



User's Guide



Whole Home Smart Wi-Fi® Router

CONTENTS

INTRODUCTION	3
GETTING STARTED	4
Package Contents	4
Status Lights.....	5
Buttons and Ports	6
BASIC SETUP GUIDE	7
Download the App.....	7
Create Your Account.....	7
Setup Your ALLY	8
Connect to ALLY	10
Personalize your Wi-Fi Settings	12
<i>WEB MENU SETUP (ALTERNATIVE TO APP SETUP)</i>	<i>13</i>
USING THE ALLY APP.....	19
Home Screen	19
Wi-Fi Networks	20
Guest Wi-Fi	22
Devices.....	24
AVG protection	25

Block devices.....	26
Activity Alerts (Push Notifications)	27
User Profiles	28
Pause the Internet	32
Activity Report	32
Website Filters	34
App Blocking	36
Curfew.....	37
Advanced settings.....	38
Privacy settings	39
WEB MENU.....	40
Welcome to the Dashboard	41
Wi-Fi Settings: Basic Settings (5.0GHz)	42
Wi-Fi Settings: Guest Networks (5.0GHz)	44
Wi-Fi Settings: Advanced Settings (5.0GHz).....	45
Wi-Fi Settings: Wireless Coverage (5.0GHz).....	46
Wi-Fi Settings: Access Schedule (5.0GHz)	46
Wi-Fi Settings: Wi-Fi Protected Setup (5.0GHz) ...	48

Wi-Fi Settings: Basic Settings (2.4GHz)	49	Firewall Settings: DMZ (Demilitarized Zone).....	72
Wi-Fi Settings: Guest Networks (2.4GHz)	51	Firewall Settings: Denial of Service	73
Wi-Fi Settings: Advanced Settings (2.4GHz)	52	Quality of Service	74
Wi-Fi Settings: Wireless Coverage (2.4GHz)	53	Management: System Status	75
Wi-Fi Settings: Access Schedule (2.4GHz).....	53	Management: Network Statistics	76
Wi-Fi Settings: Wi-Fi Protected Setup (2.4GHz)...	55	Management: Dynamic DNS Settings	77
Network Settings: Local Network (LAN)	56	Management: System Clock	78
Network Settings: Internet Network (WAN).....	58	Management: System Logs	79
Network Settings: Advanced Settings.....	60	Management: Upgrade Firmware.....	80
Security Features: Block Websites.....	62	Management: Save and Reload Settings	82
Security Features: User Access (MAC Filtering) ...	63	Management: Access Code.....	83
Security Features: User Access (IP Filtering).....	64	TECHNICAL SPECIFICATION	83
USB Storage: Local Sharing	65	DEFAULT SETTINGS.....	85
USB Storage: FTP Server	69	TROUBLESHOOTING & SUPPORT INFO.....	86
Firewall Settings: Port Filtering.....	70	WARRANTY AND REGULATORY INFO.....	112
Firewall Settings: Port Forwarding	71	LEGAL NOTICES & DISCLAIMERS	120

INTRODUCTION

Thank you for purchasing The *ALLY Plus- Whole Home Smart Wi-Fi System*. At Amped Wireless we strive to provide you with the highest quality products through innovation and advanced technology. We pride ourselves on delivering products that outperform the competition and go beyond your expectations. If you have any questions, please feel free to contact us. We'd love to hear from you and thank you for your support!

Email: sales@ampedwireless.com

Call: 888-573-8830

Web: www.ampedwireless.com

GETTING STARTED



Package Contents



Check to make sure you have all the contents within your package:

- ALLY Router
- RJ-45 Ethernet Cable
- Power Adapter
- Setup Guide


Status Lights



-  Solid - Internet Connection OK
-  Solid - No Internet Connection

-  Slow Blinking - Loading new firmware, booting up, or Sync/WPS connection Initiated
-  Fast Blinking - Resetting to default factory settings

Buttons and Ports

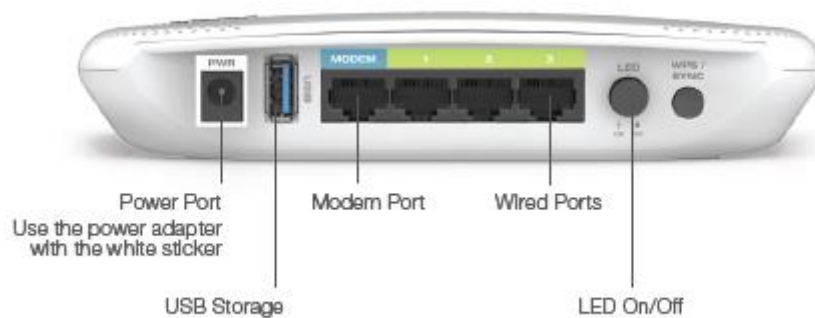

BASIC SETUP GUIDE


Download the App

Download the Amped Wireless ALLY app on your Android or iOS device. Search for ALLY Whole Home Wi-Fi System on the Google Play or Apple Store, or visit www.ampedwireless.com/allyapp. We support Android 4.4+ and iOS 9+.



Create Your Account

Open the App and create your account. The account allows you to securely manage your ALLY from anywhere and from any device.

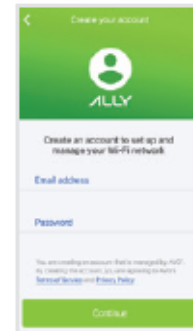

Setup Your ALLY


Follow the steps in the app to get your ALLY up and running.

Unplug your Modem

Power off the modem by disconnecting the modem's power adapter from the power outlet. If your modem has a backup battery, remove the backup battery from your modem.

Reboot your Modem

Plug in your modem's power adapter and backup battery (if available):


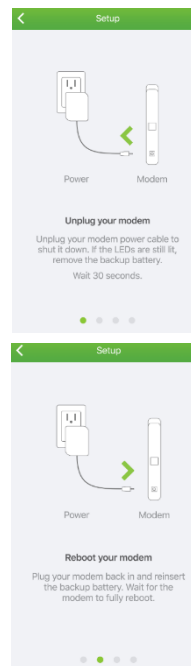


Power on ALLY

Locate your ALLY Router and the power adapter that goes with the ALLY Router (the power adapter with the white sticker) Attach one end of the power adapter to an available power outlet and the other to the white PWR port on the back of the ALLY Router

Connect ALLY to your Modem

Connect the ALLY Router to your modem using the included blue Ethernet cable. One end of the cable should be already attached to the blue Modem port on the ALLY Router. The other end should be connected to your modem.

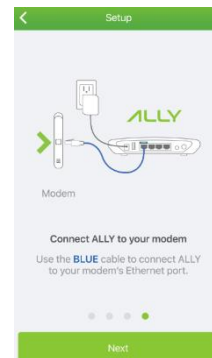
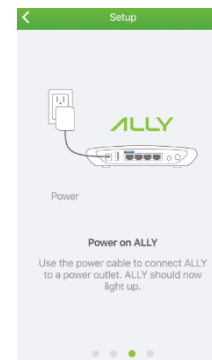


Connect to ALLY

After you have connected the ALLY to your modem you will be asked to connect to the ALLY's Wi-Fi network as shown on the screens to the right. The upper screen is what iOS users will see while the lower screen is what Android users will see.

Leave the ALLY App and go to your phone's Wi-Fi settings. Find the Wi-Fi network named: Amped_ALLY_XXXX and connect to it.


Once you have connected return to the ALLY App

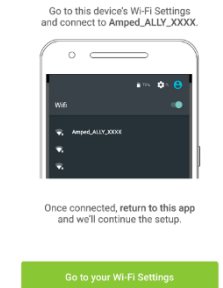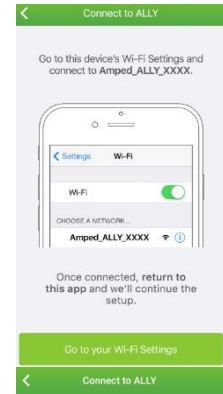

Internet Connection Detection

The ALLY App will try to detect your Internet settings and configure the ALLY Router. Please be patient. Once your connection has been successfully configured you will be directed to configure your Wi-Fi network settings.

If there is a problem with the configuration, the app will notify you of the issue as shown in the screen on the lower right. At this point, please tap Check your ALLY Setup to ensure you have connected your hardware correctly or if you choose to manually enter your configuration settings tap the selection to do so (Do this for static IP, PPPoE or other non DHCP, based installations). If you continue to have problems, contact our Elite Support department at 888-573-8820.

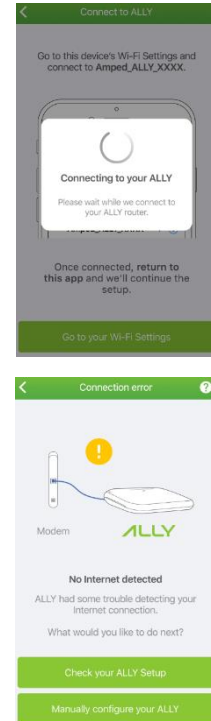


Personalize your Wi-Fi Settings

If your Internet connection was configured successfully you will see the “Personalize your Network” screen where you can give your Wi-Fi network a new name and password. You may also choose to have the ALLY app generate a password for you.

Note: You may choose to use the same network name and password for both 2.4GHz and 5GHz networks or choose individual ones for each. 2.4GHz networks will have longer range while 5GHz networks have faster speeds is the more optimal network for media streaming and other data intensive devices.

Summary

Once you have successfully named your network and selected a password you will be directed to the summary of your settings. Tap continue to begin customizing your ALLY experience.

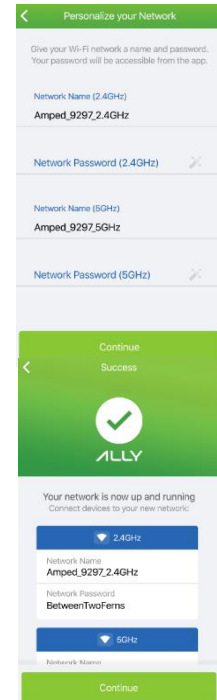


WEB MENU SETUP (ALTERNATIVE TO APP SETUP)

The ALLY is meant to be installed using the ALLY app. If you reached this section and have not begun setup yet, please refer to the Basic Setup Guide on page 7. In the case that you do not have an Android 4.4+ or iOS 9+ device and still wish to use the ALLY without the ALLY app, follow the instructions below.

Note: We strongly recommend that you use the ALLY App to enjoy the overall experience of the ALLY system. If you have already configured your ALLY using the app you will need to access your ALLY app to obtain the access code to access the web menu.

- a) Power on the ALLY Router and attach the included Ethernet cable to your modem and the other end to the modem port of the router.
- b) Connect your PC or tablet to the ALLY Wi-Fi network: Amped_ALLY_XXXX
- c) Open your web browser.
- d) Type <http://setup.ampedwireless.com> into the web address bar.
- e) If the web menu fails to open, type the following IP address into your web address bar:
<http://192.168.3.1>

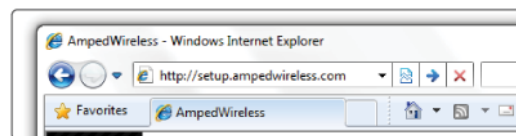

<http://setup.ampedwireless.com>

Welcome to the Setup Wizard

If this is your first time setting up the Router, the Setup Wizard should automatically load.


If you wish to manually configure your router you can also choose to skip the Setup Wizard.

Double check that the modem is connected to the Router's **Modem** port.

Click **Next** to continue.



If the Dashboard loads (see right image) instead of the Setup Wizard, scroll to the bottom and click the Setup Wizard button to access the Wizard.

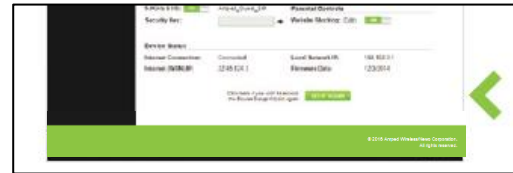



Internet Connection Detection

The Wizard will try to detect your Internet settings and configure the router. Please be patient.

If there is a problem with the Automatic Configuration, the wizard will notify you of the issue. If you continue to have problems, contact our Elite Support department at 888-573-8820.

If the Internet connection detection was successful, you will see a green check mark.

Click **Next** to continue.

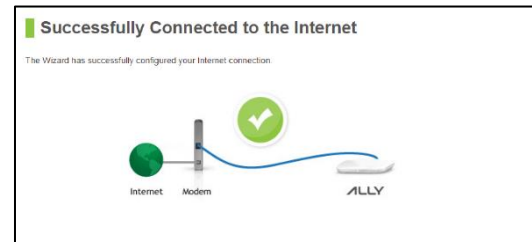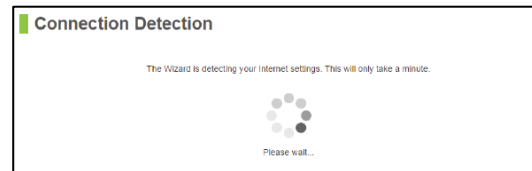

Personalize your Wi-Fi Settings

The default ID of your 5GHz and 2.4GHz Wi-Fi network is:

Amped_ALLY_XXXX

To change it, enter a new name in the SSID field. Users connecting wirelessly to the Router will use these IDs to identify your wireless network.

There is no default security key.

To change them, enter a new key in the Security Key field for both 2.4GHz and 5GHz networks. The keys must be at least 8 characters long.

Click **Next** to apply your settings.

Personalize Your Wi-Fi Settings

Configure the settings for your Wi-Fi connections.



2.4GHz Wireless SSID: 5GHz Wireless SSID:

2.4GHz Security Key: 5GHz Security Key:

Create a Password for your Router

This password is NOT your Wi-Fi network password. This password is to access the web menu of the Router to access additional router settings. Leave this blank if you do not wish to have a password.

Click **Apply** to save your settings.

Create a Access Code for Your Router

This access code is NOT your Wi-Fi connection access code. This access code is to access the web menu of the Router for access to additional Router settings. Leave this blank if you do not wish to have a access code.

New Access Code:

Confirmed Access Code:

BACK **APPLY**

The Router will reboot. This process may take up to 1 minute. The page will automatically reload after the countdown. If it does not, you may need to manually refresh the page or check your connection to the Router.

Setup Summary

Once the Router has rebooted, it will load the Setup Summary page and provide you with the details of your setup. It is recommended that you print this page for your records.


Open a new web browser window and check that you have access to the Internet.

At this time, you may disconnect from the Router and start a wireless connection.

If you have any wired devices that you would like to attach to the Router you may do so now as well.

Enjoy your new Amped Wireless network!

If there is a new firmware update available, you will be prompted to update the firmware. To do so click "Update"

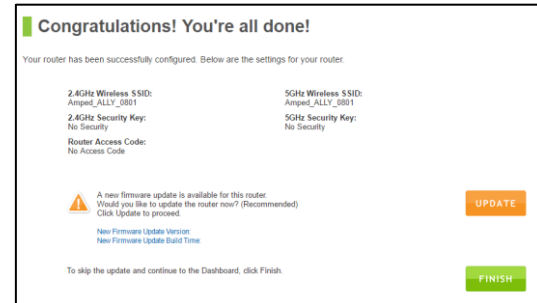


USING THE ALLY APP

Home Screen

Home screen lets you see the status of your network and access all of ALLY's features.

- a) Network status (top section):
 - If online, it says "ALLY is online" and section color is green
 - If offline, it says "ALLY is offline" and section color is red
- b) Settings: Check for updates, change Wi-Fi passwords and more.
- c) Users: View and create user profiles. The number in the button represents the number of users you have created on your network.
- d) Devices: Manage and view the devices on your network. The number in the button represents the number of devices that have connected to your network.
- e) Activity: Get a glance of recent network activities (e.g., when a new device joins your network)

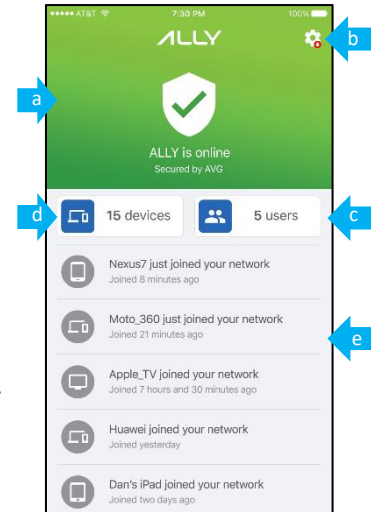


Wi-Fi Networks

- Find your Wi-Fi passwords
 - a) Open the ALLY app
 - b) On the Home screen, tap the Devices button to open the Connected Devices list. Tap the + sign in the top-right corner. Here you can see the network names and passwords for all your Wi-Fi networks.

NOTE: You should be careful about who you give your passwords to.

- Change the Wi-Fi network name and password
 - a) Open the ALLY app
 - b) On the Home screen, tap the gear icon in the upper-right corner to open the Settings menu.
 - c) Under the Network section, tap Edit Wi-Fi Networks.
 - d) To edit, tap the network name or the network password. Enter a new network name and/or

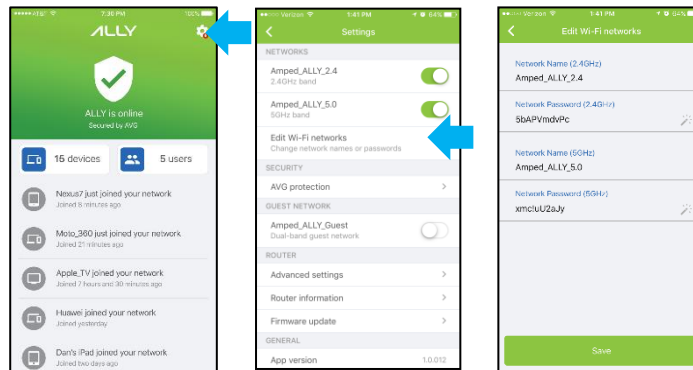

network password.

NOTE: Passwords must be 8 to max 15 characters long.

TIP: Tap the magic wand to create a strong password automatically.


- e) When done, tap Save.
- Using the 2.4GHz and 5GHz bands
 - a) ALLY has two separate Wi-Fi networks – one for the 2.4GHz band and another for the 5GHz band. So you can connect your devices to the band you want.
 - b) The 5GHz network is faster than the 2.4GHz network but the 2.4GHz will have more range.
 - c) Older devices may only support the 2.4GHz band.

Guest Wi-Fi

Guest Wi-Fi allows you to share your Wi-Fi with visitors without giving them access to your main network where all your personal devices are communicating


- To turn on the Guest Wi-Fi
 - a) Open the ALLY app
 - b) On the Home screen, tap the gear icon in the upper-right corner to open the Settings menu.
 - c) Under the Guest Network section, toggle the Guest Wi-Fi switch to turn on.

You can disable the Guest Wi-Fi at any time by following the same steps.

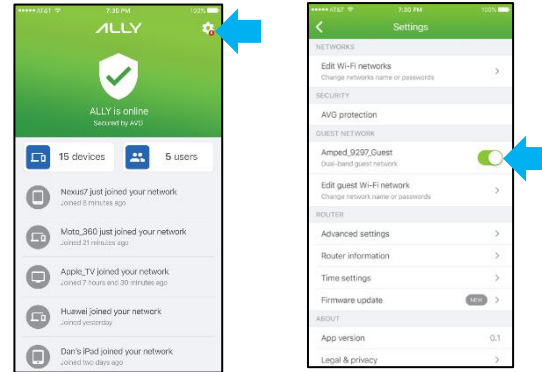

- a) Edit Guest Wi-Fi
 - a) On the Home screen, tap the gear icon in the upper-right corner to open the Settings menu.
 - b) Under the Guest Network section, tap Edit Guest Wi-Fi Network.
 - c) To edit, tap the network name or the network password. Enter a new network name and/or network password. Passwords must be 8 to max 15 characters long.
TIP: Tap the magic wand to create a strong password automatically.

d) When done, tap Save.

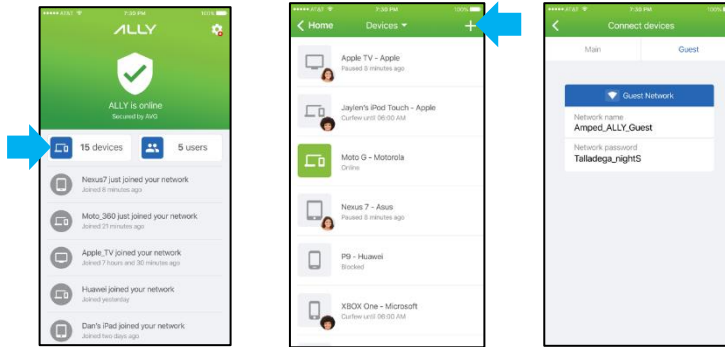


- Find the Guest Wi-Fi password
 - a) Open the ALLY app
 - b) On the Home screen, tap the Devices button to open the Connected Devices list.
 - c) On the Devices screen, tap the + sign in the top-right corner.
 - d) Tap Guest to see the name and password of your Guest Wi-Fi network.

Devices

Devices screen lets you see all registered devices in your network, status of these devices i.e. whether they are online or offline and their host/manufacture names


Tap on a device in the list to view and edit Device Settings. Device Settings allows you to Block the device from the network, assign the device to a different user, and change device details.

- Edit: Rename device
- Block button: Tap to block device.
- User: Assign the device to a different user

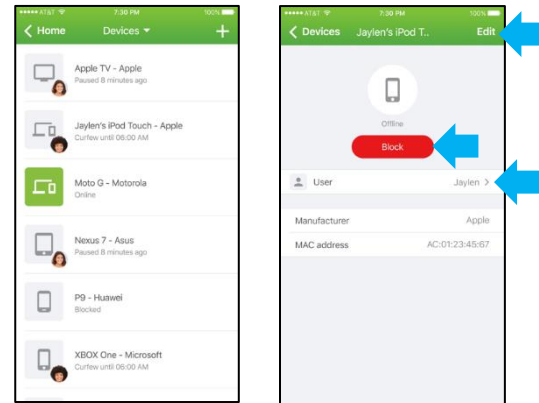

AVG protection

AVG protection helps you protect the devices on your network from malware and phishing attacks by blocking harmful websites

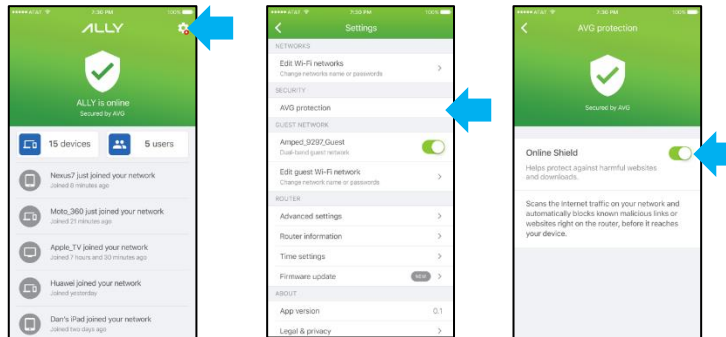


- To enable AVG protection:
 - a) On the Home screen, tap the gear icon in the upper-right corner to open the Settings menu.
 - b) Under the Security section, tap AVG protection.
 - c) Toggle the Online Shield switch to turn on.

You can turn off AVG protection at any time by following the same steps.

Block devices

ALLY gives you the power to block devices from accessing your network.

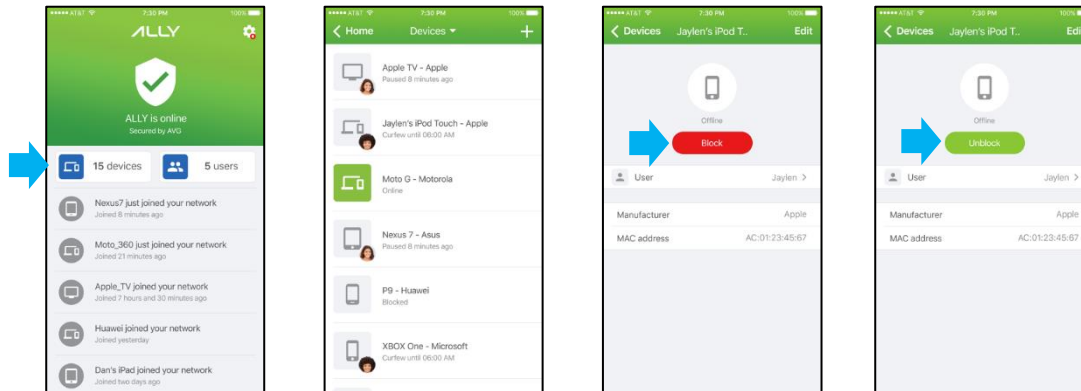

- To Block a device
 - a) On the Home screen, tap Devices.
 - b) Select the device that you want to block from the list.
 - c) Tap Block on the Device Settings screen.



To Unblock, tap again.

Activity Alerts (Push Notifications)

ALLY notifies you of important events on your network so you are always in control of what is happening for example when a new device joins your network

You can enable or disable Activity Alerts by adjusting your phone's push notification settings.


- a) For iOS devices: Go to your device's Settings and then Notifications. Scroll down to find ALLY. Click on Notifications. Toggle Allow Notifications to On or Off.
- b) For Android devices: Go to your device's Settings. Scroll down to Sounds and Notifications. Tap App Notifications. Scroll down to ALLY. Turn notifications on or off.

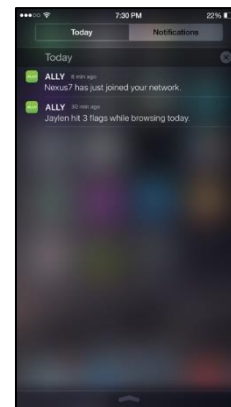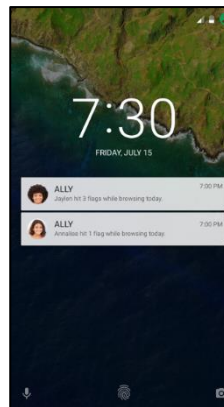


User Profiles

User Profiles allow you to customize your kids' online experience, set Internet-free moments, and keep a tab on what your kids' are up to.

- a) Edit: Change the profile name and photo, or delete the profile
- b) Pause button: Pause the Internet for the User and all of their associated devices
- c) Devices: See what devices are assigned to the User
- d) Activity Report: View online activity
- e) Website Filters: Adjust filter settings and block specific websites
- f) App Blocking: Block apps and services
- g) Curfew: Set a time for when you want to stop Internet access

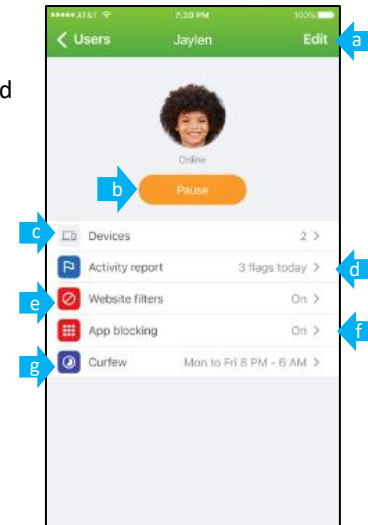

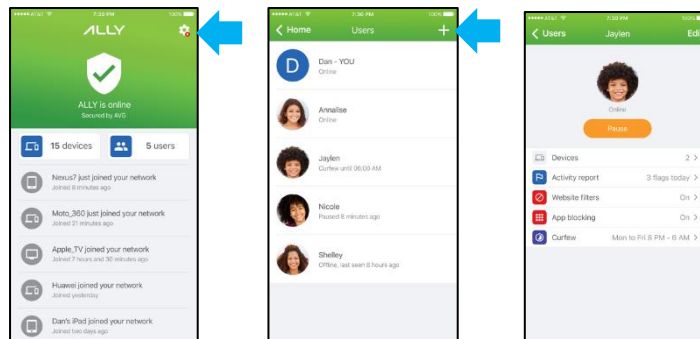

- To create User Profiles for your family members


- On the Home screen, tap Users.
- Tap the + sign in the top-right corner to Create a New User.
- Enter a name and add a photo (optional).
- Select the devices that you'd like to assign to the profile.

NOTE: ALLY will apply the profile settings to the devices that you select. A device can be assigned to only one user profile at a time.

- Tap done in the upper-right corner.

- To add and remove devices to and from a User Profile
 - a) On the Home screen, tap Users
 - b) Tap the profile you want to update
 - c) On the User Profile screen, tap Devices
 - d) Select the devices that you want to assign to the profile
- You can also assign devices to individual profiles from the Device Settings screen
 - a) On the Home screen, tap Devices
 - b) Select the device that you want to add to a profile
 - c) On the Device Settings screen, tap Owner
 - d) Select the profile you want to assign the device to
- NOTE: ALLY works by assigning a device to only one user profile at a time to avoid conflict between different filters, schedules and pauses. If a device is shared between family members, you may want to create a separate profile for that device.




- To edit or delete a User Profile
 - a) On the Home screen, tap Users.
 - b) Select the user profile that you want to edit or delete.
 - c) On the User Profile screen, tap Edit. Here you can change the profile name and photo, and delete the profile.
- NOTE: When you delete a User Profile the devices associated to that profile will be become unassigned. You can add them to a different user profile or keep them unassigned.

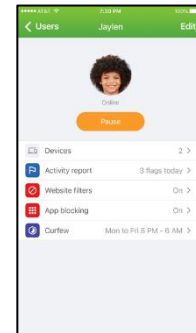

Pause the Internet

ALLY allows you to Pause the Internet for individual family members whenever you think that offline time is needed. For scheduled offline time, see the Curfew section below.

- To Pause a Family Member
 - a) On the Home screen, tap Users.
 - b) Tap the family member you want to Pause.
 - c) On the User Profile screen tap Pause.
 - d) To Resume, tap again.

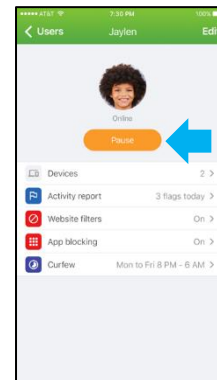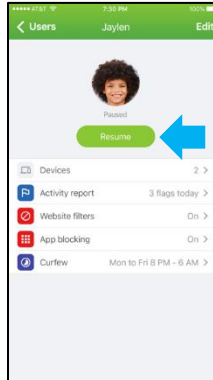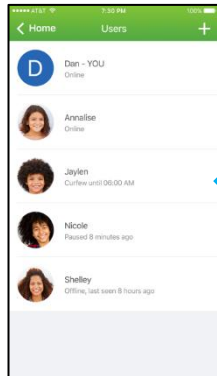

Activity Report


Activity Report lets you keep an eye on your family members' online activity, so you can always intervene if they stumble across harmful content.

To view your family members' online activity, you must first enable Activity Tracking.

- To turn Activity Tracking on
 - a) On the User Profile screen tap Activity Report.
 - b) Toggle the Activity Tracking switch to turn on.

NOTE: ALLY starts monitoring which websites they browse to only once activity tracking is enabled. After enabling, it may take some time for activity to show up in the Activity Report. ALLY will only show the online activity of devices that were assigned to that user.


- To stop Activity Tracking
 - a) On the User profile screen, tap Activity Report.
 - b) Toggle the Activity Tracking switch to turn off.

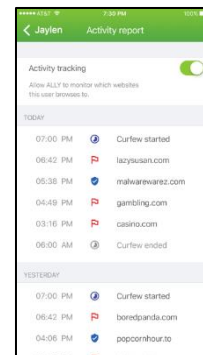

Website Filters

Website Filters let you set limits on what each family member can see and access online by filtering out content and blocking specific websites.

- To set Website Filters
 - a) On the User Profile screen, tap Website Filters.
 - b) Toggle the Website Filters switch to turn on.
 - c) Switch toggles on to filter out content. Switch toggles off to allow content.
You can tap on a category to read a category description.
 - d) Tap the Back button when finished.
- To Block a specific website
 - a) On the Website Filter screen, tap Block a Website.
 - b) Enter the domain of the site that you want to block.
 - You can only enter domain names and not URLs. For example, [www.xyz.com](http://xyz.com) instead of <http://xyz.com/category>.

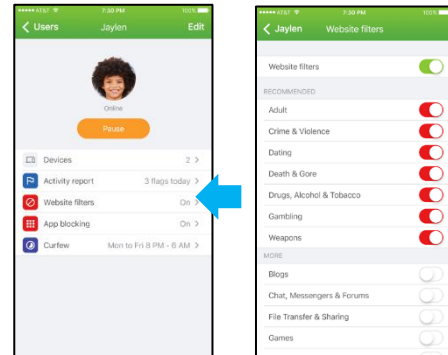


- Please note this will block entire website behind that domain
- c) Tap Add. The website will appear under the Blocked Websites section on the Website Filters screen.

To Unblock the website, tap the Bin icon next to the website address.

Note: If ALLY blocks a website for example <http://www.website.com/page> for a user, the user will be redirected to a blocked page with a message that the website has been blocked. The redirect will not work if a user is browsing a secure website i.e.


<https://www.website.com/page>.

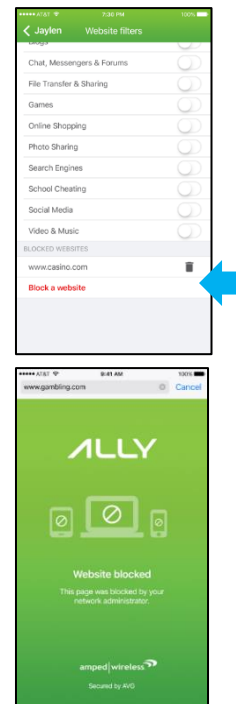

App Blocking

ALLY lets you to block apps and services for each family member. Blocked Apps will not be able to connect to internet until unblocked.


- To Block apps and services
 - a) On the User Profile screen, tap App Blocking.
 - b) Toggle the App Blocking switch to turn on.
 - c) Switch toggles on (red) to block apps and services. Switch toggles off (white) to allow.
 - d) Tap the Back button when finished.

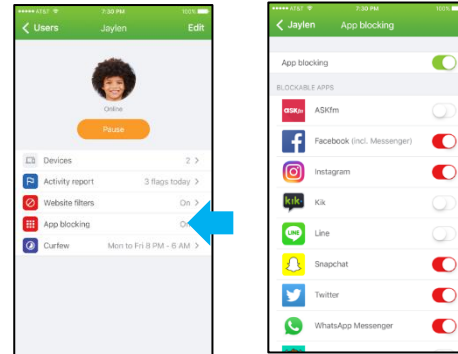

Curfew

ALLY lets you set individual Wi-Fi schedules for when you want your family members to be offline: dinners, homework, bedtime, etc.

- To set a Curfew
 - a) On the User Profile screen, tap Curfew.
 - b) Toggle the Curfew switch to turn on.
 - c) Set a start time for when you want to stop Internet access.
 - d) Set an end time for when you want to resume Internet access.
 - e) To make this Curfew repeat, tap Repeat and choose the days of the week you want the Curfew to be active.
 - f) Tap the back button when finished.

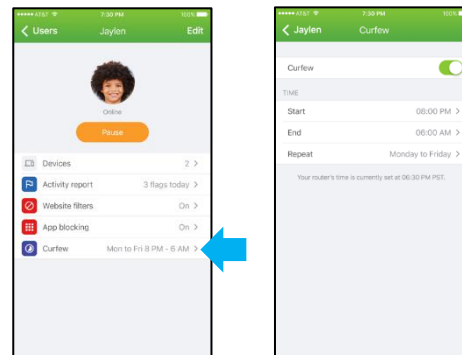

- You can override a Curfew by tapping Resume on the User Profile screen. This will resume Internet access until the next scheduled Curfew.

Advanced settings

- If you want to apply more advanced network settings on your ALLY for example port forwarding, you will need access ALLY web interface by opening <http://setup.ampedwireless.amped.com> in your PC or tablet browser.
- If ALLY was setup using the app, then you can find the access code required to access web UI in settings > advanced settings.

Update firmware

- ALLY app will automatically alert you if a software update is available when you use the app. Please follow the instructions in the app so you can always keep your ALLY up to date.
- To make sure you enjoy the latest features and that ALLY stays secure, please always keep your ALLY app and router software up to date.

Erase data and disconnect ALLY

- This allows you to disconnect your ALLY account with your ALLY Router. This will also delete all your personal data from the cloud for example profiles, devices information.
- This does not Reset your router. If you want to wipe your data from the router, you must reset the router using the reset button on the router.

- Therefore, if you are returning or replacing your ALLY, we recommend that you first “Erase data and disconnect ALLY” from the app but then also reset the router.

Privacy settings

We care about your privacy and want you to have more control over how we collect and use your data. Please read our privacy policy to understand what data we collect, why we collect it, and how we use it. In addition, we have also provided you with a few choices in the privacy settings section: use of third party analytics in our app and opting out of ALLY related product updates.


- To read the ALLY App Terms of Service, visit: www.chimewifi.com/tos
- To read the ALLY App Privacy and Cookie Policy, visit: www.chimewifi.com/privacypolicy

WEB MENU

The web menu can be used to access advanced features that may not be configurable via the ALLY app. These features include port forwarding, firewall settings, quality of service and more.

How to access the Web Menu:

- a) If you are already using the ALLY app, open the ALLY app and go to the settings menu from the home page. Tap on Advanced Settings for further instructions and to obtain the access code to log in.
- b) If you have never used the ALLY app, connect to the Wi-Fi network of the router, open a web browser and go to: <http://setup.ampedwireless.com>

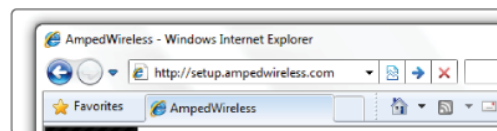


<http://setup.ampedwireless.com>

Note: Some features may not be accessible if the ALLY Router is in use with an ALLY app account. These features will have greyed out boxes and cannot be selected.

Welcome to the Dashboard

The Dashboard provides you with information regarding your internet connection and basic router settings. From here you can enable or disable guest networks, have a quick glance at what devices are connected to your Router and enable or disable website blocking features. For more advanced settings click on More Settings to navigate through the configuration menu.

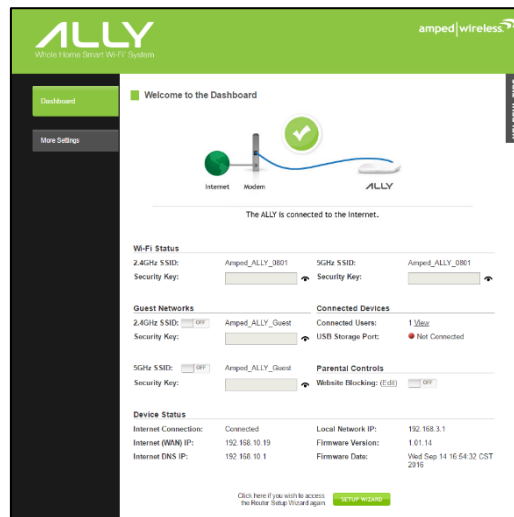

Wi-Fi Settings: Basic Settings (5.0GHz)

The Basic Settings page allows you to adjust settings for your 5GHz local wireless network.

Disable 5.0GHz Wireless Connections: Disabling will turn off all 5GHz Wi-Fi activity. Users will no longer be able to connect wirelessly to your 5GHz network.

Band: Select the compatible Wi-Fi standard and speed for your wireless network.

Broadcast SSID: Selecting **Disable Broadcast SSID** will hide the visibility of the router's 5GHz network SSID. Users must manually enter the SSID to connect.

Wi-Fi Network ID (SSID): The name of your 5GHz wireless network.

Channel Number: Wi-Fi networks operate on specific wireless channels. Some network channels may have more interference than others. If your performance is unstable, try a different channel number. If you are using a repeater with this network, it is recommended you set a static channel, instead of using "Auto".

Basic Wi-Fi Settings (5GHz)

Manually configure the settings for your Wi-Fi network.

Basic Settings (5GHz)

Band: 5GHz (A+N+AC)

Broadcast SSID: Enable

Wi-Fi Network ID (SSID): Amped_ALLY_0801

Channel Width: VHT80

Channel Number: Auto

WMM: Enable

Associated Clients: Show Active Clients

Tx Beamforming: Enable

MU-MIMO: Enable

Security Settings (5GHz)

Encryption: Disable

802.1x Authentication:

42

WMM: Prioritizes multimedia data over the wireless network.

Associated Clients: Shows the active users connected wirelessly to your 5GHz network.

Tx Beamforming: Enable or disable Beamforming capabilities with Beamforming capable devices to increase Wi-Fi connection reliability and range.

MU-MIMO: Enable or disable Multi-User MIMO. MU-MIMO enables the router to send data to multiple devices (devices must be MU-MIMO capable) simultaneously thereby increasing overall network performance and speed.

Security Settings: Change the type of wireless security settings for your 5.0GHz Wi-Fi Network.

Encryption: Select the encryption type for your Wi-Fi Network.

Pre-Shared Key: The password for your Wi-Fi Network. This is the key used by devices connecting to your Extended Network.

Wi-Fi Settings: Guest Networks (5.0GHz)

Click “Enable” to create a Guest Network. Guest Networks provide a separate wireless network, with unique settings for users to connect to.

SSID: This is the name of your Guest Network.

Broadcast SSID: Disable to hide your SSID from public view. Users will need to manually enter the SSID into their wireless software interface to connect.

Network Access: Restrict users connecting to your Guest Network to Internet access only or both local network and Internet access.

Active Client List: View all computers and network devices that are connected to your Guest Network wirelessly.

Security Settings: Change the type of wireless security settings for your Guest Networks by selecting the specific Guest Network SSID from the drop down menu.

Encryption: Select the encryption type for your Guest Network.

Pre-Shared Key: The password for your Guest Network. This is the key used by devices connecting to your Guest Network.

Basic Settings (5GHz)

Enable	Guest Network SSID	Broadcast SSID	Network Access	Encryption	Active Client List
<input type="checkbox"/>	Amped_ALLY_Guest	Enabled ▾	Internet and Local ▾	Disable	Show
<input type="checkbox"/>	Amped_Guest_5.0_2	Enabled ▾	Internet and Local ▾	Disable	Show
<input type="checkbox"/>	Amped_Guest_5.0_3	Enabled ▾	Internet and Local ▾	Disable	Show
<input type="checkbox"/>	Amped_Guest_5.0_4	Enabled ▾	Internet and Local ▾	Disable	Show

Security Settings (5GHz)

Select a Guest Network:

Amped_ALLY_Guest ▾

Encryption:

Disable ▾

Wi-Fi Settings: Advanced Settings (5.0GHz)

Advanced Wireless Settings should only be adjusted by technically advanced users. It is not recommended that novice users adjust these settings to avoid degrading wireless performance.

Fragment Threshold: The default and recommended setting is at 2346, meaning the Router will never fragment any frames that it sends to wireless users.

RTS Threshold: Adjusts the size of RTS data packets. Lower values reduce throughput, but allow the system to recover quicker from interference/collisions. Higher values provide the fastest throughput.

Beacon Interval: Indicates the frequency interval of the beacon. A beacon is a packet broadcast by the router to synch the wireless network.

STBC: Space Time Block Coding improves reception by coding the data stream in blocks.

Advanced Settings (5GHz)

These settings apply to your 5GHz Wi-Fi network. Advanced Wi-Fi settings are for technically advanced users. It is recommended that these settings not be changed unless it is understood what the effects will be on your local Wi-Fi network.

Fragment Threshold: (256-2346)

RTS Threshold: (0-2347)

Beacon Interval: (20-1024 ms)

Aggregation: ☒ Enabled ☐ Disabled

Aggregated Frames Number: (1-32)


Short GI: ☒ Enabled ☐ Disabled

STBC: ☐ Enabled ☒ Disabled

LDPC: ☒ Enabled ☐ Disabled

Wi-Fi Settings: Wireless Coverage (5.0GHz)

Adjust the output power of the Router to control the coverage distance of your 5GHz wireless network. For a smaller coverage area, you can select a lower output power. For the maximum wireless coverage, select the 100% selection.

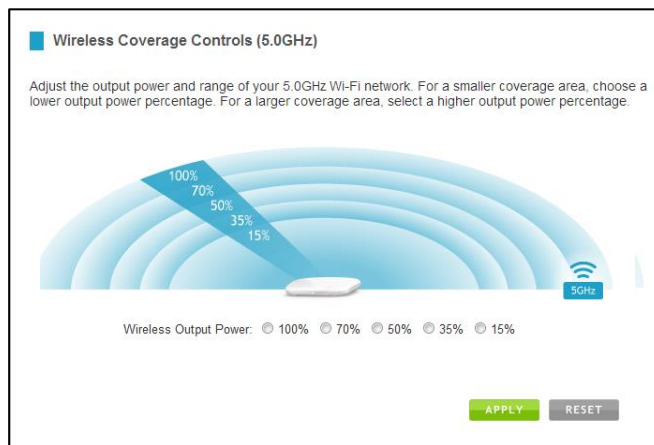

Wi-Fi Settings: Access Schedule (5.0GHz)

Access Schedules will enable or disable your 5.0GHz wireless access at a set time based on your predefined schedule. This feature is often used for restricting access to all users (such as children, employees, guests) during specific times of the day for parental control or security reasons.

- Enable Access Schedule.
- Select which days you wish for your Wi-Fi to be available.
- Select the time frame during that day that you wish for Wi-Fi to be available.
- Select the Network that you wish to apply these settings to.
- Apply Changes.

Access Schedule (5GHz)

Define a schedule for when the 5GHz Wi-Fi network is enabled or disabled on the Range Extender. Please be sure that your time zone settings have been configured before using this feature.

☐ Enable Access Schedule (5GHz)

Enable	Day	From (hh:mm)	To (hh:mm)	Network
<input type="checkbox"/>	* All Day <input type="radio"/> Everyday	00 * 00 *	00 * 00 *	Main Network
<input type="checkbox"/>	* All Day <input type="radio"/> Everyday	00 * 00 *	00 * 00 *	Main Network
<input type="checkbox"/>	* All Day <input type="radio"/> Everyday	00 * 00 *	00 * 00 *	Main Network
<input type="checkbox"/>	* All Day <input type="radio"/> Everyday	00 * 00 *	00 * 00 *	Main Network
<input type="checkbox"/>	* All Day <input type="radio"/> Everyday	00 * 00 *	00 * 00 *	Main Network
<input type="checkbox"/>	* All Day <input type="radio"/> Everyday	00 * 00 *	00 * 00 *	Main Network
<input type="checkbox"/>	* All Day <input type="radio"/> Everyday	00 * 00 *	00 * 00 *	Main Network
<input type="checkbox"/>	* All Day <input type="radio"/> Everyday	00 * 00 *	00 * 00 *	Main Network
<input type="checkbox"/>	* All Day <input type="radio"/> Everyday	00 * 00 *	00 * 00 *	Main Network
<input type="checkbox"/>	* All Day <input type="radio"/> Everyday	00 * 00 *	00 * 00 *	Main Network

Note: Make sure you have already configured your System Clock in order for your schedule to work correctly. Time Zone Settings can be adjusted from the web menu under Management > Time Zone Settings.

Wi-Fi Settings: Wi-Fi Protected Setup – WPS (5.0GHz)

WPS is a Wi-Fi feature created to make Wi-Fi setup simple and easy. Some wireless routers and adapters support this feature with varying names (i.e. one touch setup or WPS).

You may enable WPS setup here by selecting the type of WPS setup you wish to use. The Router supports all types of WPS setup:

Enable Wi-Fi Protected Setup

Option A: If your wireless user has a Wi-Fi Protected Setup button, click or press the WPS PBC (Push Button Configuration) button here:

Option B: If your wireless device requires a WPS PIN number to join the wireless network, use this PIN: 88888888

Option C: If your wireless user has a Wi-Fi Protected Setup PIN number, enter that number here:

and then click

Option A: Push button: You may push the WPS button on the web menu or use the physical button on the back of the Router.

Option B: PIN: Some wireless devices use PIN number to access wireless network. If your wireless device requests for a PIN number, use the PIN code located here.

Option C: Enter PIN: Some wireless devices require that you use a PIN number to add them to the wireless network. If your wireless device has a PIN number locate the number and enter in the field, then press Start Pin.

Wi-Fi Settings: Basic Settings (2.4GHz)

The Basic Settings page allows you to adjust settings for your 2.4GHz local wireless network.


Disable 2.4GHz Wireless Connections: Disabling will turn off all 2.4GHz Wi-Fi activity. Users will no longer be able to connect wirelessly to your 2.4GHz network.

Band: Select the compatible Wi-Fi standard and speed for your wireless network.

Broadcast SSID: Selecting Disable Broadcast SSID will hide the visibility of the router's 2.4GHz network SSID. Users must manually enter the SSID to connect.

Wireless Network ID (SSID): The name of your 2.4GHz wireless network.

Channel Number: Wi-Fi networks operate on specific wireless channels. Some network channels may have more interference than others. If your performance is unstable, try a different channel number. If you are using a repeater with this network, it is recommended you set a static channel, instead of using "Auto."

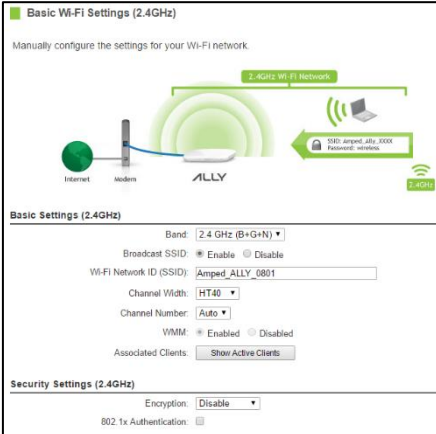

Basic Wi-Fi Settings (2.4GHz)

Manually configure the settings for your Wi-Fi network.

Internet Modem ALLY 2.4GHz Wi-Fi Network

Basic Settings (2.4GHz)

Band: 2.4 GHz (B+G+N) ▾

Broadcast SSID: ☒ Enable ☐ Disable

Wi-Fi Network ID (SSID): Amped_ALLY_0801

Channel Width: HT40 ▾

Channel Number: Auto ▾

WMM: ☒ Enabled ☐ Disabled

Associated Clients: [Show Active Clients](#)

Security Settings (2.4GHz)

Encryption: Disable ▾

802.1x Authentication: ☐

WMM: Prioritizes multimedia data over the wireless network.

Associated Clients: Shows the active users connected wirelessly to your 2.4GHz network.

Security Settings: Change the type of wireless security settings for your 2.4GHz Wi-Fi Network.

Encryption: Select the encryption type for your Wi-Fi Network.

Pre-Shared Key: The password for your Extended Network. This is the key used by devices connecting to your Wi-Fi network.

Wi-Fi Settings: Guest Networks (2.4GHz)

Click “Enable” to create a Guest Network. Guest Networks provide a separate wireless network, with unique settings for users to connect to.

SSID: This is the name of your Guest Network.

Broadcast SSID: Disable to hide your SSID from public view. Users will need to manually enter the SSID into their wireless software interface to connect.

Network Access: Restrict users connecting to your Guest Network to Internet access only or both local network and Internet access.

Active Client List: View all computers and network devices that are connected to your Guest Network wirelessly.

Security Settings: Change the type of wireless security settings for your Guest Networks by selecting the specific Guest Network SSID from the drop down menu.

Encryption: Select the encryption type for your Guest Network.

Pre-Shared Key: The password for your Guest Network. This is the key used by devices connecting to your Guest Network.

Basic Settings (2.4GHz)

Enable	Guest Network SSID	Broadcast SSID	Network Access	Encryption	Active Client List
<input type="checkbox"/>	Amped_ALLY_Guest	Enabled	Internet and Local	Disable	Show
<input type="checkbox"/>	Amped_Guest_2_4_2	Enabled	Internet and Local	Disable	Show
<input type="checkbox"/>	Amped_Guest_2_4_3	Enabled	Internet and Local	Disable	Show
<input type="checkbox"/>	Amped_Guest_2_4_4	Enabled	Internet and Local	Disable	Show

Security Settings (2.4GHz)

Select a Guest Network:

Amped_ALLY_Guest

Encryption:

Disable

Wi-Fi Settings: Advanced Settings (2.4GHz)

Advanced Wireless Settings should only be adjusted by technically advanced users. It is not recommended that novice users adjust these settings to avoid degrading wireless performance.

Fragment Threshold: The default and recommended setting is at 2346, meaning the Router will never fragment any frames that it sends to wireless users.

RTS Threshold: Adjusts the size of RTS data packets. Lower values reduce throughput, but allow the system to recover quicker from interference/collisions. Higher values provide the fastest throughput.

Beacon Interval: Indicates the frequency interval of the beacon. A beacon is a packet broadcast by the router to synch the wireless network.

STBC: Space Time Block Coding improves reception by coding the data stream in blocks.

Advanced Settings (2.4GHz)

These settings apply to your 2.4GHz Wi-Fi network. Advanced Wi-Fi settings are for technically advanced users. It is recommended that these settings not be changed unless it is understood what the effects will be on your local Wi-Fi network.

Fragment Threshold: (256-2346)

RTS Threshold: (0-2347)

Beacon Interval: (20-1024 ms)

Aggregation: ☒ Enabled ☐ Disabled

Aggregated Frames Number: (1-32)

Short GI: ☒ Enabled ☐ Disabled


STBC: ☐ Enabled ☒ Disabled

LDPC: ☒ Enabled ☐ Disabled

20/40MHz Coexist: ☐ Enabled ☒ Disabled

Wi-Fi Settings: Wireless Coverage (2.4GHz)

Adjust the output power of the Router to control the coverage distance of your 2.4GHz wireless network. For a smaller coverage area, you can select a lower output power. For the maximum wireless coverage, select the 100% selection.

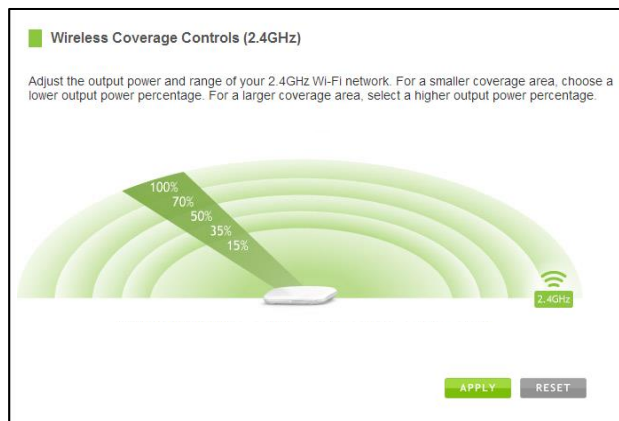

Wi-Fi Settings: Access Schedule (2.4GHz)

Access Schedules will enable or disable your 2.4GHz wireless access at a set time based on your predefined schedule. This feature is often used for restricting access to all users (such as children, employees, guests) during specific times of the day for parental control or security reasons.

- Enable Access Schedule.
- Select which days you wish for your Wi-Fi to be available.
- Select the time frame during that day that you wish for Wi-Fi to be available.
- Select the Network that you wish to apply these settings to.
- Apply Changes.

Access Schedule (2.4GHz)

Define a schedule for when the 2.4GHz Wi-Fi network is enabled or disabled on the Range Extender. Please be sure that your time zone settings have been configured before using this feature.

☐ Enable Access Schedule (2.4GHz)

Enable	Day	From (h:mm)	To (h:mm)	Network
<input type="checkbox"/>	* All Day <input type="radio"/> Everyday	00 : 00	00 : 00	Main Network
<input type="checkbox"/>	* All Day <input type="radio"/> Everyday	00 : 00	00 : 00	Main Network
<input type="checkbox"/>	* All Day <input type="radio"/> Everyday	00 : 00	00 : 00	Main Network
<input type="checkbox"/>	* All Day <input type="radio"/> Everyday	00 : 00	00 : 00	Main Network
<input type="checkbox"/>	* All Day <input type="radio"/> Everyday	00 : 00	00 : 00	Main Network
<input type="checkbox"/>	* All Day <input type="radio"/> Everyday	00 : 00	00 : 00	Main Network
<input type="checkbox"/>	* All Day <input type="radio"/> Everyday	00 : 00	00 : 00	Main Network
<input type="checkbox"/>	* All Day <input type="radio"/> Everyday	00 : 00	00 : 00	Main Network
<input type="checkbox"/>	* All Day <input type="radio"/> Everyday	00 : 00	00 : 00	Main Network
<input type="checkbox"/>	* All Day <input type="radio"/> Everyday	00 : 00	00 : 00	Main Network

Note: Make sure you have already configured your System Clock in order for your schedule to work correctly. Time Zone Settings can be adjusted from the web menu under Management > Time Zone Settings.

Wi-Fi Settings: Wi-Fi Protected Setup – WPS (2.4GHz)

WPS is a Wi-Fi feature created to make Wi-Fi setup simple and easy. Some wireless routers and adapters support this feature with varying names (i.e. one touch setup or WPS).

You may enable WPS setup here by selecting the type of WPS setup you wish to use. The Router supports all types of WPS setup:

Enable Wi-Fi Protected Setup
Option A: If your wireless user has a Wi-Fi Protected Setup button, click or press the WPS PBC (Push Button Configuration) button here:

Option B: If your wireless device requires a WPS PIN number to join the wireless network, use this PIN: 88888888
Option C: If your wireless user has a Wi-Fi Protected Setup PIN number, enter that number here:
 and then click

Option A: Push button: You may push the WPS button on the web menu or use the physical button on the back of the Router.

Option B: PIN: Some wireless devices use PIN number to access wireless network. If your wireless device requests for a PIN number, use the PIN code located here.

Option C: Enter PIN: If your wireless device has a PIN number, locate the number and enter it into the field. Press Start PIN when ready.

Network Settings: Local Network (LAN)

These settings are for your local network only and do not apply to your Internet / ISP connection.

IP Address: The IP address of the Router.

Subnet Mask: The subnet of the Router.

Default Gateway: The access point to another network.

DHCP: Each network device on your local network will have its own IP Address. The DHCP server automatically assigns the IP addresses to each device connected to your network. Disabling DHCP will require that each device on your network be assigned a manual or static IP address.

DHCP Client Range: The range of IP addresses provided by the DHCP server is defined by this field. You can limit how many IP addresses are used in your network by setting a smaller or larger range.

DHCP Lease Time: The amount of time each device is given a specific IP is decided by the DHCP lease time. After the Lease Time expires, the DHCP server will assign another IP address to the device.

IP Address: 192.168.3.1
Subnet Mask: 255.255.255.0
Default Gateway: 0.0.0.0
DHCP: Server
DHCP Client Range: 192.168.3.100 - 192.168.3.200 Show Client
DHCP Lease Time: 480 (1 ~ 10080 minutes)
Static DHCP: Set Static DHCP
Domain Name: Realtek
802.1d Spanning Type: Disabled
Clone MAC Address: 000000000000

Set Static DHCP: This allows specific devices to be given a specific IP address each time the device connects to the network. The DHCP server will always assign the same IP address to the same device. This feature is often used for shared devices such as network printers or servers.


802.1d Spanning Type (STP): A network protocol that ensures a loop-free topology for networks that have Ethernet bridges. The STP prevents bridge loops and allows a network design to include redundant links to provide automatic backup paths if active links fails.

Clone MAC Address: The Router can use a MAC address that you define as its own. This is often used when an Internet Provider only authorizes one MAC address to access the Internet. Cloning the MAC address will make it so that the cloned MAC address is the only MAC address seen by the Internet Provider.

Network Settings: Internet Network (WAN)

The Basic Setup Wizard will assist you in setting up your Internet connection. However, in the case that you wish to adjust settings manually, the options on this page provides you with the tools to do this easily.

Select your Internet Connection type from the drop down menu:

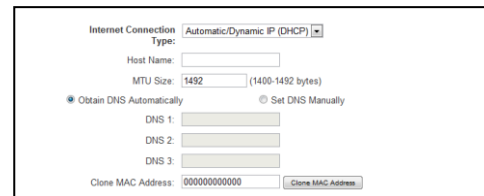

The screenshot shows a web interface for configuring the Internet connection. At the top, there is a dropdown menu labeled 'Internet Connection Type:' with 'Automatic/Dynamic IP (DHCP)' selected. Below this, there is a 'Host Name:' label followed by an empty text input field. Underneath, 'MTU Size:' is set to '1492' with a note '(1400-1492 bytes)'. There are two radio buttons: 'Obtain DNS Automatically' (which is selected) and 'Set DNS Manually'. Below the radio buttons are three empty text input fields labeled 'DNS 1:', 'DNS 2:', and 'DNS 3:'. At the bottom, 'Clone MAC Address:' is set to '000000000000' with a 'Clone MAC Address' button next to it.

Manual IP (Static): For Internet connections where the Internet provider does not provide you with an IP address automatically. If you know the IP address and DNS settings that your Internet provider uses, select this option.

Automatic/Dynamic (DHCP): This is the configuration type most often used by Internet providers. Automatic configurations are used by both DSL and Cable as well as other providers. Under the Automatic Configuration method, the Internet provider will assign your router an Internet IP address automatically.

If for some reason you do not get an IP address and you know that your Internet provider uses DHCP, try resetting your modem. Remove the power adapter from the modem as well as the backup battery (if available). Wait about 30 seconds and then power the modem back on. You can run through the Basic Setup Wizard again to see if that fixes your Internet connection issues.

PPPoE connections normally requires login information. If you do not know the settings for your PPPoE connection, please contact your Internet provider.

PPTP and L2TP connections requires login information as well as IP address settings. If you do not know the settings for your PPTP / L2TP connection, please contact your Internet provider.

Network Settings: Advanced Settings

These settings apply to the Local Network and your Internet Connection Network. If you are not familiar with these settings, please refer to a network administrator to avoid putting your network at risk.

Enable uPnP: Universal Plug and Play is a network feature that allows uPnP enabled devices to “just work” with each other when connected to the same network. UPnP can work across different network media, such as an Ethernet connection or wireless connection. With UPnP enabled, network devices may change security settings within the Router’s firewall to allow access over the Internet. By default, UPnP is disabled to avoid exposing your network to security issues.

Enable IGMP Proxy: Internet Group Management Protocol is a communication protocol used by hosts and routers on the network to establish multicast group memberships. IGMP Proxy is typically used to implement multicast routing and commonly used when advanced protocols such as PIM is not suitable.

Enable Ping Access on WAN: Allows users to ping the WAN interface IP address from the Internet.

Enable Web Server Access on WAN (Remote Management): Allows access to the Web Menu over the Internet.

Advanced Settings

These settings apply to the Local Network and your Internet Connection Network. If you are not familiar with these settings, please refer to a network administrator to avoid putting your network at risk.

- ☒ Enable UPnP (Universal Plug and Play)
- ☒ Enable IGMP Proxy
- ☐ Enable Ping Access on WAN
- ☐ Enable Web Server Access on WAN (Remote Management) Port:
- ☒ Enable IPsec pass through on VPN connection
- ☒ Enable PPTP pass through on VPN connection

Enable IPsec pass through on VPN connection: Allows the IP security protocol suite to pass through on a VPN connection.

Security Features: Block Websites

To block a website, you must first enable URL filtering. After it has been enabled, you can begin adding as many websites as you wish into the URL Address field.

Note: If you wish to block www.google.com, simply type in "google" and the Router will block all websites with the text "google" in the URL.

■ Block Websites (URL Filtering)

URL Filtering blocks users on your from accessing specific websites that you deem unsafe or inappropriate. Enter a keyword or the actual web address below to begin blocking.

Note: If you wish to block www.google.com, simply type in "google" and the High Power Router will block all websites with the text "google" in the URL.

☐ Enable URL Filtering

URL Address:

Security Features: User Access (MAC Address Filtering)

User Access allows you to deny access or allow access to specific users connecting to the network. Each networking device has a unique address called a MAC address (a 12-digit hex number).

By inputting the MAC address into the field, you can define whether that device is allowed into your network or not allowed.

A MAC Address may sometimes be referred to as a Physical Address. Most networking devices have their MAC Address located on a label on the actual device.

For Windows computers with internal networking adapters, the MAC Address can be found by viewing the Network Connection Details of the network adapter. The MAC Address will be listed as the Physical Address.

Be sure to enter the MAC Address without any symbols. For example, a MAC Address of 78-DD-78-AA-78-BB would be entered as 78DD78AA78BB.

User Access Control (MAC Address Filtering)

Each networking device has a physical address known as a MAC address. MAC Address Filtering blocks access to your network from computers or network devices based on their unique MAC address (physical address). To begin blocking access, enable MAC Filtering and enter the MAC address below without spaces or symbols (i.e. A1B2C3D4E5F6).

☐ Enable MAC Filtering

Filter Schedule

Enable	Day	From (hh:mm)	To (hh:mm)
<input type="checkbox"/>	<input checked="" type="radio"/> All Day <input type="radio"/> Monday	00 : 00	00 : 00
<input type="checkbox"/>	<input checked="" type="radio"/> All Day <input type="radio"/> Monday	00 : 00	00 : 00
<input type="checkbox"/>	<input checked="" type="radio"/> All Day <input type="radio"/> Monday	00 : 00	00 : 00
<input type="checkbox"/>	<input checked="" type="radio"/> All Day <input type="radio"/> Monday	00 : 00	00 : 00
<input type="checkbox"/>	<input checked="" type="radio"/> All Day <input type="radio"/> Monday	00 : 00	00 : 00
<input type="checkbox"/>	<input checked="" type="radio"/> All Day <input type="radio"/> Monday	00 : 00	00 : 00
<input type="checkbox"/>	<input checked="" type="radio"/> All Day <input type="radio"/> Monday	00 : 00	00 : 00
<input type="checkbox"/>	<input checked="" type="radio"/> All Day <input type="radio"/> Monday	00 : 00	00 : 00

Current Mode: Deny Listed

Change Mode:

MAC Address:

Device Name:

Security Features: User Access (IP Address Filtering)

User Access (IP Filtering) is similar to User Access (MAC filtering) except that the Router uses the local IP address to filter the specific data from the specified network protocol. For example, if you chose to block TCP data packets from a specific computer, you would need to figure out what that device's IP address is and select TCP from the Protocol drop down menu.

If you are not sure which Protocol to filter, select "Both" as your Protocol selection.

User Access Control (IP Filtering)

IP Filtering is used to block internet or network access to specific IP addresses on your local network. The restricted user may still be able to login to the network but will not be able to access the internet. To begin blocking access to an IP address, enable IP Filtering and enter the IP address of the user you wish to block.

☐ Enable IP Filtering

Filter Schedule

Enable	Day	From (hh:mm)	To (hh:mm)
<input type="checkbox"/>	* All Day <input type="radio"/> Monday ▾	00 ▾ : 00 ▾	00 ▾ : 00 ▾
<input type="checkbox"/>	* All Day <input type="radio"/> Monday ▾	00 ▾ : 00 ▾	00 ▾ : 00 ▾
<input type="checkbox"/>	* All Day <input type="radio"/> Monday ▾	00 ▾ : 00 ▾	00 ▾ : 00 ▾
<input type="checkbox"/>	* All Day <input type="radio"/> Monday ▾	00 ▾ : 00 ▾	00 ▾ : 00 ▾
<input type="checkbox"/>	* All Day <input type="radio"/> Monday ▾	00 ▾ : 00 ▾	00 ▾ : 00 ▾
<input type="checkbox"/>	* All Day <input type="radio"/> Monday ▾	00 ▾ : 00 ▾	00 ▾ : 00 ▾
<input type="checkbox"/>	* All Day <input type="radio"/> Monday ▾	00 ▾ : 00 ▾	00 ▾ : 00 ▾

IPv4 Address:

Select from Client List

Protocol:


Device Name:

ADD

USB Storage: Local Sharing

Share USB storage devices with computers on the local network of the Router.

Insert a USB storage device, such as a flash drive or external hard drive, to the USB port on the back panel of the Router and follow the directions below for your operating system. The computer must be connected to the router to access the storage device. You may also want to Map the Network Drive so it shows up as a standard drive on your computer for easier access.



USB Storage Local Sharing

Share a USB storage device, such as a USB flash drive or external hard drive, locally among networked computers. Insert your USB storage device into the USB port on the back panel of the Router.

[For Mapping the Network Drive] Share Disk Address: 192.168.1.1

Note: This may need to be [http://ServerName:PortNo](#) if applicable in your computer/network environment.

Local Network Sharing


USB Device Name: JAMFED_USB

Work Group: WORKGROUP

Password Protected Access: ☒ Enable ☐ Disable

System Account List

Enable	User Name	Password	Access Type
<input checked="" type="checkbox"/>	admin	<input type="password"/>	Read & Write
<input checked="" type="checkbox"/>	guest	<input type="password"/>	Read Only

Note: Login and password are case sensitive.

APPLY

RESET

Storage Status

USB 3.0 Drive: ● Not Connected

Partition	File System	Capacity	Free Space
<div>REFRESH</div>			

Windows 7 and Vista

To access the drive from your Windows desktop:

Note: If the USB drive does not appear automatically under your Networked devices (Windows 7, Vista or Mac OS X), you will need to Map the Network Drive.

- a) Click the **Start** button.
- b) Click **Computer**.
- c) On the Computer page, the drive should appear on the left hand column under Network as **AMPED_USB**.

To Map the Network Drive:

- a) Click the **Start** button.
- b) Click **Computer**.
- c) Click **Map Network Drive** from the top bar.
- d) Select a drive letter (any), then enter in the folder field either of the following depending on which USB port is being used:
\\AMPED_USB\usb3 or **\\router's LAN IP address\usb3**
- e) If the drive fails to open, click **browse** and locate **AMPED_USB** under Network.

Windows XP

To access the drive from your Windows desktop:

Note: If the USB drive does not appear automatically under your Networked devices (Windows 7, Vista or Mac OS X), you will need to Map the Network Drive.

- a) Click the **Start** button.
- b) Click **My Computer**.
- c) Click on **My Network Places** and locate the drive named **AMPED_USB**.

To Map the network drive:

- a) Click the **Start** button.
- b) Right Click **My Computer** and select **Map Network Drive**.
- c) Select a drive letter (any), then enter in the folder field either of the following depending on which USB port is being used:
\\AMPED_USB\usb3\ or \\router's LAN IP address\usb3
- d) If the drive fails to open, click **browse** and locate **AMPED_USB** under Network.

Mac OS X

To access the drive from your Mac desktop:

Note: If the USB drive does not appear automatically under your Networked devices, you will need to Map your Network Drive (Instructions below).

- a) Open **Finder**.
- b) On the left hand menu, under Shared, click **AMPED_USB**.

To Map the network drive:

- a) Open **Finder**.
- b) From the menu on the top of the desktop, select **Go**.
- c) Select **Connect To Server** from the drop down menu.
- d) Enter the address of the network drive: *smb://amped_usb/usb3*
- e) Then click **Connect**.

If the network drive does not appear on your Mac desktop, follow these steps:

Open Finder.


- i. Select Preferences from the drop down menu.
- ii. Check show "Connected Servers".
- iii. The drive should now appear on your desktop.

Firewall Settings: Port Filtering

Port Filtering is a security measure that prevents users from using specific ports for reasons other than what those ports were originally intended for. For example, TCP port 21 is traditionally used for FTP. However, there is nothing stopping a user from using port 21 for purposes other than FTP access. By enabling Port Filtering on TCP port 21, only FTP communications would be allowed. No other types of communication would be allowed on this port.

Hackers may sometimes scan for all open ports on your network as a method of hacking into your network. Port Filtering and other firewall features help to prevent this from happening.

To set up Port Filtering, select a range of ports you wish to filter. If you are trying to filter a single port, enter the port number twice. (For example, Port 21: 21 – 21) Select the Protocol of the port you are filtering. If you do not know what protocol you wish to filter, select “Both.”

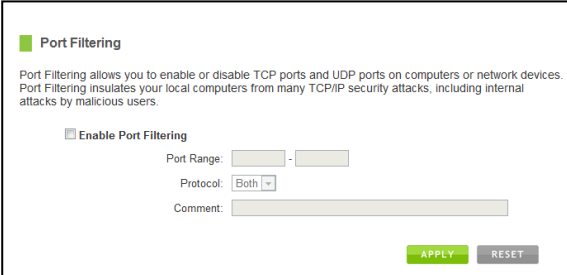

Port Filtering

Port Filtering allows you to enable or disable TCP ports and UDP ports on computers or network devices. Port Filtering insulates your local computers from many TCP/IP security attacks, including internal attacks by malicious users.

☐ Enable Port Filtering

Port Range: -

Protocol:

Comment:

Firewall Settings: Port Forwarding

Port Forwarding is a rule that tells the Router that if a specific type of request comes in on a specific port, then that request should be forwarded to a specific device on the private network.

Port Forwarding is often used for setting up servers, cameras and other devices that require remote access.


Enable Port Forwarding: Enables designated ports to begin forwarding.

IP Address: The IP address of the device behind the Firewall that is being designated for Port Forwarding.

Protocol: Select UDP, TCP or Both for the protocols to be forwarded.

Port Range: Select a range of ports for the designated IP address that you wish to be forwarded.


Comment: Create a name that you can use to easily identify this Port Forwarding entry.

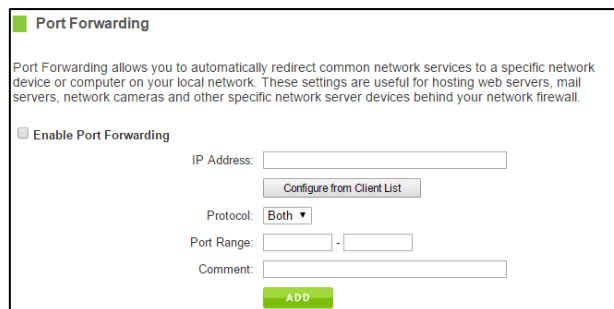

The screenshot shows a web-based configuration page titled "Port Forwarding". It includes a descriptive paragraph about the feature, a checkbox to "Enable Port Forwarding", and input fields for "IP Address", "Protocol" (a dropdown menu currently set to "Both"), "Port Range" (two adjacent input boxes separated by a hyphen), and a "Comment" field. A "Configure from Client List" button is positioned between the IP Address and Protocol fields. A green "ADD" button is at the bottom right of the form area.

Firewall Settings: DMZ (Demilitarized Zone)

A DMZ is a network location or IP Address that is not protected by the firewall. When enabling DMZ, it is important to note that the device on the IP Address designated as part of the DMZ does not have any protection from the Router's firewall. The device's only security would be those built into the operating system.

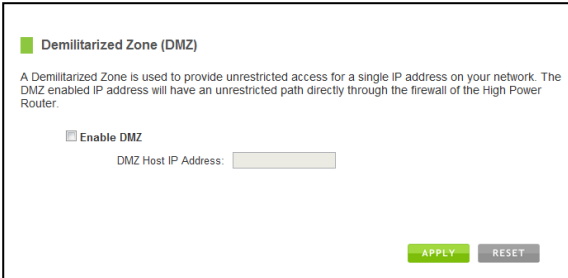

The screenshot shows a configuration window titled "Demilitarized Zone (DMZ)". It contains a descriptive paragraph about the DMZ function, a checkbox for "Enable DMZ", a text input field for "DMZ Host IP Address:", and two buttons at the bottom right: "APPLY" and "RESET".

Demilitarized Zone (DMZ)

A Demilitarized Zone is used to provide unrestricted access for a single IP address on your network. The DMZ enabled IP address will have an unrestricted path directly through the firewall of the High Power Router.

☐ Enable DMZ

DMZ Host IP Address:

APPLY **RESET**

As a general safety rule, devices placed on the DMZ should not have any other network connections to any other devices.

Enable DMZ: Enables the Demilitarized Zone.

DMZ Host IP Address: The designated IP Address of the network device to have unrestricted access through the Router's Firewall.

Firewall Settings: Denial of Service

A Denial of Service attack is an attempt by a user (or users) to make a server's or network's services unavailable. The user sends a server multiple requests with false return addresses.

The server will attempt to respond by sending a request back to the user; however, since the address is false, the server will wait for a response before closing the connection. When multiple requests like this occur, servers may often get overloaded with too many requests and stop functioning altogether. This is a typical DoS attack, although DoS attacks may not be limited to this type of attack.

The Router can assist in preventing these types of attacks by scanning the network for patterns of activity that represent DoS attacks. If a pattern comes in frequently, the Router can attempt to block messages containing that pattern and thus protect the server from becoming overloaded and unresponsive.

Denial of Service

The High Power Router can prevent specific DoS attacks from entering your network. A Denial of Service (DoS) attack is characterized by an explicit attempt by malicious users to prevent legitimate users from use of a specific internet service. To activate your protection, enable the DoS Prevention below and configure the specific settings.

☐ Enable Denial of Service (DoS) Prevention

☐ Whole System Flood: SYN
 Packet/Second

☐ Whole System Flood: FIN
 Packet/Second

☐ Whole System Flood: UDP
 Packet/Second

☐ Whole System Flood: ICMP
 Packet/Second

☐ Per-Source IP Flood: SYN
 Packet/Second

☐ Per-Source IP Flood: FIN
 Packet/Second

☐ Per-Source IP Flood: UDP
 Packet/Second

☐ Per-Source IP Flood: ICMP
 Packet/Second

☐ TCP/UDP PortScan
 Sensitivity

☐ ICMP Smurf

☐ IP Land

☐ IP Spoof

☐ IP TearDrop

☐ PingoDeath

☐ TCP Scan

☐ TCP SynWithData

☐ UDP Bomb

☐ UDP EchoChargen

Select All

Clear All

☐ Enable Source IP Blocking
 Block Time (sec)

Apply

Quality of Service

QoS prioritizes and guarantees network performance for a specific application for an IP Address range or MAC Address. You can also enter only an IP address or MAC address without selecting an application if you wish to prioritize all traffic for a specific device.

QoS is often used for applications that require steady bandwidth. Common applications include VoIP phones, video streaming applications (i.e. DVRs, network cameras, video on demand), online gaming and servers.

It is important to note that while QoS helps to prioritize and guarantee bandwidth for a specific device or application, it does not provide you with more bandwidth than you currently have.

For example, if your Internet Provider rates your internet connection speed at 5Mbps, QoS will not improve that connection. QoS helps you better manage the 5Mbps that you have so that the bandwidth is prioritized for devices on your network that may need the provided 5Mbps more than other devices. However, if you have an application that requires more than 5Mbps of steady bandwidth, the application will continue to experience “lag” with or without QoS since your available bandwidth is less than the required bandwidth of your application.

All QoS rules will be listed under the QoS Rule Table

Management: System Status

The System Status provides you with a snapshot of your Router's current connections and settings.

The System Information section provides you with the router's firmware version and build. This is used to help our support department determine what firmware version your device is running. The Current Date / Time is the setting for the system clock. If this time is off, go to the System Clock section and configure your system time.

The Internet Connection Status displays the information from your Internet Provider. If for some reason your Internet connection stops working, you may try running through the Basic Setup Wizard again or contact our support department at 888-573-8820.

The Wireless Settings shows the details of the 2.4GHz and 5.0GHz wireless networks.

The Local Area Network settings displays the current configurations for local network IP address and DHCP server settings.

System Status

System Information

Serial number: 2018071200800
Uptime: 0day 0h 20m 40s
Firmware Version: 1.01.14
Build Time: Wed Sep 14 18:54:32 CST 2018
Current Date / Time: 9/19/2018 23:49:45

Internet Connection Status

Internet Connection Type: Connected
IP Address: 192.168.10.19
Subnet Mask: 255.255.255.0
Default Gateway: 192.168.10.1
DNS Server: 192.168.10.1
MAC Address: 00:50:5c:67:08:04

5GHz Wi-Fi Network Settings

Band: 5 GHz (A+H+V+AC)
SSID: Ampel_ALLY_0801
Channel Number: Auto (30)
Encryption: Disabled
BSSID: 00:50:5c:67:08:03
Associated Clients: 0

2.4GHz Wi-Fi Network Settings

Band: 2.4 GHz (B+G+N)
SSID: Ampel_ALLY_0801
Channel Number: Auto (2)
Encryption: Disabled
BSSID: 00:50:5c:67:08:02
Associated Clients: 1

Local Area Network Settings

Router IP Address: 192.168.3.1
Subnet Mask: 255.255.255.0
DHCP Server: Enabled
MAC Address: 00:50:5c:67:08:01
DHCP Lease Time: 480 minutes

Extender Connection Status

IP Address	MAC Address	Channel Number	Signal Strength
<div>REFRESH</div>			

Management: Network Statistics

Network statistics shows the data activity for each connection type on the Router (Internet, Wireless and Wired).

The Wireless Connection statistics shows all data activity for both the 2.4GHz and 5.0GHz wireless networks separately.

The Wired Connection statistics shows all data activity for all users physically connected to the wired ports on the Router.

The Internet Connection statistics shows the data activity for all upload and download data over your Internet connection.




5.0GHz Wireless Connection:	Sent Packets: 8122582
	Received Packets: 6384185
2.4GHz Wireless Connection:	Sent Packets: 3916818
	Received Packets: 3916795
Wired Connection:	Sent Packets: 8187387
	Received Packets: 8198732
Internet Connection:	Sent Packets: 8151813
	Received Packets: 2101885

Management: Dynamic DNS Settings

The Dynamic Domain Name System (DDNS) is a method to keep a web domain name, or web address, linked to a changing IP address as most Internet Providers do not provide static IP addresses.

To use DDNS, you must first set up an account with a DDNS provider. The Router supports two of these providers (TZO and DynDNS). Once the DDNS service has been set up and configured correctly on the Router, the DDNS service will constantly track the IP address of your Internet connection. Each time your Internet Provider changes your IP address, the Router will inform the DDNS service and the DDNS service will update your new IP address. The DDNS web domain that you have chosen to use will then be updated to redirect to your new Internet IP address.

The DDNS service makes it so you never have to check or remember your Internet IP address. This feature is typically used for users running servers, network cameras and other devices that require remote access.

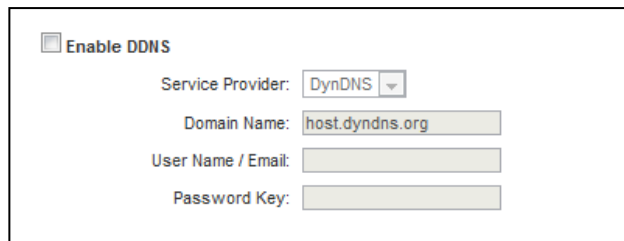

☐ Enable DDNS

Service Provider: DynDNS ▼

Domain Name: host.dyndns.org

User Name / Email:

Password Key:

Management: System Clock

Maintain the internal clock for the Router by syncing with your computer's time or over the Internet. Your system clock settings need to be accurate in order for logs and wireless access schedules to work correctly.

■ System Clock

Maintain the system clock settings by syncing the system time with the time on your computer. The Router's clock is used to make sure your Access Schedules and logs function correctly and on time.

Sync with your Computer

Current Time: Month Day Year
 Hour Minute Sec

Sync with your computer:

Sync with the Internet

☒ Enable Network Time Protocol (NTP) Updates

Select a Time Zone:

Manual NTP Server:

Management: System Logs

The System Log is useful for viewing the activity and history of your Router. The System Log is also used by Amped Wireless technicians to help troubleshoot your router when needed. It is recommended that you enable all logs in the event that troubleshooting is required.

All log entries will be deleted each time the Router reboots or is powered off.

Management: Upgrade Firmware

Amped Wireless continuously updates the firmware for all products in an effort to constantly improve our products and their user experiences. When connected to an active connection with Internet access, ALLY can automatically check for new firmware updates that are available by pressing **Check Now**. Follow the prompts to complete the upgrade process.

Before upgrading the firmware, remember to always save your current settings first by going to the **Save/Reload Settings page**. The firmware upgrade process may reset the settings of the ALLY to default settings.

The screenshot shows the 'Upgrade Firmware' page. At the top, it states: 'The Router uses software (firmware) to operate. In the event that a new firmware file is available you may update it here. During the upgrade process DO NOT power off the device to avoid damage to the Router.' Below this, it displays 'Current Firmware Version: 1.01.14' and 'Build Time: Wed Sep 14 16:54:32 CST 2016'. A green box with white text says 'Important: Before upgrading firmware, always save your current settings from the Save/Reload Settings page.' There is a checkbox labeled 'Reset settings to default after updating the firmware. If left unchecked, the Router will save your current settings after the updating the firmware.' Below that, a section titled 'Check for New Firmware Updates: (Internet connection required.)' contains a green 'CHECK NOW' button and a link 'Searching online for new Firmware updates.' At the bottom, a section titled 'Or Manually Upgrade Firmware from a File:' includes a link to the 'Support Webpage' and a file selection area with a 'Choose File' button, 'No file chosen' text, and 'Upload' and 'Reset' buttons.

Manual Firmware Upgrade: In the case that ALLY does not have access to the Internet, you can manually upgrade the firmware by downloading the firmware file from the Amped Wireless Elite Support website. The firmware update is downloaded as a zip file and you will need to have an unzipping program to open the file.

Inside the file will be a text document with details on the current firmware release and instructions on how to upgrade the firmware.

To manually upgrade your firmware:

- a) Download the file from www.ampedwireless.com/support and remember the location where you saved it. Firmware files may also be provided by Amped Wireless Elite Support Concierges.
- b) Click **Choose File** and locate the file.
- c) Click **Upload** to begin upgrading.

Note: Firmware files normally have a **.bin** file extension.


Management: Save and Reload Settings

Saving your current settings allows you to back-up your current settings which may be reloaded at a later time. This feature may be useful for testing new features and settings without having to worry about returning to a stable platform.

To save current settings:

- a) Click Save.
- b) Select a file name and location.

You may also reset the Router's settings to factory settings by pressing Reset. By resetting the Router, you will lose all previous configurations and will need to run the Basic Setup Wizard again to configure the Router's Settings.

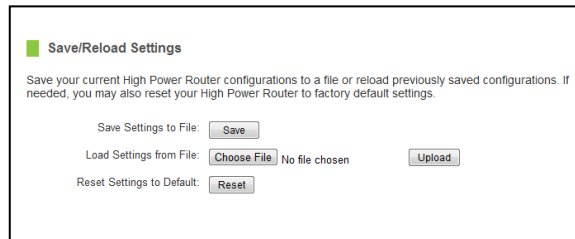

The screenshot shows a web interface titled "Save/Reload Settings". Below the title is a descriptive paragraph: "Save your current High Power Router configurations to a file or reload previously saved configurations. If needed, you may also reset your High Power Router to factory default settings." There are three sections of controls: 1. "Save Settings to File:" with a "Save" button. 2. "Load Settings from File:" with a "Choose File" button, the text "No file chosen", and an "Upload" button. 3. "Reset Settings to Default:" with a "Reset" button.

To load previously saved settings:

- a) Click Browse.
- b) Locate the previously saved settings file.
- c) Click Upload to restore the settings to the saved file.

Management: Access Code

If you wish to enable an access code to protect unauthorized access to the web menu and Setup Wizard, you may enter one here.

■ Access Code

Prevent unauthorized access to your Router's web-based configuration menu by providing a access code. If no protection is necessary, leave these fields blank and you will not be prompted for access code when accessing this web menu.

New Access Code:

Confirmed Access Code:

APPLY

RESET

TECHNICAL SPECIFICATION**ALLY Router**

Wireless Standard: 802.11a/b/g/n/ac

Frequency Band: 2.4/5GHz

Wireless Speed: 2.4GHz: 600Mbps (Tx/Rx)
5.0GHz: 1300Mbps (Tx/Rx)

Amplifier: 4 x 2.4GHz Internal Amplifiers
3 x 5.0GHz External Amplifiers
7 x Low Noise Amplifiers

Memory: 128MB DDR3

Processor: Dual Core Processor

Antennas: 4 x Internal High Gain Antennas

Ports: 3 x RJ-45 10/100/1000 LAN ports

1 x RJ-45 10/100 /1000 WAN ports

1 x USB 3.0 Port for Storage Devices

Warranty: 1 Year

DEFAULT SETTINGS

The default settings for your Router are listed here. If for some reason you need to return your Router back to default settings, hold down the Reset button on the back panel for 10 seconds. The Router will reset back to factory settings as listed below:

IP Address: 192.168.3.1

Web Menu Access: <http://setup.ampedwireless.com>

2.4GHz and 5GHz Wireless SSID: Amped_ALLY_XXXX

Wireless Security Key (WPA/WPA2 Mixed Mode): None

TROUBLESHOOTING & SUPPORT INFORMATION

We are here to help. If you have any issues with your Router please contact us.

To contact Amped Wireless' Technical Support use one of the following methods:

Phone: 888-573-8820

Email: techsupport@ampedwireless.com

Web: www.ampedwireless.com/support

Troubleshooting

The tips in this guide are listed in order of relevance. Try solution (a) before trying solution (b), etc.

Troubleshooting: ALLY Setup Issues (Using the app)

During Setup on the ALLY app I get an error message that says: “No Internet detected” and I cannot finish the setup.

- a) Check that your modem is powered on and your Ally router is connected properly. Try setup again.
- b) Reset your modem by holding down the reset button located on the back of the modem for approximately five seconds. Try the automatic configuration again.
- c) Static IP: Your Internet connection may require a static IP setting. Check with your ISP to obtain the IP settings. You can set Static IP using the ALLY app by running through the setup process and tapping “Manually configure your ALLY” when the Connection Error page appears.
- d) DSL Connections: Your Internet connection may require login information. If you are using PPPoE mode, you will need to manually configure your Internet connection settings and obtain your username and password. You can set a PPPoE connection using the ALLY app by running through the setup process and tapping “Manually configure your ALLY” when the Connection Error page appears.

During the setup process, my new Wi-Fi settings are not successfully applied.

- a) During the setup process your mobile device will disconnect from the ALLY Wi-Fi network as it applies the new Wi-Fi settings to the ALLY Router. At this time, your mobile device may have joined another Wi-Fi network that does not have Internet access. Please check that your mobile device is connected to a Wi-Fi network with an active Internet connection and go back to the ALLY app.

I see an error “No Connection to ALLY” when using the ALLY app.

- a) The ALLY Router and the ALLY app can no longer communicate. Check that the ALLY Router is connected to the modem correct. Reboot your modem or the ALLY Router if necessary.
- b) If you are using an Android mobile device, please check that your “Smart Network Switch” is toggled off.

How can I remove my ALLY Router from my ALLY app account?

- a) Go to the ALLY app and tap on the settings icon on the top right corner of the home screen. From the settings screen tap “Erase all data & disconnect ALLY”. This will remove your ALLY Router and allow you to set the ALLY Router to a new account or an existing account.

Which mobile devices can I use to set up and manage my ALLY?

- a) To set up your ALLY with the ALLY app, you need an Android or iOS device with an Internet connection. Currently we support Android 4.4 and up and iOS 9 and up.

How do I set up my ALLY if I don't have cell data service?

- a) If you cannot download the app, please access the web setup by connecting your mobile device to the ALLY's Wi-Fi network. Open a web browser and go to <http://setup.ampedwireless.com>. Follow the instructions on the screen to complete setup.

Troubleshooting: Using the ALLY App**My Network****How can I tell if my network is up and running?**

- a) If your network is up and running, the header of the Home screen of the ALLY app is green, and you'll see a message that says "ALLY is online". If your network is offline, the header is red, and it will say "ALLY is offline".

How do I find my Wi-Fi network password?

- a) Open the ALLY app.
- b) On the Home screen, tap the Devices button to open the Connected Devices list.
- c) Tap the + sign in the top-right corner. Here you can see the network names and passwords for all your Wi-Fi networks.

NOTE: You should be careful about who you give your passwords to.

How do I change my Wi-Fi network name and password?

- a) Open the ALLY app.
- b) On the Home screen, tap the gear icon in the upper-right corner to open the Settings menu.
- c) Under the Network section, tap Edit Wi-Fi Networks.
- d) To edit, tap the network name or the network password. Enter a new network name and/or network password.

NOTE: Passwords must be 8 to max 15 characters long.

TIP: Tap the magic wand to create a strong password automatically.

- e) When done, tap Save.

How do I share my Wi-Fi network with guests?

- a) ALLY allows you to create a Guest Wi-Fi for sharing your Wi-Fi without giving access to your main network where all your personal devices are communicating. To create a Guest Wi-Fi follow the steps below.
- b) Open the ALLY app.
- c) On the Home screen, tap the gear icon in the upper-right corner to open the Settings menu.
- d) Under the Guest Network section, toggle the Guest Wi-Fi switch to turn on.
You can disable the Guest Wi-Fi at any time by following the same steps.

How do I identify the devices on my network?

- a) Devices that show up in your devices list may look unfamiliar because their names are confusing or unclear. If you come across a device that you don't recognize, look for the manufacturer's name on the Devices screen and see if you recognize it. If that doesn't work, you may also look up your device's MAC address and compare it to the MAC address that is shown on the Device Settings screen. The MAC address of a device can usually be found in the About Device section in your device's Settings.

How do I see how many devices are on my network?

- a) You can see a list of all registered devices and whether they are online or offline on the Devices screen.

I see an error “No Connection to ALLY” when using the ALLY app.

- a) The ALLY Router and the ALLY app can no longer communicate. Check that the ALLY Router is connected to the modem correct. Reboot your modem or the ALLY Router if necessary.

Cyber Security**How does AVG protection work?**

- a) When enabled AVG protection scans the Internet traffic on your network and automatically blocks known malicious links or websites right on the router, before they reach your connected devices.

Do I need an Antivirus if I have AVG protection enabled?

- a) AVG protection provides an additional layer of security for your connected devices. It does not replace an antivirus product. We recommend that you install and use an up-to-date antivirus product.

Parental Controls**Filtered website is still showing.**

- a) Website Filtering may take some minutes to come into effect across your devices. If you keep having trouble with Website Filtering, please feel free to give us a call.

I can still launch apps that I blocked.

- a) App Blocking allows you to manage Internet access for individual apps and services. Apps that do not require an Internet connection, like games, may still work.

Curfew does not turn off devices.

- a) Curfew lets you set times for when you want your family members to be offline and not access the Internet. Curfew does not lock devices. Apps and services that can be launched and used without an Internet connection may still work.

Manage ALLY**Can my ALLY network have more than one administrator?**

- a) Currently, ALLY only allows one administrator per network.

I forgot my password.

- a) Try to login to the ALLY app and tap on Forgot Password. Enter your email address and follow the instructions on the screen.

How do I change my ALLY app password?

- a) Go to the AVG My Account website: <https://myaccount.avg.com>. Log in using your ALLY app details. Then select My Profile in the menu bar. Here you can change your ALLY account password.

How can I remove my ALLY Router from my ALLY app account?

- a) Go to the ALLY app and tap on the settings icon on the top right corner of the home screen. From the settings screen tap "Erase all data & disconnect ALLY". This will remove your ALLY Router and allow you to set the ALLY Router to a new account or an existing account.

How do I check if there is a firmware update available?

- a) ALLY app will automatically alert you if a firmware update is available when you use the app. If you want to check for updates, go to Settings and tap Firmware Update.

What type of data does ALLY collect and why?

- a) We care about your privacy and want you to have more control over how we collect and use your data. Please read our privacy policy to understand what data we collect, why we collect it, and how we use it. To read the ALLY App Privacy and Cookie Policy, visit:
<http://www.chimewifi.com/privacypolicy/>

Troubleshooting: Web Menu Issues

I wish to configure advanced settings on the Router such as changing Wi-Fi channels, configuring port forwarding, Quality of Service settings, etc.

- a) To access the advanced settings menu, connect to the ALLY's Wi-Fi network. Open a web browser and go to: <http://setup.ampedwireless.com>. You will be prompted for a password which can be found on the ALLY app by going to Settings (icon on the top right corner of the status page) and then going to Advanced settings. Some features on the Web Menu will be disabled when the Router is in use with the ALLY app.

I wish to use the ALLY Router without the ALLY app. How do I do this?

- a) If you have never set the ALLY Router up using the ALLY app follow these steps: Power on the ALLY Router and connect to the ALLY's Wi-Fi network. Open a web browser and go to: <http://setup.ampedwireless.com> to access the web menu and web based setup wizard. Follow the steps to configure your ALLY Router.
- b) If you have previously configured the ALLY Router using the ALLY app and you wish to no longer use the ALLY app with the Router follow these steps. While the ALLY Router is powered on, reset the ALLY Router by pressing the Reset button on the bottom of the Router for 10 seconds. The status light should blink rapidly when the Router has been reset. Once this is done, follow the steps in "a" to configure the Router using the web menu.

I entered setup.ampedwireless.com and it failed to open the Setup Wizard.

- a) Make sure your computer is connected to the Router using the included Ethernet cable. Do not try to connect with a wireless connection. Ensure that the power on the Router is on.
- b) Check that your computer IS NOT connected to any wireless networks. If it is, disable your Wi-Fi connection and disconnect from all wireless networks. Reboot the router and try again.
- c) Close your current web browser and reopen it. Use Google Chrome or Internet Explorer (v8.0 and up).
- d) Open your web browser and enter 192.168.3.1 into the web address bar.

- e) If you can access the web menu, but not the Setup Wizard, the Router may have previously been configured. There is a link to re-access the Setup Wizard from the Dashboard. Scroll to the bottom of the Dashboard page to find the Setup Wizard link.
- f) Another way to access the Setup Wizard is to reset the Router to default settings by holding the Reset Button (located on the back panel) for ten (10) seconds and try again. The Setup Wizard will always appear if the Router has not yet been configured. After it has been configured the Dashboard will appear instead.

I entered setup.ampedwireless.com and it failed to open the Web Menu Dashboard.

- a) Make sure your computer is connected to the Router using the included Ethernet cable. Do not try to connect with a wireless connection. Ensure that the power on the Router is on.
- b) Check that your computer IS NOT connected to any wireless networks. If it is, disable your Wi-Fi connection and disconnect from all wireless networks. Reboot the router and try again.
- c) Close your current web browser and reopen it. Use Google Chrome or Internet Explorer (v8.0 and up).
- d) Open your web browser and enter 192.168.3.1 into the web address bar.
- e) If the Setup Wizard appears instead of the Dashboard, the Router has not yet been configured. Complete the Setup Wizard or skip the Setup Wizard to access the Dashboard.
- f) Reset the Router to default settings by holding the Reset Button (located on the back panel) for ten (10) seconds and try again. Complete the Setup Wizard or skip the Setup Wizard to access the Dashboard.

I have entered `setup.ampedwiress.com`, but I cannot enter the Web Menu. I am prompted for an access code but it does not let me continue.

- a) Check that you are using the right access code.
- b) If you forgot your login and password for the Web Menu, reset the Router to default settings and try again. To reset the Router to default:
 - On the back panel of the router find the Reset button.
 - Use a pen tip to hold down the reset button for 5 to 10 seconds.
 - The router will reinitialize and restore its default settings.

I am having problems with features on the Web Menu. When clicking buttons, it does not register my action.

- a) Check that you are using a supported web browser: Google Chrome, Internet Explorer (8.0 and up) and Safari. If you are using an unsupported web browser, such as Firefox, please change to one of the supported web browsers and try again.

Troubleshooting: Internet Connection Issues**The ALLY Setup could not automatically configure my Internet connection.**

- a) Reset your modem by holding down the reset button located on the back of the modem for approximately five seconds. Try the automatic configuration again.
- b) Static IP: Your Internet connection may require a static IP setting. Check with your ISP to obtain the IP settings.
- c) DSL Connections: Your Internet connection may require login information. If you are using PPPoE mode, you will need to manually configure your Internet connection settings and obtain your username and password.
- d) Cable Modem: Your Internet connection may require you to clone your MAC address. Go to More Settings > IP Settings > Internet Network (WAN) and select Automatic/Dynamic (DHCP) from the drop down menu. Clone your PC's MAC address under the DNS settings.

I have gone through the Setup Wizard and I do not have Internet.

- a) Detach the power adapter and disconnect all computers from the ALLY Router.
Turn off the power to your modem and remove the backup battery (if available).
Wait 2 minutes and power the modem back on. Wait 2 minutes for the modem to initialize.

Power on the Router and connect your computer to the router.

Open your web browser and try to access the Internet.

- b) Check that your Internet connection through the modem is working. Power off the ALLY Router and disconnect your computer from the router.

Turn off the power to your modem and remove the backup battery (if available).

Wait 2 minutes and power the modem back on. Wait 2 minutes for the modem to initialize.

Attach your computer directly to the modem and power on your computer.

Open your web browser and check to see if you can go online. If you cannot go online, there may be a problem with your Internet provider. Please contact your Internet provider to troubleshoot your connection issues.

My Internet connection is unstable and drops intermittently.

- a) Power off your computer, the ALLY Router and your modem.

Power on your modem and wait 2 minutes.

Power on the Router and wait 1 minute for the router to initialize.

Power on your computer and try again.

- b) Check to see if other computers are also having this problem. If they are not, check to see if your anti-virus software or firewall software is conflicting with your Internet connection. You may also try temporarily disabling all firewalls or anti-virus software to see if that is what is causing the problem.

- c) If you have a PPPoE or another Internet connection requiring login credentials, you may need to adjust the reconnection or time out settings. If you are using the Web Menu for setup: Go to the IP Settings > Internet Connection (WAN) page and configure your Internet connection to automatically reconnect. For ALLY App based setups select manual setup once the Internet connection detection error page appears.
- d) If you are using Windows XP, check that your computer is using Service Pack 2 or greater. Windows XP users with Service Pack 1 may experience intermittent wireless connections.

My Internet connection is abnormally slow.

- a) Check with your Internet provider to ensure that they are not experiencing system wide issues.
- b) Check with speedtest.net to see the speed of your Internet provider. Connect directly to your modem with your computer and check speedtest.net again. If the speed results are the same, the issue is with your Internet provider. Please contact your provider to troubleshoot the issue.
- c) Check the Internet connection speed on another computer that is connected to the Router. If the other computer does not have Internet speed problems, the networking equipment or operating system on your original computer may be outdated or may be experiencing problems. Viruses and other software may slow down a computer's overall speed significantly.
- d) If you are using a wireless connection to the Router, check that your wireless signal strength is above 3 bars. If not, you may need to move closer to the Router.

Troubleshooting: Local Network Issues

My computer is getting an IP address of 169.254.x.x and Windows says “Limited or no Connectivity”.

- a) Make sure the Router is powered on.
- b) Check that your computer's network adapter is enabled and is set to “Obtain IP Address Automatically”.
- c) Release and Renew your IP Address on your computer. To do this on a Windows computer:
 - Click **Start** > **Run** and type **CMD**.
 - When the command prompt appears, type **ipconfig/release** and press **enter**.
 - Type **ipconfig/renew** and press **enter**.
 - Check that your computer's network adapter has an IP address of **192.168.3.x**
- d) Restart your computer and check again.
- e) Restart the Router and check again.
- f) Make sure DHCP is enabled in the Router's Web Menu (Go to More Settings > IP Settings > Local Area Network (LAN) > DHCP Settings).
- g) Check that your Firewall or Anti-Virus software is not preventing you from accessing shared devices on you network.

Troubleshooting: Wireless Issues

I am only getting 3 or 4 wireless signal bars on my wireless computer and I am within 10 feet of the wireless router.

- a) Step back at least 10 feet from the ALLY Router and check your signal again. The ALLY Router emits high power, long range Wi-Fi signals that may confuse your wireless adapter signal reading at close range. The speed and signal are at 100%, however your readout may not be displaying the data correctly.
- b) Change the wireless channel on your ALLY Router to find a channel with less interference. Do this for both 2.4GHz and 5.0GHz wireless networks. To assist in finding the right channel, download the Amped Wireless Wi-Fi Analytics Tool for your Android or PC. Changing the Wi-Fi channels can be done via the Web Menu and not the ALLY app.

I am not getting a strong wireless connection from all distances from the ALLY Router.

- a) Check if other computers are experiencing the same issue. If not, the wireless adapter in your computer may be experiencing problems or maybe older and have poor wireless performance.
- b) Avoid placing the ALLY Router near or around Microwaves and 2.4GHz wireless phones.
- c) Avoid using wireless channels that are crowded. Change the wireless channel on the ALLY Router.

- d) Place the ALLY Router in a higher location near the center of your desired coverage location.

My wireless adapter does not connect at the maximum wireless speed.

- a) Your wireless network adapter may be outdated and have older wireless technology not capable of achieving the wireless network speeds of the Router. To achieve maximum wireless speeds, it is required that you have an 802.11n (2.4GHz) or 802.11ac (5.0GHz) adapter. To obtain a data rate of 1733Mbps on the 5GHz band or 800Mbps on the 2.4GHz band the network adapter used to connect to the Router must support the same data rates.
- b) Wireless speeds degrade as you get further away from the wireless router.
- c) Check that the wireless channel set on the Router is not crowded. Try changing the wireless channel to another channel and test the speed again.
- d) Do not use Internet websites (i.e. speedtest.net or other websites) to test your wireless speeds. Speed test websites measure your Internet connection speed, which is controlled by your Internet provider. Wireless speeds are for your local network and not your Internet connection. To test wireless speeds, a local test or file transfer will be required to test the true wireless speed.

I cannot tell if MU-MIMO simultaneous data transfers are enabled and functioning.

- a) Check that the connected devices support MU-MIMO technology. All connected devices must also support MU-MIMO to enable the MU-MIMO function. If the connected device does not support MU-MIMO it will function as a SU-MIMO (single-user MIMO) device.

I cannot connect my Windows Vista computer to the wireless network. I enter my wireless password and I see an error.

- a) Manually add a wireless network to your Vista computer:
 - Click Start, and then click Network.
 - Select Network and Sharing Center.
 - Click Manage Wireless Networks.
 - Click Add and select Manually create a network profile.
 - Type in the SSID, and select the type of security and enter your security key.
 - Select "Start this connection Automatically" and click Next.
 - Go to Network and Sharing Center and select Manage Network Connections.
 - Right click Wireless Network Connection and then select Status.
 - Click details and check to see that your IPv4 IP address is correct (192.168.3.x).
- b) Disable IEEE 802.1x authentication on your computer.

I cannot connect my Windows XP computer to the wireless network. I enter my wireless password and I see an error.

- a) Make sure your computer has the latest Windows Service Pack. Windows Service Pack 1 does not support WPA security. Upgrade to the latest Service Pack to support the latest wireless encryption.
- b) Manually add a wireless network to your XP computer.
- c) Disable IEEE 802.1x authentication.

Troubleshooting: USB Storage Issues

I cannot access my USB storage device after I plug it into the ALLY Router.

Follow the instructions below for your operating system. The USB Storage function is configured via the Web Menu and not the ALLY App.

Windows 7 and Vista

To access the drive from your Windows desktop:

Note: If the USB drive does not appear automatically under your Networked devices (Windows 7, Vista or Mac OS X), you will need to Map the Network Drive.

- a) Click the **Start** button.
- b) Click **Computer**.
- c) On the **Computer** page, the drive should appear on the left hand column under **Network** as **Amped_USB**.

To Map the Network Drive:

- a) Click the **Start** button.
- b) Click **Computer**.
- c) Click **Map Network Drive** from the top bar.
- d) Select a drive letter (any), then enter in the folder field either of the following depending on which USB port is being used:
\\AMPED_USB\usb3\ or \\router's LAN IP address\usb3
- e) If the drive fails to open, click **browse** and locate **Amped_USB** under **Network**.

Windows XP

To access the drive from your Windows desktop:

Note: If the USB drive does not appear automatically under your Networked devices (Windows 7, Vista or Mac OS X), you will need to Map the Network Drive.

- a) Click the **Start** button.
- b) Click **My Computer**.
- c) Click on **My Network Places** and locate the drive named **Amped_USB**.

To Map the network drive:

- a) Click the **Start** button.
- b) Right Click **My Computer** and select **Map Network Drive**.
- c) Select a drive letter (any), then enter in the folder field either of the following depending on which USB port is being used:
\\AMPED_USB\usb3 or **\\router's LAN IP address\usb3**
- d) If the drive fails to open, click **browse** and locate **Amped_USB** under Network.

Mac OS X

To access the drive from your Mac desktop:

Note: If the USB drive does not appear automatically under your Networked devices (Windows 7, Vista or Mac OS X), you will need to Map the Network Drive.

- a) Open **Finder**.
- b) On the left hand menu, under Shared, click **Amped USB**.

To Map the network drive:

- a) Open **Finder**.
- b) From the menu on the top of the desktop, select **Go**.
- c) Select **Connect To Server** from the drop down menu.
- f) Enter the address of the network drive: **Amped_USB** or *shared disk IP address*, then click **Connect**

I cannot access my USB storage device remotely.

- a) Insert a USB storage device, such as a flash drive or external hard drive, to the USB port on the back or side of the Router.
- b) From the USB Storage/FTP Server page of the web menu, enter a FTP server name.
- c) Select whether you wish to have an open or secured access to your FTP server.
- d) Open your FTP client software (not provided) and create a new FTP connection.
To find a FTP client software, go to downloads.com and search for FTP client software. Download a FTP software suitable for your needs and continue with the next step.
- e) Enter the Internet Address for the router as the IP address for your FTP connection. When prompted enter your login information to access the USB Storage device remotely.

The Router freezes or I cannot access the web when a USB storage device is connected.

- a) Remove the USB storage device from the Router and reboot it by unplugging the power adapter. Once rebooted, try inserting the USB storage device again.
- b) Make sure your UBS storage device is not corrupted and is working properly and try again.

Additional USB Storage troubleshooting tips may be available online at the Amped Wireless Elite Support Center. Please check the Elite Support Center for the latest updates and features for USB Storage support.

WARRANTY AND REGULATORY INFORMATION

The Amped Wireless (A division of Newo Corporation, Inc.) Limited Warranty

Warranty Period: The Amped Wireless Limited Warranty is for one (1) year from the date of purchase for new products. Refurbished products carry the Limited Warranty for thirty (30) days after the date of purchase.

Guarantee: Amped Wireless warrants to the original purchaser that the hardware of this Amped Wireless product shall be free of defects in design, assembly, material, or workmanship.

Conditions: The Amped Wireless Limited Warranty is for repair or replacement only at the sole discretion of Amped Wireless. Amped Wireless does not issue any refunds for purchased product. In the event that Amped Wireless is unable to repair or replace a product (i.e. discontinued product), Amped Wireless will offer a credit toward the purchase of a similar product of equal or lesser value direct from Amped Wireless. Any repaired or replacement products will be warranted for the remainder of the original Warranty Period or thirty (30) days, whichever is longer. Amped Wireless reserves the right to discontinue any of its products without notice, and disclaims any limited warranty to repair or replace any such discontinued product. Amped Wireless reserves the right to revise or make changes to this product, its documentation, packaging, specifications, hardware, and software without notice. If any portion of the Amped Wireless Limited Warranty is found to be unenforceable, its remaining provisions shall remain in effect. All costs of shipping the product to Amped Wireless shall be borne solely by the purchaser.

Limitations: IN NO EVENT SHALL AMPED WIRELESS' (NEWO CORPORATION'S) LIABILITY EXCEED THE AMOUNT PAID BY YOU FOR THE PRODUCT FROM DIRECT, INDIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THE PRODUCT, ITS ACCOMPANYING SOFTWARE, ACCESSORIES OR ITS DOCUMENTATION. The Amped Wireless Limited Warranty does not apply if: (a) the product assembly has been opened or damaged, (b) the product or its software or firmware has been altered or modified, (c) the product has not been used and installed in accordance to Amped Wireless' instructions, (d) the product has been subjected to misuse, or negligence. Amped Wireless does not guarantee the continued availability of a third party's service for which this product's use or operation may require. The Amped Wireless Limited Warranty does not protect against acts of God, vandalism, theft, normal wear and tear, obsolescence and environmental damages such as, but not limited to, weather and electrical disturbances. The Amped Wireless Limited Warranty is the sole warranty for this product. There are no other warranties, expressed or, except required by law, implied, including the implied warranty or condition of quality, performance merchantability, or fitness for any particular purpose.

How to Claim Warranty: In the event that you have a problem with this product, please go to www.ampedwireless.com/support to find help on solving your problem. In the event that you cannot and need to file a warranty claim, please call Amped Wireless' Elite Support or visit <http://www.ampedwireless.com/support/center.html#rma> to obtain a Support Ticket Number (obtained from Technical Support Reps), fill out a Return Authorization (RMA) form and obtain a Return Authorization (RMA) number. A dated proof of original purchase and the RMA number is required to process warranty claims. You are responsible for properly packaging and shipping the product at your cost and risk to Amped Wireless. The

bearer of cost related to shipping repaired or replaced product back to the purchaser will be at the sole discretion of Amped Wireless and determined based on the details of each RMA case. Customers outside of the United States of America are responsible for all shipping and handling costs including custom duties, taxes and all other related charges.

Technical Support: The Amped Wireless Limited Warranty is not related to the terms, conditions and policies of Amped Wireless Elite Support offerings. For questions regarding support, please contact techsupport@ampedwireless.com.

Regulatory Information

FCC Statement and Declaration: Amped Wireless declares that this device complies with Part 15 of the FCC Rules and Regulations. Operation of this device is subject to the following two (2) conditions:

- (1) This device may not cause harmful interference.
- (2) This device must accept any interference received, including interference that may cause undesired operation.

FCC Notice: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try and correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the distance between the equipment and the receiver.

- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Caution and Safety Notices: Any changes or modifications (including the antennas) made to this device that are not expressly approved by the manufacturer may void the user's authority to operate the equipment. This device and its antenna(s) must not be co-located or operating in conjunction with any other antenna or transmitter. Avoid use of this product near water or during an electrical storm as there may be a remote risk of electrical shock from lighting. This product may contain lead, known to the State of California to cause cancer, and birth defects or other reproductive harm. Wash hands after handling. This device must always be used with a Listed Computer or device.

For product available in the USA/Canada market, only channel 1~11 can be operated. Selection of other channels is not possible. This device is restricted to indoor use when operated in the 5.15 to 5.25 GHz frequency range.

FCC requires this product to be used indoors for the frequency range 5.15 to 5.25 GHz to reduce the potential for harmful interference to co-channel Mobile Satellite systems.

FCC Radiation Exposure Statement: This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 23 cm between the radiator & your body.

The antennas used for this transmitter must be installed to provide a separation distance of at least 23 cm from all persons and must not be co-located or operating in conjunction with any other antenna or transmitter.

Industry Canada Statement: This device complies with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions:

- (1) this device may not cause interference, and
- (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Radiation Exposure Statement: This equipment complies with IC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 23 cm between the radiator and your body.

The transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

For product available in the USA/Canada market, only channel 1~11 can be operated. Selection of other channels is not possible.

The device for operation in the band 5150–5250 MHz is only for indoor use to reduce the potential for harmful interference to co-channel mobile satellite systems.

Déclaration d'Industrie Canada : *Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :*

- (1) l'appareil ne doit pas produire de brouillage, et
- (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Déclaration d'exposition à la radiation : Cet équipement respecte les limites d'exposition aux rayonnements IC définies pour un environnement non contrôlé. Cet équipement doit être installé et mis en marche à une distance minimale de 23 cm qui sépare l'élément rayonnant de votre corps.

L'émetteur ne doit ni être utilisé avec une autre antenne ou un autre émetteur ni se trouver à leur proximité.

Pour les produits disponibles aux Etats-Unis / Canada du marché, seul le canal 1 à 11 peuvent être exploités. Sélection d'autres canaux n'est pas possible.

Les dispositifs fonctionnant dans la bande 5150-5250 MHz sont réservés uniquement pour une utilisation à l'intérieur afin de réduire les risques de brouillage préjudiciable aux systèmes de satellites mobiles utilisant les mêmes canaux.

LEGAL NOTICES & DISCLAIMERS

Copyright Information and Trademark Usage Guidelines

© 2016 Amped Wireless / Newo Corporation. All rights reserved. Amped Wireless, Newo Corporation, and the Amped Wireless logo are registered trademarks or trademarks of Newo Corporation. All non-Amped Wireless trademarks, logos, brands and products are trademarks or registered trademarks of their respective owners. Amped Wireless does not claim any relation. Mention of non-Amped Wireless products and brands are for information purposes only and does not constitute an endorsement or affiliation.

Amped Wireless authorizes you to copy materials published by Amped Wireless solely for non-commercial use within your organization in support of Amped Wireless products. No other use of this information is authorized. Any copy of these materials which you make shall retain all copyright and other proprietary notices in the same form and manner as on the original. Except as specified above, nothing contained herein shall be construed as conferring by implication, estoppel or otherwise any license or right under any patent, trademark or copyright of Amped Wireless or any third party.

All contents of this product, including Software, are protected by copyright, except as permitted herein. No portion of the information may be reproduced without prior written permission from Amped Wireless. The

distribution, modification, publication and transmission of any content of this product for public or commercial purposes is strictly prohibited.

The Amped Wireless logo requires permission for use. For use of the Amped Wireless logo, please email legal@ampedwireless.com. Use of Amped Wireless' trademarks require the use of the proper trademark symbol in all usage cases.

The guidelines for trademark usage apply to all Amped Wireless customers, employees, vendors, consultants, licensees and any other third party.

Operating Temperature Information

This product is designed to operate in an environment with ambient temperatures ranging from 32° to 104°F. The device should be placed on a cool, flat surface and not on carpet or any other surface that may increase the operating temperature of the device. Do not block the vents on the device in anyway.

Disclaimers

Amped Wireless makes all attempts in providing accurate information on all media. However, Amped Wireless makes no warranty as to the accuracy of the information, including representations and warranties about the

accuracy of product specifications, marketing material, product availability, new product launch dates and all other content herein. Amped Wireless reserves the right to update and change information without prior notice. All information provided is provided "AS IS" with all faults without warranty of any kind. Either expressed or implied. Amped Wireless and its suppliers disclaim all warranties, expressed or implied including, without limitation. Amped Wireless and its suppliers shall not be liable for any indirect, special, consequential, or incidental damages including, without limitation, lost profits or revenues, cost of replacement goods, loss or damage to data arising out of the use or inability to use any Amped Wireless product, damages resulting from use of or reliance on information present, even with prior notice to Amped Wireless.

All non-Amped Wireless trademarks, logos, brands and products are trademarks or registered trademarks of their respective owners. Amped Wireless does not claim any relation. Mention of non-Amped Wireless products and brands are for information purposes only and does not constitute an endorsement or affiliation.

Product wireless range specifications are based on performance test results. Actual performance may vary due to differences in operating environments, building materials and wireless obstructions. Performance may increase or decrease over the stated specification. Wireless coverage claims are used only as a reference and are not guaranteed as each wireless network is uniquely different.

Maximum wireless signal rates are derived from IEEE 802.11 standard specifications. Actual data throughput may vary as a result of network conditions and environmental factors.

You agree and acknowledge that Amped Wireless is not responsible and will not be liable for any claims arising from (1) your downloading or use of any third party application that is used together with the Amped Wireless products, including the ALLY mobile application ("ALLY App") developed and supplied by AVG Netherlands B.V. ("AVG") (collectively "Third Party Applications") and (2) any privacy policy, end user agreements or terms of services entered or acknowledged by you in connection with using or downloading such Third Party Application. Amped Wireless did not develop such Third Party Applications and disclaims any representation or warranty, including any implied warranty, that such Third Party Applications will operate with the Amped Wireless product or that such Third Party Applications will operate in accordance with such specifications, representations or warranties provided with or applicable to such Third Party Applications.

You further agree and acknowledge that any personal information collected by Amped Wireless in connection with your use of Amped Wireless products, including such information submitted by you as part of or relating to (i) product registration or set up (including on or through Amped Wireless' website) or (ii) technical or customer service or support inquires, will be subject to the terms and conditions set forth in Amped Wireless' privacy policy set forth on this link <http://www.ampedwireless.com/legal.html#privacy>

You agree and acknowledge that your use of the ALLY App developed and supplied by AVG is conditioned up agreement to and subject to the terms of service located at www.chimewifi.com/tos ("AVG TOS") and the privacy policy located at www.chimewifi.com/privacypolicy ("AVG Privacy Policy"). YOU ACKNOWLEDGE AND AGREE THAT AVG HAS NO LIABILITY FOR ANY AMPED WIRELESS HARDWARE, SOFTWARE OR FIRMWARE AND

THE AVG TOS LIMITS AVG'S LIABILITY TO YOU AND REQUIRES THAT YOU SUBMIT TO ARBITRATION FOR THE RESOLUTION OF ANY CLAIM YOU MIGHT HAVE AGAINST AVG. You further agree that AVG may change the ALLY App or cease offering the ALLY App at any point without notice, and without liability to you.

End User License Agreement

This product contains embedded software (namely, firmware), licensed to you, the purchaser, by Amped Wireless (the "Software"). This license agreement (the "License Agreement") and the terms and conditions herein apply to your use of such Software with the Product. Please be aware that this License Agreement does not cover software or mobile applications downloaded from an authorized website, such as www.ampedwireless.com or from an authorized application market such as Google Play or Apple's App Store, including but not limited to Third Party Applications.

This License Agreement allows you to operate the Software in the manner described in the user's manual for the purchased product. You can make as many copies of the Software as needed for your personal use. Modifying or or tampering of the Software, including but not limited to any Open Source Software, is solely at your own risk. Amped Wireless is not responsible for any such modification or tampering. Amped Wireless will not support or warrant any product in which you have or have attempted to modify the Software provided by Amped Wireless. You may not lease, sublicense, resell, redistribute or otherwise transfer the Software without written consent from Amped Wireless.

Amped Wireless may from time to time develop patches, bug fixes, updates, upgrades and other modifications to improve the performance of the Software and related services ("Updates"). These may be automatically installed without providing any additional notice or receiving any additional consent. You consent to this automatic update. If you do not want such Updates, your remedy is to stop using the Product. If you do not cease using the Product, you will receive Updates automatically. You acknowledge that you may be required to install Updates to use the Product and the Software and you agree to promptly install any Updates Amped Wireless provides. Your continued use of the Product is your agreement to these terms.

THE SOFTWARE IS PROVIDED TO YOU "AS IS" WITH ALL FAULTS AND WITHOUT WARRANTIES OF ANY KIND. In particular, Amped Wireless does not guarantee that the Software will be error-free or that the Software will be free from system threats or attacks from viruses. Amped Wireless does not warrant that the Software will meet your expectations or that the software will be suitable for your particular situation. Amped Wireless warrants that any media (such as an included CD) on which the Software is provided to be free from defects. If you have an eligible warranty claim for defective media, Amped Wireless will replace the Software media.

Certain items of software included with the Software are subject to "open source" or "free software" licenses ("Open Source Software"). Some of the Open Source Software is owned by third parties. The Open Source Software is not subject to the terms and conditions of this License Agreement. Instead, each item of Open Source Software is licensed under the terms of the end user license that accompanies such Open Source Software. Nothing in this License Agreement limits your rights under, or grants you rights that supersede, the terms and conditions of any applicable end user license for the Open Source Software. If required by any

license for particular Open Source Software, Amped Wireless makes such Open Source Software, and Amped Wireless modifications to that Open Source Software, available by written request to Amped Wireless at the email or mailing address listed below.

IT IS YOUR RESPONSIBILITY TO BACK UP YOUR SYSTEM INCLUDING, WITHOUT LIMITATION, ANY DATA THAT YOU MAY USE OR POSSESS IN CONNECTION WITH THE PRODUCT. ANY MATERIAL, INFORMATION OR DATA DOWNLOADED OR OTHERWISE OBTAINED IS ACCESSED AT YOUR OWN DISCRETION AND RISK, AND YOU WILL BE RESPONSIBLE FOR ANY DAMAGE TO YOUR COMPUTER SYSTEM OR PRODUCT, OR LOSS OF DATA THAT RESULTS FROM THE DOWNLOAD OF SUCH MATERIAL, INFORMATION OR DATA.

YOU ARE USING THE SOFTWARE AND THE PRODUCT AT YOUR OWN DISCRETION AND RISK. YOU WILL BE SOLELY RESPONSIBLE FOR (AND AMPED WIRELESS DISCLAIMS) ANY AND ALL LOSS, LIABILITY, OR DAMAGES, INCLUDING TO YOUR HOME, PRODUCT, OTHER PERIPHERALS CONNECTED TO THE PRODUCT, COMPUTER, MOBILE DEVICE, AND ALL OTHER ITEMS AND PETS IN YOUR HOME, RESULTING FROM YOUR USE OF THE PRODUCT OR SOFTWARE.

All title and copyrights in and to the Software and any copies thereof are owned by Amped Wireless or its partners/suppliers. All title and intellectual property rights in and to the content which may be accessed through use of the Software is the property of the respective content owner and may be protected by applicable copyright or other intellectual property laws and treaties. This License Agreement grants you no

rights to use such content. You may not delete any copyright, trademark or other proprietary notices from the Software or documentation.

Nothing in this License Agreement, including the following limitation of liability provision, shall attempt to exclude liability that cannot be excluded under applicable law.

TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, IN ADDITION TO THE ABOVE WARRANTY DISCLAIMERS, IN NO EVENT WILL (A) AMPED WIRELESS BE LIABLE FOR ANY CONSEQUENTIAL, EXEMPLARY, SPECIAL, OR INCIDENTAL DAMAGES, INCLUDING ANY DAMAGES FOR LOST DATA OR LOST PROFITS, ARISING FROM OR RELATING TO THIS LICENSE AGREEMENT AND THE PRODUCTS AND SOFTWARE, EVEN IF AMPED WIRELESS KNEW OR SHOULD HAVE KNOWN OF THE POSSIBILITY OF SUCH DAMAGES, AND (B) AMPED WIRELESS' TOTAL CUMULATIVE LIABILITY ARISING FROM OR RELATED TO THIS LICENSE AGREEMENT AND THE PRODUCTS AND SOFTWARE, WHETHER IN CONTRACT OR TORT OR OTHERWISE, EXCEED THE FEES ACTUALLY PAID BY YOU TO AMPED WIRELESS OR ITS AUTHORIZED RESELLER FOR THE PRODUCT AT ISSUE IN THE PRIOR 12 MONTHS (IF ANY). THIS LIMITATION IS CUMULATIVE AND WILL NOT BE INCREASED BY THE EXISTENCE OF MORE THAN ONE INCIDENT OR CLAIM. AMPED WIRELESS DISCLAIMS ALL LIABILITY OF ANY KIND OF AMPED WIRELESS' LICENSORS AND SUPPLIERS.

Binding Arbitration and Class Action Waiver Provision

Application. This Binding Arbitration and Class Action Waiver Provision applies to any Dispute arising from or related to this **“LIMITED WARRANTY, TERMS & CONDITIONS, LICENSES, DISCLAIMERS, COPYRIGHT & REGULATORY INFORMATION,” including the License Agreement (collectively, the “Warranty and Agreement”)** or your use of our Products, Software or services and involving you and Amped Wireless. “Dispute,” for purposes of this provision, means any dispute, action, or other controversy regardless of the particular cause of action(s) asserted (i.e., it encompasses, among any other potential cause of action or legal basis, claims for breach of contract, fraud, and violation of statute or regulation).

Notice. In the event of a Dispute, you must provide Amped Wireless with a notice of Dispute, which is a written statement of the name, address and contact information of the party giving it, the facts giving rise to the Dispute, and the relief requested. You must send any Notice of Dispute by email to Amped Wireless at legal@ampedwireless.com (stating Subject: Notice of Dispute Under Warranty and Agreement).

CLASS ACTION WAIVER. ANY PROCEEDINGS TO RESOLVE OR LITIGATE ANY DISPUTE IN ANY FORUM WILL BE CONDUCTED SOLELY ON AN INDIVIDUAL BASIS. YOU WILL NOT SEEK TO HAVE ANY DISPUTE HEARD AS A CLASS ACTION, PRIVATE ATTORNEY GENERAL ACTION, OR IN ANY OTHER PROCEEDING IN WHICH EITHER PARTY ACTS OR PROPOSES TO ACT IN A REPRESENTATIVE CAPACITY. NO ARBITRATION OR PROCEEDING WILL BE COMBINED WITH ANOTHER WITHOUT THE PRIOR WRITTEN CONSENT OF ALL PARTIES TO ALL AFFECTED ARBITRATIONS OR PROCEEDINGS.

Agreement to Arbitrate. If you and Amped Wireless do not resolve any Dispute by informal negotiation, any other effort to resolve the Dispute will be conducted exclusively by binding arbitration governed by the United States Federal Arbitration Act (“FAA”), 9 U.S.C. § 1 et seq, except as specified in the “Exceptions to Agreement to Arbitrate” paragraph immediately below. Except as provided in the “Exceptions to Agreement to Arbitrate” paragraph immediately below, you are giving up the right to litigate (or participate in litigation as a party or class member) all Disputes in court before a judge or jury. Instead, all Disputes will be resolved before a neutral arbitrator, whose decision will be final except for a limited right to judicial review under the FAA. Any court with jurisdiction over the parties may enforce the arbitrator’s award.

Exceptions to Agreement to Arbitrate. (1) Small Claims Court. You may litigate any Dispute in small claims court, in the county or other similar political subdivision in which you reside, if the Dispute meets all requirements to be heard in the small claims court. If you initiate a claim in small claims court, you are responsible for all court costs and fees. (2) Intellectual Property. All Disputes concerning any alleged misappropriation of your or Amped Wireless’ intellectual property, will be resolved in court.

Arbitration Procedures. Any arbitration will be administered by the American Arbitration Association (the “AAA”) in accordance with the AAA’s “Consumer Arbitration Rules” effective September 1, 2014, including the “Costs of Arbitration (Including AAA Administrative Fees)” effective September 1, 2014 (collectively, the “Consumer Procedures”).

Arbitration Costs. The Consumer Procedures provide for certain fees, specifically allocating some to the consumer (you) and others to the business (Amped Wireless). If your claim is US\$75,000 or less, Amped Wireless will pay all of those specified fees and costs, including those allocated to the consumer. Amped Wireless does not agree to bear any other costs. If your claim is more than US\$75,000, the Consumer Procedures will govern payment.

Laws And Rules Governing Arbitration. Except as provided in the Business Customer Disputes paragraph below, the AAA's Consumer Procedures shall be applied to any Dispute between the parties. However, pursuant to Consumer Arbitration Rule R-1(e), a party may raise the proper application of the Consumer Arbitration Rules to an arbitrator for a final decision. This Warranty and Agreement, including the Binding Arbitration and Class Action Waiver Provision, governs to the extent it conflicts with the Consumer Procedures. In ruling on a Dispute, the neutral arbitrator will apply the terms of this Agreement and the laws of the State of California. You will commence arbitration only in the county or other similar political subdivision in which you reside. The arbitration proceedings will be conducted by conference call. However, if the proceedings are conducted pursuant to the AAA Consumer Procedures, the arbitrator(s) shall have the discretionary authority to require a face-to-face hearing upon the request of a party.

AAA Not Integral To Agreement To Arbitrate. You and Amped Wireless agree that the use of the AAA to administer arbitration is not integral to the parties' agreement to arbitrate Disputes. If the AAA will not or cannot conduct an arbitration, you and Amped Wireless shall negotiate in good faith to agree on a sole arbitrator who

shall resolve the Dispute as provided in the Consumer Procedures. If the parties cannot agree on an arbitrator, a court of competent jurisdiction may appoint an arbitrator, who shall follow the AAA's Consumer Procedures.

Severability. If one or more parts of this Binding Arbitration and Class Action Waiver Provision are found to be illegal, invalid or unenforceable as to all or some parts of a Dispute, then, and only in that circumstance, those parts will be severed and the Dispute will be resolved subject to all remaining parts of this Binding Arbitration and Class Action Waiver Provision and all other provisions of this Warranty and Agreement. If such severance results in all or some parts of a Dispute proceeding in a court of law, exclusive jurisdiction for any such court proceeding shall be the state or federal courts sitting in the State of California. For purposes of any such court proceeding, you consent to, and will not challenge, the California courts' personal jurisdiction over you, and you further waive objection based upon improper venue or forum non conveniens and will not seek transfer to another district or jurisdiction. Any conflict between the Warranty and Agreement and the specific terms of the Binding Arbitration and Class Action Waiver Provision shall be governed by the Binding Arbitration and Class Action Waiver Provision.

Business Customers Disputes. If you purchased a Product, Software or service for other than personal or household use, all Disputes will be subject to this Binding Arbitration and Class Action Waiver Provision, with the following exceptions: The arbitration proceedings, including the payment of costs, will be administered in accordance with the AAA's Commercial Arbitration Rules (the "Commercial Procedures"). The Commercial Procedures are appropriately applied to any Dispute between the parties, and you will not advocate otherwise

in any proceeding. However, this Warranty and Agreement, including the Binding Arbitration and Class Action Waiver Provision, governs to the extent it conflicts with the Commercial Procedures.

Contact Us

Email Contact

Amped Wireless

Email: legal@ampedwireless.com

Web: www.ampedwireless.com

Elite Support

USA Toll Free: 888-573-8820

International: +1-909-217-3168

Email: techsupport@ampedwireless.com

Web: www.ampedwireless.com/support



tech support 888-573-8820
e-mail techsupport@ampedwireless.com
web www.ampedwireless.com

Amped Wireless
A Division of Newo Corporation
Copyright © 2016 Amped Wireless / Newo Corporation. All rights reserved.
Amped Wireless, Newo Corporation, and the Amped Wireless Logo are registered trademarks or trademarks of Newo Corporation.