



Maintenance and Service Guide

HP EliteBook X G1i 14 inch Notebook Next Gen AI PC

SUMMARY

This guide provides maintenance information about such topics as spare parts, removal and replacement of parts, security, and backing up.

Legal information

© Copyright 2025 HP Development Company, L.P

AMD is a trademark of Advanced Micro Devices, Inc. Bluetooth is a trademark owned by its proprietor and used by HP Inc. under license. Chrome and Google are trademarks of Google LLC. Intel, Core, and Thunderbolt are trademarks of Intel Corporation or its subsidiaries in the U.S. and/or other countries. Microsoft and Windows are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries. Qualcomm is a trademark of Qualcomm Incorporated, registered in the United States and other countries, used with permission. USB Type-C is registered trademark of USB Implementers Forum. DisplayPort and the DisplayPort logo are trademarks owned by the Video Electronics Standards Association (VESA) in the United States and other countries. Wi-Fi is a registered trademark of Wi-Fi Alliance.

The information contained herein is subject to change without notice. The only warranties for HP products and services are set forth in the express warranty statements accompanying such products and services. Nothing herein should be construed as constituting an additional warranty. HP shall not be liable for technical or editorial errors or omissions contained herein.

First Edition: January 2025

Document Part Number: P19816-001

Product notice

This guide describes features that are common to most models. Some features may not be available on your computer.

Not all features are available in all editions or versions of Windows. Systems may require upgraded and/or separately purchased hardware, drivers, software or BIOS update to take full advantage of Windows functionality. Windows is automatically updated, which is always enabled. High-speed internet and Microsoft account required. ISP fees may apply and additional requirements may apply over time for updates. See <http://www.microsoft.com>.

If your product ships with Windows in S

Mode: Windows in S Mode works exclusively with apps from the Microsoft Store within Windows. Certain default settings, features, and apps cannot be changed. Some accessories and apps that are compatible with Windows may not work (including some antivirus, PDF writers, driver utilities, and accessibility apps), and performance may vary, even if you switch out of S Mode. If you switch to Windows, you cannot switch back to S Mode. Learn more at Windows.com/SmodeFAQ.

To access the latest user guides, go to <http://www.hp.com/support>, and follow the instructions to find your product. Then select **Setup & User Guides**.

To help us improve this document, please send any suggestions, comments, or errors to <mailto:hp.doc.feedback@hp.com>. Include the document part number when submitting your feedback.

Software terms

By installing, copying, downloading, or otherwise using any software product preinstalled on this computer, you agree to be bound by the terms of the HP End User License Agreement (EULA). If you do not accept these license terms, your sole remedy is to return the entire unused product (hardware and software) within 14 days for a full refund subject to the refund policy of your seller.

For any further information or to request a full refund of the price of the computer, please contact your seller.

Safety warning notice

Reduce the possibility of heat-related injuries or of overheating the computer by following the practices described.

 **WARNING!** To reduce the possibility of heat-related injuries or of overheating the mobile computer, do not place the mobile computer directly on your lap or obstruct the computer air vents. Use the mobile computer only on a hard, flat surface. Do not allow another hard surface, such as an adjoining optional printer; or a soft surface, such as pillows or rugs or clothing, to block airflow. Also, do not allow the AC adapter to contact the skin or a soft surface, such as pillows or rugs or clothing, during operation. The computer and AC adapter provided by HP comply with the user-accessible surface temperature limits defined by applicable safety standards.

Table of contents

1 Product description.....	1
2 Components.....	5
Locating hardware	5
Locating software.....	5
Right.....	5
Left.....	6
360 modes (select products only)	8
Display	8
Auto Lock and Awake.....	8
Low blue light mode (select products only).....	8
Keyboard area	10
Touchpad	10
Touchpad settings	10
Adjusting touchpad settings.....	10
Turning on the touchpad	10
Touchpad components	10
Lights	11
Buttons, speakers, and fingerprint reader	13
Special keys	14
Bottom	15
Rear	16
Labels	17
Using a SIM card (select products only).....	18
Determining the correct SIM card size for your computer	18
Inserting a nano SIM card	18
3 Illustrated parts catalog	20
Computer major components.....	20
Miscellaneous parts.....	25
4 Removal and replacement procedures preliminary requirements.....	30
Tools required	30
Service considerations	30
Plastic parts.....	30
Cables and connectors.....	30
Drive handling	30
Electrostatic discharge information.....	31
Generating static electricity.....	31
Preventing electrostatic damage to equipment	32

Personal grounding methods and equipment.....	32
Grounding the work area.....	33
Recommended materials and equipment.....	33
Cleaning your computer	34
Enabling HP Easy Clean (select products only)	34
Removing dirt and debris from your computer.....	34
Cleaning your computer with a disinfectant.....	35
Caring for wood veneer (select products only)	36
Packaging and transporting guidelines.....	36
Accessing support information	36
5 Removal and replacement procedures for Customer Self-Repair parts	39
Component replacement procedures	39
Preparation for disassembly.....	39
Bottom cover	39
Battery.....	41
Removing and reinstalling the same battery	41
Installing a new battery	42
WLAN module.....	47
WWAN module.....	49
Solid-state drive.....	50
6 Removal and replacement procedures for authorized service provider parts.....	53
Component replacement procedures	53
Preparation for disassembly.....	53
System board	53
Fan/heat sink assembly.....	57
Fingerprint reader cable.....	59
Fingerprint reader	60
Display assembly.....	61
Speakers.....	64
NFC module cable.....	65
NFC module	66
Touchpad cable.....	67
Touchpad	68
Connector board cable.....	69
Connector board.....	70
Top cover with keyboard.....	71
7 Computer Setup (BIOS), TPM, and HP Sure Start	73
Using Computer Setup	73
Navigating and selecting in Computer Setup	73
Restoring factory settings in Computer Setup.....	73
Updating the BIOS	74
Determining the BIOS version	74
Preparing for a BIOS update.....	74
Downloading a BIOS update	75
Installing a BIOS update	75

Changing the boot order using the f9 prompt	76
TPM BIOS settings (select products only)	76
Using HP Sure Start (select products only).....	76
8 Backing up, restoring, and recovering	77
Backing up information and creating recovery media	77
Using Windows tools for backing up.....	77
Using the HP Cloud Recovery Download Tool to create recovery media (select products only).....	77
Restoring and recovering your system.....	77
Creating a system restore	78
Restoring and recovery methods	78
Recovering using HP Recovery media.....	78
Changing the computer boot order	79
Using HP Sure Recover (select products only).....	79
9 Using HP PC Hardware Diagnostics	80
Using HP PC Hardware Diagnostics Windows (select products only).....	80
Using an HP PC Hardware Diagnostics Windows hardware failure ID code.....	80
Accessing HP PC Hardware Diagnostics Windows.....	80
Accessing HP PC Hardware Diagnostics Windows from HP Support Assistant.....	80
Accessing HP PC Hardware Diagnostics Windows from the Start menu (select products only).....	81
Downloading HP PC Hardware Diagnostics Windows.....	81
Downloading the latest HP PC Hardware Diagnostics Windows version from HP	81
Downloading the HP PC Hardware Diagnostics Windows from the Microsoft Store	81
Downloading HP Hardware Diagnostics Windows by product name or number (select products only)	81
Installing HP PC Hardware Diagnostics Windows.....	82
Using HP PC Hardware Diagnostics UEFI	82
Using an HP PC Hardware Diagnostics UEFI hardware failure ID code	82
Starting HP PC Hardware Diagnostics UEFI	82
Starting HP PC Hardware Diagnostics UEFI through HP Hotkey Support software (select products only).....	83
Downloading HP PC Hardware Diagnostics UEFI to a USB flash drive.....	83
Downloading the latest HP PC Hardware Diagnostics UEFI version	84
Downloading HP PC Hardware Diagnostics UEFI by product name or number (select products only)	84
Using Remote HP PC Hardware Diagnostics UEFI settings (select products only).....	84
Downloading Remote HP PC Hardware Diagnostics UEFI	84
Downloading the latest Remote HP PC Hardware Diagnostics UEFI version.....	84
Downloading Remote HP PC Hardware Diagnostics UEFI by product name or number	84
Customizing Remote HP PC Hardware Diagnostics UEFI settings.....	85
10 Specifications.....	86
Computer specifications	86
Display specifications.....	87
Hard drive specifications.....	87
Solid-state drive specifications	88

11 Statement of memory volatility	89
Current BIOS steps	89
Nonvolatile memory usage	91
Questions and answers	92
Using HP Sure Start (select products only)	93
12 Power cord set requirements	94
Requirements for all countries	94
Requirements for specific countries and regions	94
13 Swelling or deformation of notebook battery	97
Swollen notebook batteries	97
Swollen battery is not a safety issue	97
Discontinue using a swollen battery	97
Replace a swollen battery	97
Minimize battery swelling	97
HP Adaptive Battery Optimizer (consumer notebooks)	98
HP Battery Health Manager (commercial notebooks)	98
14 Recycling	99
Index	100

1 Product description

This table provides detailed product information.

Table 1-1 Product components and their descriptions

Category	Description
Product Name	HP EliteBook X G1i 14 inch Notebook Next Gen AI PC
Processors	Intel® Core™ Ultra7 268V vPro Enterprise processor (8 cores, 17 W)
	Intel Core Ultra7 266V processor (8 cores, 17 W)
	Intel Core Ultra7 258 vPro Enterprise (8 cores, 17 W)
	Intel Core Ultra7 256 vPro Enterprise (8 cores, 17 W)
	Intel Core Ultra5 238v vPro Enterprise processor (8 cores, 17 W)
	Intel Core Ultra5 236V vPro Enterprise processor (8 cores, 17 W)
	Intel Core Ultra5 228V processor (8 cores, 17 W)
	Intel Core Ultra5 226V processor (8 cores, 17 W)
Graphics	Intel integrated Soldered-on-Circuit (SoC)
	Unified memory architecture (UMA)
Display	35.6 cm (14.0 in), narrow bezel, ultrawide viewing angle (UWVA)
	2.5K (2560 × 1600), GorillaGlass7, antiglare, WLED + low blue light (LBL), Adobe RGB 100% + (DCI)-P3 100%, embedded DisplayPort™ (eDP) 1.4 + panel self refresh (PSR2) 120 Hz, non-Touch On Panel (nTOP), bent display panel; typical brightness: 400 nits
	2.5K (2560 × 1600), non-GorillaGlass7, antiglare, OLED + LBL, DCI-P3 100, eDP 1.4 + PSR2 120 Hz, variable refresh rate (VRR), nTOP, bent display panel; typical brightness: 400 nits
	Liquid crystal display (LCD), widescreen ultra extended graphics array (WUXGA, 1920 × 1200), antiglare, LBL, standard red/green/blue (sRGB) 100, eDP 1.4 + PSR2 + I/O link (IOL), SureView5, TOP, bent display panel, typical brightness: 800 nits
	LCD, WUXGA (1920 × 1200), antiglare, LBL, sRGB 100, eDP 1.4 + PSR2 + IOL, SureView5, nTOP, bent display panel, typical brightness: 800 nits
	LCD, WUXGA (1920 × 1200), antiglare, LED, sRGB 100, eDP 1.4 + PSR2, ACS, TOP, bent display panel, typical brightness: 500 nits
	LCD, WUXGA (1920 × 1200), antiglare, WLED + LBL, sRGB 100, eDP 1.4 + PSR2, low power (LP), ACS, nTOP, bent display panel, typical brightness: 400 nits
	LCD, WUXGA (1920 × 1200), antiglare, WLED + LBL, sRGB 100, eDP 1.4 + PSR2, ALS + ACS, SureView5, TOP, bent display panel, typical brightness: 800 nits
	LCD, WUXGA (1920 × 1200), antiglare, WLED + LBL, sRGB 100, eDP 1.4 + PSR2, ALS + ACS, SureView5, nTOP, bent display panel, typical brightness: 800 nits
Memory	LCD, WUXGA (1920 × 1200), antiglare, WLED + LBL, sRGB 100, eDP 1.4 + PSR2, nTOP, bent display panel, typical brightness: 400 nits
	Low-power double data rate (LPDDRx)-7500 support
	Supports 64 GB and 32 GB configurations

Table 1-1 Product components and their descriptions (continued)

Category	Description
Primary storage	2280, Peripheral Component Interconnect Express (PCIe), Nonvolatile Memory Express (NVMe), solid-state drives (SSDs)
	For use in all countries and regions except the People's Republic of China:
	2 TB, 2280, PCIe-4×4, NVMe SSD with triple layer cell (TLC)
	1 TB, 2280, PCIe-4×4, NVMe SSD with TLC
	1 TB, 2280, PCIe, NVMe, value SSD
	512 GB, PCIe-4×4, NVMe SSD with TLC
	512 GB, 2280, PCIe, NVMe, value SSD
	256 GB, 2280, PCIe, NVMe, value SSD
	256 GB, 2280, PCIe, NVMe, value, SED SSD with TLC and OPAL2
	For use only in the People's Republic of China:
	2 TB, 2280, PCIe-4×4, NVMe SSD with TLC
	1 TB, 2280, PCIe-4×4, NVMe SSD with TLC
	1 TB, 2280, PCIe, NVMe, value SSD
	512 GB, PCIe-4×4, NVMe SSD with TLC
	512 GB, 2280, PCIe, NVMe, value SSD
	256 GB, 2280, PCIe, NVMe, value SSD
eMMC	On-board embedded MultiMedia Controller (eMMC v5.0) 32 GB configuration (MLC/TLC) MO-276
Audio and video	Support for discrete amplifiers
	Support for discrete Poly Studio
	Support for quad speakers
	Integrated HP Wide Vision Camera: Fixed, USB 2.0, 5 MP, infrared, wide field-of-view (WFOV)
	Dual-array digital microphone with appropriate software: beam forming, echo cancellation, noise suppression
	Time-of-flight camera (ToF camera)
Wireless	Wireless Local Area Network (WLAN)
	Intel® BE201 M.2 2230 Wi-Fi 7 + Bluetooth® 5.4 vPro WW WLAN module
	Intel BE201 M.2 2230 Wi-Fi 7 + Bluetooth 5.4 non-vPro worldwide (WW) WLAN module
	Wireless Wide Area Network (WWAN)
	HP 5000 5G Solution WWAN module
	HP 4000 4G LTE-Advanced Pro WWAN module
	Qualcomm® 9205 LTE-M (CAT-M1 fSVC) WWAN module
NFC module	Near Field Communication (NFC) Mirage WNC XRAV-1
Ports	Hot plug/unplug and autodetect for correct output to wide-aspect vs. standard aspect video
	Audio-out (headphone)/audio-in (microphone) combo jack

Table 1-1 Product components and their descriptions (continued)

Category	Description
	High-Definition Multimedia Interface (HDMI) v2.0a supporting: up to 4096 × 2160 @ 60 Hz with HDCP 2.2
	USB 5 Gbps port with HP Sleep and Charge
	USB Type-C® power connector and 10 Gbps port with HP Sleep and Charge and DisplayPort™ output
	USB Type-C power connectors and Thunderbolt™ ports with HP Sleep and Charge and DisplayPort output (2)
Keyboard/pointing devices	Keyboard
	Full size, backlit, 3-coat paint, island style
	Touchpad
	Clickpad with image sensor
	Multitouch gestures enabled
	Precision touchpad support
	Support for Modern Trackpad Gestures
	Taps enabled as default
Power requirements	Battery: 6 cell, 68 Whr, polymer, HP Long Life battery and 3 cell, 56 Whr, polymer, HP Long Life battery
	HP Fast Charge Technology
	AC adapters
	Non-Power Factor Correction (nPFC) or Power Factor Correction (PFC)
	100 W, USB Type-C with straight, slim barrel
	65 W, USB Type-C with straight, slim barrel
	65 W, USB Type-C, halogen free (HF), with straight, slim barrel
	Power cord
	• C5, 1.0 m (3.3 ft), conventional with sticker HF power cord • C5, 1.0 m (3.3 ft), conventional with sticker power cord • C5, 1.0 m (3.3 ft), premium with sticker power cord
Security	• Nano security lock • Integrated fingerprint reader • Privacy camera shutter door
Sensors	• HP Sure Platform • Hall sensor • Thermal sensor
Operating system	Windows® 11 Pro
	Windows 11 Pro Education
	Windows 11 Home - HP recommends Windows 11 Pro for Business
	Windows 11 Home Single Language - HP recommends Windows 11 Pro for Business

Table 1-1 Product components and their descriptions (continued)

Category	Description
	Windows 11 Pro (Windows 11 Enterprise or Windows 10 Enterprise available with a Volume Licensing Agreement)
	Windows 11 Pro (preinstalled with Windows 10 Pro Downgrade)
	FreeDOS
Serviceability	End user replaceable part: AC adapter

2 Components

Your computer features top-rated components. This chapter provides details about your components, where they are located, and how they work.

Locating hardware

Use these instructions to find out what hardware is installed on your computer.

- Select the **Search** icon in the taskbar, type `device manager` in the search box, and then select the **Device Manager** app.

A list displays all the devices installed on your computer.

For information about system hardware components and the system BIOS version number, press **fn+esc** (select products only).

Locating software

Use these instructions to find out what software is installed on your computer:

- Right-click the **Start** button, and then select **Installed Apps**.

Right

Use the illustration and table to identify the components on the right side of the computer.

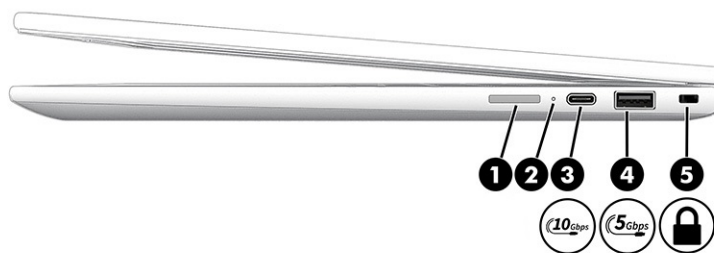


Table 2-1 Right-side components and their descriptions

	Component	Description
(1)	Nano SIM card slot (select products only)	Supports a wireless subscriber identity module (SIM) card.

Table 2-1 Right-side components and their descriptions (continued)

	Component	Description
(2)	Battery light	When AC power is connected: • White: The battery charge is greater than 90 percent. • Amber: The battery charge is from 0 to 90 percent. • Off: The battery is not charging. When AC power is disconnected (battery not charging): • Blinking amber: The battery has reached a low battery level. When the battery has reached a critical battery level, the battery light begins blinking rapidly. • Off: The battery is not charging.
(3)	 USB Type-C® power connector and 10 Gbps port with HP Sleep and Charge and DisplayPort™ output	Connects an AC adapter that has a USB Type-C connector, supplying power to the computer and, if needed, charging the computer battery. - and - Connects a USB device, provides high-speed data transfer, and charges small devices (such as a smartphone), even when the computer is off. NOTE: Use a standard USB Type-C charging cable or cable adapter (purchased separately) when charging a small external device. - and - Connects a display device that has a USB Type-C connector, providing DisplayPort output.
(4)	 USB 5 Gbps port	Connects a USB device and provides high-speed data transfer. NOTE: This port provides charging capability.
(5)	Security cable slot	Attaches an optional security cable to the computer. NOTE: The security cable is designed to act as a deterrent, but it might not prevent the computer from being mishandled or stolen.

Left

Use the illustration and table to identify the components on the left side of the computer.

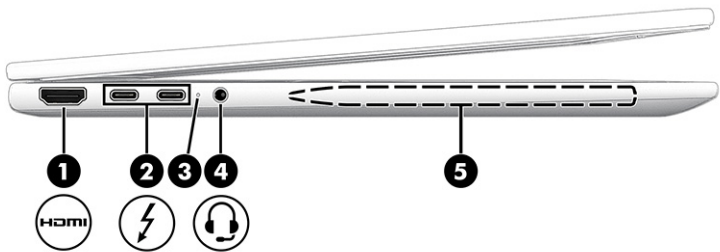


Table 2-2 Left-side components and their descriptions

	Component	Description
(1)	 HDMI port	Connects an optional video or audio device, such as a high-definition television, any compatible digital or audio component, or a high-speed High Definition Multimedia Interface (HDMI) device.
(2)	 USB Type-C® power connectors and Thunderbolt™ ports with HP Sleep and Charge and DisplayPort output (2)	Connect an AC adapter that has a USB Type-C connector, supplying power to the computer and, if needed, charging the computer battery. - and - Connect USB devices, provide high-speed data transfer, and charge small devices (such as a smartphone), even when the computer is off. NOTE: Use a standard USB Type-C charging cable or cable adapter (purchased separately) when charging a small external device. - and - Connect a display device that has a USB Type-C connector, providing DisplayPort output. NOTE: Your computer might also support a Thunderbolt docking station.
(3)	Battery light	When AC power is connected: • White: The battery charge is greater than 90 percent. • Amber: The battery charge is from 0 to 90 percent. • Off: The battery is not charging. When AC power is disconnected (battery not charging): • Blinking amber: The battery has reached a low battery level. When the battery has reached a critical battery level, the battery light begins blinking rapidly. • Off: The battery is not charging.
(4)	 Audio-out (headphone)/Audio-in (microphone) combo jack	Connects optional powered stereo speakers, headphones, earbuds, a headset, or a television audio cable. Also connects an optional headset microphone. This jack does not support optional standalone microphones. WARNING! To reduce the risk of personal injury, adjust the volume before putting on headphones, earbuds, or a headset. For additional safety information, see the <i>Regulatory, Safety, and Environmental Notices</i>. To access this guide: ■ Select the Search icon in the taskbar, type HP Documentation in the search box, and then select HP Documentation. NOTE: When a device is connected to the jack, the computer speakers are disabled.
(5)	Magnetic pen attachment area (select products only)	Holds an optional pen.

360 modes (select products only)

If your computer offers 360 modes, the following illustration shows how you can use and fold your device.



Display

Use the illustration and table to identify the display components.

Auto Lock and Awake

Auto Lock and Awake monitors your presence in front of the computer to save power and add security.

When you step away from the computer, the proximity sensor puts the computer into the Sleep state. When you return to the computer, the sensor recognizes you and wakes the computer automatically. Auto Lock and Awake is turned on by default.

To access Auto Lock and Awake:

1. Select the **Start** button, select **Settings**, select **System**, and then select **Power & battery**.
2. Select **Screen and sleep**, and then follow the on-screen instructions.

Low blue light mode (select products only)

Your computer display is shipped from the factory in low blue light mode for improved eye comfort and safety. Also, blue light mode automatically adjusts blue light emissions when you are using the computer at night or for reading.

⚠ WARNING! To reduce the risk of serious injury, read the *Safety & Comfort Guide*. It describes proper workstation setup and proper posture, health, and work habits for computer users. The *Safety & Comfort Guide* also provides important electrical and mechanical safety information. The *Safety & Comfort Guide* is available on the web at <http://www.hp.com/ergo>.

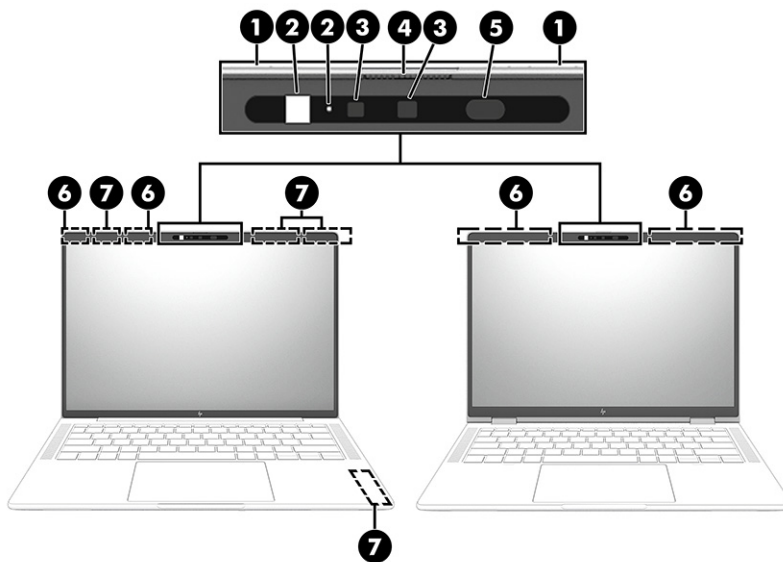


Table 2-3 Display components and their descriptions

	Component	Description
(1)	Internal microphones (2)	Record sound.
(2)	Camera lights (2)	On: One or more cameras are in use.
(3)	Cameras (2)	Allow you to video chat, record video, and record still images. Some cameras also allow a facial recognition login to Windows, instead of a password login.
		NOTE: Camera functions vary depending on the camera hardware and software installed on your product.
(4)	Camera privacy cover	By default, the camera lens is uncovered, but you can slide the camera privacy cover to block the camera's view. To use the camera, slide the camera privacy cover in the opposite direction to reveal the lens.
		NOTE: If you have both front-facing and rear-facing cameras, when one camera lens is revealed and ready to use, the other is concealed.
(5)	Ambient light and color sensor	Adjusts the brightness of the display, depending on the ambient light, and manages and controls the color temperature. Color temperature enables you to measure and adjust the warmth or coolness of the light source
(6)	WLAN antennas* (2)	Send and receive wireless signals to communicate with wireless local area networks (WLANs).
(7)	WWAN antennas* (2) (select products only)	Send and receive wireless signals to communicate with wireless wide area networks (WWANs) and low-power wide area networks (LPWAN).

*The antennas are not visible from the outside of the computer. For optimal transmission, keep the areas immediately around the antennas free from obstructions.

For wireless regulatory notices, see the section of the *Regulatory, Safety, and Environmental Notices* that applies to your country or region.

To access this guide:

- Select the **Search** icon in the taskbar, type `HP Documentation` in the search box, and then select **HP Documentation**.

Keyboard area

Keyboards can vary by language.



NOTE: The keyboard, including the function keys and power key (select products only), is disabled in stand, tent, and tablet modes. To enable the keyboard, including the power key, change to the clamshell mode.

Touchpad

The touchpad settings and components are described here.

Touchpad settings

You learn how to adjust the touchpad settings and components here.

Adjusting touchpad settings

Use these steps to adjust touchpad settings and gestures.

1. Select the **Search** icon in the taskbar, type `touchpad settings` in the search box, and then press `enter`.
2. Choose a setting.

Turning on the touchpad

Follow these steps to turn on the touchpad.

1. Select the **Search** icon in the taskbar, type `touchpad settings` in the search box, and then press `enter`.
2. Using an external mouse, click the **Touchpad** button.

If you are not using an external mouse, press the `Tab` key repeatedly until the pointer rests on the **touchpad** button. Then press the `spacebar` to select the button.

Touchpad components

Use the illustration and table to identify the touchpad components.

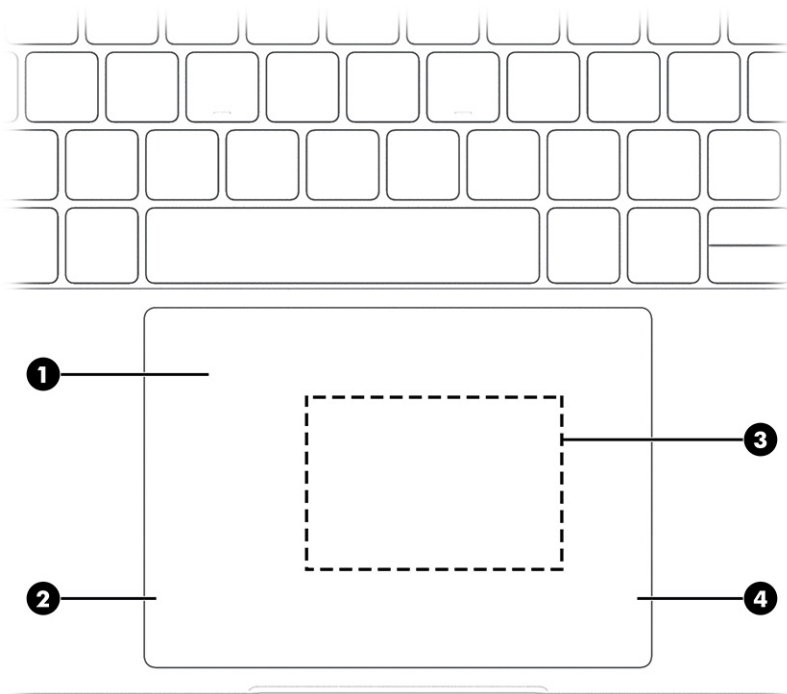


Table 2-4 Touchpad components and their descriptions

	Component	Description
(1)	Touchpad zone	Reads your finger gestures to move the pointer or activate items on the screen.
(2)	Left touchpad button	Functions like the left button on an external mouse.
(3)	Near Field Communications (NFC) tapping area and antenna (select products only)	Allows you to wirelessly share information when you tap it with an NFC-enabled device.
(4)	Right touchpad button	Functions like the right button on an external mouse.

Lights

Use the illustration and table to identify the lights on the computer.

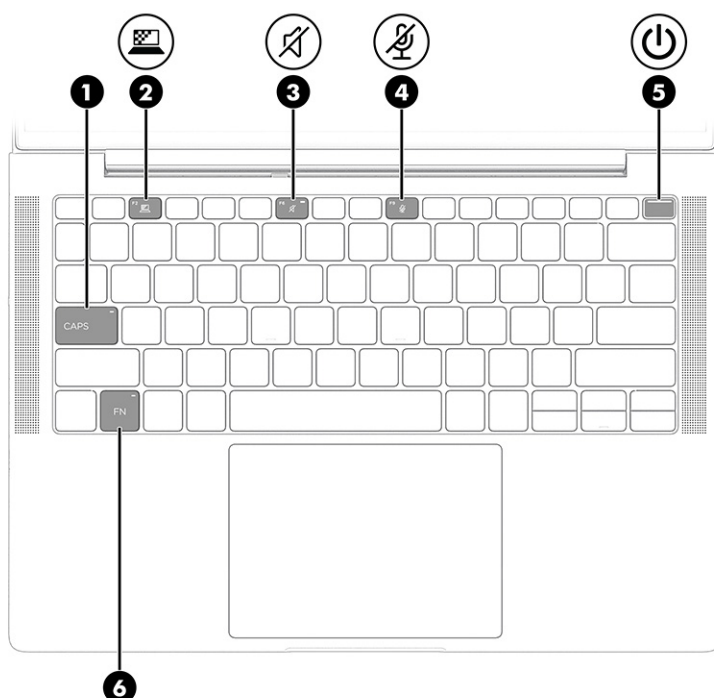


Table 2-5 Lights and their descriptions

	Component	Description
(1)	Caps lock light	On: Caps lock is on, which switches the key input to all capital letters.
(2)	 Privacy key light (select products only)	On: Privacy screen is on, which helps prevent side-angle viewing.
(3)	 Mute light	- On: Computer sound is off. - Off: Computer sound is on.
(4)	 Microphone mute light	- On: Microphone is off. - Off: Microphone is on.
(5)	 Power light	- On: The computer is on. - Blinking (select products only): The computer is in the Sleep state, a power-saving state. The computer shuts off power to the display and other unnecessary components. - Off: Depending on your computer model, the computer is off, in Hibernation, or in Sleep. Hibernation is the power-saving state that uses the least amount of power.
(6)	Fn lock light	On: The fn key is locked.

Buttons, speakers, and fingerprint reader

Fingerprint readers can be located on the touchpad, on a side panel of the computer, or on the top cover below the keyboard.

 **IMPORTANT:** To verify that your computer supports fingerprint reader sign-in, select the **Search** icon in the taskbar, type **Sign-in options** in the search box, and then select the **Sign-on options** app. If **Fingerprint recognition** is not listed as an option, then your notebook does not include a fingerprint reader.

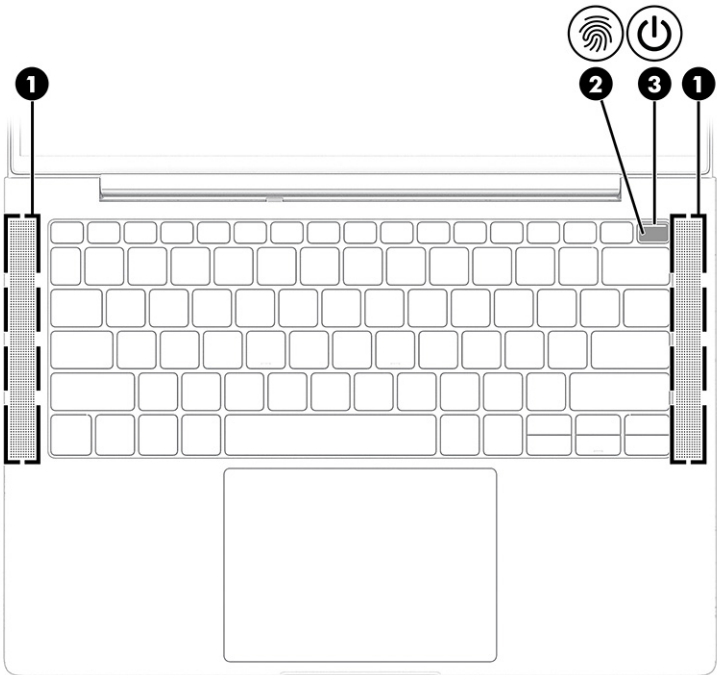


Table 2-6 Buttons, speakers, and fingerprint reader and their descriptions

	Component	Description
(1)	Speakers (2)	Produce sound.
(2)	Fingerprint reader (select products only)	Allows a fingerprint logon to Windows, instead of a password logon. ■ Touch your finger to the fingerprint reader. IMPORTANT: To prevent fingerprint logon issues, make sure when you register your fingerprint that all sides of your finger are registered by the fingerprint reader.

Table 2-6 Buttons, speakers, and fingerprint reader and their descriptions (continued)

Component		Description
(3)	 Power button	- When the computer is off, press the button briefly to turn on the computer. - When the computer is on, press the button briefly to initiate Sleep. - When the computer is in the Sleep state, press the button briefly to exit Sleep (select products only). - When the computer is in Hibernation, press the button briefly to exit Hibernation. IMPORTANT: Pressing and holding down the power button results in the loss of unsaved information. If the computer has stopped responding and shutdown procedures are ineffective, press and hold the power button for at least 4 seconds to turn off the computer. To learn more about your power settings, use the Power icon. - Right-click the Power icon , and then select Power and sleep settings.

Special keys

Use the illustration and table to identify the special keys.

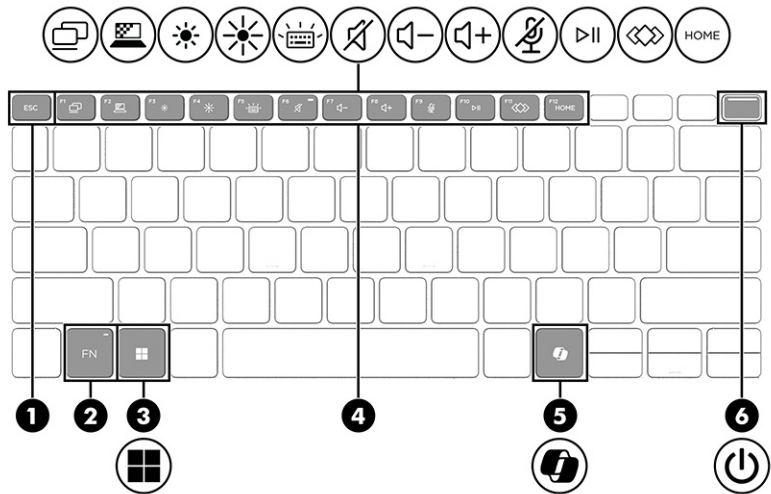


Table 2-7 Special keys and their descriptions

Component		Description
(1)	esc key	Displays system information when pressed in combination with the fn key.
(2)	fn key	Executes frequently used system functions when pressed in combination with another key. Such key combinations are called <i>hot keys</i> .

Table 2-7 Special keys and their descriptions (continued)

	Component	Description
(3)	 Windows key	Opens the Start menu. NOTE: Pressing the Windows key again closes the Start menu.
(4)	Action keys	Execute frequently used system functions.
(5)	 Windows Copilot key	Opens Windows Copilot (select products only). NOTE: Copilot in Windows requires Windows 11. Some features require a neural processing unit (NPU). The timing of feature delivery and availability varies by market and device. You must have a Microsoft account to use the Copilot feature. Where the Copilot feature is not available, pressing the Copilot key opens the Bing search engine. See http://aka.ms/WindowsAIFeatures.
(6)	 Power button	• When the computer is off, press the button briefly to turn on the computer. • When the computer is on, press the button briefly to initiate Sleep. • When the computer is in the Sleep state, press the button briefly to exit Sleep (select products only). • When the computer is in Hibernation, press the button briefly to exit Hibernation. IMPORTANT: Pressing and holding down the power button results in the loss of unsaved information. If the computer has stopped responding and shutdown procedures are ineffective, press and hold the power button for at least 4 seconds to turn off the computer. To learn more about your power settings, use the Power icon. • Right-click the Power icon  and then select Power and sleep settings.

Bottom

Use the illustration and table to identify the bottom components.

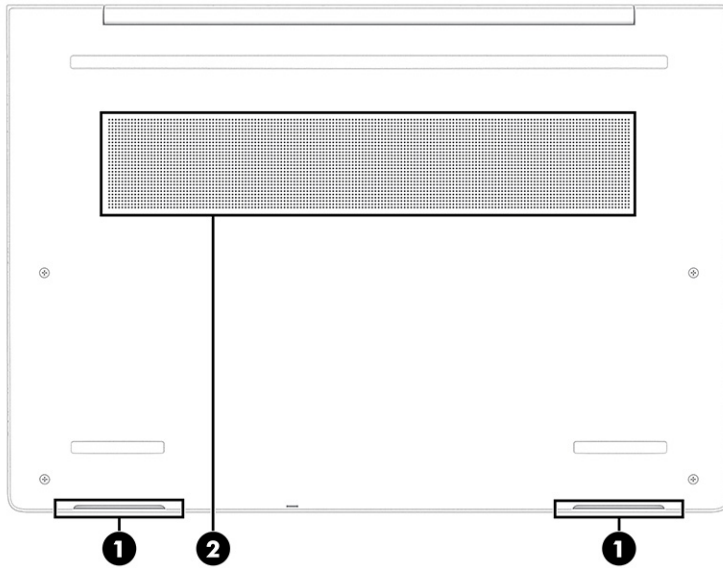


Table 2-8 Bottom components and their descriptions

	Component	Description
(1)	Speakers (2)	Produce sound.
(2)	Vent	Enables airflow to cool internal components.

NOTE: The computer fan starts up automatically to cool internal components and prevent overheating. It is normal for the internal fan to cycle on and off during routine operation.

Rear

Use the illustration and table to identify the rear component.



Table 2-9 Rear component and its description

Component	Description
Vent (select products only)	Enables airflow to cool internal components.

NOTE: The computer fan starts up automatically to cool internal components and prevent overheating. It is normal for the internal fan to cycle on and off during routine operation.

Labels

The labels affixed to the computer provide information you might need when you troubleshoot system problems or travel internationally with the computer. Labels might be in paper form or imprinted on the product.

 **IMPORTANT:** Check the following locations for the labels described in this section: the bottom of the computer, inside the battery bay, under the service door, on the back of the display, or on the bottom of a tablet kickstand.

- Service label—Provides important information to identify your computer. When contacting support, you might be asked for the serial number, the product number, or the model number. Locate this information before you contact support.

Your service label will resemble one of the examples shown below. Refer to the illustration that most closely matches the service label on your computer.

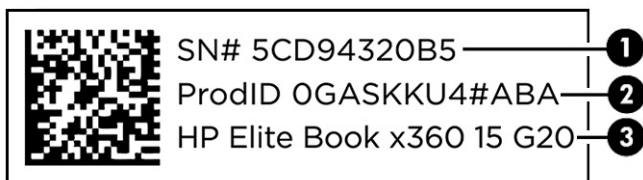


Table 2-10 Service label components

Component	
(1)	Serial number
(2)	Product ID
(3)	HP product name

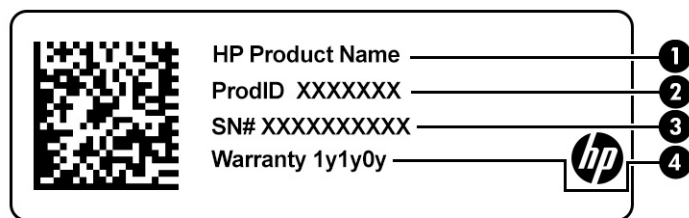


Table 2-11 Service label components

Component	
(1)	HP product name
(2)	Product ID
(3)	Serial number
(4)	Warranty period

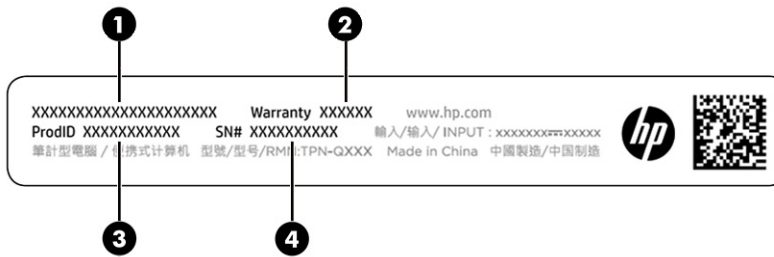


Table 2-12 Service label components

Component	
(1)	HP product name
(2)	Warranty period
(3)	Product ID
(4)	Serial number

- Regulatory labels—Provide regulatory information about the computer.
- Wireless certification labels—Provide information about optional wireless devices and the approval markings for the countries or regions in which the devices have been approved for use.

Using a SIM card (select products only)

Use these instructions to insert a SIM card.

 **IMPORTANT:** You can damage the SIM card if you insert the wrong size card or insert it or the SIM card tray in the wrong direction. The card might also become stuck in the slot. Do not use SIM card adapters. To prevent damage to the SIM card or connectors, use minimal force when inserting or removing a SIM card.

Determining the correct SIM card size for your computer

Before purchasing a SIM card, follow these instructions to determine the correct SIM card size for your computer.


1. Go to <http://www.hp.com/support>, and then search for your computer by product name or number.
2. Select **Product Information**.
3. Refer to the listed options to determine which card to purchase.

Inserting a nano SIM card

To insert a nano SIM card, follow these steps.

1. Turn off the computer by using the **Shut down** command.
2. Insert a small straightened paper clip into the card tray access hole.
3. Press in gently on the clip until the card tray is ejected (1).
4. Remove the tray (2) from the computer and insert the card (3).

5. Replace the tray in the computer. Press in gently on the tray **(4)** until it is firmly seated.

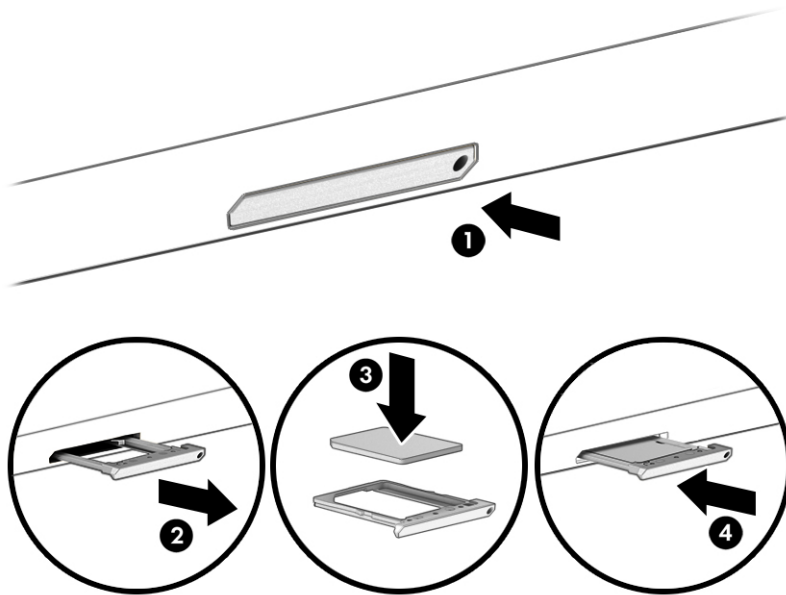

To remove the SIM card, insert a small straightened paper clip into the card tray access hole and press in gently on the clip. The tray will pop out of the slot. Remove the SIM card. Replace the tray in the computer and press in gently on the tray until it is firmly seated.

3 Illustrated parts catalog

Use this chapter to determine the spare parts that are available for the computer.

Computer major components

To identify the computer major components, use this illustration and table.



NOTE: HP continually improves and changes product parts. For complete and current information about supported parts for your computer, go to <http://partsurfer.hp.com>, select your country or region, and then follow the on-screen instructions.



NOTE: Details about your computer, including model, serial number, product key, and length of warranty, are on the service tag at the bottom of your computer.

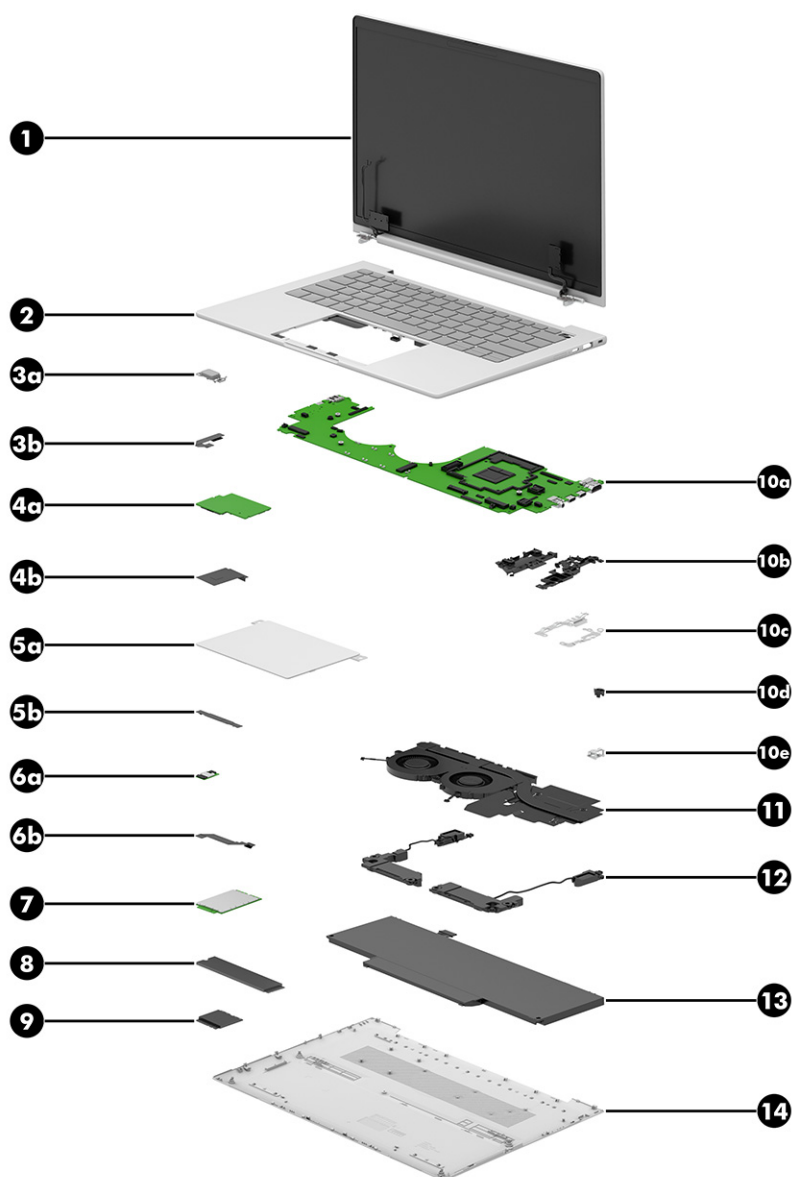


Table 3-1 Computer major component descriptions and part numbers

Item	Component	Spare part number
(1)	Display assembly	
	35.6 cm (14.0 in), antiglare, TOP, with privacy filter and infrared webcam, for use on computer models equipped with WLAN; typical brightness: 500 nits	P24129-001
	35.6 cm (14.0 in), antiglare, TOP, with privacy filter and infrared webcam, for use on computer models equipped with WWAN; typical brightness: 500 nits	P24130-001
	35.6 cm (14.0 in), antiglare, nTOP, with privacy filter and infrared webcam, for use on computer models equipped with WLAN; typical brightness: 400 nits	P24131-001
	35.6 cm (14.0 in), antiglare, nTOP, with privacy filter and infrared webcam, for use on computer models equipped with WWAN; typical brightness: 400 nits	P24132-001
	35.6 cm (14.0 in), antiglare, TOP, with privacy filter and infrared webcam, for use on computer models equipped with WWAN; typical brightness: 800 nits	P24133-001

Table 3-1 Computer major component descriptions and part numbers (continued)

Item	Component	Spare part number
	35.6 cm (14.0 in), antiglare, UWVA, nTOP, with infrared webcam, for use on computer models equipped with WWAN; typical brightness: 800 nits	P24133-001
	35.6 cm (14.0 in), antiglare, UWVA, nTOP, with infrared webcam, for use on computer models equipped with WWAN; typical brightness: 800 nits	P24134-001
	35.6 cm (14.0 in), antiglare,, TOP, with privacy filter and infrared webcam, for use on computer models equipped with WLAN; typical brightness: 500 nits	P32341-001
	35.6 cm (14.0 in), antiglare, TOP, with privacy filter and infrared webcam, for use on computer models equipped with WWAN; typical brightness: 500 nits	P32342-001
	35.6 cm (14.0 in), antiglare, TOP, with privacy filter and infrared webcam, for use on computer models equipped with WLAN; typical brightness: 400 nits	P32343-001
	35.6 cm (14.0 in), 2.5K, antiglare, TOP, with privacy filter and infrared webcam, for use on computer models equipped with WLAN; typical brightness: 400 nits	P24127-001
	35.6 cm (14.0 in), 2.5K, antiglare, TOP, with privacy filter and infrared webcam, for use on computer models equipped with WLAN; typical brightness: 400 nits	P32349-001
	35.6 cm (14.0 in), 2.5K, DBTS, antiglare, TOP, with privacy filter and infrared webcam, for use on computer models equipped with WWAN; typical brightness: 400 nits	P24128-001
	35.6 cm (14.0 in), 2.5K, antiglare, TOP, with privacy filter and infrared webcam, for use on computer models equipped with WWAN; typical brightness: 400 nits	P32340-001
	35.6 cm (14.0 in), antiglare, nTOP, with privacy filter and infrared webcam, for use on computer models equipped with WWAN; typical brightness: 400 nits	P32344-001
	35.6 cm (14.0 in), antiglare, nTOP, with privacy filter and infrared webcam, for use on computer models equipped with WWAN; typical brightness: 800 nits	P32345-001
	35.6 cm (14.0 in), antiglare, TOP, with privacy filter and infrared webcam, for use on computer models equipped with WWAN; typical brightness: 800 nits	P32346-001
(2)	Top cover with keyboard	
	With keyboard with backlight for use on computer models equipped with privacy filter (includes backlight cable and keyboard cable)	P32348-xxx
	With keyboard with backlight for use on computer models equipped with privacy filter (includes backlight cable and keyboard cable)	P24136-xxx
	With keyboard with backlight for use on computer models not equipped with privacy filter (includes backlight cable and keyboard cable)	P32347-xxx
	With keyboard with backlight for use on computer models not equipped with privacy filter (includes backlight cable and keyboard cable)	P24135-xxx
	NOTE: For a detailed list of country codes, see Top cover with keyboard on page 71 .	
(3a)	Fingerprint reader (includes cable)	N98113-001
		P32589-001
	Power button without fingerprint reader (not illustrated, includes cable)	N98114-001
		P32590-001
(3b)	Fingerprint reader cable	
	NOTE: The fingerprint reader spare part kit does not include the fingerprint reader cable. The fingerprint reader cable is included in the Cable Kit, spare part number P28061-001.	
(4a)	Transfer board (includes cable)	P28064-001

Table 3-1 Computer major component descriptions and part numbers (continued)

Item	Component	Spare part number
(4b)	Transfer board cable: Included with the transfer board	P28064-001
(5a)	Touchpad NOTE: The touchpad spare part kit does not include the touchpad cable. The touchpad cable is included in the Cable Kit, spare part number N98116-001.	
	For use on computer models equipped with NFC (includes NFC module antenna)	P28068-001 P32351-001
	For use on computer models not equipped with NFC	P28069-001 P32352-001
(5b)	Touchpad cable: Included in the Cable Kit, spare part number P28061-001.	
(6a)	NFC module	914758-001
(6b)	NFC module cable: Included in the Cable Kit, spare part number P28061-001.	
(7)	WWAN module	
	Qualcomm 9205 LTE-M (CAT-M1 fSVC)	P11676-005
	R15 5G NR/4G RW350R-GL	P20951-001
	R15 4G LTE GPS RW 350R-GL	P06930-001
(8)	SSD	
	For use in all countries and regions except the People's Republic of China	
	2 TB, 2280, PCIe-4×4, NVMe SSD with TLC	N77396-001
	1 TB, 2280, PCIe-4×4, NVMe, SSD with TLC	N77395-001
	1 TB, M.2 2280, PCIe-4×4, NVMe, value SSD	N77394-001
	512 GB, M.2 2280, PCIe-4×4, SSD with SED and TLC	N86921-001
	512 GB, 2280, PCIe-4×4, NVMe, SSD with TLC	N77393-001
	512 GB, 2280, PCIe-4×4, NVMe, value SSD	N77392-001
	256 GB, 2280, PCIe-4×4, NVMe, value SSD	N77391-001
	SSD bracket (not illustrated) Included in the Bracket Kit, spare part number P35098-001	
(9)	WLAN module	
	Intel BE201 M.2 2230 Wi-Fi 7 + Bluetooth 5.4 vPro WW WLAN module	N86465-005
	Intel BE201 M.2 2230 Wi-Fi 7 + Bluetooth 5.4 non-vPro WW WLAN module	N86466-005
(10a)	System board (includes integrated processor, a graphics subsystem with UMA memory, and replacement thermal material)	
	For use in all countries and regions	
	Equipped with an Intel Core U5-236V processor, 16 GB of system memory, and the Windows 11 operating system	P24117-601
	Equipped with an Intel Core U5-238V processor, 36 GB of system memory, and the Windows 11 operating system	P24118-601

Table 3-1 Computer major component descriptions and part numbers (continued)

Item	Component	Spare part number
	Equipped with an Intel Core U7-266V processor, 16 GB of system memory, and the Windows 11 operating system	P24119-601
	Equipped with an Intel Core U7-268V processor, 32 GB of system memory, OSR, and the Windows 11 operating system	P24120-601
	Equipped with an Intel Core U7-268V processor, 32 GB of system memory, OSR, and the Windows 11 operating system	P24121-601
	Equipped with an Intel Core U5-238V processor, 32 GB of system memory, OSR, and the Windows 11 operating system	P24122-601
	Equipped with an Intel Core U5-226V processor, 16 GB of system memory, and the Windows 11 operating system	P24123-601
	Equipped with an Intel Core U5-228V processor, 32 GB of system memory, and the Windows 11 operating system	P24124-601
	Equipped with an Intel Core U7-256V processor, 16 GB of system memory, and the Windows 11 operating system	P24125-601
	Equipped with an Intel Core U7-258V processor, 32 GB of system memory, and the Windows 11 operating system	P24126-601
	Equipped with an Intel Core U5-236V processor, 16 GB of system memory, and the Windows 11 operating system	P32329-601
	Equipped with an Intel Core U5-238V processor, 32 GB of system memory, and the Windows 11 operating system	P32330-601
	Equipped with an Intel Core U7-266V processor, 16 GB of system memory, and the Windows 11 operating system	P32331-601
	Equipped with an Intel Core U768-268V processor, 32 GB of system memory, and the Windows 11 operating system	P32332-601
	Equipped with an Intel Core U7-268V processor, 32 GB of system memory, OSR, and the Windows 11 operating system	P32333-601
	Equipped with an Intel Core U5-238V processor, 32 GB of system memory, OSR, and the Windows 11 operating system	P32334-601
	Equipped with an Intel Core U5-226V processor, 16 GB of system memory, and the Windows 11 operating system	P32335-601
	Equipped with an Intel Core U5-228V processor, 32 GB of system memory, and the Windows 11 operating system	P32336-601
	Equipped with an Intel Core U7-256V processor, 16 GB of system memory, and the Windows 11 operating system	P32337-601
	Equipped with an Intel Core U7-258V processor, 32 GB of system memory, and the Windows 11 operating system	P32338-601
(10b)	Left and right I/O bracket holders: Included in the Plastics Kit, spare part number P28065-001	
(10c)	Left and right I/O brackets: Included in the Bracket Kit, spare part number P35098-001	
(10d)	Middle hook holder: Included in the Plastics Kit, spare part number P28065-001	
(10e)	Security bracket: Not available as a spare part	
(11)	Fan/heat sink assembly (includes captive screws and replacement thermal material)	P28062-001
(12)	Speakers (includes left and right speakers, cables, and six rubber isolators)	P28067-001

Table 3-1 Computer major component descriptions and part numbers (continued)

Item	Component	Spare part number
(13)	Battery (includes cable)	
	6 cell, 68 Whr, Li-ion battery	N59788-001
	3 cell, 56 Whr, Li-ion battery	P34001-001
(14)	Bottom cover (includes one long rubber foot and two short rubber feet)	
	For use only on computer models equipped with WWAN capability	P28058-001
		P32350-001
	For use only on computer models not equipped with WWAN capability	P28057-001
		P32349-001

Miscellaneous parts

To identify the miscellaneous parts, use this table.

Table 3-2 Miscellaneous part descriptions and part numbers

Component	Spare part number
AC adapter	
120 W HP Smart adapter (PFC, 7.4 mm, slim)	L89695-001
120 W HP Smart adapter (PFC, RC, 4.5 mm, slim)	M95377-001
100 W AC adapter (nPFC, 3 prong, USB Type-C PD)	N57045-001
65 W AC adapter (nPFC, 3 prong, USB Type-C, slim)	M54350-001
65 W AC adapter 65W (nPFC, USB Type-C, 1.8 m [6.6 ft])	L67440-001
65 W AC adapter (nPFC, USB Type-C, 1.8 m [6.6 ft], HF)	N90678-001
65 W AC adapter (PD)	P02292-001
65 W AC adapter (USB Type-C), nPFC	N99217-001
65 W AC adapter (USB Type-C)	N05175-001
Adapter	
HP HDMI-to-VGA adapter	701943-001
HP USB 3.0-to-Gigabit RJ45 adapter	M95984-001
HP USB Type-C-to-HDMI 2.0 adapter	935325-001
HP USB Type-C-to-RJ45 adapter	M95985-001
USB Type-C-to-USB Type-A adapter	L65254-001
USB Type-C-to-DisplayPort G2 adapter and cable	N81435-001
Backpack	
HP 14.1 inch Business slim top load backpack	L05333-001
HP Prelude Pro 15.6 inch backpack	M03617-001

Table 3-2 Miscellaneous part descriptions and part numbers (continued)

Component	Spare part number
HP Prelude Pro 15.6 inch top load backpack	M03618-001
Bag	
HP 14.1 inch Business laptop bag	M55007-001
HP 16 inch Executive laptop bag	N19980-001
HP Renew Sleeve 14.1 laptop	N19981-001
Bracket Kit (includes I/O brackets, memory module shields, SIM tray, and SSD shield)	P35098-001
Cable	
HP Thunderbolt G4 120 W cable (0.8 m [2.6 ft])	M88058-001
USB Type-C male-to-USB Type-A male cable (1.0 m [3.3 ft])	L65353-001
Cable Kit (includes fingerprint reader cable, NFC module cable, and touchpad cable)	P28061-001
HP Thunderbolt G4 280 W dock (includes combination cable)	M97106-001
HP Thunderbolt G4 120 W dock (includes cable)	M97105-001
HP Thunderbolt 120 W dock (includes cable)	L15809-001
Bottom case for HP USB Type-C dock	L65256-001
HP USB Type-C G5 Essential dock	N31329-001
HP USB Type-A/-C universal dock (includes cable)	L64087-001
Bottom case for HP USB Type-A/-C universal dock	L64088-001
HP USB External DVD+-RW Drive	747080-001
Duck head adapter (for use in Japan)	L33157-001
Headset (VY, 60 UC, with touchscreen)	N73088-001
Hub	
HP universal USB Type-C multidevice hub	M96822-001
USB Type-C G3, multiport, travel	N60372-001
HP USB keyboard (United States layout)	L95712-001
Lock	
HP Essential nano combination cable lock	N10501-001
HP nano combination cable lock	N10500-001
HP nano lock	918431-001
Mouse	
HP 435 wireless mouse	M62277-001
HP 715 black multidevice mouse	N21845-001
HP 935 Creator mouse	M16122-001
HP USB mouse	L95713-001
Power cord (C5, 1.0 m [3.3 ft], conventional with sticker) + AC adapter bundle for use in Thailand	M85418-001

Table 3-2 Miscellaneous part descriptions and part numbers (continued)

Component	Spare part number
Power cord (C5, 1.0 m [3.3 ft], conventional with sticker):	
For use in Argentina	L19357-001
For use in Australia	L19358-001
For use in Brazil	L19359-001
For use in Denmark	L19360-001
For use in Europe	L19361-001
For use in India	L19363-001
For use in Israel	L19362-001
For use in Italy	L19364-001
For use in Japan	L19365-001
For use in North America	L19367-001
For use in the People's Republic of China	L19368-001
For use in South Africa	L19369-001
For use in South Korea	L19366-001
For use in Switzerland	L19370-001
For use in Taiwan	L19372-001
For use in Thailand	L19371-001
For use in the United Kingdom	L19373-001
Power cord (C5, 1.0 m [3.3 ft], conventional with sticker, HF):	
For use in Denmark	M79264-001
For use in Europe	M79266-001
For use in Israel	M82712-001
For use in Switzerland	M79265-001
For use in the United Kingdom	M82711-001
Power cord (C5, 1.0 m [3.3 ft], premium with sticker) + AC adapter bundle for use in Thailand	M85421-001
Power cord (C5, 1.0 m [3.3 ft], premium with sticker):	
For use in Argentina	L30811-001
For use in Australia	L22327-001
For use in Brazil	L30812-001
For use in Denmark	L22322-001
For use in Europe	L22321-001
For use in India	L22624-001
For use in Israel	L22323-001
For use in Italy	L30813-001

Table 3-2 Miscellaneous part descriptions and part numbers (continued)

Component	Spare part number
For use in Japan	L22330-001
For use in North America	L22319-001
For use in the People's Republic of China	L21930-001
For use in South Africa	L22325-001
For use in South Korea	L22328-001
For use in Switzerland	L22324-001
For use in Taiwan	L22329-001
For use in Thailand	L22326-001
For use in the United Kingdom	L22320-001
Power cord (C5, 1.0 m [3.3 ft], premium with sticker, NP):	
For use in Argentina	L42493-001
For use in Australia	L42486-001
For use in Denmark	L42487-001
For use in Europe	L42488-001
For use in Israel	L42489-001
For use in Japan	L42490-001
For use in North America	L42492-001
For use in South Korea	L42491-001
For use in Switzerland	L42494-001
For use in Taiwan	L42496-001
For use in Thailand	L42495-001
For use in the United Kingdom	L42497-001
Power cord (C5, 1.8 m [6.0 ft], conventional with sticker):	
For use in Argentina	L19357-002
For use in Australia	L19358-002
For use in Brazil	L19359-002
For use in Denmark	L19360-002
For use in Europe	L19361-002
For use in India	L19363-002
For use in Israel	L19362-002
For use in Italy	L19364-002
For use in Japan	L19365-002
For use in North America	L19367-002
For use in the People's Republic of China	L19368-002

Table 3-2 Miscellaneous part descriptions and part numbers (continued)

Component	Spare part number
For use in South Africa	L19369-002
For use in South Korea	L19366-002
For use in Switzerland	L19370-002
For use in Taiwan	L19372-002
For use in Thailand	L19371-002
For use in the United Kingdom	L19373-002
Power cord (C5, 1.8 m [6.0 ft], premium with sticker, DH, FX for use in Brazil)	L19341-002
Power cord (C13, 1.0 m [3.3 ft], premium with tag)	
For use in Argentina	L32029-001
For use in Brazil	L32030-001
For use in Italy	L32031-001
Power cord (C13, 1.0 m [3.3 ft], premium with tag LW)	
For use in Australia	N24670-002
For use in Denmark	N24672-001
For use in Europe	N24669-001
For use in India	N24679-001
For use in Israel	N24678-001
For use in Japan	N24680-001
For use in North America	N24671-001
For use in the People's Republic of China	N24676-001
For use in South Africa	N24674-001
For use in South Korea	N24675-001
For use in Switzerland	N24673-001
For use in Taiwan	N24677-001
For use in the United Kingdom	N24668-001
Screw Kit	N98121-001
Screw Kit	L64089-001
For Adicora dock	
Pen	
AES 2.0 PEN with app button with LIF	L57041-001
AES 2.0 PEN with app button with LIFBLK	L57042-001

4 Removal and replacement procedures preliminary requirements

Use this information to properly prepare to disassemble and reassemble the computer.

Tools required

You need the following tools to complete the removal and replacement procedures:

- Tweezers
- Nonconductive, nonmarking pry tool
- Magnetic Phillips P1 screwdriver

Service considerations

The following sections include some of the considerations that you must keep in mind during disassembly and assembly procedures.



NOTE: As you remove each subassembly from the computer, place the subassembly and all accompanying screws away from the work area to prevent damage.

Plastic parts

Using excessive force during disassembly and reassembly can damage plastic parts.

Cables and connectors

Handle cables with extreme care to avoid damage.



IMPORTANT: When servicing the computer, be sure that cables are placed in their proper locations during the reassembly process. Improper cable placement can damage the computer.

Apply only the tension required to unseat or seat the cables during removal and insertion. Handle cables by the connector whenever possible. In all cases, avoid bending, twisting, or tearing cables. Be sure that cables are routed so that they cannot be caught or snagged as you remove or replace parts. Handle flex cables with extreme care; these cables tear easily.

Drive handling

Note the following guidelines when handling drives.



IMPORTANT: Drives are fragile components. Handle them with care. To prevent damage to the computer, damage to a drive, or loss of information, observe these precautions:

- Before removing or inserting a hard drive, shut down the computer. If you are unsure whether the computer is off or in Hibernation or Sleep mode, turn the computer on, and then shut it down through the operating system.

- Before handling a drive, be sure that you are discharged of static electricity. While handling a drive, avoid touching the connector.
 - Before removing an optical drive, be sure that a disc is not in the drive, and be sure that the optical drive tray is closed.
 - Handle drives on surfaces covered with at least 2.54 cm (1 inch) of shock-proof foam.
 - Avoid dropping drives from any height onto any surface.
 - After removing a hard drive or an optical drive, place it in a static-proof bag.
 - Avoid exposing an internal hard drive to products that have magnetic fields, such as monitors or speakers.
 - Avoid exposing a drive to temperature extremes or liquids.
 - If a drive must be mailed, place the drive in a bubble pack mailer or other suitable form of protective packaging, and label the package "FRAGILE."
-

Electrostatic discharge information

A sudden discharge of static electricity from your finger or other conductor can destroy static-sensitive devices or microcircuitry. Often the spark is neither felt nor heard, but damage occurs. An electronic device exposed to electrostatic discharge (ESD) might not appear to be affected at all and can work perfectly throughout a normal cycle. The device might function normally for a while, but it has been degraded in the internal layers, reducing its life expectancy.

Networks built into many integrated circuits provide some protection, but in many cases, the discharge contains enough power to alter device parameters or melt silicon junctions.



IMPORTANT: To prevent damage to the device when you remove or install internal components, observe these precautions:

- Keep components in their electrostatic-safe containers until you are ready to install them.
 - Before touching an electronic component, discharge static electricity by using the guidelines described in [Personal grounding methods and equipment on page 32](#).
 - Avoid touching pins, leads, and circuitry. Handle electronic components as little as possible.
 - If you remove a component, place it in an electrostatic-safe container.
-

Generating static electricity

Follow these static electricity guidelines:

- Different activities generate different amounts of static electricity.
- Static electricity increases as humidity decreases.

Table 4-1 Static electricity occurrence based on activity and humidity

Event	55% relative humidity	40% relative humidity	10% relative humidity
Walking across carpet	7,500 V	15,000 V	35,000 V
Walking across vinyl floor	3,000 V	5,000 V	12,000 V
Motions of bench worker	400 V	800 V	6,000 V
Removing dual in-line packages (DIPs) from plastic tube	400 V	700 V	2,000 V
Removing DIPs from vinyl tray	2,000 V	4,000 V	11,500 V
Removing DIPs from polystyrene foam	3,500 V	5,000 V	14,500 V
Removing bubble pack from PCB (printed circuit board)	7,000 V	20,000 V	26,500 V
Packing PCBs in foam-lined box	5,000 V	11,000 V	21,000 V



NOTE: Multiple electric components can be packaged together in plastic tubes, trays, or polystyrene foam.

As little as 700 V of static electricity can degrade a product.

Preventing electrostatic damage to equipment

Many electronic components are sensitive to ESD. Circuitry design and structure determine the degree of sensitivity.

The following packaging and grounding precautions are necessary to prevent static electricity damage to electronic components:

- To avoid hand contact, transport products in static-safe containers such as tubes, bags, or boxes.
- Protect all electrostatic parts and assemblies with conductive or approved containers or packaging.
- Keep electrostatic-sensitive parts in their containers until they arrive at static-free stations.
- Place items on a grounded surface before removing them from their container.
- Always be properly grounded when touching a sensitive component or assembly.
- Avoid contact with pins, leads, or circuitry.
- Place reusable electrostatic-sensitive parts from assemblies in protective packaging or conductive foam.

Personal grounding methods and equipment

Using certain equipment can prevent static electricity damage to electronic components.

- **Wrist straps** are flexible straps with a maximum of $1\text{ M}\Omega \pm 10\%$ resistance in the ground cords. To provide proper ground, wear a strap snug against bare skin. Verify that the ground cord is connected and fits snugly into the banana plug connector on the grounding mat or workstation.
- You can use **heel straps, toe straps, and boot straps** at standing workstations. These straps are compatible with most types of shoes or boots. On conductive floors or dissipative floor mats, use them on both feet with a maximum of $1\text{ M}\Omega \pm 10\%$ resistance between the operator and ground.

Table 4-2 Static shielding protection levels

Method	Voltage
Antistatic plastic	1,500
Carbon-loaded plastic	7,500
Metallized laminate	15,000

Grounding the work area

To prevent static damage at the work area, follow these precautions:

- Cover the work surface with approved static-dissipative material.
- Use a wrist strap connected to a properly grounded work surface and use properly grounded tools and equipment.
- Use static-dissipative mats, foot straps, or air ionizers to give added protection.
- Handle electrostatic sensitive components, parts, and assemblies by the case or PCB laminate. Handle them only at static-free work areas.
- Turn off power and input signals before inserting and removing connectors or test equipment.
- Use fixtures made of static-safe materials when fixtures must directly contact dissipative surfaces.
- Keep the work area free of nonconductive materials, such as ordinary plastic assembly aids and polystyrene foam.
- Use conductive field service tools, such as cutters, screwdrivers, and vacuums.
- Avoid contact with pins, leads, or circuitry.

Recommended materials and equipment

HP recommends certain materials and equipment to prevent static electricity:

- Antistatic tape
- Antistatic smocks, aprons, or sleeve protectors
- Conductive bins and other assembly or soldering aids
- Conductive foam
- Conductive tabletop workstations with ground cord of $1\text{ M}\Omega \pm 10\%$ resistance
- Static-dissipative table or floor mats with hard tie to ground
- Field service kits
- Static awareness labels
- Wrist straps and footwear straps providing $1\text{ M}\Omega \pm 10\%$ resistance
- Material handling packages
- Conductive plastic bags

- Conductive plastic tubes
- Conductive tote boxes
- Opaque shielding bags
- Transparent metallized shielding bags
- Transparent shielding tubes

Cleaning your computer

Cleaning your computer regularly removes dirt and debris so that your device continues to operate at its best. Use the following information to safely clean the external surfaces of your computer.

Enabling HP Easy Clean (select products only)

HP Easy Clean helps you to avoid accidental input while you clean the computer surfaces. This software disables devices such as the keyboard, touch screen, and touchpad for a preset amount of time so that you can clean all computer surfaces.

1. Start HP Easy Clean in one of the following ways:
 - Select the **Start** menu, and then select **HP Easy Clean**.
 - Select the **HP Easy Clean** icon in the taskbar.
 - Select **Start**, and then select the **HP Easy Clean** tile.
2. Now that your device is disabled for a short period, see [Removing dirt and debris from your computer on page 34](#) for the recommended steps to clean the high-touch, external surfaces on your computer. After you remove the dirt and debris, you can also clean the surfaces with a disinfectant. See [Cleaning your computer with a disinfectant on page 35](#) for guidelines to help prevent the spread of harmful bacteria and viruses.

Removing dirt and debris from your computer

Here are the recommended steps to clean dirt and debris from your computer.

For computers with wood veneer, see [Caring for wood veneer \(select products only\) on page 36](#).

1. Wear disposable gloves made of latex (or nitrile gloves, if you are latex-sensitive) when cleaning the surfaces.
2. Turn off your device and unplug the power cord and other connected external devices. Remove any installed batteries from items such as wireless keyboards.

 **CAUTION:** To prevent electric shock or damage to components, never clean a product while it is turned on or plugged in.

3. Moisten a microfiber cloth with water. The cloth should be moist, but not dripping wet.

 **IMPORTANT:** To avoid damaging the surface, avoid abrasive cloths, towels, and paper towels.

4. Wipe the exterior of the product gently with the moistened cloth.

 **IMPORTANT:** Keep liquids away from the product. Avoid getting moisture in any openings. If liquid makes its way inside your HP product, it can cause damage to the product. Do not spray liquids directly on the product. Do not use aerosol sprays, solvents, abrasives, or cleaners containing hydrogen peroxide or bleach that might damage the finish.

5. Start with the display (if applicable). Wipe carefully in one direction, and move from the top of the display to the bottom. Finish with any flexible cables, like power cord, keyboard cable, and USB cables.
6. Be sure that surfaces have completely air-dried before turning the device on after cleaning.
7. Discard the gloves after each cleaning. Clean your hands immediately after you remove the gloves.

See [Cleaning your computer with a disinfectant on page 35](#) for recommended steps to clean the high-touch, external surfaces on your computer to help prevent the spread of harmful bacteria and viruses.

Cleaning your computer with a disinfectant

The World Health Organization (WHO) recommends cleaning surfaces, followed by disinfection, as a best practice for preventing the spread of viral respiratory illnesses and harmful bacteria.

After cleaning the external surfaces of your computer using the steps in [Removing dirt and debris from your computer on page 34](#), [Caring for wood veneer \(select products only\) on page 36](#), or both, you might also choose to clean the surfaces with a disinfectant. A disinfectant that is within HP's cleaning guidelines is an alcohol solution consisting of 70% isopropyl alcohol and 30% water. This solution is also known as rubbing alcohol and is sold in most stores.

Follow these steps when disinfecting high-touch, external surfaces on your computer:

1. Wear disposable gloves made of latex (or nitrile gloves, if you are latex-sensitive) when cleaning the surfaces.
2. Turn off your device and unplug the power cord and other connected external devices. Remove any installed batteries from items such as wireless keyboards.

 **CAUTION:** To prevent electric shock or damage to components, never clean a product while it is turned on or plugged in.

3. Moisten a microfiber cloth with a mixture of 70% isopropyl alcohol and 30% water. The cloth should be moist, but not dripping wet.

 **CAUTION:** Do not use any of the following chemicals or any solutions that contain them, including spray-based surface cleaners: bleach, peroxides (including hydrogen peroxide), acetone, ammonia, ethyl alcohol, methylene chloride, or any petroleum-based materials, such as gasoline, paint thinner, benzene, or toluene.

 **IMPORTANT:** To avoid damaging the surface, avoid abrasive cloths, towels, and paper towels.

4. Wipe the exterior of the product gently with the moistened cloth.

 **IMPORTANT:** Keep liquids away from the product. Avoid getting moisture in any openings. If liquid makes its way inside your HP product, it can cause damage to the product. Do not spray liquids directly on the product. Do not use aerosol sprays, solvents, abrasives, or cleaners containing hydrogen peroxide or bleach that might damage the finish.

5. Start with the display (if applicable). Wipe carefully in one direction, and move from the top of the display to the bottom. Finish with any flexible cables, like power cord, keyboard cable, and USB cables.
6. Be sure that surfaces have completely air-dried before turning the device on after cleaning.
7. Discard the gloves after each cleaning. Clean your hands immediately after you remove the gloves.

Caring for wood veneer (select products only)

Your product might feature high-quality wood veneer. As with all natural wood products, proper care is important for best results over the life of the product. Because of the nature of natural wood, you might see unique variations in the grain pattern or subtle variations in color, which are normal.

- Clean the wood with a dry, static-free microfiber cloth or chamois.
- Avoid cleaning products containing substances such as ammonia, methylene chloride, acetone, turpentine, or other petroleum-based solvents.
- Do not expose the wood to sun or moisture for long periods of time.
- If the wood becomes wet, dry it by dabbing with an absorbent, lint-free cloth.
- Avoid contact with any substance that might dye or discolor the wood.
- Avoid contact with sharp objects or rough surfaces that might scratch the wood.

See [Removing dirt and debris from your computer on page 34](#) for the recommended steps to clean the high-touch, external surfaces on your computer. After you remove the dirt and debris, you can also clean the surfaces with a disinfectant. See [Cleaning your computer with a disinfectant on page 35](#) for sanitizing guidelines to help prevent the spread of harmful bacteria and viruses.

Packaging and transporting guidelines

Follow these grounding guidelines when packaging and transporting equipment:

- To avoid hand contact, transport products in static-safe tubes, bags, or boxes.
- Protect ESD-sensitive parts and assemblies with conductive or approved containers or packaging.
- Keep ESD-sensitive parts in their containers until the parts arrive at static-free workstations.
- Place items on a grounded surface before removing items from their containers.
- Always be properly grounded when touching a component or assembly.
- Store reusable ESD-sensitive parts from assemblies in protective packaging or nonconductive foam.
- Use transporters and conveyors made of antistatic belts and roller bushings. Be sure that mechanized equipment used for moving materials is wired to ground and that proper materials are selected to avoid static charging. When grounding is not possible, use an ionizer to dissipate electric charges.

Accessing support information

To find the HP support that you need, use this information.

Table 4-3 Support information locations

Service consideration	Path to access information
Records of reported failure incidents stored on the computer	Windows®: Preoperating system failures are logged in the BIOS Event Log. To view the BIOS Event Log: 1. Press the power button. 2. Immediately and repeatedly press esc when the power button light turns white. NOTE: If you do not press esc at the appropriate time, you must restart the computer and again repeatedly press esc when the power button light turns white to access the utility. 3. Press f10 to enter the BIOS setup. 4. Complete one of these tasks: • (On commercial products) Under the Main tab, select BIOS event log, and then select View BIOS Event Log. • (On consumer products) Under the Main tab, select System Log. Post-operating system failures are logged in the Event Viewer. 1. Turn on the computer and allow the operating system to open. 2. Select the search icon  in the taskbar. 3. Type <code>Event Viewer</code>, and then press enter. 4. Select the log from the left panel. Details display in the right panel. Chrome™: 1. Go to support.google.com/chrome. 2. Search <code>collect Chrome device logs</code>.
Technical bulletins	To locate technical bulletins: 1. Go to www.hp.com. 2. Place the cursor over Problem solving to display more options. 3. Select Support & Troubleshooting. 4. Type the serial number, product number, or product name to go to the product support page. 5. Select Advisories to view technical bulletins.
Repair professionals	To locate repair professionals: 1. Go to www.hp.com. 2. Place the cursor over Support resources to display more options. 3. Select Authorized service providers.

Table 4-3 Support information locations (continued)

Service consideration	Path to access information
Component and diagnosis information, failure detection, and required action	To locate diagnosis information and actions: 1. Go to http://www.hp.com/go/techcenter/pcdiags. 2. Select Get Support. 3. Near the bottom of the window, select Notebook PCs, and then select your location.

5 Removal and replacement procedures for Customer Self-Repair parts

This chapter provides removal and replacement procedures for Customer Self-Repair parts.

 **NOTE:** The Customer Self-Repair program is not available in all locations. Installing a part that is not supported by the Customer Self-Repair program can void your warranty. Check your warranty to determine whether Customer Self-Repair is supported in your location.

 **NOTE:** The [HP Support YouTube Channel](#) (in English) has videos that provide step-by-step removal and replacement instructions for many common parts and models.

Component replacement procedures

To remove and replace computer components, use these procedures.

 **NOTE:** Details about your computer, including model, serial number, product key, and length of warranty, are on the service tag at the bottom of your computer.

 **NOTE:** HP continually improves and changes product parts. For complete and current information about supported parts for your computer, go to <https://partsurfer.hp.com/>, select your country or region, and then follow the on-screen instructions.

Make special note of each screw size and location during removal and replacement.

Preparation for disassembly

To remove and replace computer components, use these procedures:

For initial safety procedures, see [Removal and replacement procedures preliminary requirements on page 30](#).

1. Turn off the computer. If you are unsure whether the computer is off or in Hibernation or Sleep mode, turn the computer on, and then shut it down through the operating system.
2. Disconnect the power from the computer by unplugging the power cord from the computer.
3. Disconnect all external devices from the computer.

Bottom cover

To remove the bottom cover, use this procedure and illustration.

Table 5-1 Bottom cover descriptions and part numbers

Description	Spare part number
For use only on computer models equipped with WWAN capability	P28058-001
For use only on computer models equipped with WWAN capability	P32350-001
For use only on computer models not equipped with WWAN capability	P32349-001


Table 5-1 Bottom cover descriptions and part numbers (continued)

Description	Spare part number
For use only on computer models not equipped with WWAN capability	P28057-001

Before removing the bottom cover, prepare the computer for disassembly (see [Preparation for disassembly on page 39](#)).


Remove the bottom cover:

1. Close the computer and rest it upside down on a flat work surface with the front toward you.
2. Loosen the four Phillips captive screws that secure the bottom cover to the computer

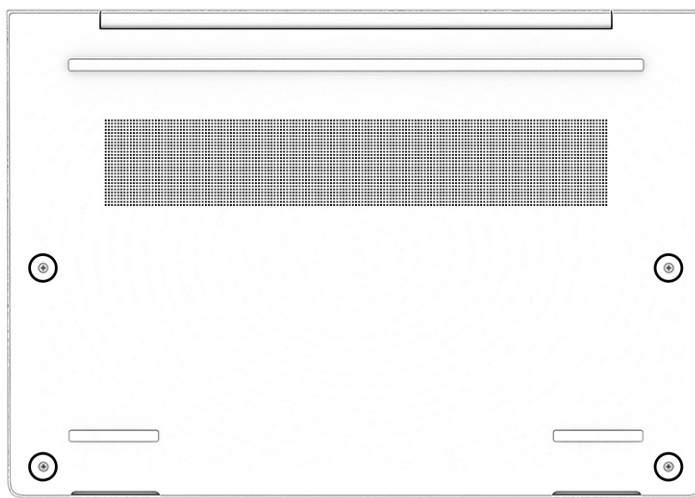

3. Use a plastic, thin tool **(1)** to separate the front edge of the bottom cover from the computer.

4. Swing the front edge of the bottom cover (2) up and forward until it releases from the computer, and then remove the bottom cover (3).

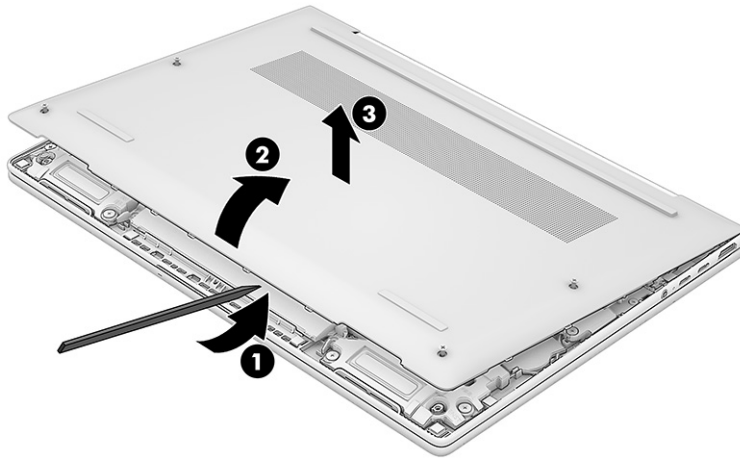

To replace the bottom cover, reverse the removal procedures.

Battery

The battery removal procedure differs depending on whether you are removing and replacing the existing battery or installing a new battery. To install a new battery, you must use a revive kit.

- To remove and replace the existing battery, see [Removing and reinstalling the same battery on page 41](#).
- To install a new battery, see [Installing a new battery on page 42](#).

Removing and reinstalling the same battery

To remove the battery, use this procedure and illustration.

⚠ WARNING! To avoid personal injury and damage to the product:

- Do *not* puncture, twist, or crack the battery.
- Do *not* cause an external puncture or rupture to the battery, which can cause a short inside the battery that can result in battery thermal runaway.
- Do *not* handle or touch the battery enclosure with sharp objects such as tweezers or pliers, which might puncture the battery.
- Do *not* compress or squeeze the battery case with tools or heavy objects stacked on top of the case. These actions can apply undue force on the battery.
- Do *not* touch the connectors with any metallic surface or object, such as metal tools, screws, or coins, which can cause shorting across the connectors.

For additional battery information, see the *Regulatory, Safety, and Environmental Notices*. To access this guide, select the **Search** icon in the taskbar, type `HP Documentation` in the search box, and then select **HP Documentation**.

Before removing the battery, follow these steps:


1. Prepare the computer for disassembly (see [Preparation for disassembly on page 39](#)).
2. Remove the bottom cover (see [Bottom cover on page 39](#)).

⚠ WARNING! To reduce potential safety issues, use only the user-replaceable battery provided with the computer, a replacement battery provided by HP, or a compatible battery purchased from HP.

📋 IMPORTANT: Removing a battery that is the sole power source for the computer can cause loss of information. To prevent loss of information, save your work or shut down the computer through Windows before you remove the battery.

Remove the battery:

1. Disconnect the battery cable (1) from the system board.
2. Swing the battery latches (2) toward the inside of the computer.
3. Lift the front edge of the battery (3) until it rests at an angle, and then remove the battery (4) from the computer.

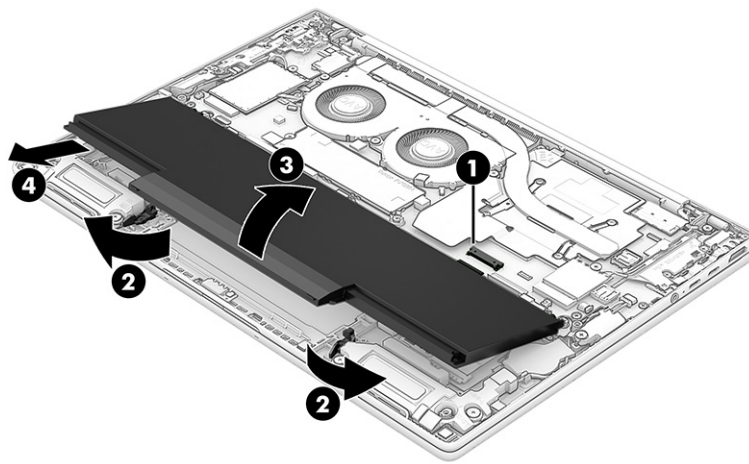

To reinstall the battery, reverse the removal procedures.

📋 NOTE: When reinstalling the battery, be sure to completely reassemble the computer and plug in the AC adapter before turning the computer on.

Installing a new battery

To replace the battery, use these procedures and illustrations. You must use a revive kit to remove the old battery and install a new one. The revive kit includes an empty containment tray and a containment tray with a battery preinstalled.

Table 5-2 Battery descriptions and part numbers

Description	Spare part number
6 cell, 68 Whr, Li-ion battery	N59788-001
3 cell, 56 Whr, Li-ion battery	P34001-001

Before starting this replacement procedure:

- Ensure other individuals are sufficiently clear of your workspace.
- Ensure your workspace is clear of any flammable material such as paper or oils.
- Locate the nearest ABC dry chemical fire-extinguisher for use in an emergency.

 **WARNING!** This procedure requires removing the battery or disconnecting the battery cable. Use care to avoid bending, twisting, or puncturing the battery regardless of its condition. Failure to follow this replacement guide or to use HP recommended tools might damage the system and/or cause a safety hazard.

- Do *not* remove the battery from the containment tray.
- Do *not* handle or touch the battery enclosure with sharp objects such as tweezers or pliers, which might puncture the battery.
- Do *not* touch the connectors with any metallic surface or object, such as metal tools, screws, or coins, which can cause shorting across the connectors.

Should a part become stuck or difficult to remove when opening a unit where a swollen battery is suspected, or if the battery becomes stuck in the unit, stop, and contact HP Support for assistance. Do not try to remove a battery by force.

 **NOTE:** Latch locations and internal components might vary.

Before removing the battery, follow these steps:


1. Prepare the computer for disassembly (see [Preparation for disassembly on page 39](#)).
2. Remove the bottom cover (see [Bottom cover on page 39](#)).

 **WARNING!** To reduce potential safety issues, use only the user-replaceable battery provided with the computer, a replacement battery provided by HP, or a compatible battery purchased from HP.

 **IMPORTANT:** Removing a battery that is the sole power source for the computer can cause loss of information. To prevent loss of information, save your work or shut down the computer through Windows before you remove the battery.

1. Remove the battery using the revive kit:


- a. Disconnect the battery cable from the system board. Connector location might vary.

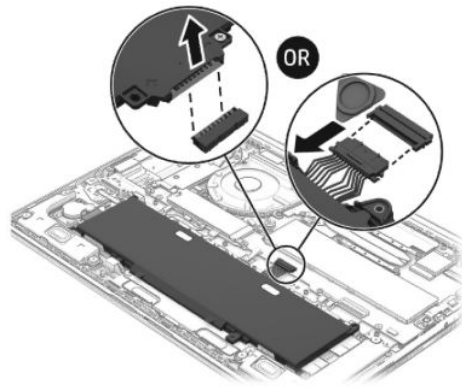

- b. Open the empty battery containment tray.




- c. Remove the paper backing layer from the adhesive on the tray.

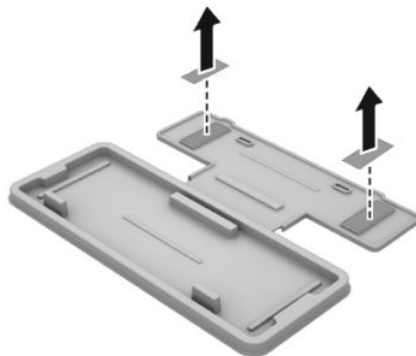


- d. Turn the tray (1) over so that the adhesive is facing down.
- e. Place the tray (2) centered on the battery.

- f. Press down on the indentations on the tray **(3)** to adhere it to the battery.

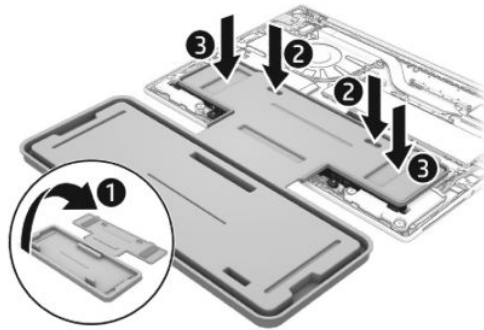


- g. Rotate to unlock the latches **(1)** that secure the battery to the computer. Latch locations might vary.

- h. Lift the top of the tray **(2)** to remove the battery from the computer.

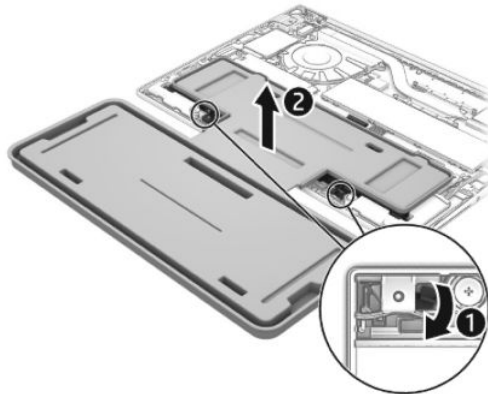


- i. Rotate the battery up and over into the cavity of the containment tray.

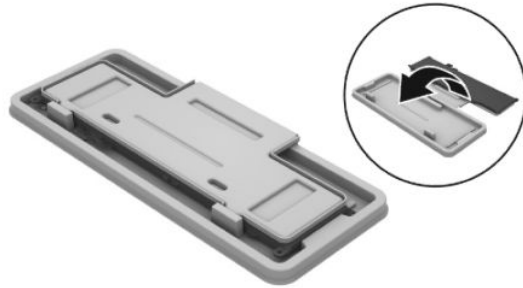


NOTE: Please recycle responsibly. For more information about recycling programs, see the HP website at <http://www.hp.com/recycle>.

- 2. Install the battery using the revive kit:
 - a. Open the containment tray that includes the new battery.
 - b. Turn the tray (1) over so the battery is facing downward, and then insert the battery (2) into the computer. Adhesive secures the battery to the tray.

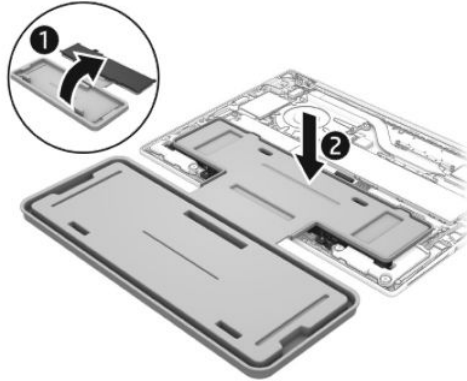


- c. Rotate to lock the latches (1) to secure the battery. Latch locations might vary.

- d. Lift the containment tray (2) off the battery.

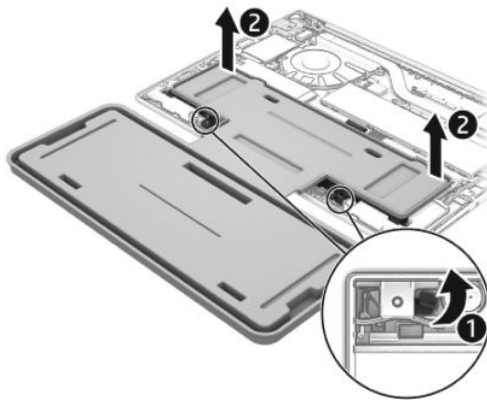

- e. Connect the battery cable to the system board. Connector location might vary.

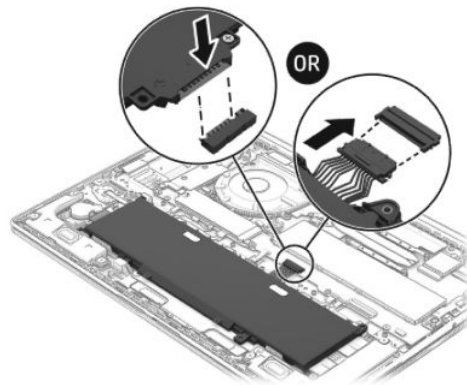

NOTE: When replacing the battery, be sure to completely reassemble the computer and plug in the AC adapter before turning the computer on.

WLAN module

To remove the WLAN module, use this procedure and illustration.

Table 5-3 WLAN module descriptions and part numbers

Description	Spare part number
Intel BE201 M.2 2230 Wi-Fi 7 + Bluetooth 5.4 vPro WW WLAN module	N86465-005
Intel BE201 M.2 2230 Wi-Fi 7 + Bluetooth 5.4 non-vPro WW WLAN module	N86466-005



IMPORTANT: To prevent an unresponsive system, replace the wireless module only with a wireless module authorized for use in the computer by the governmental agency that regulates wireless devices in your country or region. If you replace the module and then receive a warning message, remove the module to restore device functionality, and then contact technical support.

Before removing the WLAN module, follow these steps:


1. Prepare the computer for disassembly (see [Preparation for disassembly on page 39](#)).
2. Remove the bottom cover (see [Bottom cover on page 39](#)).
3. Disconnect the battery cable from the computer (see [Battery on page 41](#)).

Remove the WLAN module:


1. Carefully disconnect the two WLAN antenna cables **(1)** from the terminals on the WLAN module.

Computer models have either one or two WLAN antennas. On models with two antennas, the #1 WLAN antenna cable connects to the WLAN module #1 Main terminal. The #2 WLAN antenna cable connects to the WLAN module #2 Aux terminal.

2. Remove the Phillips M2.0 × 2.4 screw **(2)** that secures the WLAN module to the system board.
3. Lift the edge of the WLAN module **(3)** opposite until it rests at an angle.
4. Remove the WLAN module **(4)** by pulling the module away from the slot at an angle.

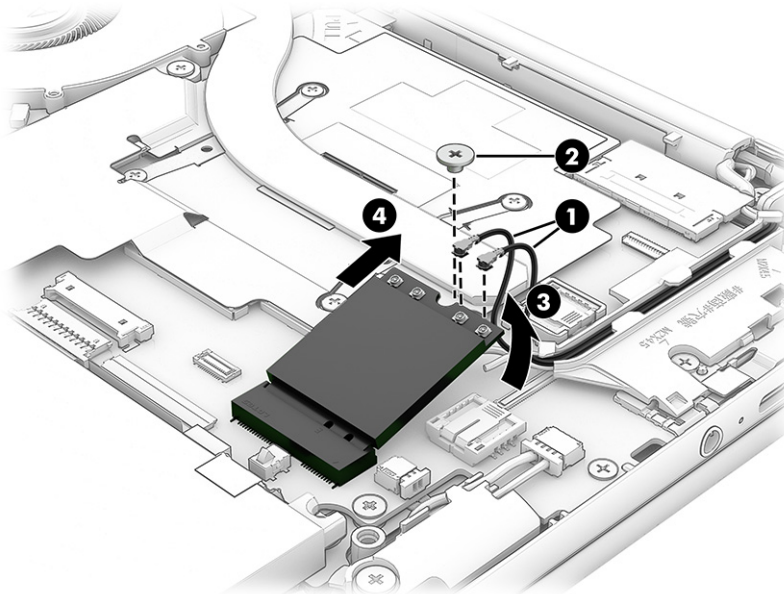

5. If the WLAN antenna is not connected to the terminal on the WLAN module, install a protective sleeve on the antenna connector, as shown in the following illustration.

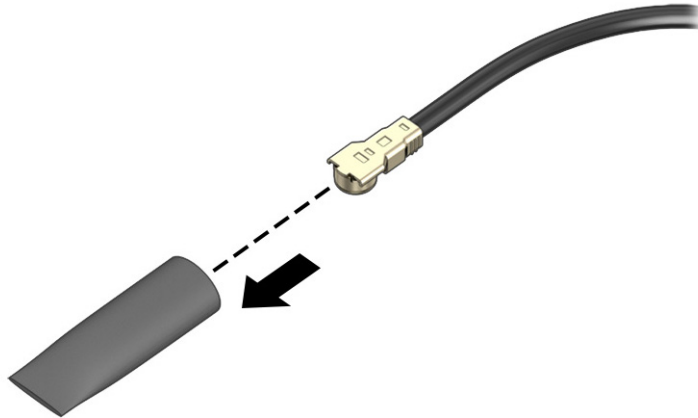

To replace the WLAN module, reverse the removal procedures.

 **NOTE:** The WLAN module is designed with a notch to prevent incorrect insertion.

WWAN module

To remove the WWAN module, use this procedure and illustration.

Table 5-4 WWAN module description and part number

Description	Spare part number
Qualcomm 9205 LTE-M (CAT-M1 fSVC)	P11676-005
R15 5G NR/4G RW 350R-GL	P20951-001
R15 4G LTE GPS RW 350R-GL	P06930-001

 **IMPORTANT:** To prevent an unresponsive system, replace the wireless module only with a wireless module authorized for use in the computer by the governmental agency that regulates wireless devices in your country or region. If you replace the module and then receive a warning message, remove the module to restore device functionality, and then contact technical support.


Before removing the WWAN module, follow these steps:

1. Prepare the computer for disassembly (see [Preparation for disassembly on page 39](#)).
2. Remove the bottom cover (see [Bottom cover on page 39](#)).
3. Disconnect the battery cable from the computer (see [Battery on page 41](#)).


Remove the WWAN module:

1. Carefully disconnect the two WWAN antenna cables **(1)** from the terminals on the WWAN module.
The #5 WWAN antenna cable connects to the WWAN module #5 Main terminal. The #6 WWAN antenna cable connects to the WWAN module #6 Aux terminal.
2. Remove the Phillips M2.0 × 2.4 screw **(2)** that secures the WWAN module to the system board.

3. Lift the edge of the WWAN module (3) until it rests at an angle.
4. Remove the WWAN module (4) by pulling the module away from the slot at an angle.

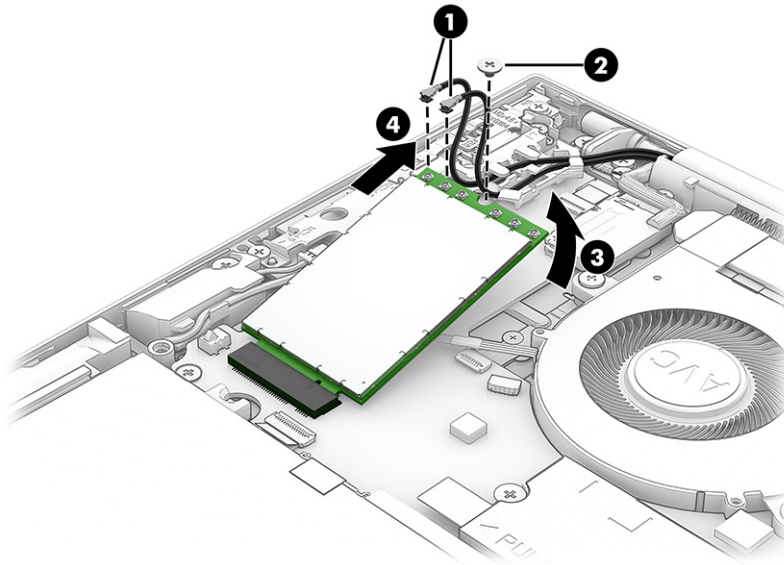

5. If the WWAN antenna is not connected to the terminal on the WWAN module, install a protective sleeve on the antenna connector, as shown in the following illustration.

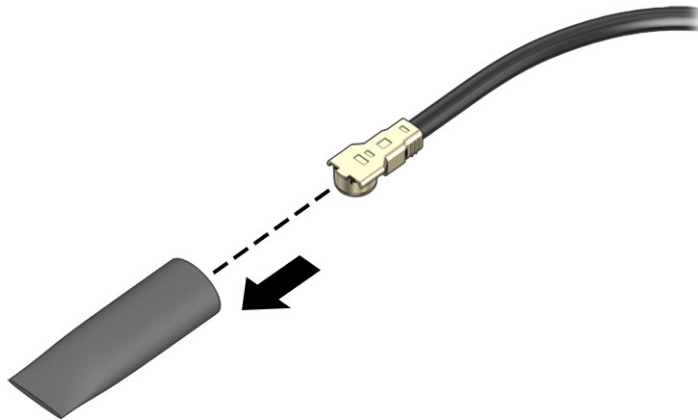

To replace the WWAN module, reverse the removal procedures.



NOTE: The WWAN module is designed with a notch to prevent incorrect insertion.

Solid-state drive

To remove the SSD, use this procedure and illustration.

Table 5-5 SSD descriptions and part numbers

Description	Spare part number
2 TB, 2280, PCIe-4×4, NVMe SSD with TLC	N77396-001
1 TB, 2280, PCIe-4×4, NVMe, SSD with TLC	N77395-001

Table 5-5 SSD descriptions and part numbers (continued)


Description	Spare part number
1 TB, 2280, PCIe-4×4, NVMe, value SSD	N77394-001
512 GB, 2280, PCIe-4×4, NVMe, SSD with TLC	N77393-001
512 GB, M.2 2280, PCIe-4×4, SSD with SED and TLC	N86921-001
512 GB, 2280, PCIe-4×4, NVMe, value SSD	N77392-001
256 GB, 2280, PCIe-4×4, NVMe, value SSD	N77391-001
SSD bracket included in the Bracket Kit, spare part number N98115-001	

Before removing the SSD, follow these steps:


1. Prepare the computer for disassembly (see [Preparation for disassembly on page 39](#)).
2. Remove the bottom cover (see [Bottom cover on page 39](#)).
3. Disconnect the battery cable from the computer (see [Battery on page 41](#)).

Remove the SSD:

1. Remove the Phillips M2.0 × 2.4 screw **(1)** that secures the SSD to the computer.
2. Lift the edge of the SSD **(2)** opposite the slot until it rests at an angle.
3. Remove the SSD by pulling the drive up **(3)** and away from the slot **(4)** at an angle.

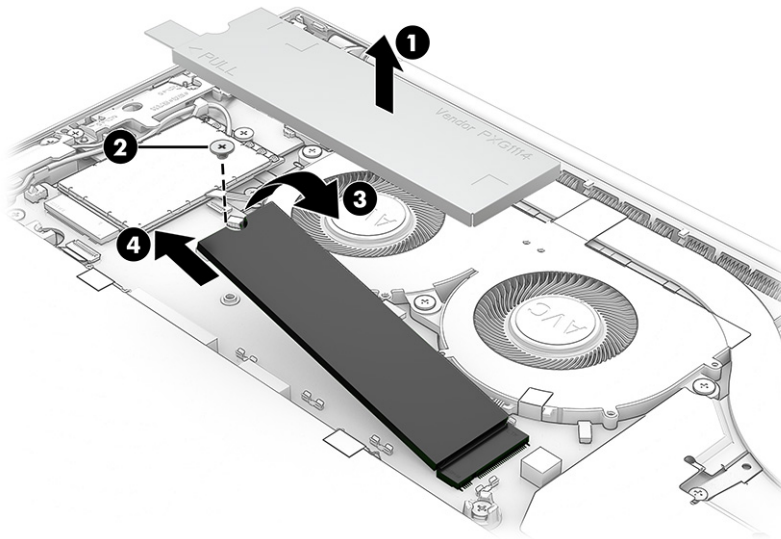

4. Thoroughly clean the thermal material from the surfaces of the SSD (1) and the system board (2) each time you remove the SSD. Replacement SSD thermal material is included in the SSD spare part kit. The following illustration shows the replacement thermal material locations.

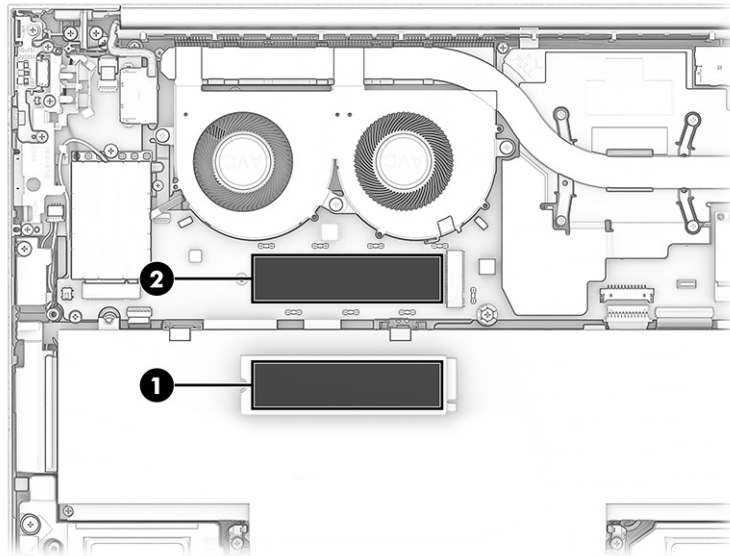

To replace the SSD, reverse the removal procedures.



NOTE: The SSD is designed with a notch to prevent incorrect insertion.

6 Removal and replacement procedures for authorized service provider parts

This chapter provides removal and replacement procedures for authorized service provider parts.

 **IMPORTANT:** Only an authorized service provider should access the components described in this chapter. Accessing these parts can damage the computer or void the warranty.

 **NOTE:** Details about your computer, including model, serial number, product key, and length of warranty, are on the service tag at the bottom of your computer.

 **NOTE:** The [HP Support YouTube Channel](#) (in English) has videos that provide step-by-step removal and replacement instructions for many common parts and models.

Component replacement procedures

To remove and replace computer components, use the procedures described in this section.

 **NOTE:** HP continually improves and changes product parts. For complete and current information about supported parts for your computer, go to <https://partsurfer.hp.com/>, select your country or region, and then follow the on-screen instructions.

Make special note of each screw size and location during removal and replacement.

Preparation for disassembly

To remove and replace computer components, use these procedures:

For initial safety procedures, see [Removal and replacement procedures preliminary requirements on page 30](#).

1. Turn off the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect the power from the computer by unplugging the power cord from the computer.
3. Disconnect all external devices from the computer.

System board

To remove the system board, use these procedures and illustrations.

Table 6-1 System board descriptions and part numbers

Description	Spare part number
System board (includes processor): All system boards use the following part numbers:	
xxxxxx-001: Non-Windows operating system	
xxxxxx-601: Windows 10 operating system	

Table 6-1 System board descriptions and part numbers (continued)

Description	Spare part number
For use in all countries and regions except the People's Republic of China	
Equipped with an Intel Core U5-236V processor, 16 GB of system memory, and the Windows 11 operating system	P24117-601
Equipped with an Intel Core U5-238V processor, 36 GB of system memory, and the Windows 11 operating system	P24118-601
Equipped with an Intel Core U7-266V processor, 16 GB of system memory, and the Windows 11 operating system	P24119-601
Equipped with an Intel Core U7-268V processor, 32 GB of system memory, OSR, and the Windows 11 operating system	P24120-601
Equipped with an Intel Core U7-268V processor, 32 GB of system memory, OSR, and the Windows 11 operating system	P24121-601
Equipped with an Intel Core U5-238V processor, 32 GB of system memory, OSR, and the Windows 11 operating system	P24122-601
Equipped with an Intel Core U5-226V processor, 16 GB of system memory, and the Windows 11 operating system	P24123-601
Equipped with an Intel Core U5-228V processor, 32 GB of system memory, and the Windows 11 operating system	P24124-601
Equipped with an Intel Core U7-256V processor, 16 GB of system memory, and the Windows 11 operating system	P24125-601
Equipped with an Intel Core U7-258V processor, 32 GB of system memory, and the Windows 11 operating system	P24126-601
Equipped with an Intel Core U5-236V processor, 16 GB of system memory, and the Windows 11 operating system	P32329-601
Equipped with an Intel Core U5-238V processor, 32 GB of system memory, and the Windows 11 operating system	P32330-601
Equipped with an Intel Core U7-266V processor, 16 GB of system memory, and the Windows 11 operating system	P32331-601
Equipped with an Intel Core U768-268V processor, 32 GB of system memory, and the Windows 11 operating system	P32332-601
Equipped with an Intel Core U7-268V processor, 32 GB of system memory, OSR, and the Windows 11 operating system	P32333-601
Equipped with an Intel Core U5-238V processor, 32 GB of system memory, OSR, and the Windows 11 operating system	P32334-601
Equipped with an Intel Core U5-226V processor, 16 GB of system memory, and the Windows 11 operating system	P32335-601
Equipped with an Intel Core U5-228V processor, 32 GB of system memory, and the Windows 11 operating system	P32336-601
Equipped with an Intel Core U7-256V processor, 16 GB of system memory, and the Windows 11 operating system	P32337-601
Equipped with an Intel Core U7-258V processor, 32 GB of system memory, and the Windows 11 operating system	P32338-601

Before removing the system board, follow these steps:

1. Prepare the computer for disassembly (see [Preparation for disassembly on page 53](#)).
2. Remove the bottom cover (see [Bottom cover on page 39](#)).
3. Disconnect the battery cable from the computer (see [Battery on page 41](#)).

When you replace the system board, be sure to remove the following components (as applicable) from the defective system board and install them on the replacement system board:

- Solid-state drive (see [Solid-state drive on page 50](#)).
- WLAN module (see [WLAN module on page 47](#)).
- Fan/heat sink assembly (see [Fan/heat sink assembly on page 57](#)).

Remove the system board:

1. Release the zero insertion force (ZIF) connector **(1)** the fingerprint reader cable is connected to, and then disconnect the fingerprint reader cable from the system board.
2. Disconnect the display hub cable **(2)** from the system board.
3. Release the ZIF connector **(3)** the keyboard backlight cable is connected to, and then disconnect the keyboard backlight cable from the system board.
4. Disconnect the display panel cable **(4)** from the system board.
5. Disconnect the speaker cables **(5)** from the system board.
6. Carefully disconnect the two WLAN antenna cables **(6)** from the terminals on the WLAN module.




NOTE: Computer models have either one or two WLAN antennas. On models with two antennas, the #1 WLAN antenna cable connects to the WLAN module #1 Main terminal. The #2 WLAN antenna cable connects to the WLAN module #2 Aux terminal.

7. Release the ZIF connector **(7)** the transfer board cable is connected to, and then disconnect the transfer board cable from the system board.
8. Release the ZIF connector **(8)** the NFC module cable is connected to, and then disconnect the NFC module cable from the system board.
9. Carefully disconnect the two WWAN antenna cables **(9)** from the terminals on the WWAN module.




NOTE: Computer models have two WWAN antennas. The #5 WWAN antenna cable connects to the WWAN module #5 Main terminal. The #6 WWAN antenna cable connects to the WWAN module #6 Aux terminal.

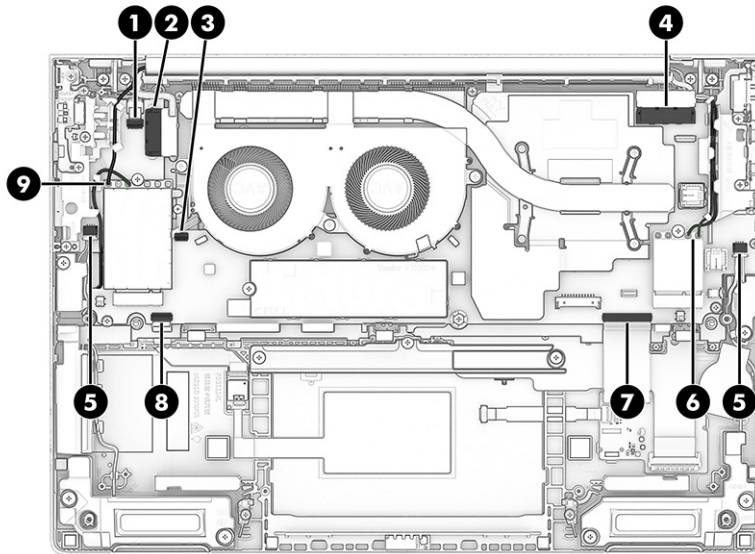


10. Remove the 13 Phillips M2.0 × 4.9 screws **(1)** that secure the system board, the left and right I/O bracket holders, the left and right I/O brackets, the middle hook holder, and the security bracket to the computer.
11. Loosen the Phillip captive screw **(2)** that secures the system board and fan/heat sink assembly to the computer.
12. Remove the middle hook holder **(3)**, the left and right I/O brackets **(4)**, the left and right I/O bracket holders **(5)**, and the security bracket **(6)**.

The system board hardware components are available as detailed below:

- Middle hook holder: Included in the Plastics Kit, spare part number N98117-001
- Left and right I/O brackets: Included in the Bracket Kit, spare part number N98115-001
- Left and right I/O bracket holders: Included in the Plastics Kit, spare part number N98117-001
- Security bracket: Not available as a spare part

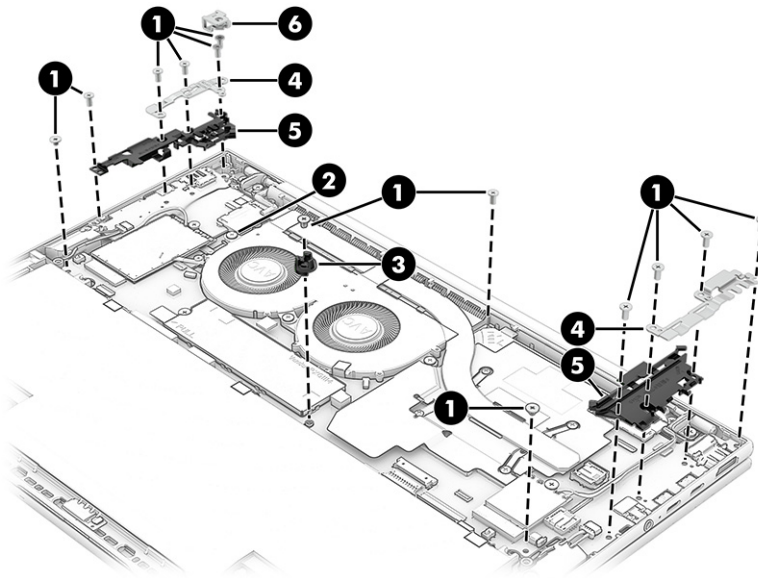

13. Lift the right side of the system board (1) until it rests at an angle, and then remove the system board (2) by sliding it up and to the right at an angle.

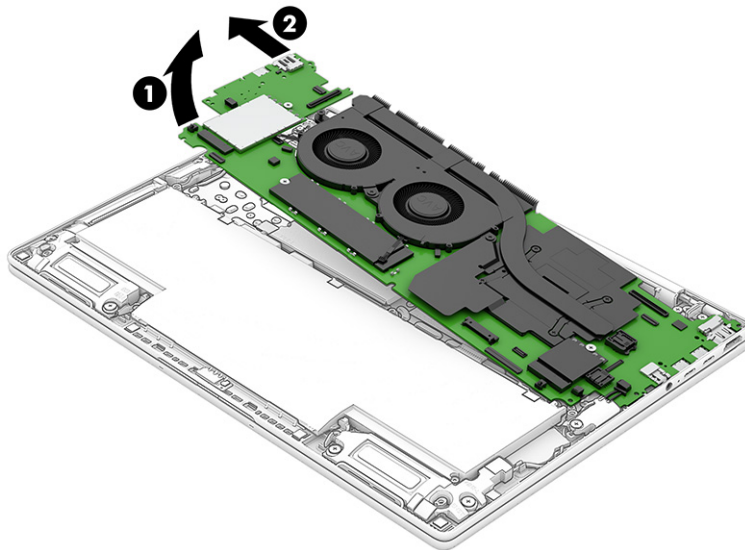

To install the system board, reverse the removal procedures.

Fan/heat sink assembly

To remove the fan/heat sink assembly, use these procedures and illustrations.

Table 6-2 Fan/heat sink assembly description and part number


Description	Spare part number
Fan/heat sink assembly (includes captive screws and replacement thermal material)	P28063-001

Before removing the fan/heat sink assembly, follow these steps:

1. Prepare the computer for disassembly (see [Preparation for disassembly on page 53](#)).
2. Remove the bottom cover (see [Bottom cover on page 39](#)).
3. Disconnect the battery cable from the computer (see [Battery on page 41](#)).
4. Remove the system board (see [System board on page 53](#)).


Remove the fan/heat sink assembly:

1. Disconnect the fan cables **(1)** from the system board.
2. Loosen the six screws **(2)** and **(3)** that secure the fan/heat sink assembly to the system board.
3. Remove the fan/heat sink assembly **(4)** from the system board.

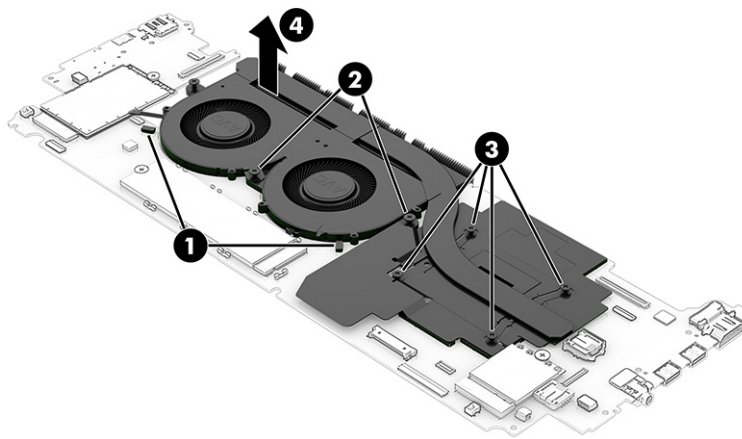

4. Thoroughly clean the thermal material from the surfaces of the fan/heat sink assembly and the system board components each time you remove the fan/heat sink assembly. Replacement thermal material is included with the fan/heat sink assembly and system board spare part kits. The following illustration shows the replacement thermal material locations.

Thermal paste is used on the processor **(1)** and on the fan/heat sink assembly area **(2)** that services the processor.

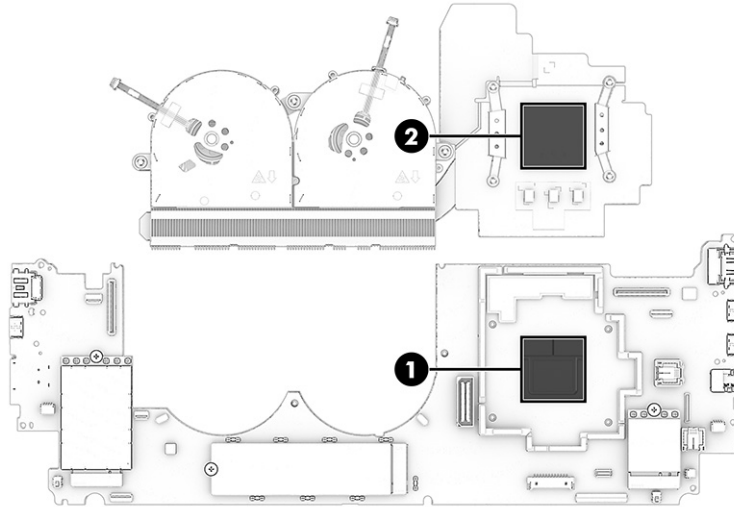

To replace the fan/heat sink assembly, reverse the removal procedures.

Fingerprint reader cable

To remove the fingerprint reader cable, use this procedure and illustration.

The fingerprint reader cable is included in the Cable Kit, spare part number P28061-001.


Before removing the fingerprint reader cable, follow these steps:

1. Prepare the computer for disassembly (see [Preparation for disassembly on page 53](#)).
2. Remove the bottom cover (see [Bottom cover on page 39](#)).
3. Disconnect the battery cable from the computer (see [Battery on page 41](#)).
4. Remove the system board (see [System board on page 53](#)).

Remove the fingerprint reader cable:

1. Release the ZIF connector (1) the fingerprint reader cable is connected to, and then disconnect the fingerprint reader cable from the fingerprint reader.

2. Remove the fingerprint reader cable (2) from the computer.

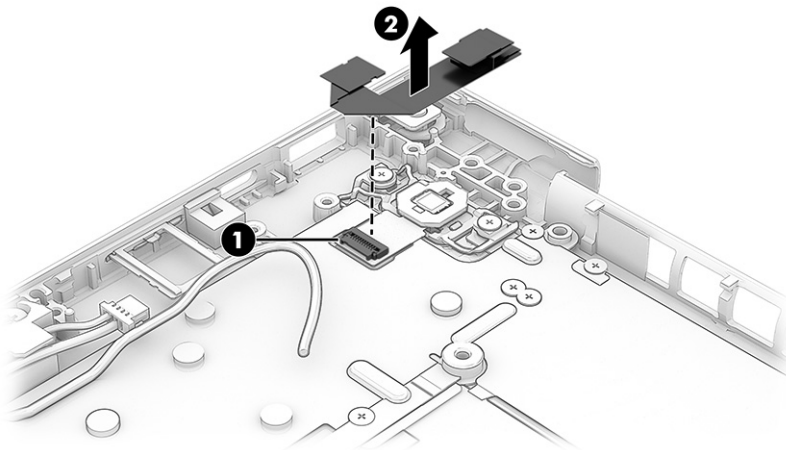

To replace the fingerprint reader cable, reverse the removal procedures.

Fingerprint reader

To remove the fingerprint reader, use this procedure and illustration.

Table 6-3 Fingerprint reader descriptions and spare part numbers

Description	Spare part number
Fingerprint reader (includes cable)	N98113-001
	P32589-001
NOTE: The fingerprint reader spare part kit does not include the fingerprint reader cable. The fingerprint reader cable is included in the Cable Kit, spare part number P28061-001.	
Power button without fingerprint reader	P32590-001
	N98114-001


Before removing the fingerprint reader, follow these steps:

1. Prepare the computer for disassembly (see [Preparation for disassembly on page 53](#)).
2. Remove the bottom cover (see [Bottom cover on page 39](#)).
3. Disconnect the battery cable from the computer (see [Battery on page 41](#)).
4. Remove the system board (see [System board on page 53](#)).
5. Remove the fingerprint reader cable (see [Fingerprint reader cable on page 59](#)).

Remove the fingerprint reader:

1. Remove the two Phillips M1.5 × 2.9 screws (1) that secure the fingerprint reader and bracket to the computer.
2. Detach the fingerprint reader from the computer. The fingerprint reader is attached to the computer with double-sided adhesive.

3. Remove the fingerprint reader bracket and fingerprint reader (2) from the computer.

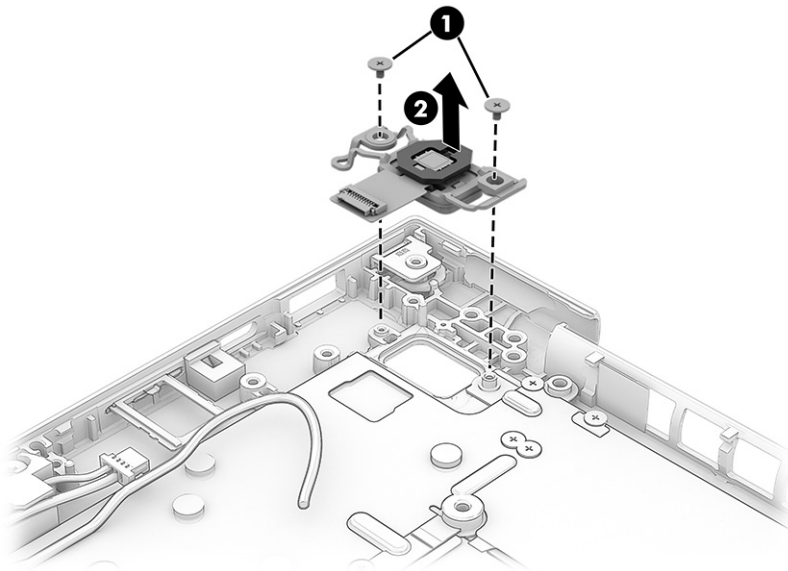

To replace the fingerprint reader, reverse the removal procedures.

Display assembly

To remove and disassemble the display assembly, use these procedures and illustrations.

Table 6-4 Display assembly descriptions and part numbers

Description	Spare part number
35.6 cm (14.0 in), antiglare, TOP, with privacy filter and infrared webcam, for use on computer models equipped with WWAN; typical brightness: 500 nits	P24130-001
35.6 cm (14.0 in), antiglare, nTOP, with privacy filter and infrared webcam, for use on computer models equipped with WLAN; typical brightness: 400 nits	P24131-001
35.6 cm (14.0 in), antiglare, nTOP, with privacy filter and infrared webcam, for use on computer models equipped with WWAN; typical brightness: 400 nits	P24132-001
35.6 cm (14.0 in), antiglare,, TOP, with privacy filter and infrared webcam, for use on computer models equipped with WWAN; typical brightness: 800 nits	P24133-001
35.6 cm (14.0 in), antiglare, UWVA, nTOP, with infrared webcam, for use on computer models equipped with WWAN; typical brightness: 800 nits	P24133-001
35.6 cm (14.0 in), antiglare, UWVA, nTOP, with infrared webcam, for use on computer models equipped with WWAN; typical brightness: 800 nits	P24134-001
35.6 cm (14.0 in), antiglare,, TOP, with privacy filter and infrared webcam, for use on computer models equipped with WLAN; typical brightness: 500 nits	P32341-00
35.6 cm (14.0 in), antiglare, TOP, with privacy filter and infrared webcam, for use on computer models equipped with WWAN; typical brightness: 500 nits	P32342-00
35.6 cm (14.0 in), antiglare, TOP, with privacy filter and infrared webcam, for use on computer models equipped with WLAN; typical brightness: 400 nits	P32343-00
35.6 cm (14.0 in), 2.5K, antiglare, TOP, with privacy filter and infrared webcam, for use on computer models equipped with WLAN; typical brightness: 400 nits	P24127-001

Table 6-4 Display assembly descriptions and part numbers (continued)

Description	Spare part number
35.6 cm (14.0 in), 2.5K, antiglare, TOP, with privacy filter and infrared webcam, for use on computer models equipped with WLAN; typical brightness: 400 nits	P32349-001
35.6 cm (14.0 in), 2.5K, DBTS, antiglare, TOP, with privacy filter and infrared webcam, for use on computer models equipped with WWAN; typical brightness: 400 nits	P24128-001
35.6 cm (14.0 in), 2.5K, antiglare, TOP, with privacy filter and infrared webcam, for use on computer models equipped with WWAN; typical brightness: 400 nits	P32340-001
35.6 cm (14.0 in), antiglare, nTOP, with privacy filter and infrared webcam, for use on computer models equipped with WWAN; typical brightness: 400 nits	P32344-001
35.6 cm (14.0 in), antiglare, nTOP, with privacy filter and infrared webcam, for use on computer models equipped with WWAN; typical brightness: 800 nits	P32345-001
35.6 cm (14.0 in), antiglare, TOP, with privacy filter and infrared webcam, for use on computer models equipped with WWAN; typical brightness: 800 nits	P32346-001

Before removing the display assembly, follow these steps:


1. Prepare the computer for disassembly (see [Preparation for disassembly on page 53](#)).
2. Remove the bottom cover (see [Bottom cover on page 39](#)).
3. Disconnect the battery cable from the computer (see [Battery on page 41](#)).

Remove the display assembly:


1. Disconnect the display hub cable **(1)** from the system board.
2. Carefully disconnect the two WWAN antenna cables **(2)** from the terminals on the WWAN module.

The #5 WWAN antenna cable connects to the WWAN module #5 Main terminal. The #6 WWAN antenna cable connects to the WWAN module #6 Aux terminal.


3. Release the WWAN antenna cables from the retention clips (3) and routing channels that are built into the right I/O bracket holder.

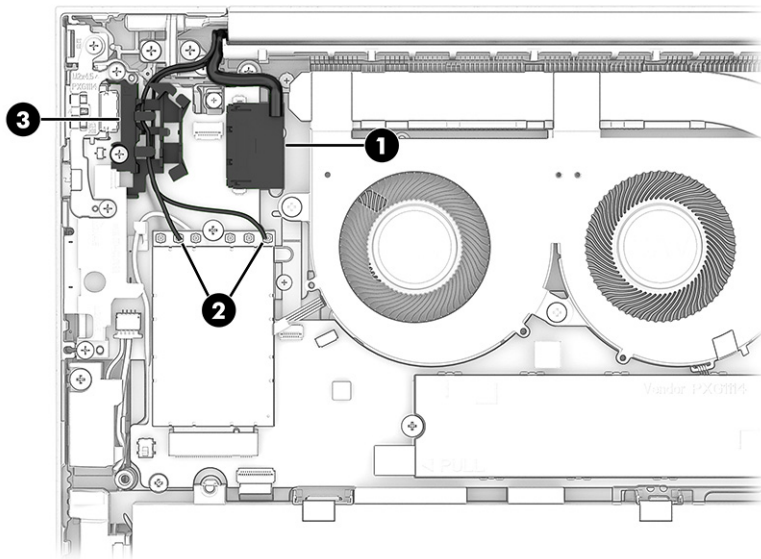


4. Disconnect the display panel cable (1) from the system board.
5. Carefully disconnect the two WLAN antenna cables (2) from the terminals on the WLAN module.
The #1 WLAN antenna cable connects to the WLAN module #1 Main terminal. The #2 WLAN antenna cable connects to the WLAN module #2 Aux terminal.
6. Release the WLAN antenna cables from the retention clips (3) and routing channels that are built into the left I/O bracket holder.

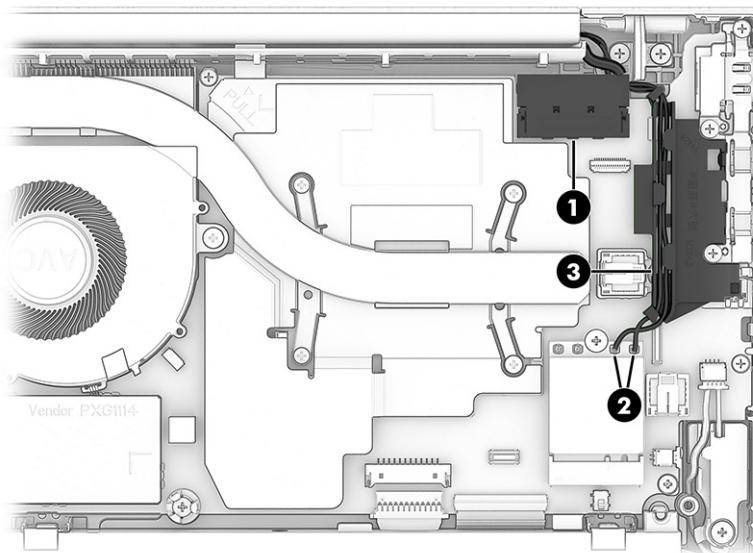

7. Remove the six Phillips M2.5 × 4.1 screws that secure the display assembly to the computer.

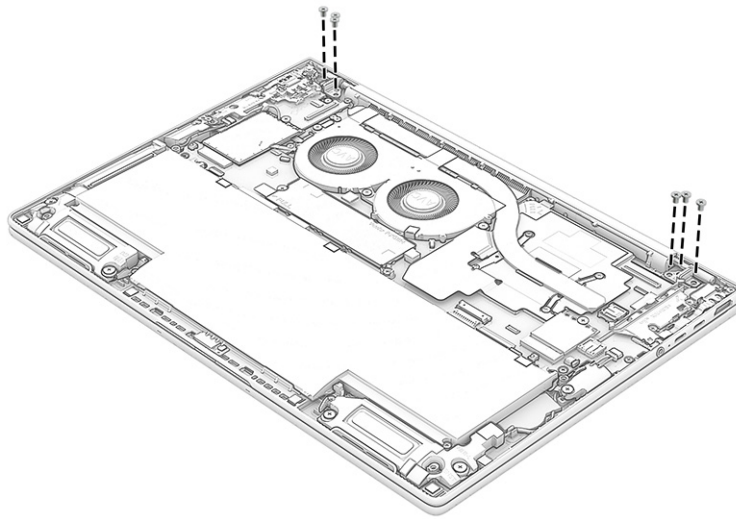

8. Swing the top edge of the display assembly (1) down and away from the top cover with keyboard until it rests at a 90-degree angle.
9. Release the display hinges from the top cover by sliding the top cover with keyboard (2) away from the display assembly.
10. Separate the top cover with keyboard (3) from the display assembly.

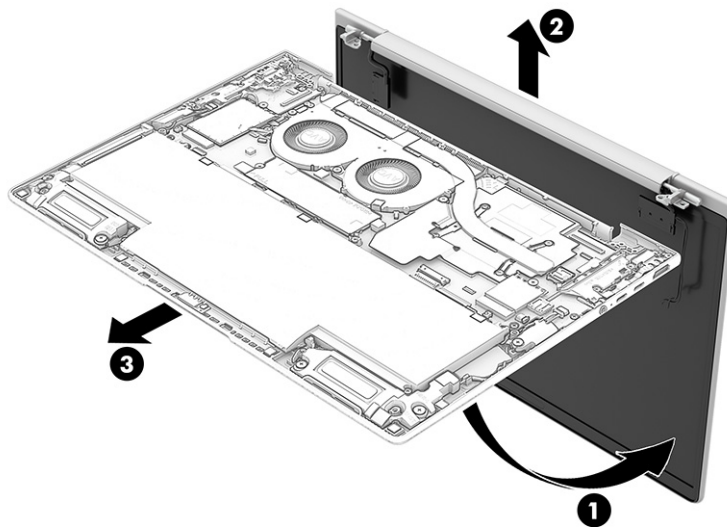

To replace the display assembly, reverse the removal procedures.

Speakers

To remove the speakers, use this procedure and illustration.

Table 6-5 Speaker description and part number

Description	Spare part number
Speakers (includes left and right speakers, cables, and six rubber isolators)	P28067-001


Before removing the speakers, follow these steps:

1. Prepare the computer for disassembly (see [Preparation for disassembly on page 53](#)).
2. Remove the bottom cover (see [Bottom cover on page 39](#)).
3. Remove the battery from the computer (see [Battery on page 41](#)).

Remove the speakers:

1. Disconnect the speaker cables (1) from the system board.
2. Remove the six Phillips M2.0 × 2.4 broadhead screws (2) that secure the speakers to the computer.
3. Release the speaker cables from the retention clips (3) that are built into the computer.
4. Remove the rear speakers (4) from the computer.
5. Remove the front speakers (5) from the computer.

 **NOTE:** When removing the speakers, make note of the location of the rubber isolator locations (6). The absence of or damage to these isolators can result in degraded speaker performance.

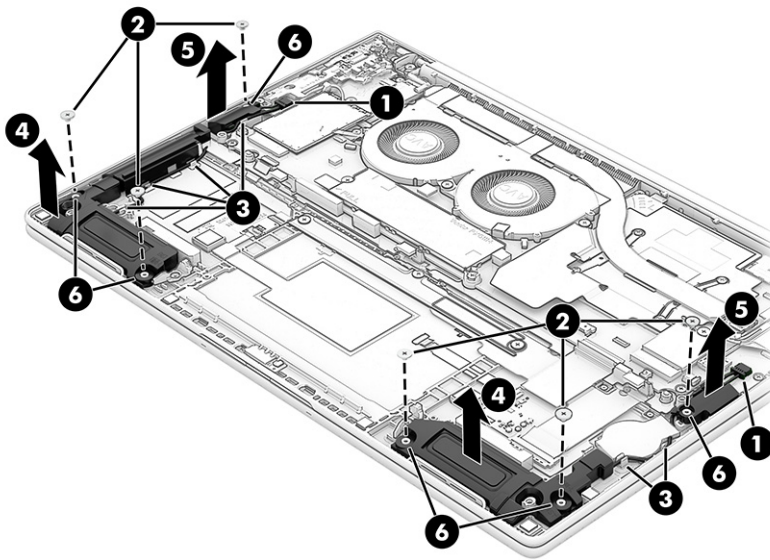

To replace the speakers, reverse the removal procedures.

NFC module cable

To remove the NFC module cable, use this procedure and illustration.


The NFC module cable is included in the Cable Kit, spare part number P28061-001.

Before removing the NFC module cable, follow these steps:

1. Prepare the computer for disassembly (see [Preparation for disassembly on page 53](#)).
2. Remove the bottom cover (see [Bottom cover on page 39](#)).
3. Remove the battery from the computer (see [Battery on page 41](#)).

Remove the NFC module cable:

1. Release the ZIF connector (1) the NFC module cable is connected to, and then disconnect the NFC module cable from the system board.
2. Release the ZIF connector (2) the NFC module cable is connected to, and then disconnect the NFC module cable from the NFC module.
3. Remove the NFC module cable (3) from the computer.

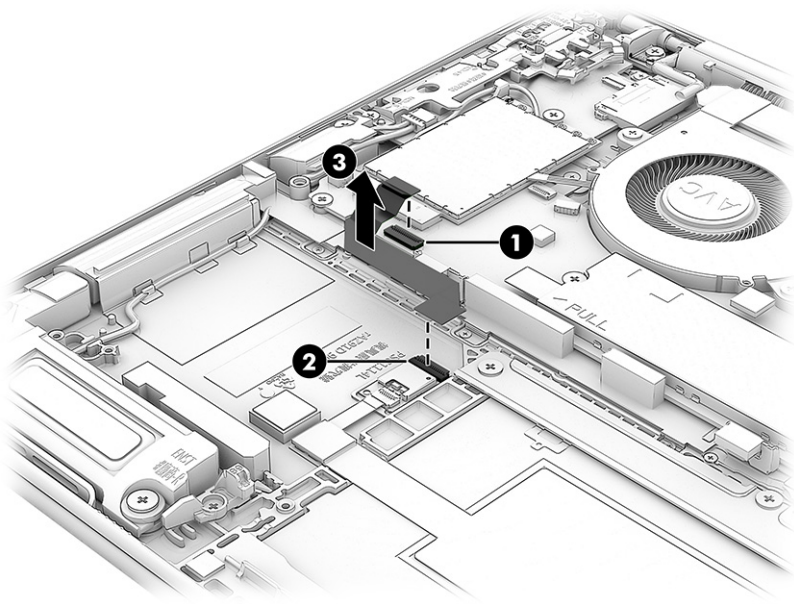

To replace the NFC module cable, reverse the removal procedures.

NFC module

To remove the NFC module, use this procedure and illustration.

Table 6-6 NFC module description and part number

Description	Spare part number
NFC module	914758-001

NOTE: The NFC module spare part kit does not include the NFC module. The NFC module cable is included in the Cable Kit, spare part number P28061-001.


Before removing the NFC module, follow these steps:

1. Prepare the computer for disassembly (see [Preparation for disassembly on page 53](#)).
2. Remove the bottom cover (see [Bottom cover on page 39](#)).

3. Remove the battery from the computer (see [Battery on page 41](#)).
4. Remove the NFC module cable (see [NFC module cable on page 65](#)).

Remove the NFC module:

1. Release the ZIF connector **(1)** the NFC module antenna cable is connected to, and then disconnect the NFC module antenna cable from the NFC module.
2. Detach the NFC module **(2)** from the computer. The NFC module is attached to the computer with double-sided adhesive.

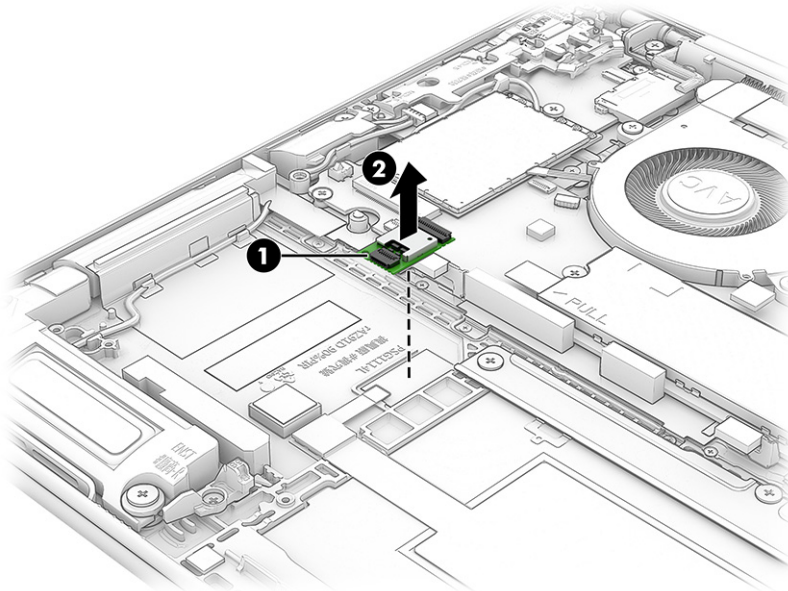

To replace the NFC module, reverse the removal procedures.

Touchpad cable

To remove the touchpad cable, use this procedure and illustration.

The touchpad cable is included in the Cable Kit, spare part number P28061-001.


Before removing the touchpad cable, follow these steps:

1. Prepare the computer for disassembly (see [Preparation for disassembly on page 53](#)).
2. Remove the bottom cover (see [Bottom cover on page 39](#)).
3. Remove the battery from the computer (see [Battery on page 41](#)).

Remove the touchpad cable:

1. Release the ZIF connector **(1)** the touchpad cable is connected to, and then disconnect the touchpad cable from the transfer board.
2. Release the ZIF connector **(2)** the touchpad cable is connected to, and then disconnect the touchpad cable from the touchpad.

3. Detach the touchpad cable (3) from the computer. The touchpad cable is attached to the computer with double-sided adhesive.

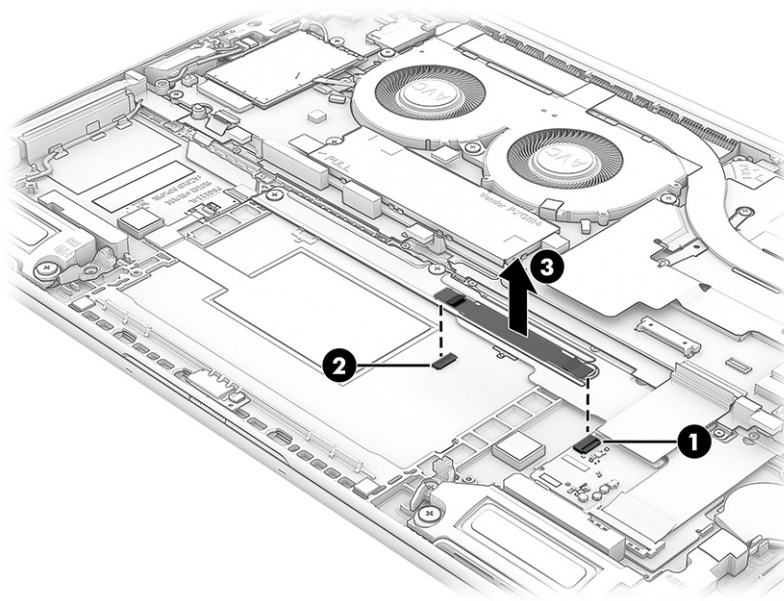

4. Remove the touchpad cable.

To replace the touchpad cable, reverse the removal procedures.

Touchpad

To remove the touchpad, use this procedure and illustration.

Table 6-7 Touchpad descriptions and part numbers

Description	Spare part number
For use on computer models equipped with NFC (includes NFC module antenna and cable)	P28068-001
For use on computer models not equipped with NFC	P28069-001

NOTE: The touchpad spare part kit does not include the touchpad cable. The touchpad cable is included in the Cable Kit, spare part number P28061-001.


Before removing the touchpad, follow these steps:

1. Prepare the computer for disassembly (see [Preparation for disassembly on page 53](#)).
2. Remove the bottom cover (see [Bottom cover on page 39](#)).
3. Remove the battery from the computer (see [Battery on page 41](#)).
4. Remove the touchpad cable (see [Touchpad cable on page 67](#)).

Remove the touchpad:

1. Release the ZIF connector (1) the NFC module antenna cable is connected to, and then disconnect the NFC module antenna cable from the NFC module.

2. Remove the three Phillips M2.0 × 2.4 broadhead screws **(2)** that secure the touchpad to the computer.
3. Lift the rear edge of the touchpad **(3)** until it rests at an angle.
4. Remove the touchpad **(4)** by sliding it up and back at an angle.

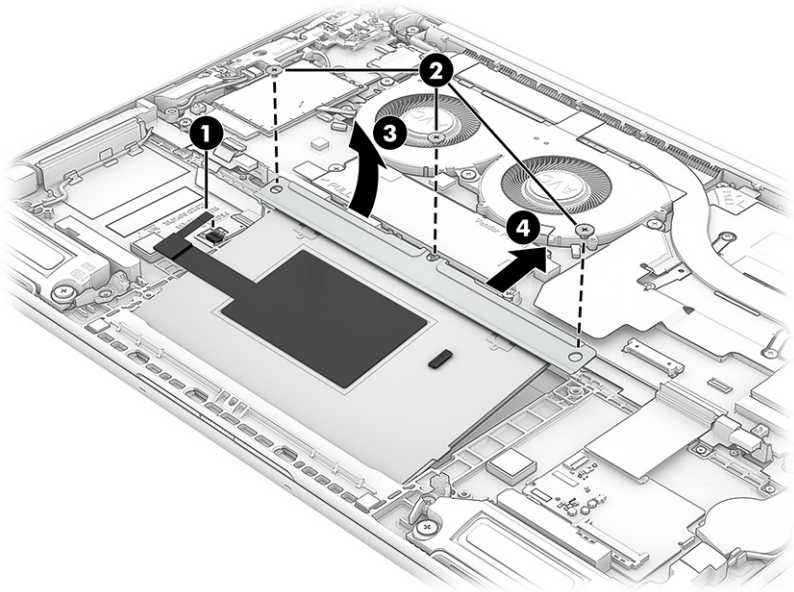

To replace the touchpad, reverse the removal procedures.

Connector board cable

To remove the connector board cable, use this procedure and illustration.

Table 6-8 Connector board cable description and part number

Description	Spare part number
Connector board cable with connector board	P28064-001


Before removing the connector board cable, follow these steps:

1. Prepare the computer for disassembly (see [Preparation for disassembly on page 53](#)).
2. Remove the bottom cover (see [Bottom cover on page 39](#)).
3. Disconnect the battery cable from the computer (see [Battery on page 41](#)).

Remove the connector board cable:

1. Release the zero insertion force (ZIF) connector **(1)** the connector board cable is connected to, and then disconnect the connector board cable from the system board.
2. Release the ZIF connector **(2)** the connector board cable is connected to, and then disconnect the connector board cable from the connector board.

3. Remove the connector board cable (3) from the computer.

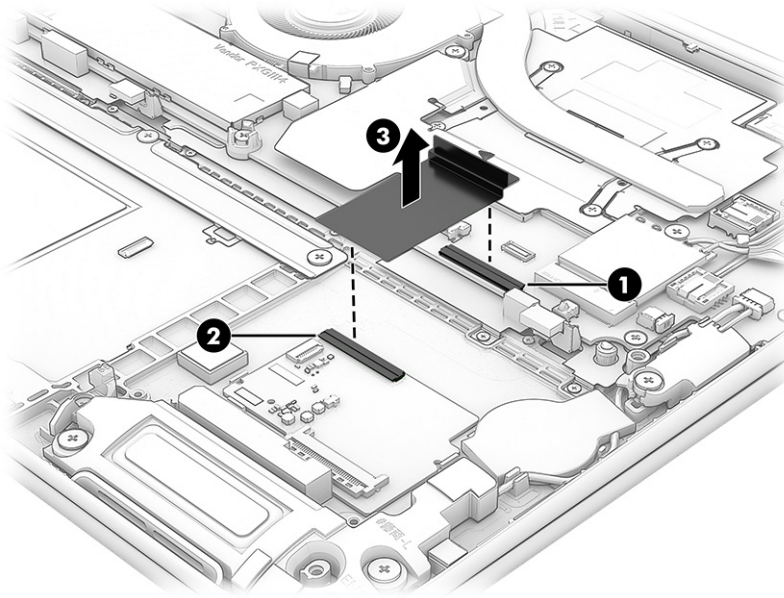

To replace the connector board cable, reverse the removal procedures.

Connector board

To remove the connector board, use this procedure and illustration.

Table 6-9 Connector board description and part number

Description	Spare part number
Connector board (includes USB port and audio jack)	P28064-001
NOTE: The connector board spare part kit includes the connector cable.	


Before removing the connector board, follow these steps:

1. Prepare the computer for disassembly (see [Preparation for disassembly on page 53](#)).
2. Remove the bottom cover (see [Bottom cover on page 39](#)).
3. Disconnect the battery cable from the computer (see [Battery on page 41](#)).
4. Remove the connector board cable (see [Connector board cable on page 69](#)).

Remove the connector board:

1. Remove the two Phillips M2.0 × 2.9 screws (1) that secure the connector board to the computer.

2. Remove the connector board (2) from the computer.

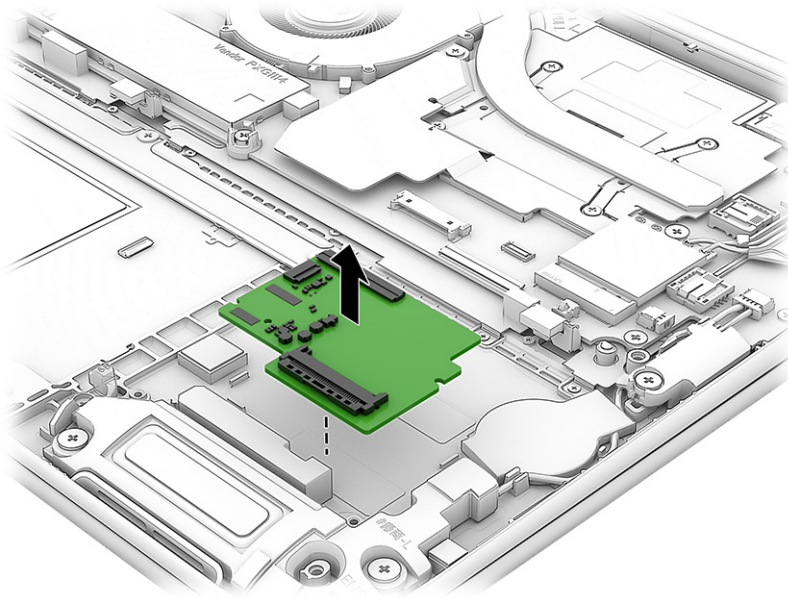

To replace the connector board, reverse the removal procedures.

Top cover with keyboard

The top cover with keyboard remains after removing all other spare parts from the computer. In this section, the first table provides the main spare part number for the top covers and keyboards. The second table provides the country codes.

Table 6-10 Top cover with keyboard descriptions and part numbers

Description	Spare part number
Top cover with keyboard with backlight for use on computer models equipped with privacy filter (includes backlight cable and keyboard cable)	P32348-xxx
Top cover with keyboard with backlight for use on computer models equipped with privacy filter (includes backlight cable and keyboard cable)	P24136-xxx
Top cover with keyboard with backlight for use on computer models not equipped with privacy filter (includes backlight cable and keyboard cable)	P32347-xxx
Top cover with keyboard with backlight for use on computer models not equipped with privacy filter (includes backlight cable and keyboard cable)	P24135-xxx

Table 6-11 Spare part country codes

For use in country or region	Spare part number	For use in country or region	Spare part number	For use in country or region	Spare part number
Belgium	-A41	Israel	-BB1	Slovenia	-BA1
Brazil	-201	Italy	-061	South Korea	-AD1
Bulgaria	-261	Japan	-291	Spain	-071
The Czech Republic and Slovakia	-FL1	Kazakhstan	-DF1	Sweden and Finland	-B71

Table 6-11 Spare part country codes (continued)

For use in country or region	Spare part number	For use in country or region	Spare part number	For use in country or region	Spare part number
Denmark	-081	Latin America	-161	Switzerland	-BG1
Denmark, Finland, and Norway	-DH1	The Netherlands	-B31	Taiwan	-AB1
France	-051	Northwest Africa	-FP1	Thailand	-281
French Canada	-DB1	Norway	-091	Turkey	-141
Germany	-041	Portugal	-131	Turkey-F	-541
Greece	-151	Romania	-271	Ukraine	-BD1
Hungary	-211	Russia	-251	United Kingdom	-031
Iceland	-DD1	Saudi Arabia	-171	United States	-001
India	-D61				

7 Computer Setup (BIOS), TPM, and HP Sure Start

HP provides several tools to help set up and protect your computer.

Using Computer Setup

Computer Setup, or Basic Input/Output System (BIOS), controls communication between all the input and output devices on the system (such as hard drives, display, keyboard, mouse, and printer). Computer Setup includes settings for types of devices installed, the startup sequence of the computer, and amount of system and extended memory.

 **NOTE:** Use extreme care when making changes in Computer Setup. Errors can prevent the computer from operating properly.

To start Computer Setup, turn on or restart the computer, and when the HP logo appears, press **F10** to enter Computer Setup.

Navigating and selecting in Computer Setup

You can navigate and select in Computer Setup using one or more methods.

- To select a menu or a menu item, use the **tab** key and the keyboard arrow keys and then press **enter**, or use a pointing device to select the item.
- To scroll up and down, select the up arrow or the down arrow in the upper-right corner of the screen, or use the up arrow key or the down arrow key on the keyboard.
- To close open dialog boxes and return to the main Computer Setup screen, press **esc**, and then follow the on-screen instructions.

To exit Computer Setup, choose one of the following methods:

- To exit Computer Setup menus without saving your changes, select **Main**, select **Ignore Changes and Exit**, and then select **Yes**.

 **NOTE:** If you are using arrow keys to highlight your choice, you must then press **enter**.

- To save your changes and exit Computer Setup menus, select **Main**, select **Save Changes and Exit**, and then select **Yes**.

 **NOTE:** If you are using arrow keys to highlight your choice, you must then press **enter**.

Your changes go into effect when the computer restarts.

Restoring factory settings in Computer Setup

To return all settings in Computer Setup to the values that were set at the factory, follow these steps.

 **NOTE:** Restoring defaults will not change the hard drive mode.

1. Start Computer Setup. See [Using Computer Setup on page 73](#).
2. Select **Main**, select **Apply Factory Defaults and Exit**, and then select **Yes**.

 **NOTE:** If you are using arrow keys to highlight your choice, you must then press **enter**.

 **NOTE:** On select products, the selections might display **Restore Defaults** instead of **Apply Factory Defaults and Exit**.

Your changes go into effect when the computer restarts.

 **NOTE:** Your password settings and security settings are not changed when you restore the factory settings.

Updating the BIOS

Updated versions of the BIOS might be available on the HP website. Most BIOS updates on the HP website are packaged in compressed files called *SoftPaqs*.

Some download packages contain a file named Readme.txt, which contains information regarding installing and troubleshooting the file.

Determining the BIOS version

To decide whether you need to update Computer Setup (BIOS), first determine the BIOS version on your computer.

If you are already in Windows, you can access BIOS version information (also known as *ROM date* and *System BIOS*) by pressing **fn+esc** (select products only). Or you can use Computer Setup.

1. Start Computer Setup. See [Using Computer Setup on page 73](#).
2. Select **Main**, and then select **System Information**.
3. To exit Computer Setup menus without saving your changes, select **Main**, select **Ignore Changes and Exit**, and then select **Yes**.

 **NOTE:** If you are using arrow keys to highlight your choice, you must then press **enter**.

To check for later BIOS versions, see [Preparing for a BIOS update on page 74](#).

Preparing for a BIOS update

Be sure to follow all prerequisites before downloading and installing a BIOS update.

 **IMPORTANT:** To reduce the risk of damage to the computer or an unsuccessful installation, download and install a BIOS update only when the computer is connected to the following types of reliable external power:

- The HP AC adapter provided with the computer (select products only)
 - A replacement AC adapter provided by HP
 - An AC adapter with the power rating specified on the product label
-

Do not download or install a BIOS update while the computer is operating under these circumstances:

- Running on battery power

- Docked in an optional docking device
- Connected to an optional docking power source

During the download and installation, follow these instructions:

- Do not disconnect power on the computer by unplugging the power cord from the AC outlet.
- Do not shut down the computer or initiate Sleep.
- Do not insert, remove, connect, or disconnect any device, cable, or cord.

Downloading a BIOS update

After you review the prerequisites, you can check for and download BIOS updates.

1. Perform one of these tasks:
 - Select the **Search** icon in the taskbar, type `support` in the search box, and then select the **HP Support Assistant** app.
 - Select the question mark icon (select products only) in the taskbar.
2. Select **Updates**, and then select **Check for updates and messages**.
3. Follow the on-screen instructions.
4. At the download area, follow these steps:
 - a. Identify the most recent BIOS update and compare it to the BIOS version currently installed on your computer. Make a note of the date, name, or other identifier. You might need this information to locate the update later, after it has been downloaded to your hard drive.
 - b. Follow the on-screen instructions to download your selection to the hard drive.

Make a note of the path to the location on your hard drive where the BIOS update is downloaded. You will need to access this path when you are ready to install the update.



NOTE: If you connect your computer to a network, consult the network administrator before installing any software updates, especially system BIOS updates.

Installing a BIOS update

BIOS installation procedures vary. Follow any instructions that are displayed on the screen after the download is complete. If no instructions are displayed, follow these steps.

1. Select the **Search** icon in the taskbar, type `file` in the search box, and then select **File Explorer**.
2. Select your hard drive designation. The hard drive designation is typically Local Disk (C:).
3. Using the hard drive path you recorded earlier, open the folder that contains the update.
4. Double-click the file that has an .exe extension (for example, *filename.exe*).
The BIOS installation begins.
5. Complete the installation by following the on-screen instructions.



NOTE: After a message on the screen reports a successful installation, you can delete the downloaded file from your hard drive.

Changing the boot order using the f9 prompt

To dynamically choose a boot device for the current startup sequence, follow these steps.

1. Access the Boot Device Options menu:
 - Turn on or restart the computer, and when the HP logo appears, press **f9** to enter the Boot Device Options menu.
2. Select a boot device, press **enter**, and then follow the on-screen instructions.

TPM BIOS settings (select products only)

TPM provides additional security for your computer. You can modify the TPM settings in Computer Setup (BIOS).



IMPORTANT: Before enabling Trusted Platform Module (TPM) functionality on this system, you must ensure that your intended use of TPM complies with relevant local laws, regulations and policies, and approvals or licenses must be obtained if applicable. For any compliance issues arising from your operation or usage of TPM that violates the previously mentioned requirement, you shall bear all the liabilities wholly and solely. HP will not be responsible for any related liabilities.



NOTE: If you change the TPM setting to Hidden, TPM is not visible in the operating system.

To access TPM settings in Computer Setup:

1. Start Computer Setup. See [Using Computer Setup on page 73](#).
2. Select **Security**, select **TPM Embedded Security**, and then follow the on-screen instructions.

Using HP Sure Start (select products only)

Select computer models are configured with HP Sure Start, a technology that monitors the computer's BIOS for attacks or corruption. If the BIOS becomes corrupted or is attacked, HP Sure Start automatically restores the BIOS to its previously safe state, without user intervention.

HP Sure Start is configured and already enabled so that most users can use the HP Sure Start default configuration. Advanced users can customize the default configuration.

To access the latest documentation on HP Sure Start, go to <http://www.hp.com/support>. Select **Find your product**, and then follow the on-screen instructions.

8 Backing up, restoring, and recovering

You can use Windows tools or HP software to back up your information, create a restore point, reset your computer, create recovery media, or restore your computer to its factory state. Performing these standard procedures can return your computer to a working state faster.



IMPORTANT: If you are performing recovery procedures on a tablet, the tablet battery must be at least 70% charged before you start the recovery process.



IMPORTANT: For a tablet with a detachable keyboard, connect the tablet to the keyboard base before beginning any recovery process.

Backing up information and creating recovery media

These methods of creating recovery media and backups are available on select products only.

Using Windows tools for backing up

HP recommends that you back up your information immediately after initial setup. You can do this task either using Windows Backup locally with an external USB flash drive or using online tools.



NOTE: If computer storage is 32 GB or less, Microsoft System Restore is disabled by default.

Using the HP Cloud Recovery Download Tool to create recovery media (select products only)

You can use the HP Cloud Recovery Download Tool to create HP Recovery media on a bootable USB flash drive.

For details:

- Go to <http://www.hp.com>, search for HP Cloud Recovery, and then select the result that matches the type of computer that you have.



NOTE: If you cannot create recovery media yourself, contact support to obtain recovery discs. Go to <http://www.hp.com/support>, select your country or region, and then follow the on-screen instructions.



IMPORTANT: HP recommends that you follow the [Restoring and recovery methods on page 78](#) to restore your computer before you obtain and use the HP recovery discs. Using a recent backup can return your machine to a working state sooner than using the HP recovery discs. After the system is restored, reinstalling all the operating system software released since your initial purchase can be a lengthy process.

Restoring and recovering your system

You have several tools available to recover your system both within and outside of Windows if the desktop cannot load.

HP recommends that you attempt to restore your system using the [Restoring and recovery methods on page 78](#).

Creating a system restore

System Restore is available in Windows. The System Restore software can automatically or manually create restore points, or snapshots, of the system files and settings on the computer at a particular point.

When you use System Restore, it returns your computer to its state at the time you made the restore point. Your personal files and documents should not be affected.

Restoring and recovery methods

After you run the first method, test to see whether the issue still exists before you proceed to the next method, which might now be unnecessary.

1. Run a Microsoft System Restore.
2. Run Reset this PC.



NOTE: The options **Remove everything** and then **Fully clean the drive** can take several hours to complete and leave no information on your computer. It is the safest way to reset your computer before you recycle it.

3. Recover using HP Recovery media. For more information, see [Recovering using HP Recovery media on page 78](#).

For more information about the first two methods, see the Get Help app:

- Select the **Start** button, select **All apps**, select the **Get Help** app, and then enter the task you want to perform.



NOTE: You must be connected to the internet to access the Get Help app.

Recovering using HP Recovery media

You can use HP Recovery media to recover the operating system and drivers that were installed at the factory. On select products, you can create recovery media on a bootable USB flash drive using the HP Cloud Recovery Download Tool.

For details, see [Using the HP Cloud Recovery Download Tool to create recovery media \(select products only\) on page 77](#).



NOTE: If you cannot create recovery media yourself, contact support to obtain recovery discs. Go to <http://www.hp.com/support>, select your country or region, and then follow the on-screen instructions.

To recover your system:

- Insert the HP Recovery media, and then restart the computer.



NOTE: HP recommends that you follow the [Restoring and recovery methods on page 78](#) to restore your computer before you obtain and use the HP recovery discs. Using a recent backup can return your machine to a working state sooner than using the HP recovery discs. After the system is restored, reinstalling all the operating system software released since your initial purchase can be a lengthy process.

Changing the computer boot order

If your computer does not restart using the HP Recovery media, you can change the computer boot order, which is the order of devices listed in BIOS for startup information. You can select an optical drive or a USB flash drive, depending on the location of your HP Recovery media.



IMPORTANT: For a tablet with a detachable keyboard, connect the tablet to the keyboard base before beginning these steps.

To change the boot order:

1. Insert the HP Recovery media.
2. Access the system **Startup** menu.
 - For computers or tablets with keyboards attached, turn on or restart the computer or tablet, quickly press **esc**, and then press **f9** for boot options.
 - For tablets without keyboards, turn on or restart the tablet, and then quickly press and hold one of the following buttons:
 - Volume up
 - Volume down

Then select **f9**.
3. Select the optical drive or USB flash drive from which you want to boot, and then follow the on-screen instructions.

Using HP Sure Recover (select products only)

Select computer models are configured with HP Sure Recover, a PC operating system (OS) recovery solution built into the hardware and software. HP Sure Recover can fully restore the HP OS image without installed recovery software.

Using HP Sure Recover, an administrator or user can restore the system and install:

- Latest version of the operating system
- Platform-specific device drivers
- Software applications, in the case of a custom image

To access the latest documentation for HP Sure Recover, go to <http://www.hp.com/support>. Follow the on-screen instructions to find your product and locate your documentation.

9 Using HP PC Hardware Diagnostics

You can use the HP PC Hardware Diagnostics utility to determine whether your computer hardware is running properly. The three versions are HP PC Hardware Diagnostics Windows, HP PC Hardware Diagnostics UEFI (Unified Extensible Firmware Interface), and (for select products only) Remote HP PC Hardware Diagnostics UEFI, a firmware feature.

Using HP PC Hardware Diagnostics Windows (select products only)

HP PC Hardware Diagnostics Windows is a Windows-based utility that allows you to run diagnostic tests to determine whether the computer hardware is functioning properly. The tool runs within the Windows operating system to diagnose hardware failures.

If HP PC Hardware Diagnostics Windows is not installed on your computer, you must download and install it. To download HP PC Hardware Diagnostics Windows, see [Downloading HP PC Hardware Diagnostics Windows on page 81](#).

Using an HP PC Hardware Diagnostics Windows hardware failure ID code

When HP PC Hardware Diagnostics Windows detects a failure that requires hardware replacement, a 24-digit failure ID code is generated for select component tests. For interactive tests, such as keyboard, mouse, or audio and video palette, you must perform troubleshooting steps before you can receive a failure ID.

You have several options after you receive a failure ID:

- Select **Next** to open the Event Automation Service (EAS) page, where you can log the case.
- Scan the QR code with your mobile device, which takes you to the EAS page, where you can log the case.
- Select the box next to the 24-digit failure ID to copy your failure code and send it to support.

Accessing HP PC Hardware Diagnostics Windows

After HP PC Hardware Diagnostics Windows is installed, you can access it from HP Support Assistant or the Start menu.

Accessing HP PC Hardware Diagnostics Windows from HP Support Assistant

After HP PC Hardware Diagnostics Windows is installed, follow these steps to access it from HP Support Assistant:

1. Complete one of the following tasks:
 - Select the **Search** icon in the taskbar, type `support` in the search box, and then select the **HP Support Assistant** app.
 - Select the question mark icon in the taskbar.
2. Select **Fixes & Diagnostics**.

3. Select **Run hardware diagnostics**, and then select **Launch**.
4. When the tool opens, select the type of diagnostic test that you want to run, and then follow the on-screen instructions.



NOTE: To stop a diagnostic test, select **Cancel**.

Accessing HP PC Hardware Diagnostics Windows from the Start menu (select products only)

After HP PC Hardware Diagnostics Windows is installed, follow these steps to access it from the Start menu:

1. Select the **Start** button, and then select **All apps**.
2. Select **HP PC Hardware Diagnostics Windows**.
3. When the tool opens, select the type of diagnostic test that you want to run, and then follow the on-screen instructions.



NOTE: To stop a diagnostic test, select **Cancel**.

Downloading HP PC Hardware Diagnostics Windows

The HP PC Hardware Diagnostics Windows downloading instructions are provided in English only. You must use a Windows computer to download this tool because only .exe files are provided.

Downloading the latest HP PC Hardware Diagnostics Windows version from HP

To download HP PC Hardware Diagnostics Windows from HP, follow these steps:

1. Go to <http://www.hp.com/go/techcenter/pcdiags>. The HP PC Diagnostics home page is displayed.
2. Select **Download HP Diagnostics Windows**, and then select the specific Windows diagnostics version to download to your computer or a USB flash drive.

The tool downloads to the selected location.

Downloading the HP PC Hardware Diagnostics Windows from the Microsoft Store

You can download the HP PC Hardware Diagnostics Windows from the Microsoft Store:

1. Select the Microsoft Store app on your desktop or select the **Search** icon in the taskbar, and then type `Microsoft Store` in the search box.
2. Type `HP PC Hardware Diagnostics Windows` in the **Microsoft Store** search box.
3. Follow the on-screen directions.

The tool downloads to the selected location.

Downloading HP Hardware Diagnostics Windows by product name or number (select products only)

You can download HP PC Hardware Diagnostics Windows by product name or number.



NOTE: For some products, you might have to download the software to a USB flash drive by using the product name or number.

1. Go to <http://www.hp.com/support>.
2. Select **Software and Drivers**, select your type of product, and then enter the product name or number in the search box that is displayed.
3. In the **Diagnostics** section, select **Download**, and then follow the on-screen instructions to select the specific Windows diagnostics version to be downloaded to your computer or USB flash drive.

The tool downloads to the selected location.

Installing HP PC Hardware Diagnostics Windows

To install HP PC Hardware Diagnostics Windows, navigate to the folder on your computer or the USB flash drive where the .exe file downloaded, double-click the .exe file, and then follow the on-screen instructions.

Using HP PC Hardware Diagnostics UEFI

HP PC Hardware Diagnostics Unified Extensible Firmware Interface (UEFI) allows you to run diagnostic tests to determine whether the computer hardware is functioning properly. The tool runs outside the operating system so that it can isolate hardware failures from issues that are caused by the operating system or other software components.



NOTE: For some products, you must use a Windows computer and a USB flash drive to download and create the HP UEFI support environment because only .exe files are provided. For more information, see [Downloading HP PC Hardware Diagnostics UEFI to a USB flash drive on page 83](#).

If your PC does not start in Windows, you can use HP PC Hardware Diagnostics UEFI to diagnose hardware issues.

Using an HP PC Hardware Diagnostics UEFI hardware failure ID code

When HP PC Hardware Diagnostics UEFI detects a failure that requires hardware replacement, a 24-digit failure ID code is generated.

For assistance in solving the problem, complete one of these tasks:

- Select **Contact HP**, accept the HP privacy disclaimer, and then use a mobile device to scan the failure ID code that appears on the next screen. The HP Customer Support - Service Center page appears with your failure ID and product number automatically filled in. Follow the on-screen instructions.
- Contact support, and provide the failure ID code.

Starting HP PC Hardware Diagnostics UEFI

To start HP PC Hardware Diagnostics UEFI, follow this procedure.

1. Turn on or restart the computer, and quickly press **esc**.
2. Press **f2**.

The BIOS searches three places for the diagnostic tools, in the following order:

- a. Connected USB flash drive



NOTE: To download the HP PC Hardware Diagnostics UEFI tool to a USB flash drive, see [Downloading the latest HP PC Hardware Diagnostics UEFI version on page 84](#).

- b. Hard drive
 - c. BIOS
3. When the diagnostic tool opens, select the type of diagnostic test that you want to run, and then follow the on-screen instructions.

Starting HP PC Hardware Diagnostics UEFI through HP Hotkey Support software (select products only)

This section describes how to start HP PC Hardware Diagnostics UEFI through HP Hotkey Support software.



NOTE: You must disable fast boot to access HP PC Hardware Diagnostics UEFI from the HP System Information application.

To disable fast boot:

1. Turn on or restart the computer, and when the HP logo appears, press **f10** to enter Computer Setup.
2. Select **Advanced**, and then select **Boot Options**.
3. Clear **Fast Boot**.
4. Select **Save Changes and Exit**, and then select **Yes**.

To start HP PC Hardware Diagnostics UEFI through HP Hotkey Support software, follow this procedure:

1. From the **Start** menu, open the HP System Information Application or press **fn+esc**.
2. In HP System Information screen, select **Run System Diagnostics**, select **Yes** to run the application, and then select **Restart**.



IMPORTANT: To prevent loss of data, save your work in all open apps before restarting your computer.



NOTE: When the restart is complete, the computer opens the HP PC Hardware Diagnostics UEFI Application. Proceed with the troubleshooting tests.

Downloading HP PC Hardware Diagnostics UEFI to a USB flash drive

Downloading HP PC Hardware Diagnostics UEFI to a USB flash drive can be useful in some situations.

- HP PC Hardware Diagnostics UEFI is not included in the preinstallation image.
- HP PC Hardware Diagnostics UEFI is not included in the HP Tool partition.
- The hard drive is damaged.



NOTE: The HP PC Hardware Diagnostics UEFI downloading instructions are provided in English only, and you must use a Windows computer to download and create the HP UEFI support environment because only .exe files are provided.

Downloading the latest HP PC Hardware Diagnostics UEFI version

To download the latest HP PC Hardware Diagnostics UEFI version to a USB flash drive, follow this procedure:

1. Go to <http://www.hp.com/go/techcenter/pcdiags>. The HP PC Diagnostics home page is displayed.
2. Select **Download HP Diagnostics UEFI**, and then select **Run**.

Downloading HP PC Hardware Diagnostics UEFI by product name or number (select products only)

You can download HP PC Hardware Diagnostics UEFI by product name or number (select products only) to a USB flash drive.



NOTE: For some products, you might have to download the software to a USB flash drive by using the product name or number.

1. Go to <http://www.hp.com/support>.
2. Enter the product name or number, select your computer, and then select your operating system.
3. In the **Diagnostics** section, follow the on-screen instructions to select and download the specific UEFI Diagnostics version for your computer.

Using Remote HP PC Hardware Diagnostics UEFI settings (select products only)

Remote HP PC Hardware Diagnostics UEFI is a firmware (BIOS) feature that downloads HP PC Hardware Diagnostics UEFI to your computer. It can then run the diagnostics on your computer, and it might upload results to a preconfigured server.

For more information about Remote HP PC Hardware Diagnostics UEFI, go to <http://www.hp.com/go/techcenter/pcdiags>, and then select **Find out more**.

Downloading Remote HP PC Hardware Diagnostics UEFI

Remote HP PC Hardware Diagnostics UEFI is also available as a SoftPaq that you can download to a server.

Downloading the latest Remote HP PC Hardware Diagnostics UEFI version

You can download the latest Remote HP PC Hardware Diagnostics UEFI version to a USB flash drive.

1. Go to <http://www.hp.com/go/techcenter/pcdiags>. The HP PC Diagnostics home page is displayed.
2. Select **Download Remote Diagnostics**, and then select **Run**.

Downloading Remote HP PC Hardware Diagnostics UEFI by product name or number

You can download Remote HP PC Hardware Diagnostics UEFI by product name or number.



NOTE: For some products, you might have to download the software by using the product name or number.

1. Go to <http://www.hp.com/support>.

2. Select **Software and Drivers**, select your type of product, enter the product name or number in the search box that is displayed, select your computer, and then select your operating system.
3. In the **Diagnostics** section, follow the on-screen instructions to select and download the **Remote UEFI** version for the product.

Customizing Remote HP PC Hardware Diagnostics UEFI settings

Using the Remote HP PC Hardware Diagnostics setting in Computer Setup (BIOS), you can perform several customizations.

- Set a schedule for running diagnostics unattended. You can also start diagnostics immediately in interactive mode by selecting **Execute Remote HP PC Hardware Diagnostics UEFI**.
- Set the location for downloading the diagnostic tools. This feature provides access to the tools from the HP website or from a server that has been preconfigured for use. Your computer does not require the traditional local storage, such as a hard drive or USB flash drive, to run remote diagnostics.
- Set a location for storing the test results. You can also set the user name and password that you use for uploads.
- Display status information about the diagnostics run previously.

To customize Remote HP PC Hardware Diagnostics UEFI settings, follow these steps:

1. Turn on or restart the computer, and when the HP logo appears, press **f10** to enter Computer Setup.
2. Select **Advanced**, and then select **Settings**.
3. Make your customization selections.
4. Select **Main**, then select **Save Changes and Exit** to save your settings.

Your changes take effect when the computer restarts.

10 Specifications

This chapter provides specifications for your computer system.

Computer specifications

This section provides specifications for your computer. When you travel with your computer, the computer dimensions and weights, as well as input power ratings and operating specifications, provide helpful information.

Table 10-1 Computer specifications

	Metric	U.S.
Dimensions		
Width	385.0 mm	15.2 in
Depth	258.0 mm	10.2 in
Height (front to back)	23.0 mm	0.9 in
Weight	2.1 kg	4.6 lb
Input power		
Operating voltage and current	19.5 V DC @ 2.31 A - 45 W	
	19.5 V DC @ 3.33 A - 65 W	
	19.5 V DC @ 4.62 A - 90 W	
	19.5 V DC @ 7.70 A - 150 W	
	19.5 V DC @ 10.3 A - 200 W	
Temperature		
Operating	5°C to 35°C	41°F to 95°F
Nonoperating	-20°C to 60°C	-4°F to 140°F
Relative humidity (noncondensing)		
Operating	10% to 90%	
Nonoperating	5% to 95%	
Maximum altitude (unpressurized)		
Operating	-15 m to 3,048 m	-50 ft to 10,000 ft
Nonoperating	-15 m to 12,192 m	-50 ft to 40,000 ft



NOTE: Applicable product safety standards specify thermal limits for plastic surfaces. The device operates well within this range of temperatures.

Display specifications

This section provides specifications for your display.

Table 10-2 Display specifications

	Metric	U.S.
Active diagonal size	35.6 cm	14.0 in
Resolution	2560 × 1600 (2.5K) 1920 × 1080 (WUXGA)	
Surface treatment	Antiglare (WLED and LED panels) Brightview (OLED panel)	
Brightness	800 nits (WUXGA, LBL panel) 400 nits (OLED + LBL and LED panel)	
Viewing angle	UWVA	
Backlight	OLED WLED LED	
Display panel interface	eDP	

Hard drive specifications

This section provides specifications for your hard drives.

Table 10-3 Hard drive specifications

	500 GB*	750 GB*
Dimensions		
Height	9.5 mm	9.5 mm
Width	70 mm	70 mm
Weight	107 g max	102 g max
Interface type	SATA	SATA
Transfer rate	300 MBps	300 MBps
Security	ATA security	ATA security
Seek times (typical read, including setting)		
Single track	1.5 ms	1.1 ms
Average	12.0 ms	12.0 ms
Maximum	22.0 ms	21.0 ms
Logical blocks	976,752,240	1,465,149,168
Disk rotational speed	5400 rpm	5400 rpm

Table 10-3 Hard drive specifications (continued)

	500 GB*	750 GB*
Operating temperature	0°C to 60°C (0°F to 140°F)	0°C to 60°C (0°F to 140°F)

 **NOTE:** *Size refers to hard drive storage capacity. Actual accessible capacity is less. Actual drive specifications can differ slightly.

Certain restrictions and exclusions apply. Contact support for details.

Solid-state drive specifications

This section provides specifications for your solid-state drives.

Table 10-4 Solid-state drive specifications

	256 GB*	512 GB*	1 TB*
Dimensions			
Height	1.0 mm	1.0 mm	1.0 mm
Length	50.8 mm	50.8 mm	50.8 mm
Width	28.9 mm	28.9 mm	28.9 mm
Weight	< 10 g	< 10 g	< 10 g
Interface type			
Ready time, maximum (to not busy)	1.0 ms	< 1.0 ms	1.0 ms
Access times, logical	0.1 ms	0.1 ms	0.1 ms
Transfer rate			
Sequential read	up to 2150 MBps	up to 2150 MBps	up to 2150 MBps
Random read	Up to 300,000 IOPs	Up to 300,000 IOPs	Up to 300,000 IOPs
Sequential write	up to 1550 MBps	up to 1550 MBps	up to 1550 MBps
Random write	Up to 100,000 IOPs	Up to 100,000 IOPs	Up to 100,000 IOPs
Total logical sectors	468,883,296	1,000,215,216	1,500,336,388
Operating temperature	0°C to 70°C (32°F to 158°F)	0°C to 70°C (32°F to 158°F)	0°C to 70°C (32°F to 158°F)

 **NOTE:** *1 GB = 1 billion bytes when referring to hard drive storage capacity. Actual accessible capacity is less. Actual drive specifications might differ slightly.

Certain restrictions and exclusions apply. Contact support for details.

11 Statement of memory volatility

For general information regarding nonvolatile memory in HP business computers, and to restore nonvolatile memory that can contain personal data after the system has been turned off and the hard drive has been removed, use these instructions.

HP business computer products that use Intel®-based or AMD®-based system boards contain volatile DDR memory. The amount of nonvolatile memory present in the system depends upon the system configuration. Intel-based and AMD-based system boards contain nonvolatile memory subcomponents as originally shipped from HP, with the following assumptions:

- No subsequent modifications were made to the system.
- No applications, features, or functionality were added to or installed on the system.

Following system shutdown and removal of all power sources from an HP business computer system, personal data can remain on volatile system memory (DIMMs) for a finite period of time and also remains in nonvolatile memory. Use the following steps to remove personal data from the computer, including the nonvolatile memory found in Intel-based and AMD-based system boards.

 **NOTE:** If your tablet has a keyboard base, connect to the keyboard base before beginning steps in this chapter.

Current BIOS steps

Use these instructions to restore nonvolatile memory.

1. Follow these steps to restore the nonvolatile memory that can contain personal data. Restoring or reprogramming nonvolatile memory that does not store personal data is neither necessary nor recommended.

- a. Turn on or restart the computer, and then quickly press **esc**.

 **NOTE:** If the system has a BIOS administrator password, type the password at the prompt.

- b. Select **Main**, select **Apply Factory Defaults and Exit**, and then select **Yes** to load defaults. The computer restarts.

- c. During the restart, press **esc** while the "Press the ESC key for Startup Menu" message is displayed at the bottom of the screen.

 **NOTE:** If the system has a BIOS administrator password, type the password at the prompt.

- d. Select the **Security** menu, select **Restore Security Settings to Factory Defaults**, and then select **Yes** to restore security level defaults. The computer restarts.

- e. During the restart, press **esc** while the "Press the ESC key for Startup Menu" message is displayed at the bottom of the screen.

 **NOTE:** If the system has a BIOS administrator password, type the password at the prompt.

- f. If an asset or ownership tag is set, select the **Security** menu and scroll down to the **Utilities** menu. Select **System IDs**, and then select **Asset Tracking Number**. Clear the tag, and then make the selection to return to the prior menu.
- g. If a DriveLock password is set, select the **Security** menu, and scroll down to **Hard Drive Utilities** under the **Utilities** menu. Select **Hard Drive Utilities**, select **DriveLock**, and then clear the check box for **DriveLock password on restart**. Select **OK** to proceed.
- h. Select the **Main** menu, and then select **Reset BIOS Security to factory default**. Select **Yes** at the warning message. The computer restarts.
- i. During the restart, press **esc** while the "Press the ESC key for Startup Menu" message is displayed at the bottom of the screen.



NOTE: If the system has a BIOS administrator password, type the password at the prompt.

- j. Select the **Main** menu, select **Apply Factory Defaults and Exit**, select **Yes** to save changes and exit, and then select **Shutdown**.
 - k. Restart the system. If the system has a Trusted Platform Module (TPM), fingerprint reader, or both, one or two prompts will appear—one to clear the TPM and the other to Reset Fingerprint Sensor. Press or tap **f1** to accept or **f2** to reject.
 - l. Remove all power and system batteries for at least 24 hours.
2. Complete one of the following tasks:
- Remove and retain the storage drive.
 - Clear the drive contents by using a third-party utility designed to erase data from an SSD.
 - Clear the contents of the drive by using the following BIOS Setup Secure Erase command option steps:



NOTE: If you clear data using Secure Erase, you cannot recover it.

- a. Turn on or restart the computer, and then quickly press **esc**.
- b. Select the **Security** menu and scroll down to the **esc** menu.
- c. Select **Hard Drive Utilities**.
- d. Finish by completing one of these tasks:
 - Under **Utilities**, select **Secure Erase**, select the hard drive storing the data you want to clear, and then follow the on-screen instructions to continue.
 - Clear the contents of the drive using the following Disk Sanitizer commands steps:
 - i. Turn on or restart the computer, and then quickly press **esc**.
 - ii. Select the **Security** menu and scroll down to the **Utilities** menu.
 - iii. Select **Hard Drive Utilities**.

- iv. Under **Utilities**, select **Disk Sanitizer**, select the hard drive with the data that you want to clear, and then follow the on-screen instructions to continue.



NOTE: The amount of time it takes for Disk Sanitizer to run can take several hours. Plug the computer into an AC outlet before starting.

Nonvolatile memory usage

Use this table to troubleshoot nonvolatile memory usage.

Table 11-1 Troubleshooting information for nonvolatile memory usage

Description	Volatility description	Storage user data	How to erase
Primary storage device, holds the OS, applications, and application settings	Nonvolatile, 8-256 GB of eMMC or NVMe SSD storage, removable	Yes ¹	Follow instructions below under "Erase the Primary Storage Device."
System memory (RAM), holds transient data during system operation	Volatile, SODIMM socket. Removable (4 GB/8 GB/16 GB)	Yes	Unplug unit from power.
Permanent system BIOS settings	Nonvolatile; 16 KB; stored	No ²	Follow instructions below under "Clearing BIOS Settings."
System boot ROM (BIOS)	Nonvolatile memory, 128 Mbit (16 MB) socketed, removable	No	Download the latest BIOS for your model from the HP website and follow the instructions to flash the BIOS that are on the website.
RTC (CMOS) RAM	Volatile memory, 256 bytes located in AMD embedded System on Chip (SoC)	No	Desktop computers with a CMOS button: Unplug unit from main power, remove top cover and press the Clear CMOS button. Notebook and desktop computers without a CMOS button: 1. Press and hold power button for 12 seconds. 2. Press Windows key + V, and then press power button.
Keyboard/mouse (ROM)	Nonvolatile, 2 KB embedded in the super I/O controller (SIO2)	Yes	N/A
Keyboard/mouse (RAM)	Volatile, 256 bytes embedded in the super I/O controller (SIO2)	No	Unplug unit from main power.
LOM EEPROM	Nonvolatile, 2 MB embedded in LAN controller	No	N/A
Trusted Platform Module (TPM)	Nonvolatile; 51 KB ROM for firmware and 38 KB system parametric data	No ³	Follow instructions below under "Clearing TPM."

¹ Under typical operation, the only user data stored on the primary storage device are preferences for device configuration and settings for connections. However, the administrator can configure the system to allow users to store data locally.

² The only user data potentially stored in BIOS Settings are the ownership and asset tags, administrator password, and startup password.

³ The Trusted Platform Module might contain encrypted passwords or certificates generated from user or administrator input.

Questions and answers

Use this section to answer your questions about nonvolatile memory.

1. How can the BIOS settings be restored (returned to factory settings)?

 **IMPORTANT:** The restore defaults feature does not securely erase any information on your hard drive. See question and answer 6 for steps to securely erase information.

The restore defaults feature does not reset the Custom Secure Boot keys. See question and answer 7 for information about resetting the keys.

- Turn on or restart the computer, and then quickly press **esc**.
- Select **Main**, and then select **Apply Factory Defaults and Exit**.
- Follow the on-screen instructions.
- Select **Main**, select **Save Changes and Exit**, and then follow the on-screen instructions.

2. What is a UEFI BIOS, and how is it different from a legacy BIOS?

The Unified Extensible Firmware Interface (UEFI) BIOS is an industry-standard software interface between the platform firmware and an operating system (OS). It replaces the older BIOS architecture but supports much of the legacy BIOS functionality.

Like the legacy BIOS, the UEFI BIOS provides an interface to display the system information and configuration settings and to change the configuration of your computer before an OS is loaded. BIOS provides a secure runtime environment that supports a GUI. In this environment, you can use either a pointing device (touch screen, touchpad, pointing stick, or USB mouse) or the keyboard to navigate and make menu and configuration selections. The UEFI BIOS also contains basic system diagnostics.

The UEFI BIOS provides functionality beyond that of the legacy BIOS. In addition, the UEFI BIOS works to initialize the computer's hardware before loading and executing the OS; the runtime environment allows the loading and execution of software programs from storage devices to provide more functionality, such as advanced hardware diagnostics (with the ability to display more detailed system information) and advanced firmware management and recovery software.

HP has provided options in Computer Setup BIOS to allow you to run in legacy BIOS, if required by the operating system. Examples of this requirement would be if you upgrade or downgrade the OS.

3. Where is the UEFI BIOS located?

The UEFI BIOS is located on a flash memory chip. You must use a utility to write to the chip.

4. What kind of configuration data is stored on the DIMM Serial Presence Detect (SPD) memory module? How would this data be written?

The DIMM SPD memory contains information about the memory module, such as size, serial number, data width, speed and timing, voltage, and thermal information. This information is written by the module manufacturer and stored on an EEPROM. You cannot write to this EEPROM when the memory module is installed in a computer. Third-party tools do exist that can write to the EEPROM when the memory module is not installed in a computer. Various third-party tools are available to read SPD memory.

5. What is meant by “Restore the nonvolatile memory found in Intel-based system boards”?

This message relates to clearing the Real Time Clock (RTC) CMOS memory that contains computer configuration data.

6. How can the BIOS security be reset to factory defaults and erase the data?



IMPORTANT: Resetting results in the loss of information.

These steps do not reset Custom Secure Boot Keys. See question and answer 7 for information about resetting the keys.

- a. Turn on or restart the computer, and then quickly press **esc**.
- b. Select **Main**, and then select **Reset Security to Factory Defaults**.
- c. Follow the on-screen instructions.
- d. Select **Main**, select **Save Changes and Exit**, and then follow the on-screen instructions.

7. How can the Custom Secure Boot Keys be reset?

Secure Boot is a feature to ensure that only authenticated code can start on a platform. If you enabled Secure Boot and created Custom Secure Boot Keys, disabling Secure Boot does not clear the keys. You must also select to clear the Custom Secure Boot Keys. Use the same Secure Boot access procedure that you used to create the Custom Secure Boot Keys, but select to clear or delete all Secure Boot Keys.

- a. Turn on or restart the computer, and then quickly press **esc**.
- b. Select the **Security** menu, select **Secure Boot Configuration**, and then follow the on-screen instructions.
- c. At the **Secure Boot Configuration** window, select **Secure Boot**, select **Clear Secure Boot Keys**, and then follow the on-screen instructions to continue.

Using HP Sure Start (select products only)

Select computer models are configured with HP Sure Start, a technology that monitors the computer's BIOS for attacks or corruption. If the BIOS becomes corrupted or is attacked, HP Sure Start automatically restores the BIOS to its previously safe state, without user intervention.

HP Sure Start is configured and already enabled so that most users can use the HP Sure Start default configuration. Advanced users can customize the default configuration.

To access the latest documentation on HP Sure Start, go to <http://www.hp.com/support>. Select **Find your product**, and then follow the on-screen instructions.

12 Power cord set requirements

This chapter provides power cord requirements for countries and regions.

The wide-range input feature of the computer permits it to operate from any line voltage from 100 V AC to 120 V AC, or from 220 V AC to 240 V AC.

The three-conductor power cord set included with the computer meets the requirements for use in the country or region where the equipment is purchased.

Power cord sets for use in other countries or regions must meet the requirements of the country and region where the computer is used.

Requirements for all countries

These power cord requirements are applicable to all countries and regions.

- The length of the power cord set must be at least **1.0 m** (3.3 ft) and no more than **2.0 m** (6.5 ft).
- All power cord sets must be approved by an acceptable accredited agency responsible for evaluation in the country or region where the power cord set will be used.
- The power cord sets must have a minimum current capacity of 10 A and a nominal voltage rating of 125 V AC or 250 V AC, as required by the power system of each country or region.
- The appliance coupler must meet the mechanical configuration of an EN 60 320/IEC 320 Standard Sheet C13 connector for mating with the appliance inlet on the back of the computer.

Requirements for specific countries and regions

To determine power cord requirements for specific countries and regions, use this table.

Table 12-1 Power cord requirements for specific countries and regions

Country/region	Accredited agency	Applicable note number
Argentina	IRAM	1
Australia	SAA	1
Austria	OVE	1
Belgium	CEBEC	1
Brazil	ABNT	1
Canada	CSA	2
Chile	IMQ	1
Denmark	DEMKO	1
Finland	FIMKO	1
France	UTE	1

Table 12-1 Power cord requirements for specific countries and regions (continued)

Country/region	Accredited agency	Applicable note number
Germany	VDE	1
India	BIS	1
Israel	SII	1
Italy	IMQ	1
Japan	JIS	3
Netherlands	KEMA	1
New Zealand	SANZ	1
Norway	NEMKO	1
People's Republic of China	CCC	4
Saudi Arabia	SASO	7
Singapore	PSB	1
South Africa	SABS	1
South Korea	KTL	5
Sweden	SEMKO	1
Switzerland	SEV	1
Taiwan	BSMI	6
Thailand	TISI	1
United Kingdom	ASTA	1
United States	UL	2

1. The flexible cord must be Type HO5VV-F, three-conductor, 0.75 mm² conductor size. Power cord set fittings (appliance coupler and wall plug) must bear the certification mark of the agency responsible for evaluation in the country or region where it will be used.
2. The flexible cord must be Type SVT/SJT or equivalent, No. 18 AWG, three-conductor. The wall plug must be a two-pole grounding type with a NEMA 5-15P (15 A, 125 V AC) or NEMA 6-15P (15 A, 250 V AC) configuration. CSA or C-UL mark. UL file number must be on each element.
3. The appliance coupler, flexible cord, and wall plug must bear a T mark and registration number in accordance with the Japanese Dentori Law. The flexible cord must be Type VCTF, three-conductor, 0.75 mm² or 1.25 mm² conductor size. The wall plug must be a two-pole grounding type with a Japanese Industrial Standard C8303 (7 A, 125 V AC) configuration.
4. The flexible cord must be Type RVV, three-conductor, 0.75 mm² conductor size. Power cord set fittings (appliance coupler and wall plug) must bear the CCC certification mark.
5. The flexible cord must be Type HO5VV-F three-conductor, 0.75 mm² conductor size. KTL logo and individual approval number must be on each element. Approval number and logo must be printed on a flag label.
6. The flexible cord must be Type HVCTF three-conductor, 1.25 mm² conductor size. Power cord set fittings (appliance coupler, cable, and wall plug) must bear the BSMI certification mark.

7. For 127 V AC, the flexible cord must be Type SVT or SJT 3-conductor, 18 AWG, with plug NEMA 5-15P (15 A, 125 V AC), with UL and CSA or C-UL marks. For 240 V AC, the flexible cord must be Type H05VV-F three-conductor, 0.75 mm² or 1.00 mm² conductor size, with plug BS 1363/A with BSI or ASTA marks.

13 Swelling or deformation of notebook battery

To protect your hardware from potential damage, HP recommends that if you are experiencing battery swelling, stop using the notebook until you can replace the battery.

You can contact HP to understand what battery replacement options are available. To learn more about Lithium-ion batteries and the factors that can accelerate battery swelling, see https://support.hp.com/us-en/document/ish_6824662-6824706-16.

Swollen notebook batteries

You might notice that your notebook battery has become somewhat deformed or swollen over time. In some cases, the battery swelling might be significant enough to impact other components of the system including the touchpad, keyboard, and chassis.

Swollen battery is not a safety issue

A swollen battery does not present a safety issue. It is the result of the generation of gases per the normal degradation of the battery cell over time.

HP has worked closely with our battery cell suppliers and third-party industry experts to help minimize the potential for HP batteries to swell over time and to identify that swollen batteries are not a safety issue.

Discontinue using a swollen battery

To protect your hardware from potential damage, HP recommends that, if you are experiencing battery swelling, you stop using the notebook until the battery can be replaced.

You can contact <https://www.hp.com/go/contacthp> to understand what battery replacement options are available.

Replace a swollen battery

If a battery is under warranty, HP will replace the battery per the terms and conditions of the HP Worldwide Limited Warranty or applicable HP Care Packs.

For batteries no longer under warranty, contact HP to purchase a genuine HP replacement battery.

Minimize battery swelling

Multiple factors can accelerate battery swelling.

To help mitigate battery swelling over time, you can use either HP Adaptive Battery Optimizer (consumer notebooks) or HP Battery Health Manager (commercial notebooks) settings to improve battery longevity and performance for various use scenarios.

HP Adaptive Battery Optimizer (consumer notebooks)

HP Adaptive Battery Optimizer technology can help mitigate the factors that cause the battery to swell. It is available on select HP OMEN, HP Spectre, HP Pavilion, and HP ENVY notebook computers.

HP Adaptive Battery Optimizer has been available on select gaming notebooks since 2019 and select consumer notebooks since 2020. To learn more about enabling HP Adaptive Battery Optimizer on your HP notebook, see <https://support.hp.com/us-en/document/c06310986>.

HP Battery Health Manager (commercial notebooks)

HP Battery Health Manager provides an easy-to-manage solution to help mitigate factors that cause the battery to swell. It is available on select HP ProBook and HP EliteBook notebook computers.

HP Battery Health Manager is available on select commercial notebooks manufactured since 2016. To learn more about HP Battery Health Manager, see https://support.hp.com/us-en/document/ish_4449597-3519507-16.

14 Recycling

When a nonrechargeable or rechargeable battery has reached the end of its useful life, do not dispose of the battery in general household waste. Follow the local laws and regulations in your area for battery disposal.

HP encourages customers to recycle used electronic hardware, HP original print cartridges, and rechargeable batteries. For more information about recycling programs, see the HP website at <http://www.hp.com/recycle>.

Index

Symbols/Numerics

360 modes, identifying 8

A

AC adapter
 spare part numbers 25
action keys, identifying 15
adapter
 spare part numbers 25
ambient light and color sensor,
 identifying 9
audio-out (headphone)/audio-in
 (microphone) combo jack,
 identifying 7
audio, product description 2
Auto Lock and Awake 8

B

backpack
 spare part numbers 25
backup, creating 77
backups 77
bag
 spare part numbers 26
battery
 illustrated 25
 removal 41
 spare part numbers 25, 41
battery light 6, 7
battery swelling 97
BIOS
 determining version 74
 downloading an update 75
 preparing for an update 74
 updating 74
Bluetooth label 17
boot order
 changing using the f9
 prompt 76
boot order, changing 79
bottom cover
 illustrated 25
 removal 39
 spare part number 39
 spare part numbers 25
Bracket Kit
 contents 26

 spare part number 26
buttons
 left touchpad 11
 power 14, 15
 right touchpad 11

C

cable
 spare part numbers 26
Cable Kit
 contents 26
 spare part number 26
camera 9
 identifying 9
camera light, identifying 9
camera privacy cover,
 identifying 9
caps lock light, identifying 12
caring for your computer 34
cautions
 electrostatic discharge 30, 31
cleaning your computer 34
 caring for wood veneer 36
 disinfecting 35
 HP Easy Clean 34
 removing dirt and debris 34
components
 bottom 15
 display 8
 keyboard area 10
 left side 6
 rear 16
 right side 5
Computer Setup
 navigating and selecting 73
 restoring factory settings 73
 starting 73
computer specifications 86
connector board
 removal 70
 spare part number 70
connector board cable
 removal 69
 spare part number 69
connector, power 6, 7

D

display
 specifications 86, 87
display assembly
 illustrated 21
 removal 61
 spare part numbers 21, 61
display components 8
display panel
 product description 1
duck head adapter, spare part
 number 26

E

electrostatic discharge (ESD) 30,
 31
 preventing damage 30-32
eMMC
 product description 2
esc key, identifying 14

F

fan/heat sink assembly
 removal 57
 spare part numbers 57
fingerprint reader
 illustrated 22
 removal 60
 spare part number 22, 60
fingerprint reader board cable
 spare part number 22
fingerprint reader cable
 illustrated 22
 removal 59
 spare part number 59
fingerprint reader, identifying 13
fn key, identifying 14
fn lock light, identifying 12

G

graphics, product description 1
grounding methods 30-32
guidelines
 packaging 30, 36
 transporting 30, 36
 workstation 30

H

- hard drive
 - product description 2
 - specifications 86, 87
- hardware, locating 5
- HDMI port, identifying 7
- headset, spare part number 26
- heat sink
 - illustrated 24
 - spare part number 24
- HP PC Hardware Diagnostics UEFI
 - downloading 83
 - failure ID code 82
 - HP Hotkey Support
 - software 83
 - starting 82, 83
 - using 82
- HP PC Hardware Diagnostics Windows
 - accessing 80, 81
 - downloading 81
 - failure ID code 80
 - installing 82
 - using 80
- HP Recovery media
 - recovery 78
- HP Sure Recover 79
- HP Sure Start 89
- hub, spare part numbers 26

I

- I/O bracket
 - illustrated 24
 - spare part number 24
- I/O bracket holder
 - illustrated 24
 - spare part number 24
- illustrated parts catalog 20
- internal microphones,
 - identifying 9

J

- jacks
 - audio-out (headphone)/audio-in (microphone) combo 7

K

- keyboard
 - product description 3
- keyboard, spare part number 26
- keys
 - action 15
 - esc 14

- fn 14
- Windows 15
- Windows Copilot 15

L

- labels
 - Bluetooth 17
 - regulatory 17
 - serial number 17
 - service 17
 - wireless certification 17
 - WLAN 17
- left side components 6
- lights
 - AC adapter and battery 6, 7
 - battery 6, 7
 - camera 9
 - caps lock 12
 - fn lock 12
 - microphone mute 12
 - power 12
 - privacy key 12
- lights, mute 12
- lock
 - spare part number 26
- low blue light mode 8

M

- memory
 - nonvolatile 89
 - volatile 89
- memory module
 - product description 1
- microphone
 - product description 2
- microphone mute light,
 - identifying 12
- middle hook holder
 - illustrated 24
 - spare part number 24
- model name 1
- mouse, spare part numbers 26
- mute light, identifying 12

N

- nano SIM card slot, identifying 5
- nano SIM card, inserting 18
- Near Field Communications (NFC)
 - tapping area and antenna, identifying 11
- NFC module
 - illustrated 23
 - removal 66

- spare part number 23, 66
- NFC module cable
 - removal 65
 - spare part number 65
- NFC module, product
 - description 2
- nonvolatile memory 89

O

- operating system, product
 - description 3
- optical drive, spare part
 - number 26

P

- packaging guidelines 30, 36
- pointing device, product
 - description 3
- ports
 - HDMI 7
 - product description 2
 - USB port with HP Sleep and Charge 6
 - USB Type-C power connector and port with HP Sleep and Charge 6
 - USB Type-C power connector and Thunderbolt port with HP Sleep and Charge 7
- power button
 - illustrated 22
 - spare part number 22
- power button, identifying 14, 15
- power connector
 - identifying USB Type-C 6, 7
- power cord
 - requirements for all countries 94
 - requirements for specific countries and regions 94
 - set requirements 94
 - spare part numbers 27-29
- power lights 12
- power requirements, product
 - description 3
- primary storage
 - product description 2
- privacy key light 12
- processor
 - product description 1
- product description
 - audio 2
 - display panel 1
 - eMMC 2

- graphics 1
- hard drive 2
- keyboard 3
- memory module 1
- microphone 2
- NFC module 2
- operating system 3
- pointing device 3
- ports 2
- power requirements 3
- primary storage 2
- processors 1
- product name 1
- security 3
- sensors 3
- serviceability 4
- solid-state drive 2
- video 2
- wireless 2
- product name 1
- product name and number, computer 17

R

- recovery 77
 - discs 78
 - media 78
 - USB flash drive 78
- recovery media 77
 - creating using HP Cloud Recovery Download Tool 77
 - creating using Windows tools 77
- regulatory information
 - regulatory label 17
 - wireless certification labels 17
- Remote HP PC Hardware Diagnostics UEFI settings
 - customizing 85
 - using 84
- removal and replacement procedures 39, 53
- removing personal data from volatile system memory 89
- restoring 77
- restoring and recovery methods 78
- right side components 5

S

- Screw Kit, spare part number 29
- security cable slot, identifying 6
- security, product description 3
- sensors, product description 3

- serial number, computer 17
- service labels, locating 17
- serviceability, product description 4
- setup utility
 - navigating and selecting 73
 - restoring factory settings 73
- SIM card, correct size 18
- SIM card, inserting 18
- slots
 - nano SIM card 5
 - security cable 6
- software installed, locating 5
- solid-state drive
 - product description 2
 - specifications 88
- spare part country codes 71
- speakers
 - illustrated 24
 - removal 64
 - spare part number 24, 64
- speakers, identifying 13, 16
- special keys, using 14
- specifications
 - computer 86
 - display 86, 87
 - hard drive 86, 87
 - solid-state drive 88
- SSD
 - illustrated 23
 - removal 50
 - spare part numbers 23, 50
- SSD bracket
 - illustrated 23, 51
 - spare part number 23, 51
- static electricity 30, 31
- support information 36
- Sure Start
 - using 76, 93
- swelling or deformation of notebook battery 97
- system board
 - illustrated 23
 - removal 53
 - spare part numbers 23, 53
- system memory, removing personal data from volatile 89
- system restore 78
- system restore point, creating 77

T

- top cover with keyboard
 - illustrated 22
 - spare part numbers 22, 71

- touchpad
 - illustrated 23
 - removal 68
 - settings 10
 - spare part numbers 23, 68
- touchpad buttons
 - identifying 11
- touchpad cable
 - illustrated 23
 - removal 67
 - spare part number 23, 67
- touchpad zone, identifying 11
- TPM settings 76
- transfer board
 - illustrated 22
 - spare part number 22
- transfer board cable
 - illustrated 23
 - spare part number 23
- transporting guidelines 30, 36
- traveling with the computer 17

U

- USB port with HP Sleep and Charge, identifying 6
- USB Type-C power connector and port with HP Sleep and Charge, identifying 6
- USB Type-C power connector and Thunderbolt port with HP Sleep and Charge, identifying 7

V

- vents, identifying 16
- video, product description 2

W

- Windows
 - backup 77
 - recovery media 77
 - system restore point 77
- Windows Copilot key, identifying 15
- Windows key, identifying 15
- Windows tools, using 77
- wireless antennas, identifying 9
- wireless certification label 17
- wireless, product description 2
- WLAN antennas, identifying 9
- WLAN device 17
- WLAN label 17
- WLAN module
 - illustrated 23

- removal 47
- spare part numbers 23, 47
- workstation guidelines 30
- WWAN antennas, identifying 9
- WWAN module
 - illustrated 23
 - removal 49
 - spare part number 23, 49