



INSTALLATION INSTRUCTIONS

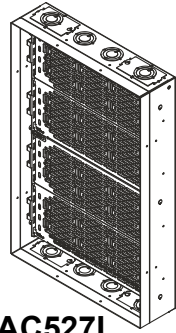


PAC527L

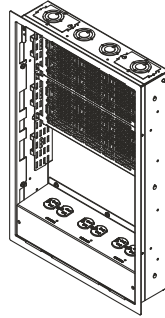


PAC527LFxP4

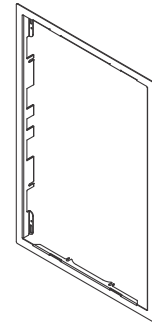


PAC527F-KIT

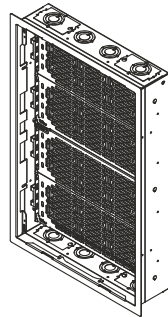


PAC527LF

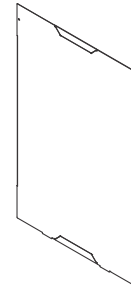

PAC527CVR-KIT

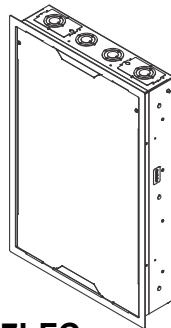

PAC527LFC

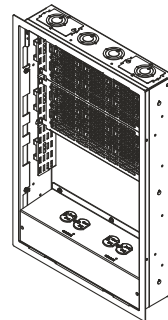

PAC527LFxP6

In-Wall Box w/LeverLock™ and Accessories

DISCLAIMER

Legrand | AV and its affiliated corporations and subsidiaries (collectively "Legrand | AV"), intend to make this manual accurate and complete. However, Legrand | AV makes no claim that the information contained herein covers all details, conditions or variations, nor does it provide for every possible contingency in connection with the installation or use of this product. The information contained in this document is subject to change without notice or obligation of any kind. Legrand | AV makes no representation of warranty, expressed or implied, regarding the information contained herein. Legrand | AV assumes no responsibility for accuracy, completeness or sufficiency of the information contained in this document.

Chief® is a registered trademark of Legrand AV Inc.

DEFINITIONS

MOUNTING SYSTEM: A MOUNTING SYSTEM is the primary Chief product to which an accessory and/or component is attached.

ACCESSORY: AN ACCESSORY is the secondary Chief product which is attached to a primary Chief product, and may have a component attached or setting on it.

COMPONENT: A COMPONENT is an audiovisual item designed to be attached or resting on an accessory or mounting system such as a video camera, CPU, screen, display, projector, etc.



WARNING: A WARNING alerts you to the possibility of serious injury or death if you do not follow the instructions.



CAUTION: A CAUTION alerts you to the possibility of damage or destruction of equipment if you do not follow the corresponding instructions.



IMPORTANT SAFETY INSTRUCTIONS



WARNING: Failure to read, thoroughly understand, and follow all instructions can result in serious personal injury, damage to equipment, or voiding of factory warranty! It is the installer's responsibility to make sure all accessories are properly assembled and installed using the instructions provided.



WARNING: Failure to provide adequate structural strength for this accessory can result in serious personal injury or damage to equipment! It is the installer's responsibility to make sure the structure to which this accessory is attached can support five times the combined weight of all equipment. Reinforce the structure as required before installing the accessory.



WARNING: Exceeding the weight capacity can result in serious personal injury or damage to equipment! It is the installer's responsibility to make sure the combined weight of all components located in the accessory does not exceed 40 lbs (18.1 kg).

- Each PAC527L may hold up to 4 individual backplanes (2 complete) and each individual backplane may hold a maximum weight of 10 lbs (4.5 kg)
- A half backplane (after separation) may hold a maximum weight of 5 lbs (2.3 kg).



WARNING: Use this accessory only for its intended use as described in these instructions. Do not use attachments not recommended by the manufacturer.



WARNING: Never operate this accessory if it is damaged. Return the accessory to a service center for examination and repair.



WARNING: For indoor use only.

IMPORTANT ! : The PAC527L accessory is designed to be mounted to either a 2" x 3" or 2" x 4" wood stud wall 16" or 24" on center, or a 2" x 3"-25ga (minimum) or 2" x 4"-25ga (minimum) steel studs wall.

NOTE: Spacings - Minimum spacings between the 120 Vac power components and the A/V components shall be maintained for safe operation of the equipment when installed in accordance with the National Electric Code, ANSI/NFPA 70.

NOTE: When selecting a Listed 120 Vac Receptacle for use as the main power source for the PAC series boxes (to power the A/V equipment), make sure that AC Receptacle is rated at least 15A and it is used in the building's AC branch circuit that is connected to a circuit breaker rated at least 15A. Do not connect more than 12A from the Receptacle.

In the U.S., the equipment shall be installed per the applicable requirements of the National Electrical Code, CSA C22.1.

In Canada, the equipment shall be installed per the applicable requirements of the National Electrical Code, ANS/NFPA 70.

NOTE: It is the installer's responsibility to ensure that the enclosure is bonded to the ground in the switch box, in accordance with the National Electric Code, ANSI/NFPA 70 or Canadian Electrical Code, CSA C22.1. A green grounding screw is provided in the enclosure for the purpose, if required.

IMPORTANT ! : The PAC527L mounts are designed to accommodate the following Chief power kits ONLY:

- PAC527P4-KIT
- PAC527P6-KIT

--SAVE THESE INSTRUCTIONS--

DIMENSION DRAWINGS are located at the end of these Installation Instructions.

ADDITIONAL SAFETY INSTRUCTIONS **SPECIFIC TO PAC527FxFP4 / PAC527FxFP6**

READ ALL INSTRUCTIONS BEFORE USING THIS PRODUCT!!!!

⚠ DANGER: TO REDUCE THE RISK OF ELECTRIC SHOCK:

1. Always turn off power at source before installing the outlet.

⚠ WARNING: TO REDUCE THE RISK OF BURNS, FIRE, ELECTRIC SHOCK, OR INJURY TO PERSONS:

- Always turn off power at source before servicing or removing the outlet.
- Do not use outdoors - For indoor use only.
- Route cables as shown in these installation instructions.
- To disconnect, turn off power at source.

⚠ WARNING: RISK OF ELECTRIC SHOCK!
Make sure the outlet is properly grounded. See grounding instructions.

⚠ CAUTION: This equipment must be installed and assembled by qualified service personnel in accordance with local building and electrical codes.

NOTE: Knockouts are provided for ease of installation. Any unused knockouts that have been punched are to be closed up with a metal plug.

Ambient Temperature - The manufacturer's maximum ambient temperature is 104°F (40°C) and minimum ambient temperature is 30°F (-1°C) so that the installer is able to determine acceptability of use of Accessories and components.

--SAVE THESE INSTRUCTIONS--

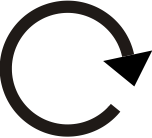
IMPORTANT ! : DIMENSION DRAWINGS are located at the end of these Installation Instructions.

TABLE OF CONTENTS


	Installation Instructions
DISCLAIMER.....	2
DEFINITIONS.....	2
IMPORTANT SAFETY INSTRUCTIONS.....	2
ADDITIONAL SAFETY INSTRUCTIONS (PAC527LFxFP4 / PAC527LFxFP6)	3
TABLE OF CONTENTS.....	3
LEGEND.....	4
TOOLS REQUIRED FOR INSTALLATION....	5
PARTS INCLUDED.....	5
OPTIONAL PARTS (for custom configuration).7	
ADDITIONAL INFORMATION.....	7
ASSEMBLY AND INSTALLATION.....	7
Locating PAC527L.....	7
Instructions for PAC527LFxFP4/PAC527LFxFP6 Only.....	8
Isolated Ground Receptacle.....	8
References.....	8
Prepare for Wiring.....	8
Outlet Box Use.....	9
PAC527L Site Preparation.....	10
PAC527L Box Preparation and Installation.....	10
Installing Backplanes.....	12
Adding Template/Temporary Cover.....	13
PAC527F-KIT.....	13
PAC527CVR-KIT.....	13
Dimensions - PAC527L.....	15
Dimensions - PAC527LF.....	16
Dimensions - PAC527LFC.....	17
Dimensions - PAC527LFxFP4.....	18
Dimensions - PAC527LFxFP6.....	18
Dimensions - PAC527LFxFPx.....	18
Dimensions - PAC527F-KIT.....	19
Dimensions - PAC527CVR-KIT.....	19

IMPORTANT ! : DIMENSION DRAWINGS are located at the end of these Installation Instructions.


LEGEND

	Tighten Fastener Apretar elemento de fijación Befestigungsteil festziehen Apertar fixador Serrare il fissaggio Bevestiging vastdraaien Serrez les fixations		Pencil Mark Marcar con lápiz Stiftmarkierung Marcar com lápis Segno a matita Potloodmerkteken Marquage au crayon
	Loosen Fastener Aflojar elemento de fijación Befestigungsteil lösen Desapertar fixador Allentare il fissaggio Bevestiging losdraaien Desserrez les fixations		Drill Hole Perforar Bohrloch Fazer furo Praticare un foro Gat boren Percez un trou
	Phillips Screwdriver Destornillador Phillips Kreuzschlitzschraubendreher Chave de fendas Phillips Cacciavite a stella Kruiskopschroevendraaier Tournevis à pointe cruciforme		Adjust Ajustar Einstellen Ajustar Regolare Afstellen Ajuster
	Open-Ended Wrench Llave de boca Gabelschlüssel Chave de bocas Chiave a punte aperte Steeksleutel Clé à fourche		Remove Quitar Entfernen Remover Rimuovere Verwijderen Retirez
	By Hand A mano Von Hand Com a mão A mano Met de hand À la main		Optional Opcional Optional Opcional Opzionale Optie En option
	Hex-Head Wrench Llave de cabeza hexagonal Sechskantschlüssel Chave de cabeça sextavada Chiave esagonale Zeskantsleutel Clé à tête hexagonale		Security Wrench Llave de seguridad Sicherheitsschlüssel Chave de segurança Chiave di sicurezza Veiligheidssleutel Clé de sécurité

TOOLS REQUIRED FOR INSTALLATION

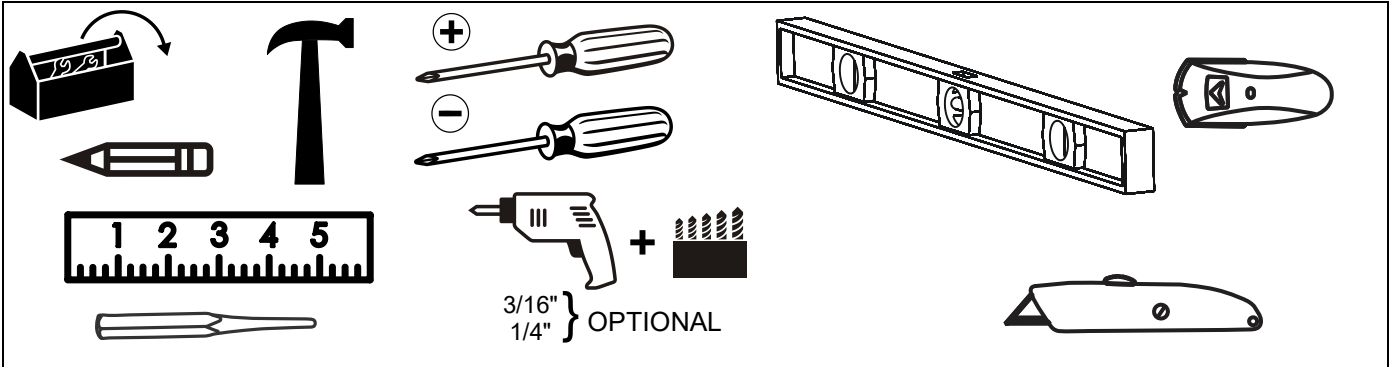


PARTS INCLUDED

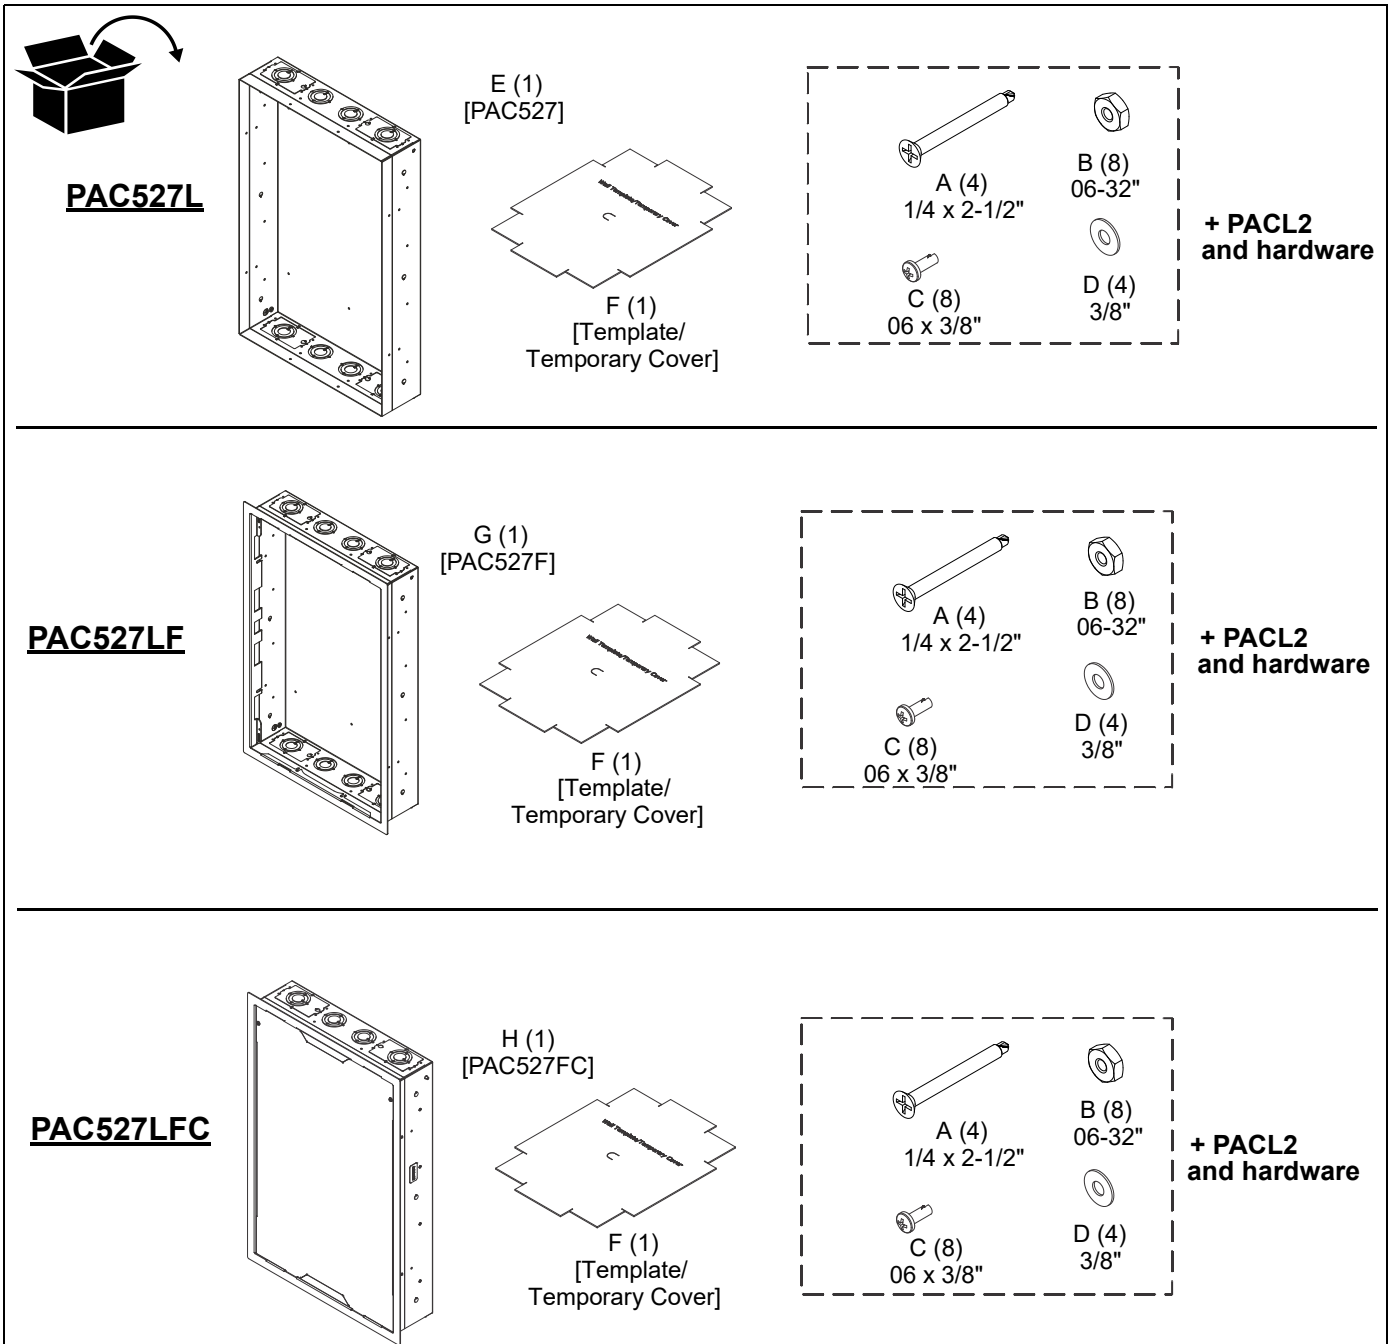


PARTS - continued


PAC527LFxP4

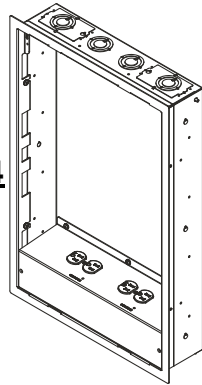

J (1)
[PAC527LFxP4]

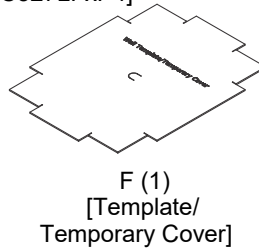

F (1)
[Template/
Temporary Cover]

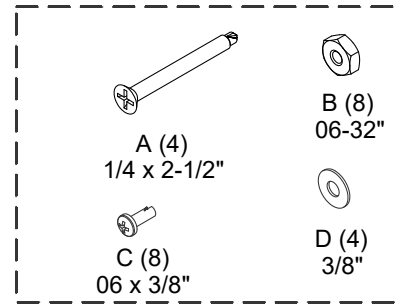

A (4)
1/4 x 2-1/2"


B (8)
06-32"

C (8)
06 x 3/8"


D (4)
3/8"

+ PACL2
and hardware


PAC527LFxP6

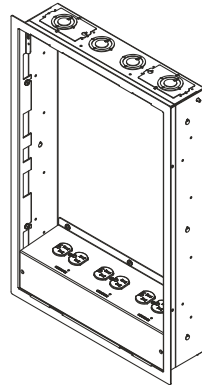

K (1)
[PAC527LFxP6]

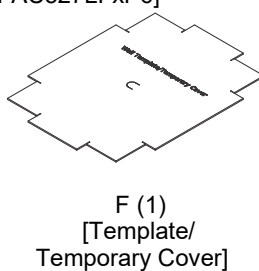

F (1)
[Template/
Temporary Cover]

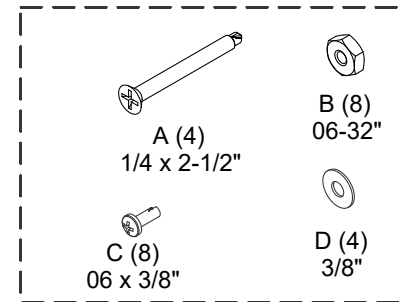

A (4)
1/4 x 2-1/2"


B (8)
06-32"

C (8)
06 x 3/8"


D (4)
3/8"

+ PACL2
and hardware

PAC527F-KIT

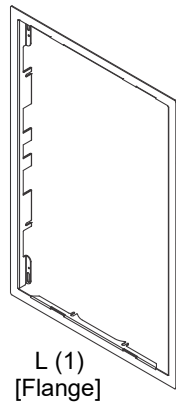


L (1)
[Flange]

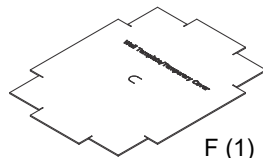


F (1)
[Template/
Temporary Cover]

M (8)
10-24 x 1/4"

PACL2

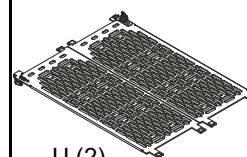

U (2)
[Backplane]




V (8)
[Adapter]

W (4)
#10-24 x 5/8"
(not used)

X (8)
#10-24 x 1/4"

PAC527CVR-KIT

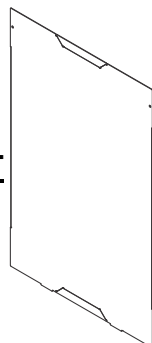

N (1)
[Cover]


P (2)
#06 x 1-1/4"

S (2)
.259 x .156 x .625"

Q (2)
#06 x 1-1/2"

T (2)
#06

R (1)
1/8"
[security]

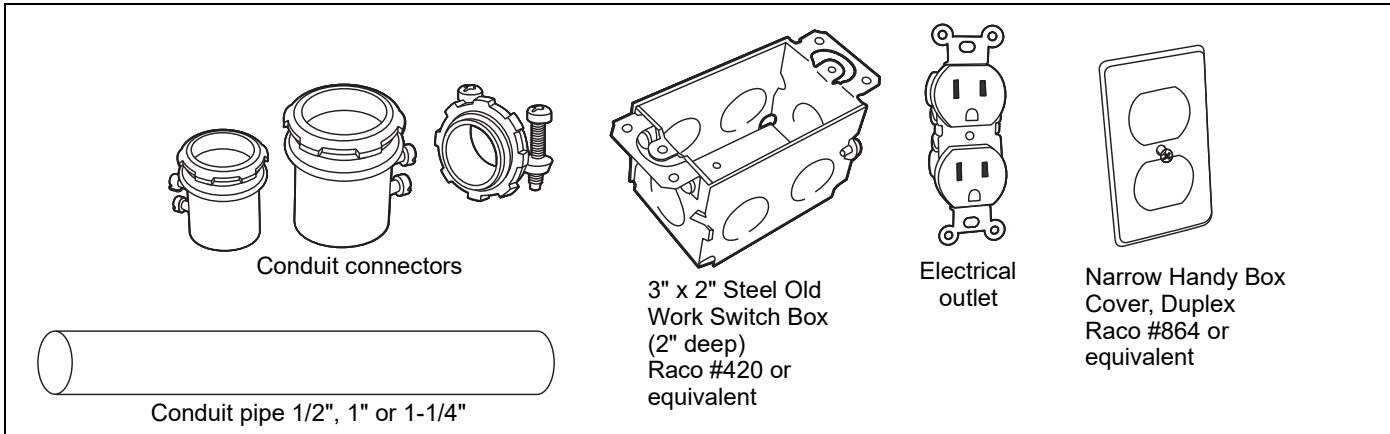OPTIONAL PARTS PER CUSTOM CONFIGURATION (NOT INCLUDED)**ADDITIONAL INFORMATION**

NOTE: Grounding screw installed at factory in PAC527L, PAC527LF, PAC527LFC, PAC527LFxP4, and PAC527LFxP6 in-wall boxes. Grounding screw is located on one side of the PAC527L box.

10-32
grounding screw



Earthing symbol IEC 60418 No. 5019
affixed adjacent to grounding terminal

ASSEMBLY AND INSTALLATION

IMPORTANT ! : In the following instructions, the reference to PAC527L includes the following models:

- PAC527L
- PAC527LF
- PAC527LFC
- PAC527LFxP4
- PAC527LFxP6

The PAC527L is intended for use in both installations where an existing finished drywall wall is present, and where the wall surface has not been finished and the structural studs are exposed. The wall then must be finished around the opening of the box after the box has been installed.



WARNING: All wiring should be performed by a licensed electrician following all local codes and ordinances.



WARNING: ELECTRICAL SHOCK HAZARD! CUTTING OR DRILLING INTO ELECTRICAL WIRES OR CABLES CAN CAUSE DEATH OR SERIOUS PERSONAL INJURY! ALWAYS make certain area behind mounting surfaces is free of electrical wires and cables before cutting, drilling or installing fasteners.



WARNING: EXPLOSION AND FIRE HAZARD! CUTTING OR DRILLING INTO GAS PLUMBING CAN CAUSE DEATH OR SERIOUS PERSONAL INJURY. ALWAYS make certain area behind mounting surfaces is free of gas, water, waste or any other plumbing before cutting, drilling or installing fasteners.

4. Determine all additional/optional components required:

- Conduit pipe
- Conduit connectors (both large and small)
- Electrical box(es) (3" x 2")
- Steel electrical box cover(s)
- Electrical outlet(s)

Locating PAC527L

1. Identify a suitable wall location for the accessory.
2. Locate and mark studs using a stud sensor.
3. Identify possible structural conflicts (electrical wiring, plumbing, gas lines, HVAC).

INSTRUCTIONS FOR PAC527LFxP4 / PAC527LFxP6 Only

Isolated Ground Receptacle

This product incorporates an isolated ground receptacle, identified by the orange triangle on its face. This feature may be useful to reduce common noise in the connected equipment. Its intended use is to reduce electrical noise (electromagnetic interference) by purposely insulating the grounding circuit from any metallic wiring system. The ground pin of the receptacle is connected to the green/yellow wire and is isolated from the metal mounting yoke of the receptacle. The accessible metal of the product is connected to the green wire. If it is not desired to use this feature, connect the green/yellow and green wires together.

References

Application Guide for Isolated Ground Wiring Devices 2007, National Electrical Manufacturers Association (NEMA)

IEEE Std 1100™-2005, "IEEE Recommended Practice for Powering and Grounding Electronic Equipment" (Emerald Book), Section 8.5.3.2.

IEEE Std 142™-2007, "IEEE Recommended Practice for Grounding of Industrial and Commercial Power Systems" (Green Book), Sections 5.5.1, 5.5.2

NFPA-70, "National Electrical Code", Article 250.146 Connecting Receptacle Grounding Terminal to Box.

- (D) Isolated Ground Receptacles. Where installed for the reduction of electrical noise (electromagnetic interference) on the grounding circuit, a receptacle in which the grounding terminal is purposefully insulated from the receptacle mounting means shall be permitted. The receptacle grounding terminal shall be connected to an insulated equipment grounding conductor run with the circuit conductors. This equipment grounding conductor shall be permitted to pass through one or more panel boards without a connection to the panel board grounding terminal bar as permitted in 408.40, Exception, so as to terminate within the same building or structure directly at an equipment grounding conductor terminal of the applicable derived system or service. Where installed in accordance with the provisions of this section, this equipment grounding conductor shall also be permitted to pass through boxes, wire ways, or other enclosures without being connected to such enclosures.
- Informational Note: Use of an isolated equipment grounding conductor does not relieve the requirement for grounding the raceway system and outlet box.

C22.2 No. 1, "Canadian Electrical Code, Part 1", Rule 10-906 Bonding conductor connection to circuits and equipment.

- (6) A bonding jumper shall be installed to connect the bonding conductor to the grounding terminal of a receptacle and in such a manner that disconnection or removal of the receptacle will not interfere with, or interrupt grounding continuity.
- (7) In the case of metallically enclosed systems where the grounding path is provided by the metal enclosure, a bonding jumper shall be installed to bond the grounding terminal of the receptacle to the enclosure.

- (8) Notwithstanding Sub-rules (6) and (7), the bonding jumper, in the case of receptacles having grounding terminals isolated from the mounting strap required for special equipment, shall be permitted to be extended directly back to the distribution panel.



WARNING: IMPROPER INSTALLATION CAN RESULT IN DEATH OR SERIOUS PERSONAL INJURY! This enclosure should be installed by qualified personnel.

NOTE: The PAC527LFxP4 and PAC527LFxP6 must be connected to a 15 Amp branch circuit.

Prepare for Wiring

1. Remove and save three Phillips head screws holding power kit within box. (See Figure 1)
2. Remove the power kit from the in-wall box. (See Figure 1)

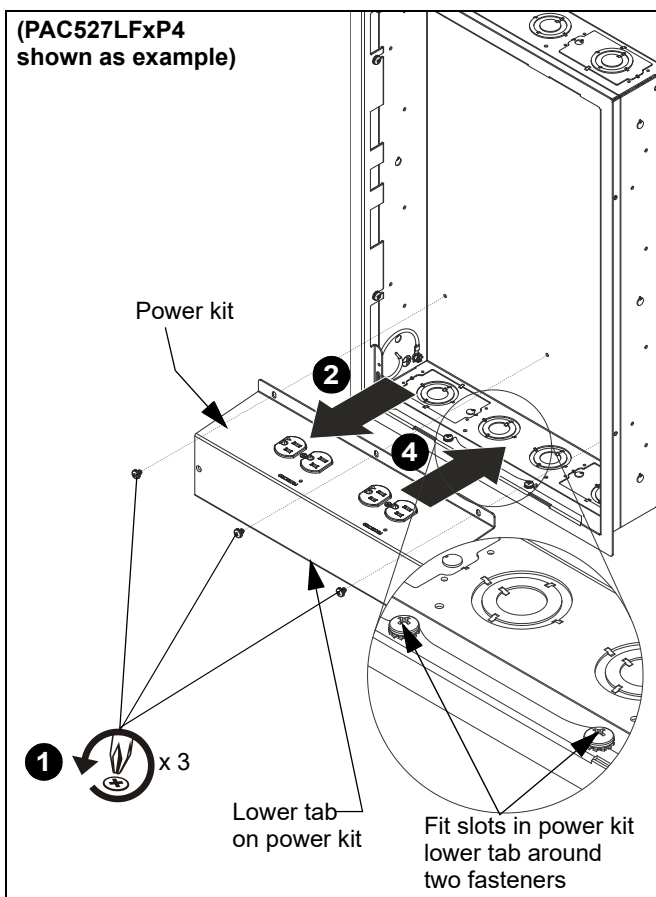


Figure 1

3. Wire the outlet box(es) as required. Refer to Table 1 and Table 2 for input and output specifications. (See Figure 2)

Table 1: Input Specifications

Input	
Input voltage, frequency	125 V AC, 60 Hz
Input connection type	4x14 AWG stranded, UL Style 1015, CSA TEW
Input Wire colors	Black - Line White - Neutral Green - Box Ground Green/Yellow - Isolated Ground
Input wire length (ft.)	1 (with a 3/4" stripped end)

Table 2: Output Specifications

Output	
Output	15 A, 1875 W
Power consumption	<0.5 watt
Fuses	Thermal current interrupting circuits are in MOVs
Quantity/Type	Duplex NEMA 5-15R Isolated Ground Receptacle
Color/Markings	Grey with protection symbol (Orange triangle)



CAUTION: Isolated ground-mounting means NOT grounded. Grounding wire connection required.

IMPORTANT ! : If a separate isolated green/yellow ground wire is installed in the building wiring, attach it separately to the green/yellow isolated ground wire on box. If there is no separate green/yellow isolated ground wire, connect green ground wire to both green/yellow isolated ground wire and green box ground wire on box.

NOTE: The grounding conductors serving this outlet are to be connected to earth ground at the service equipment or other acceptable building earth ground such as the building frame in the case of a high-rise steel-frame structure. Connections should be made with minimum AWG 14 copper wire intended for use on a 15 Amp circuit. The conductors used to connect the outlet to the line or bus and ground shall not be any longer than necessary and shall avoid unnecessary bends.

NOTE: An insulated grounding conductor that is identical in size and insulation material and thickness to the grounded and ungrounded circuit supply conductors, except that it is green with or without one or more yellow stripes, is to be installed as part of the circuit that supplies the outlet. Refer to Table 250-122 of the National Electrical Code regarding the appropriate size of the grounding conductor.

NOTE: Pressure terminal or pressure splicing connectors and soldering lugs used in the installation of the outlet shall be identified as being suitable for the material of the conductors. Conductors of dissimilar metals shall not be intermixed in a terminal or splicing connector where physical contact occurs between dissimilar conductors unless the device is identified for the purpose and conditions of use.

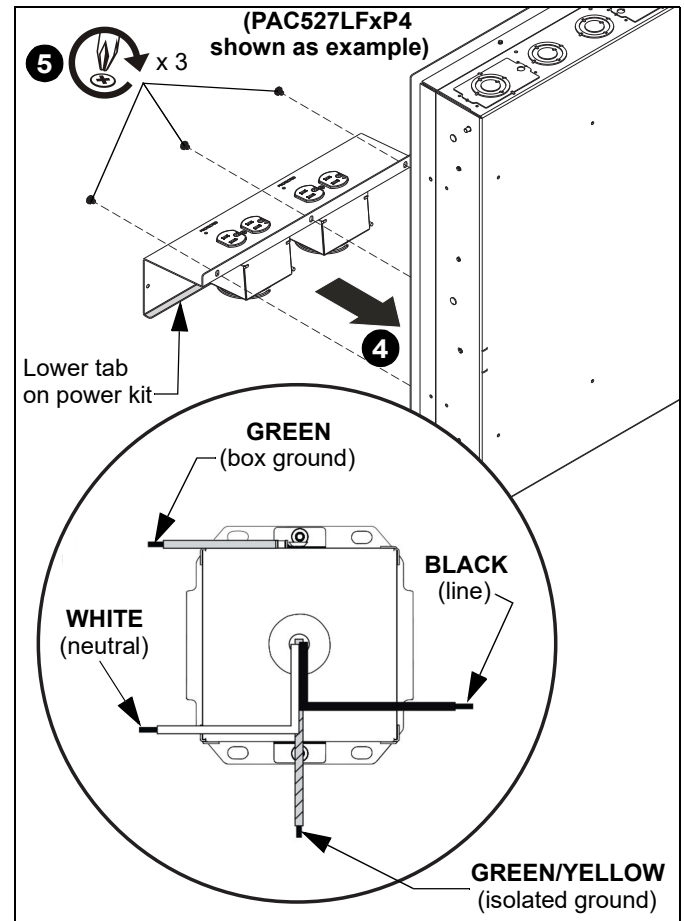


Figure 2

4. Replace the power kit in the PAC527L, fitting the two slots in the power kit lower tab around two fasteners in the PAC527L. (See Figure 1) and (See Figure 2)
5. Tighten three Phillips screws to secure power kit in the PAC527L. (See Figure 2)

Outlet Box Use

NOTE: The "PROTECTED" light indicates that the surge protection circuitry is active and operational.

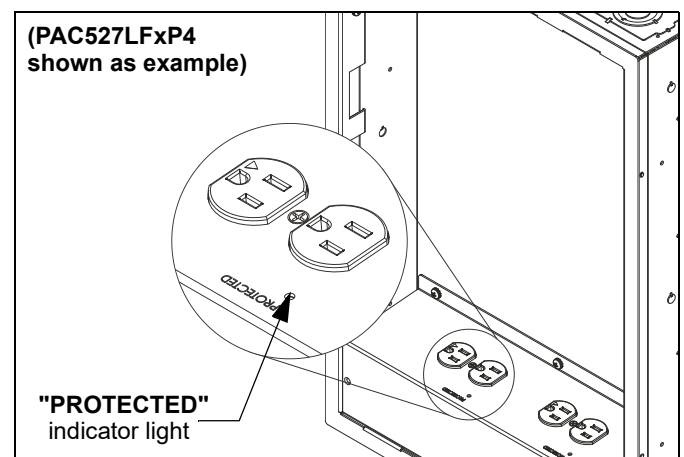


Figure 3

PAC527L Site Preparation

1. Using a level, draw a horizontal line at the lower edge of the install site. (See Figure 4)
2. Create an exploratory hole to confirm edge of the studs.
3. Using the line drawn in Step 1 as lower edge and placing between studs, use the enclosed template (F) to draw lines around corners of template, and connect lines on bottom, top and sides. (See Figure 4)

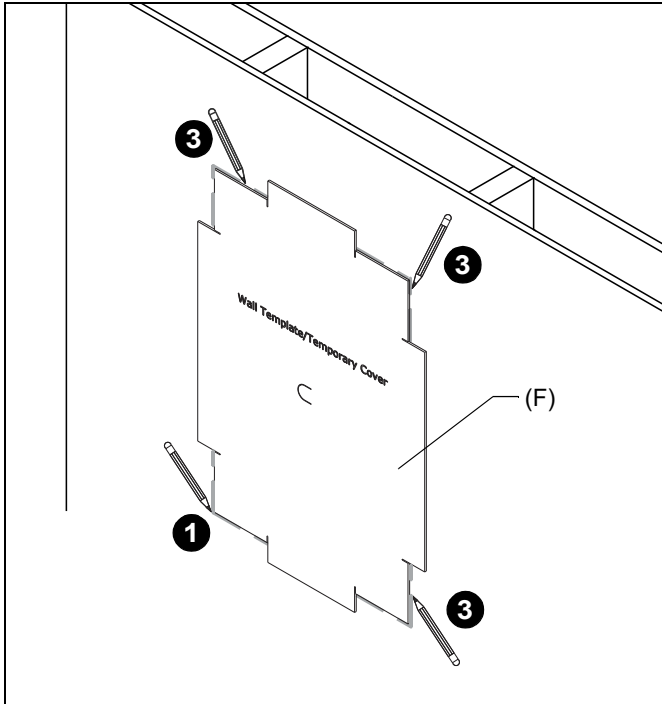


Figure 4

4. Cut along outside edge of line using a utility knife and remove drywall.
5. Check stud depth within the wall.
 - If 3-1/2" or greater, proceed to **PAC527L Box Preparation and Installation**.
 - If less than 3-1/2" deep, proceed to **Step 6**.
6. If present, remove box flange by loosening screws. (See Figure 5)



CAUTION: Injury may occur on sharp edges. Carefully discard the removable tabs. Avoid sharp edges.

7. Snap off removable tabs at perforations provided.
8. Reinstall box flange.
9. Fasten flange in place by tightening screws loosened in Step 6.

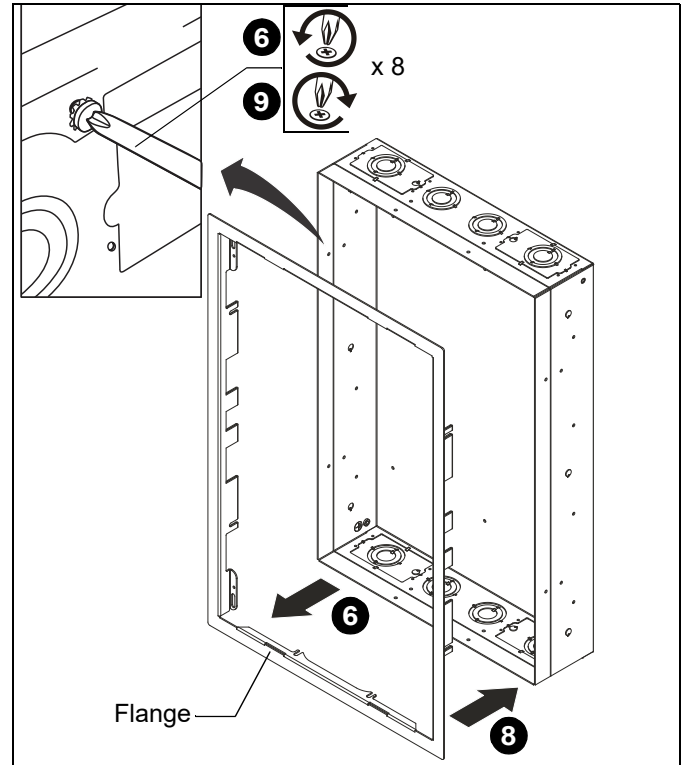


Figure 5

PAC527L Box Preparation and Installation

1. Remove knock-outs as determined in Step 4 of **Locating PAC527L** section. (See Figure 6)

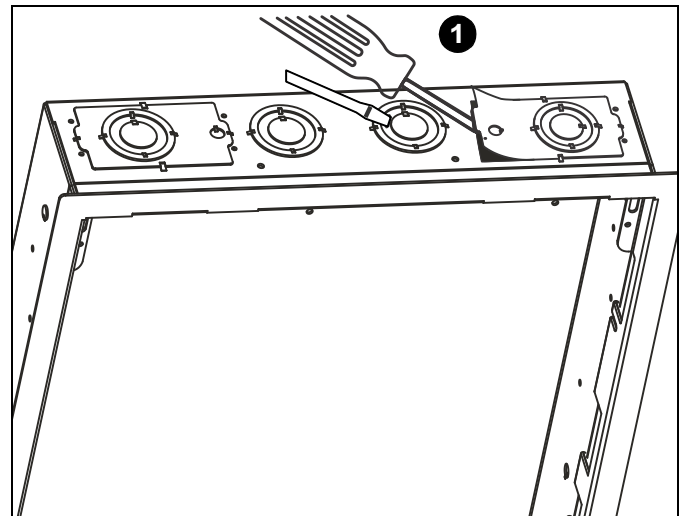


Figure 6

2. Loosely attach required conduit and conduit connectors, switch boxes, outlets, etc (not included) to PAC527L to enable fitting into the wall opening. (See Figure 7)

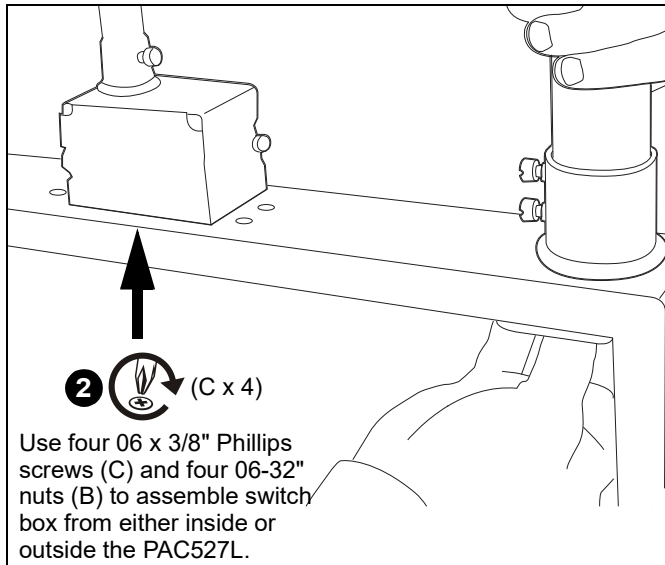


Figure 7

3. Feed conduit attached to PAC527L through cut-out in wall and insert PAC527L into wall opening. Tighten component connections.
4. Drill pilot holes (at least 2 on each side of PAC527L) into studs through mounting holes in PAC527L.
 - Wood studs: use 3/16" drill bit
 - Steel studs: use 1/4" drill bit
5. Install PAC527L to studs using four 1/4 x 2-1/2" Phillips flat head screws (A) and four 3/8" flat washers (D) through PAC527L and pilot holes. (See Figure 8)

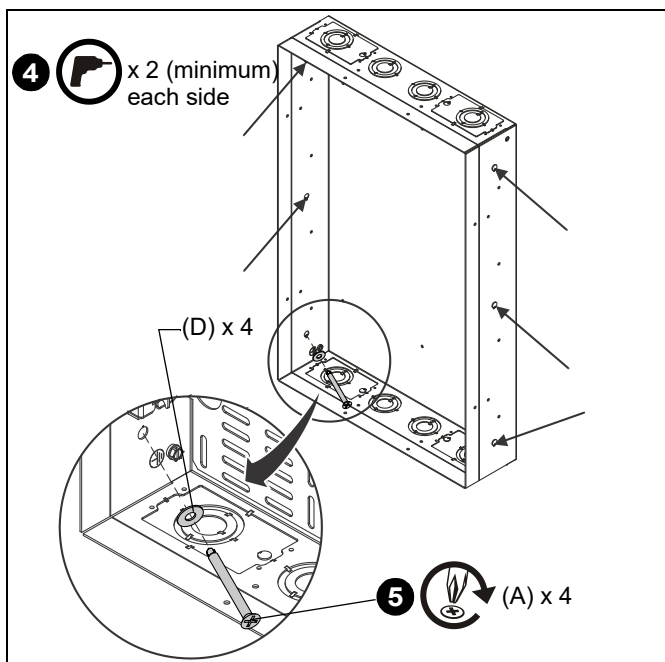


Figure 8

NOTE: If installing in a stud wall BEFORE the drywall is installed, remove outer flange from PAC527L before installing the PAC527L. (See Figure 9)

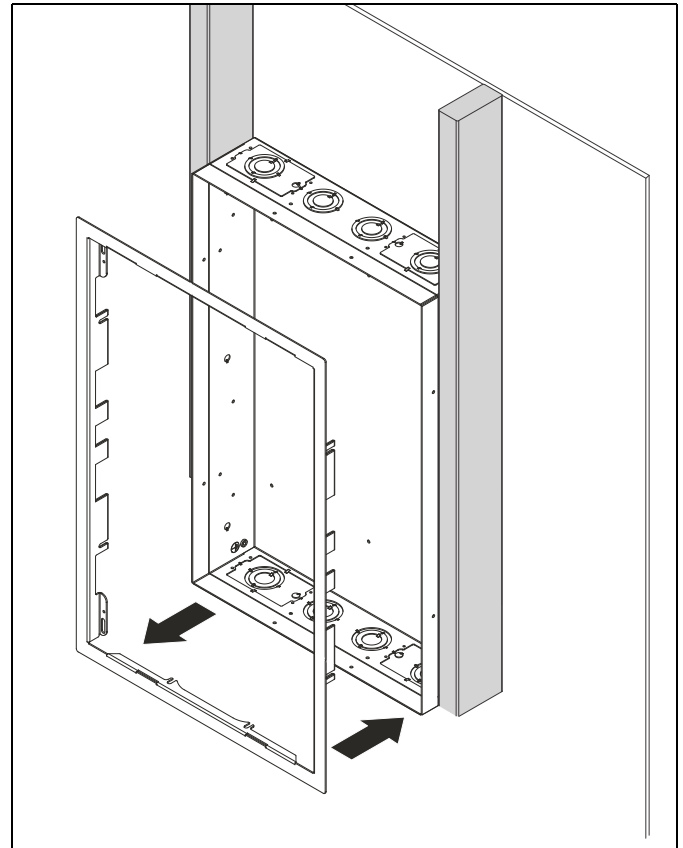


Figure 9

Installing LeverLock™ Backplanes

1. Partially install #10-24 x 1/4" Phillips screws with external tooth washers (X) into holes on sides of PAC box. (See Figure 10)
2. Slide each adapter (V) inside PAC box. (See Figure 10)
3. Tighten #10-24 x 1/4" Phillips screws with external tooth washers (X) to secure adapter (V) to PAC box. (See Figure 10)

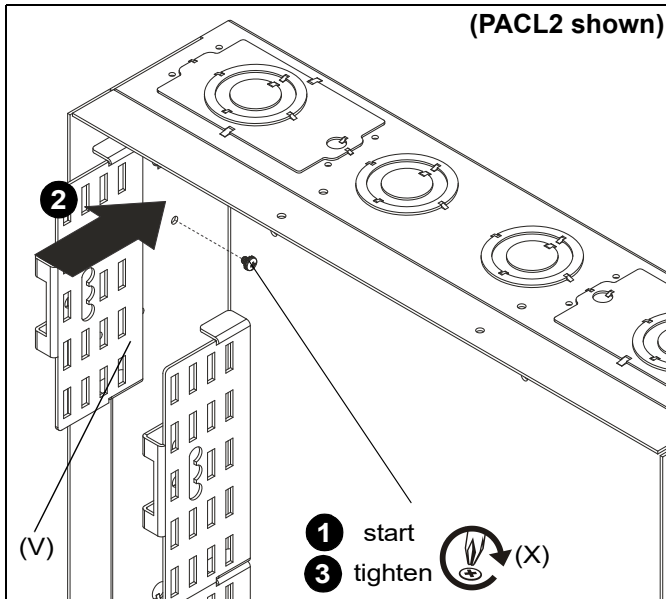


Figure 10

4. Slide LeverLock™ backplanes (U) into adapter (V) slots on one side of PAC527L box (A). (See Figure 11)

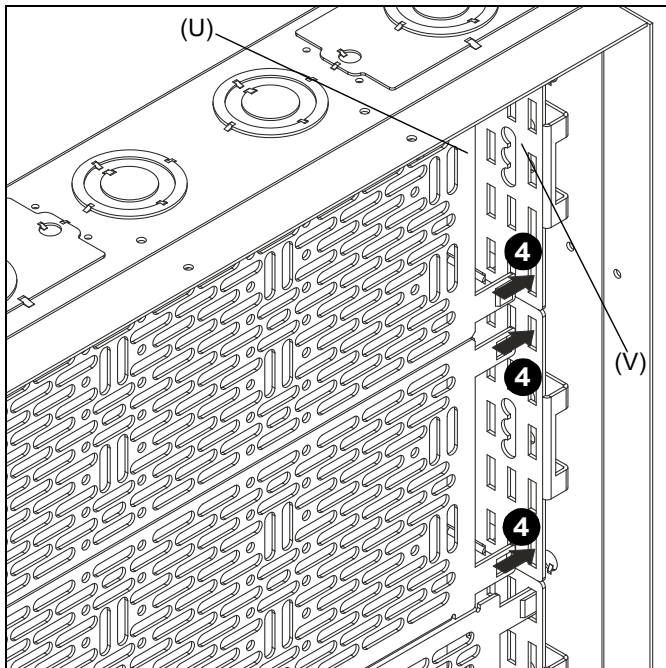


Figure 11

5. Slide LeverLock™ backplanes into adapter slots on opposite side, making sure it "clicks" into place. (See Figure 12)

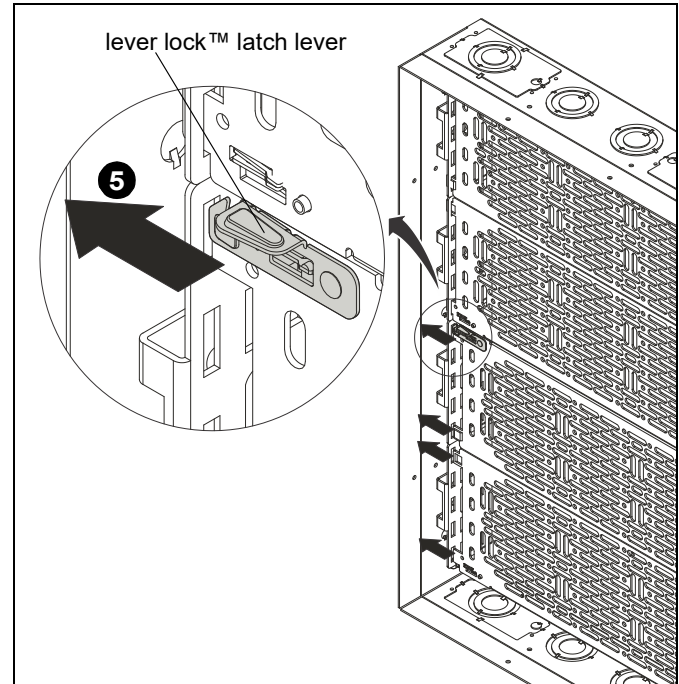


Figure 12

6. If required, break the LeverLock™ backplanes (U) along the scored mid-line. (See Figure 13)

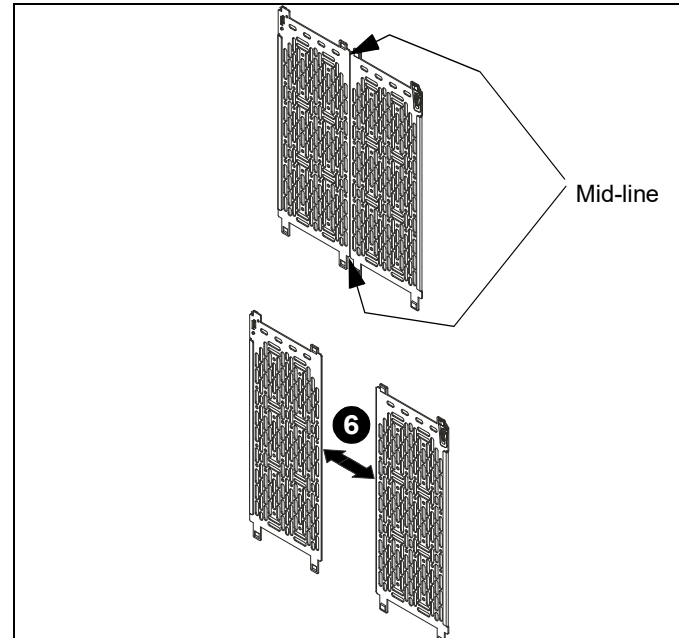


Figure 13

7. Attach components to LeverLock™ backplanes following component manufacturer's instructions.

Adding Template/Temporary Cover

NOTE: OPTIONAL: Install template (F), if necessary, as a temporary cover to protect interior of PAC527L box from debris.

1. Fold tabs of template (F) in and insert into PAC527L opening. (See Figure 14)

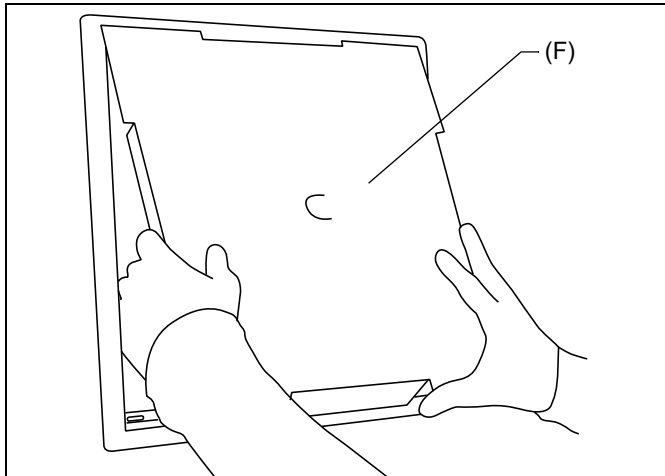


Figure 14

PAC527F-KIT

1. Loosely install eight 10-24 x 1/4" Phillips head screws with external teeth (M) into holes in PAC527L sides. (See Figure 15)

NOTE: If the outer edge of the PAC527L needs to be removed, use the inner hole for flange attachment. (See Figure 15)

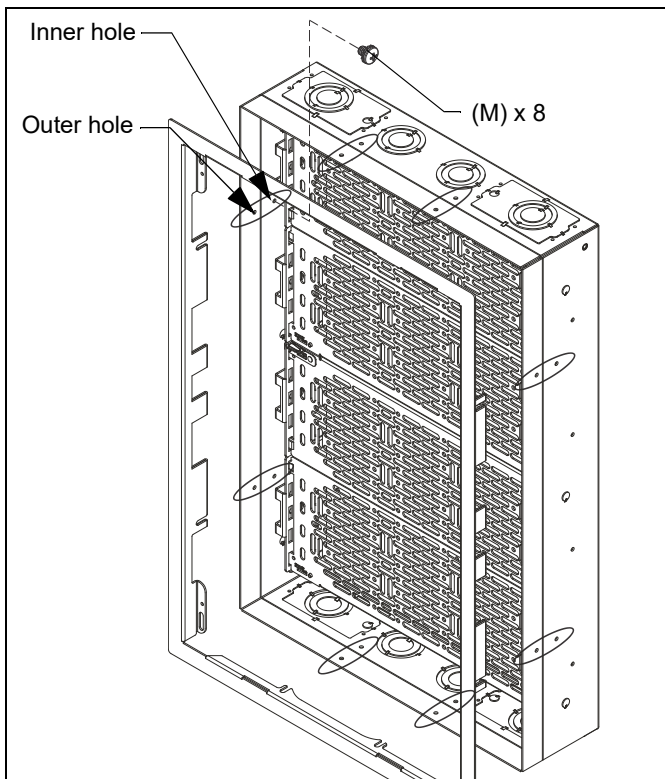


Figure 15

2. Slide flange (L) into PAC527L over installed screws, and tighten screws. (See Figure 16)

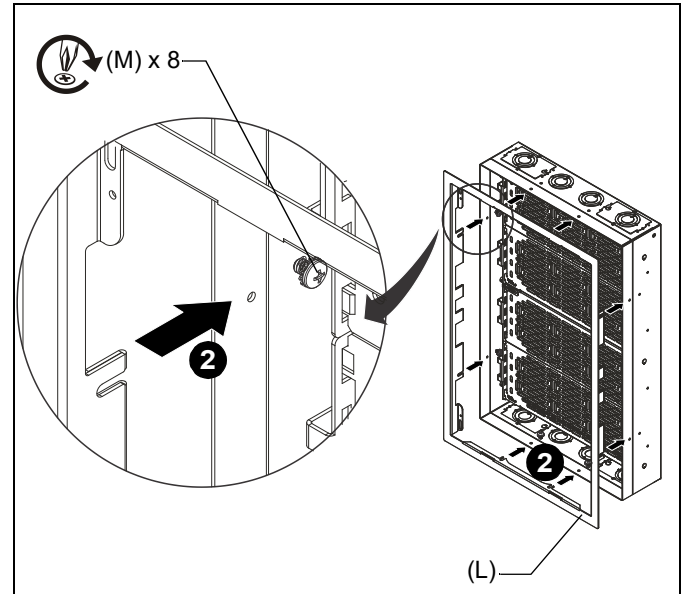


Figure 16

PAC527CVR-KIT

1. Break away the tab(s) on the cover (N) to allow wire exit from the PAC527L, and to meet ventilation needs of the components. (See Figure 17)

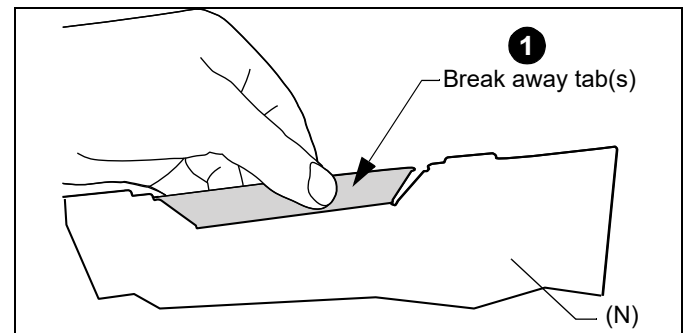


Figure 17

2. Gather all wires and route through the cover opening(s).
(See Figure 18)
3. Install cover (N) and fasten with two #6 x 1-1/4" Phillips self-tapping screws (P) [#6 x 1-1/2" button head self-tapping screws (Q) for security], two spacers (S) and two #6 lock washers (T). (See Figure 18)



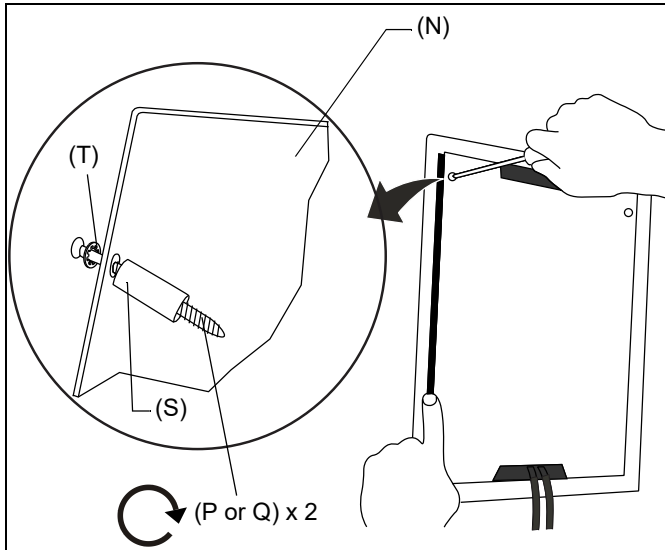


Figure 18


DIMENSIONS

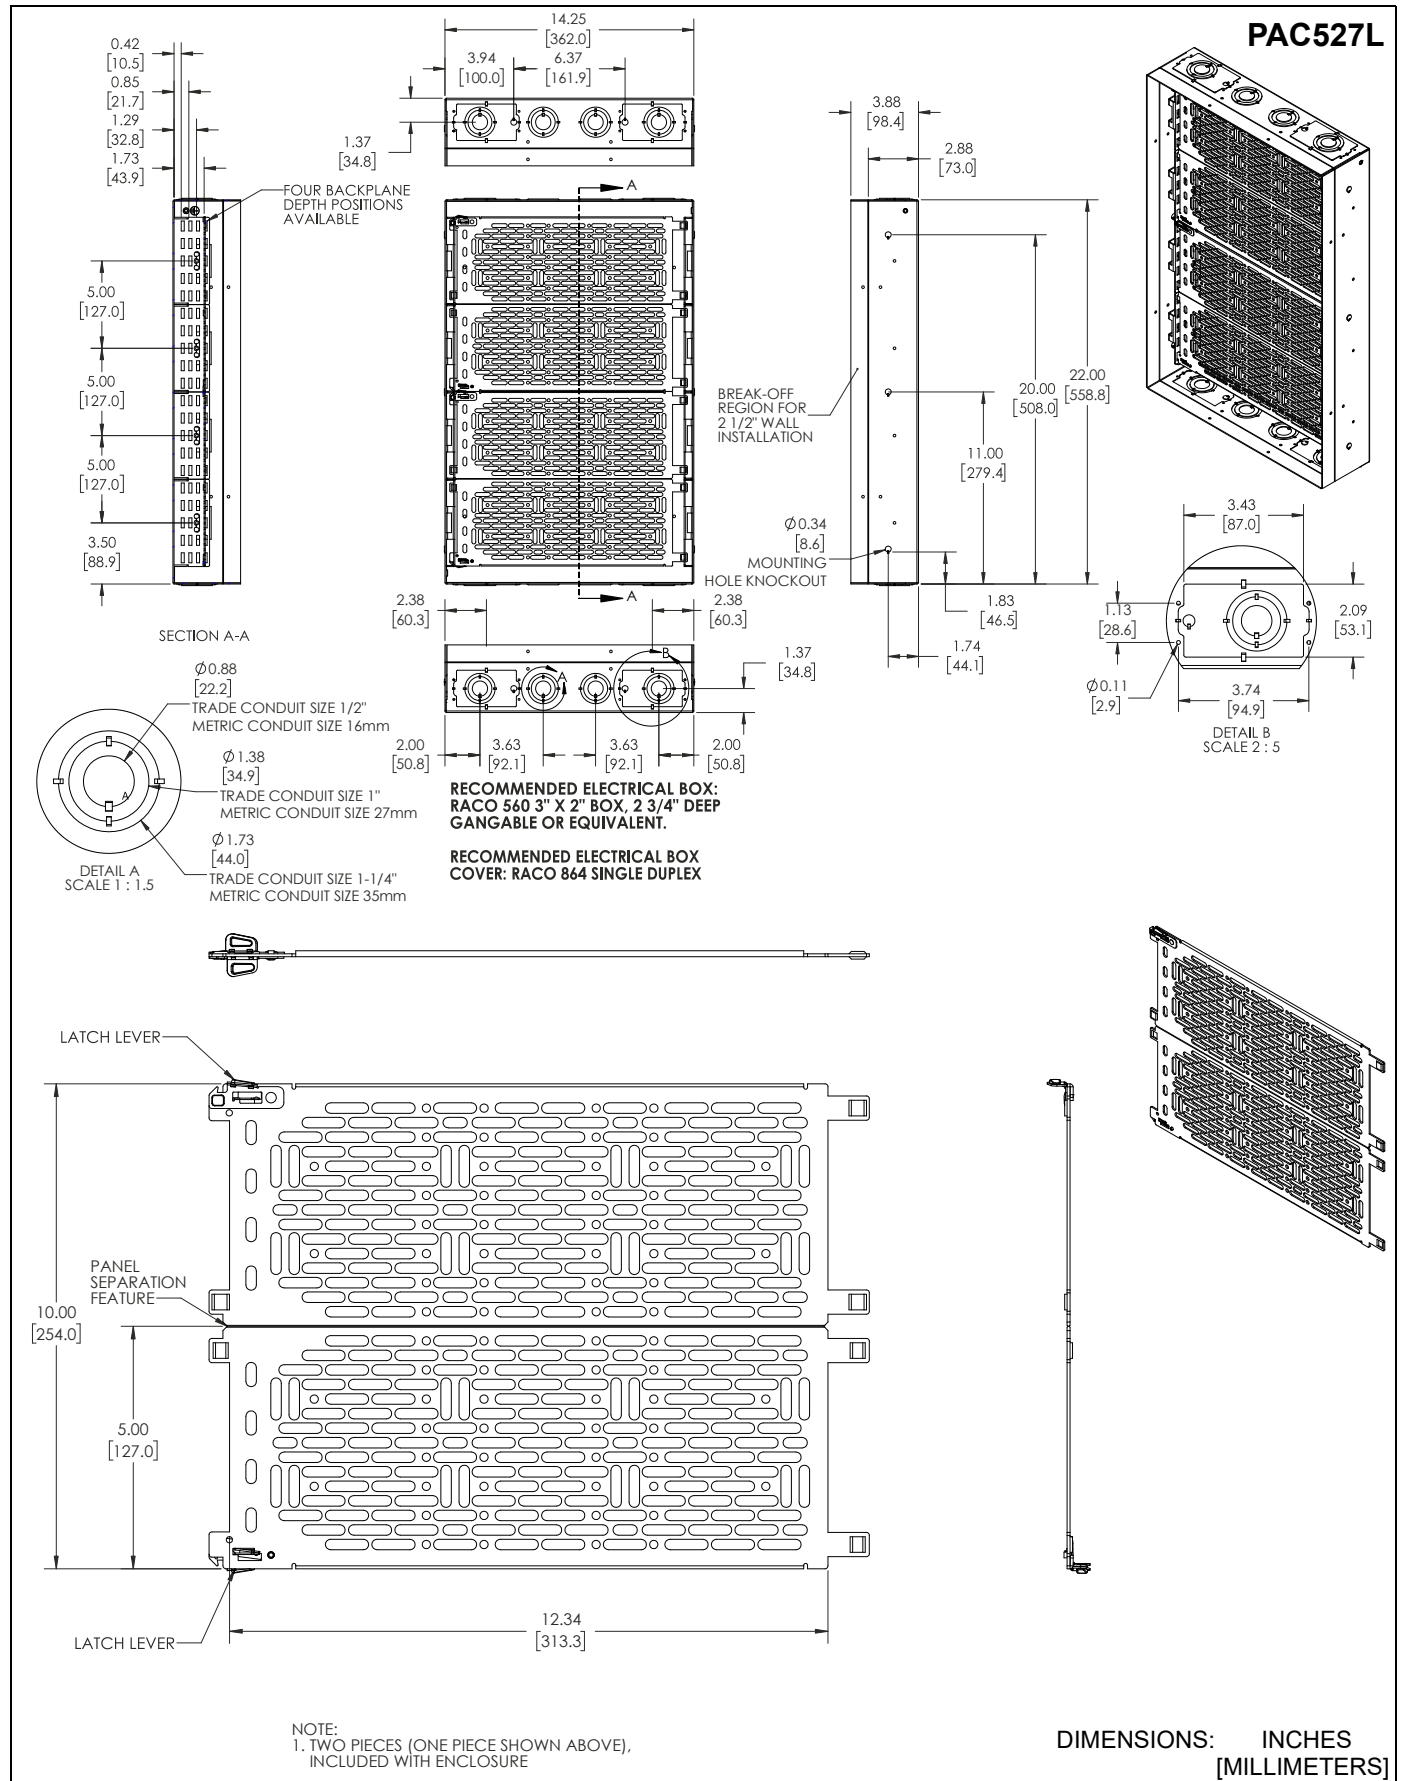



DIMENSIONS - continued

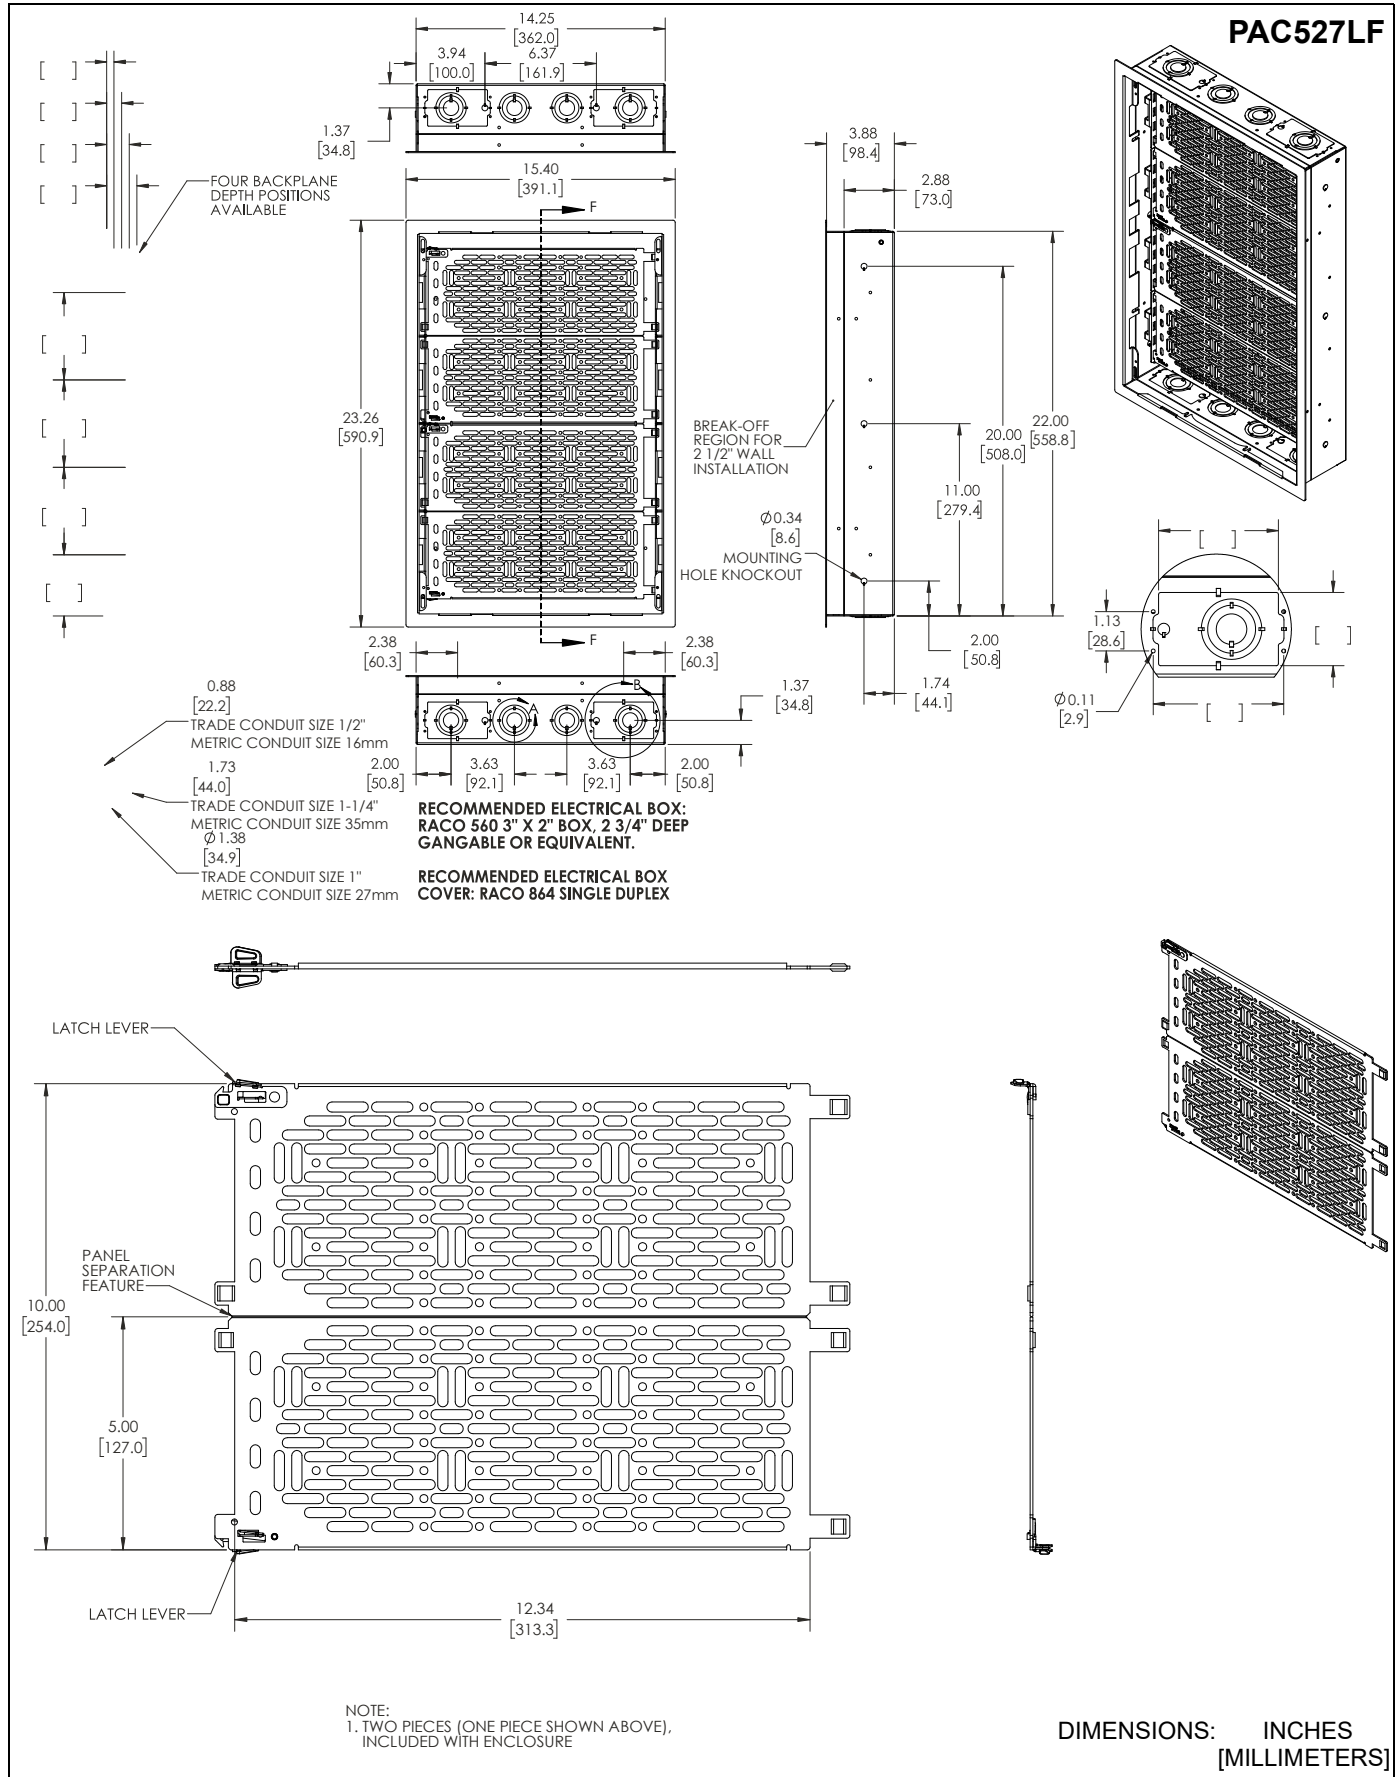



DIMENSIONS - continued

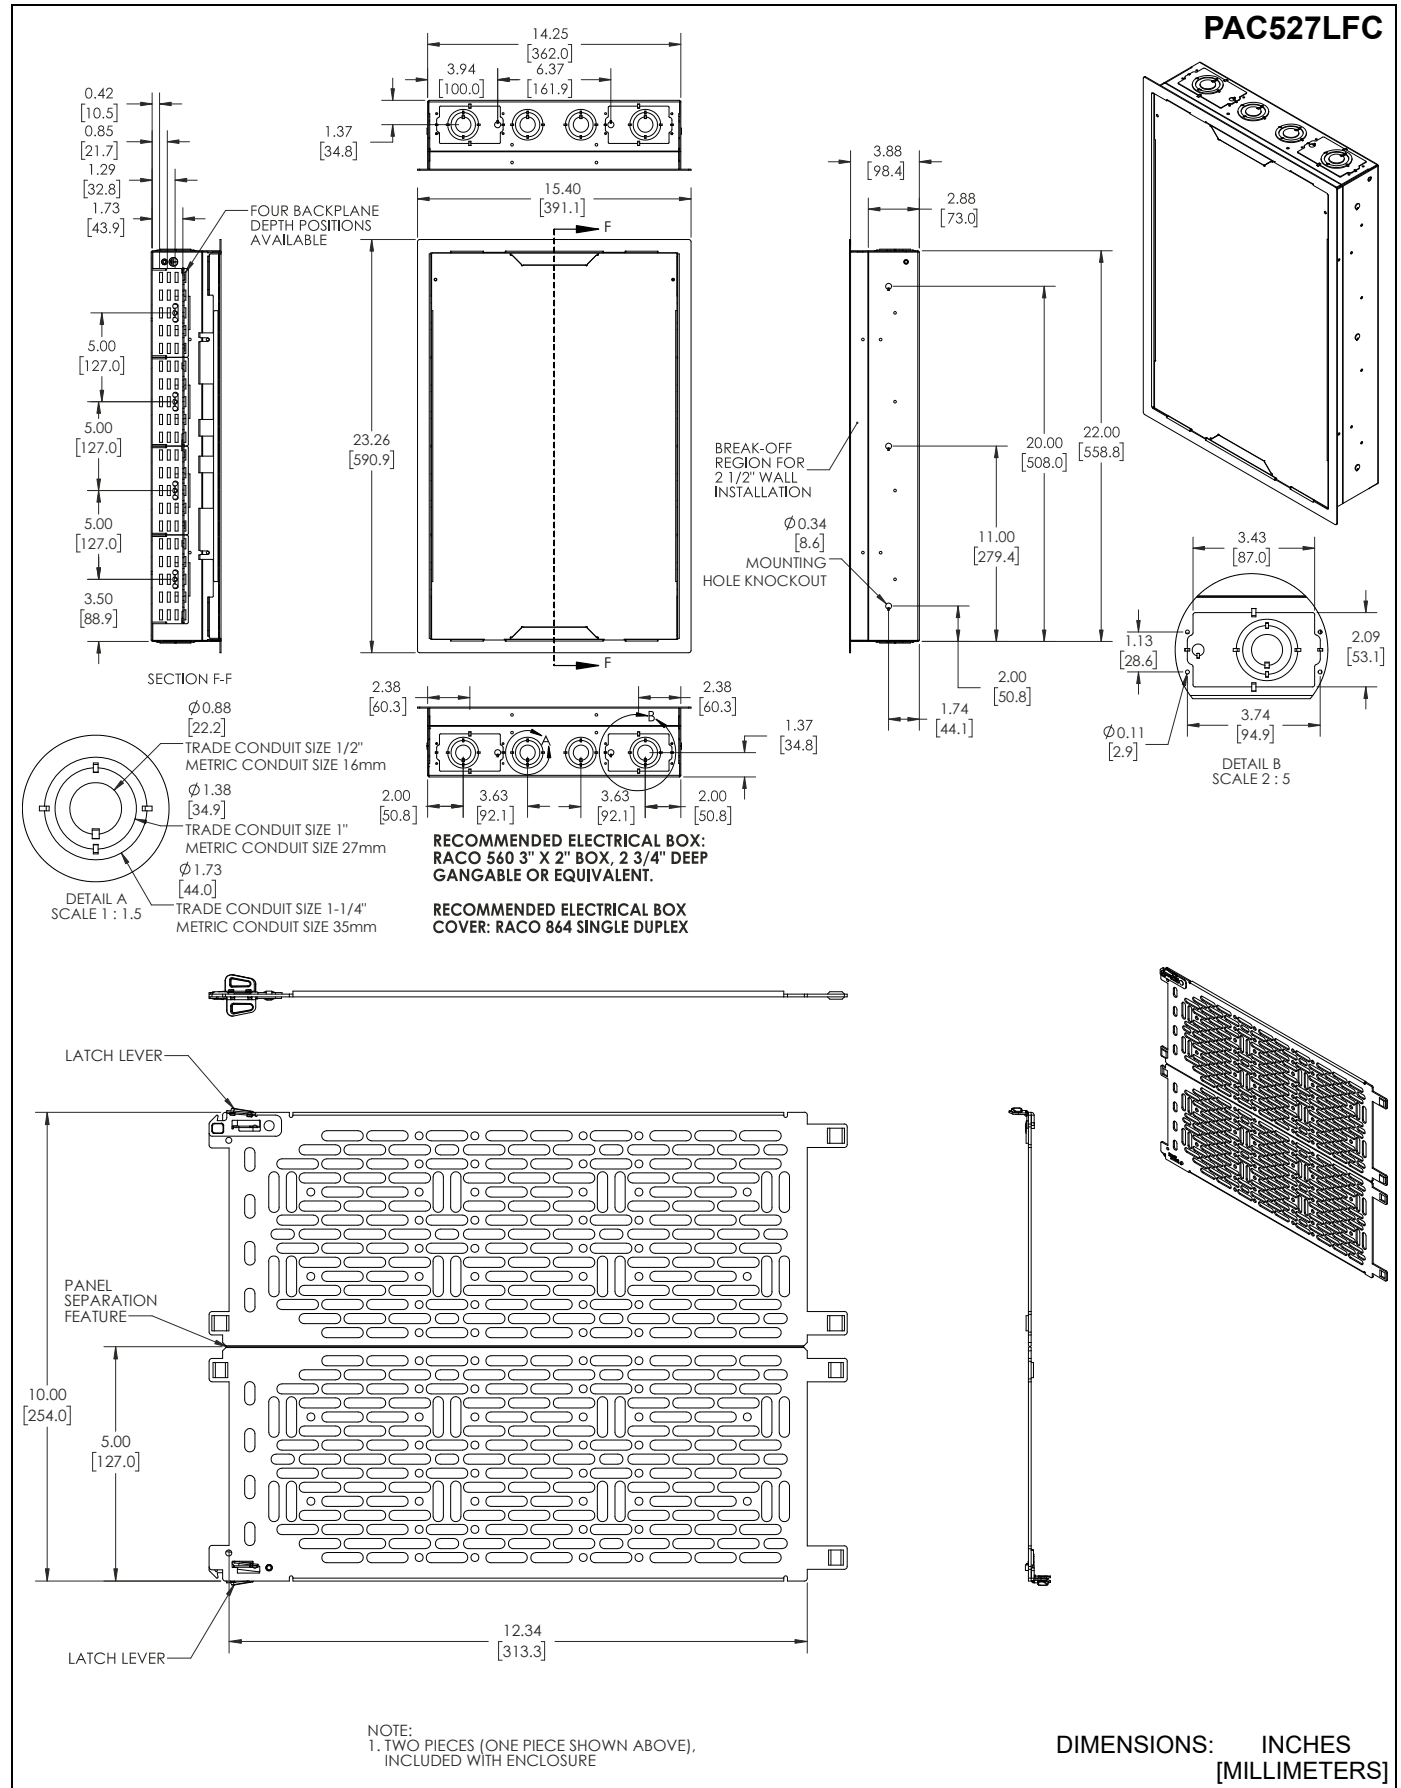

DIMENSIONS - continued

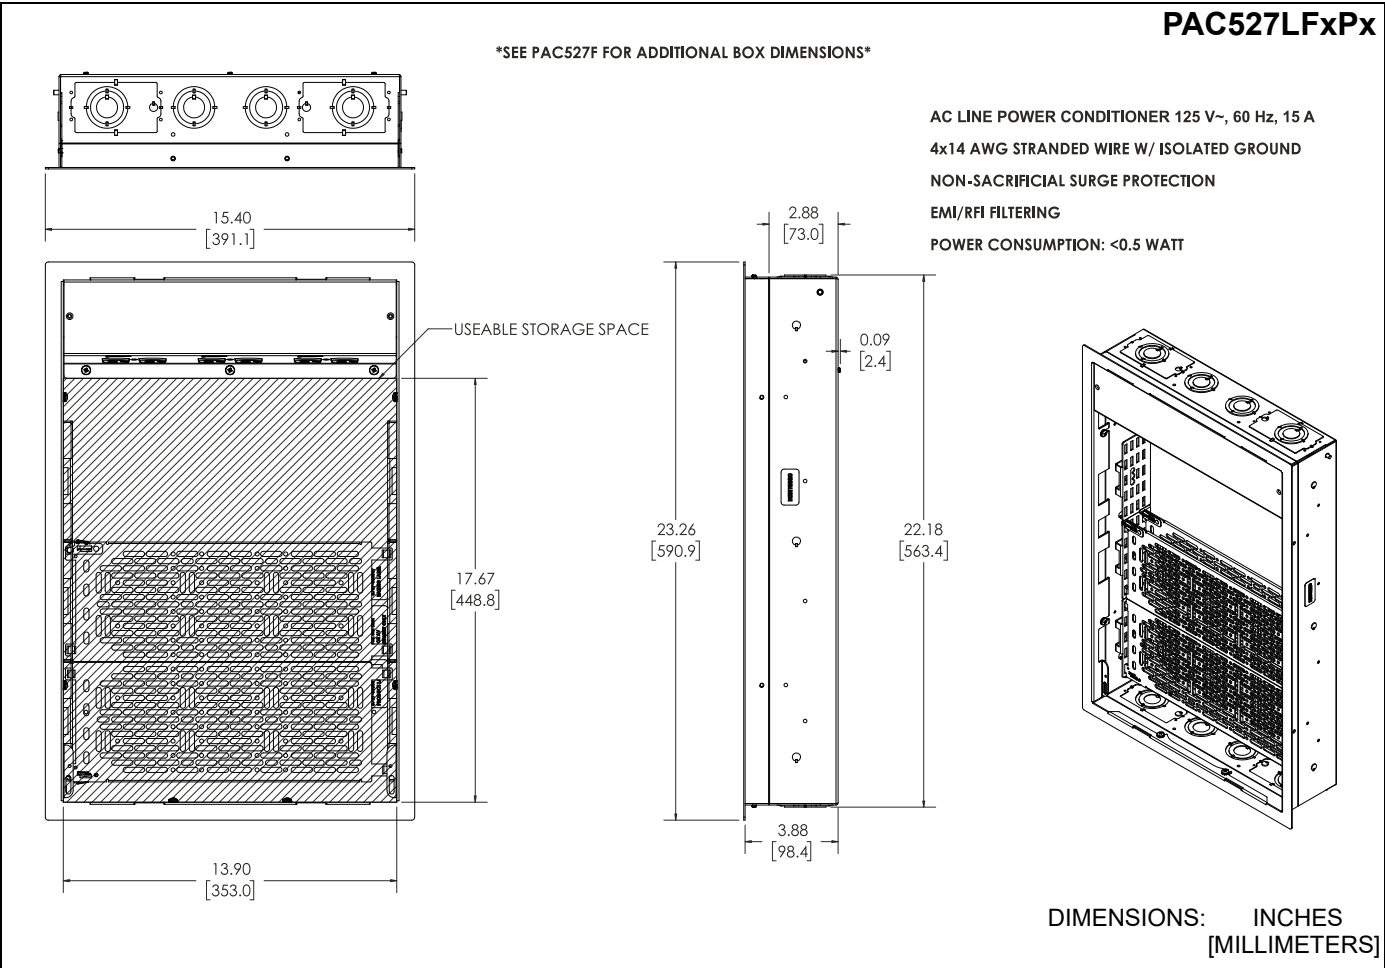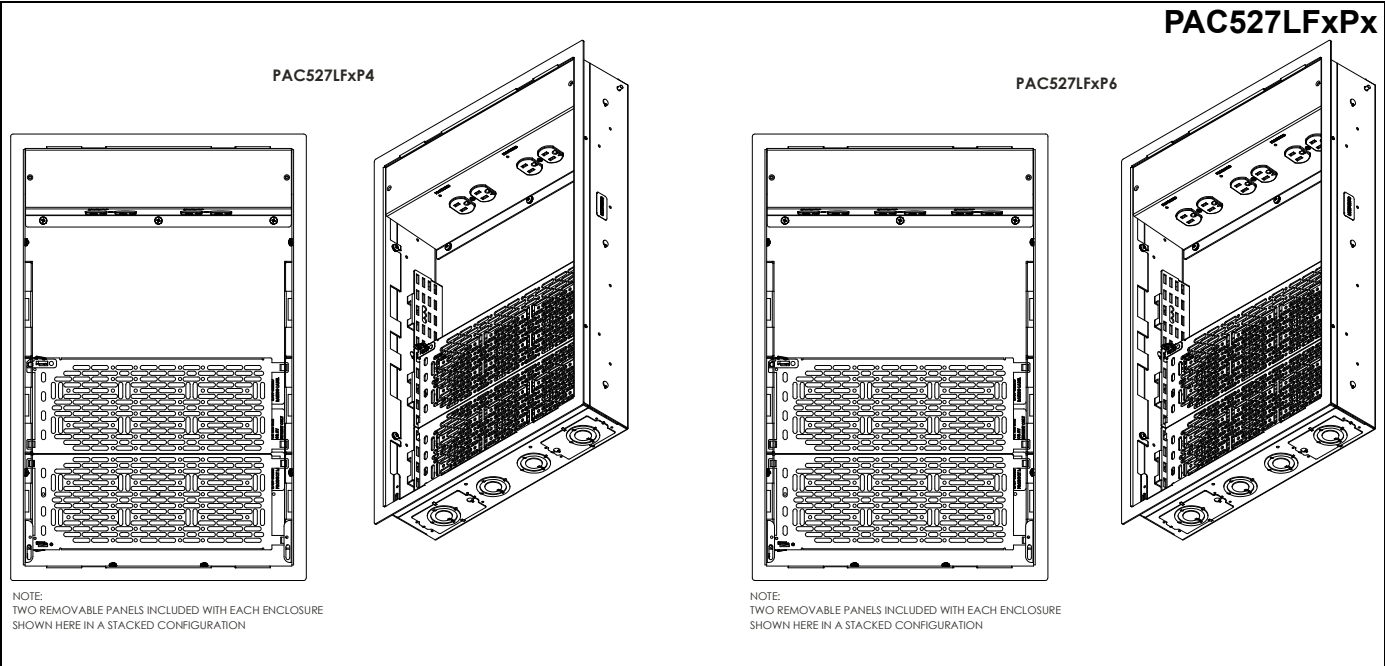

DIMENSIONS - continued

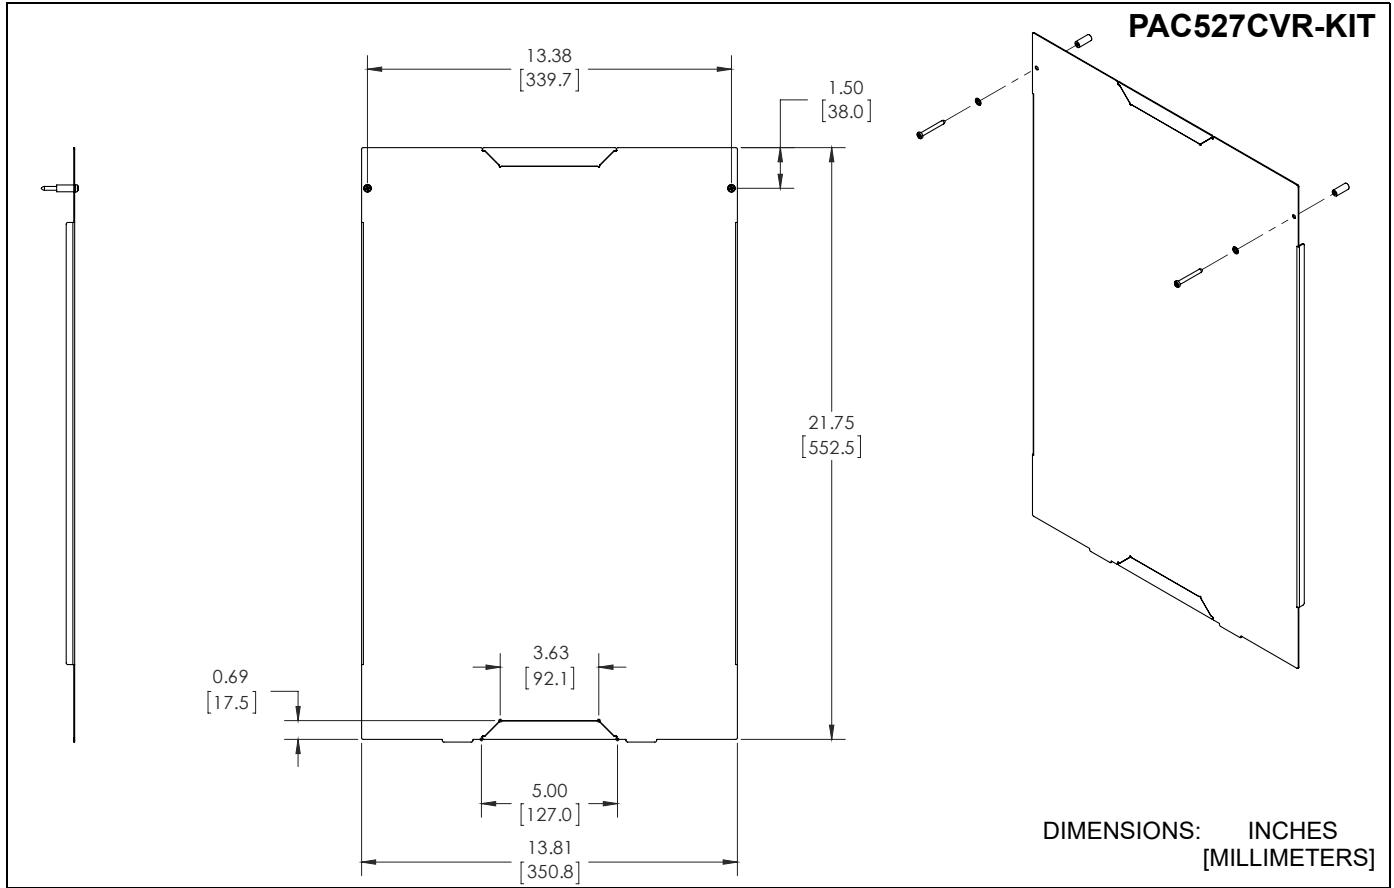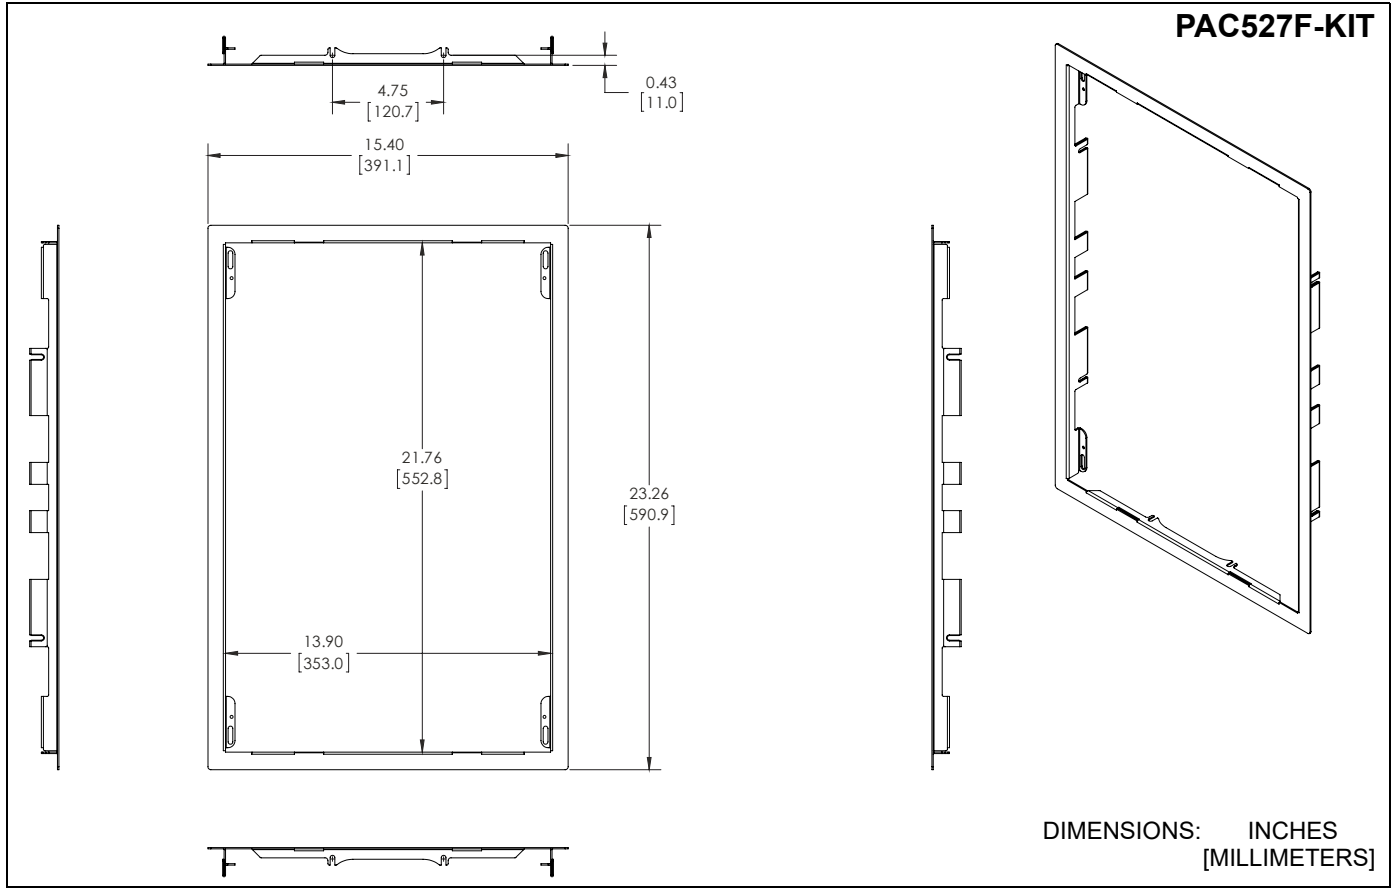



8800-003183 Rev00
©2020 Legrand | AV
www.legrandav.com
06/20

USA/International	A 6436 City West Parkway, Eden Prairie, MN 55344 P 800.582.6480 / 952.225.6000 F 877.894.6918 / 952.894.6918
Europe	A Franklinstraat 14, 6003 DK Weert, Netherlands P +31 (0) 495 580 852 F +31 (0) 495 580 845
Asia Pacific	A Office No. 918 on 9/F, Shatin Galleria 18-24 Shan Mei Street Fotan, Shatin, Hong Kong P 852 2145 4099 F 852 2145 4477

