



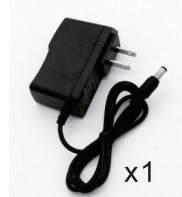

# Magnetic LED Light Panel for Telehealth Solutions (Black/White)

## INSTRUCTION MANUAL

ADD-LEDB/ADD-LEDW

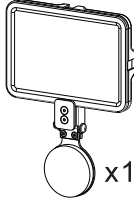

### Power management



**1. Lithium battery**  
Place the lithium battery in the battery compartment and press the LOCK button to toggle the battery.



**Power indicator button:** Press this button to display the power, otherwise the power is not displayed. Electricity in more than 75% bright 4 lights, more than 50% light 3 lights, more than 25% bright 2 lights, more than 5% light 1 lights, if all the lights are not bright means the lack of electricity, so you need to charge.




**2. DC power**  
If you use the DC power supply, please use the charger (by yourself) with the relative voltage limit, first connect the power supply, and then open the product power switch to enter the working state.



**Color temperature adjustment button:** color temperature can be adjusted in the 3300K-5600K Step-less dimming, clockwise rotation color temperature becomes larger (to cold light changes), counterclockwise rotation color temperature becomes smaller (to warm light changes).

### Use LED light

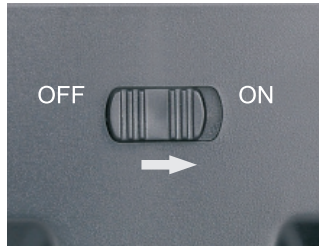

Turn on the power switch, fill light began to light. Power switch: Scroll to the right and swipe left to turn off.



**Brightness adjustment knob,** the brightness can be adjusted in the brightness range of 5%-100% ,clockwise rotation of brightness is dimmed, counterclockwise rotation is brightness.

