# **Panasonic**<sup>®</sup>

# Operating Instructions High Definition Plasma Display

Model No. TH-103PF12U



The illustration shown is an image.



Before connecting, operating or adjusting this product, please read these instructions completely.

Please keep this manual for future reference.

**English** 



# **CAUTION**

RISK OF ELECTRIC SHOCK DO NOT OPEN



WARNING: To reduce the risk of electric shock, do not remove cover or back. No user-serviceable parts inside. Refer servicing to qualified service personnel.



The lightning flash with arrow-head within a triangle is intended to tell the user that parts inside the product are a risk of electric shock to persons.



The exclamation point within a triangle is intended to tell the user that important operating and servicing instructions are in the papers with the appliance.

WARNING: To prevent damage which may result in fire or shock hazard, do not expose this apparatus to rain or moisture.

Do not place containers with water (flower vase, cups, cosmetics, etc.) above the set. (including on shelves above, etc.)

**WARNING:** 1) To prevent electric shock, do not remove cover. No user serviceable parts inside. Refer servicing to qualified service personnel.

2) Do not remove the grounding pin on the power plug. This apparatus is equipped with a three pin grounding-type power plug. This plug will only fit a grounding-type power outlet. This is a safety feature. If you are unable to insert the plug into the outlet, contact an electrician. Do not defeat the purpose of the grounding plug.

# **Important Safety Instructions**

- 1) Read these instructions.
- 2) Keep these instructions.
- 3) Heed all warnings.
- 4) Follow all instructions.
- 5) Do not use this apparatus near water.
- 6) Clean only with dry cloth.
- 7) Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- 8) Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9) Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 10) Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- 11) Only use attachments / accessories specified by the manufacturer.
- 12) Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart / apparatus combination to avoid injury from tip-over.



- 13) Unplug this apparatus during lightning storms or when unused for long periods of time.
- 14) Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- 15) To prevent electric shock, ensure the grounding pin on the AC cord power plug is securely connected.

# Dear Panasonic Customer

Welcome to the Panasonic family of customers. We hope that you will have many years of enjoyment from your new Plasma Display.

To obtain maximum benefit from your set, please read these Instructions before making any adjustments, and retain them for future reference.

Retain your purchase receipt as well, and record the model number and serial number of your set in the space provided on the rear cover of these instructions.

Visit our Panasonic Web Site http://panasonic.net

# **Table of Contents**

Important Safety Instructions	
FCC STATEMENT	
Safety Precautions	
Maintenance	
Accessories	
Accessories Supplied	
Remote Control Batteries	
Connections	
AUDIO OUT Terminals connection	9
PC Input Terminals connection	
SERIAL Terminals connection	11
HDMI connection	
COMPONENT / RGB connection	
Power ON / OFF	. 13
Selecting the input signal	. 15
Basic Controls	. 16
ASPECT Controls	
MULTI PIP	
Digital Zoom	
On-Screen Menu Displays	
Adjusting POS. /SIZE	
PICTURE Adjustments	
ADVANCED SETTINGS	
Picture Profiles	
Saving profiles	
Loading profiles	
Editing profiles	
Locking profiles	. 33
SOUND Adjustment	
SDI SOUND OUTPUT	
PRESENT TIME SETUP / SET UP TIMER	
PRESENT TIME SETUP	
SET UP TIMER	
SCREENSAVER (For preventing image retention)	
Setup of SCREENSAVER Time	
Reduces screen image retention	
EXTENDED LIFE SETTINGS	. 39

Reduces power consumption	
Customizing the Input labels	
Selecting the On-Screen Menu Language	
DISPLAY ORIENTATION	
SET UP for MULTI DISPLAY	
How to setup MULTI DISPLAY	
ID Remote Control Function	
MULTI PIP SETUP	
SET UP for PORTRAIT	
How to setup PORTRAIT	48
SET UP for Input Signals	50
COMPONENT / RGB IN SELECT	
YUV / RGB IN SELECT	
SIGNAL menu	
3D Y/C FILTER	
COLOR SYSTEM / Panasonic AUTO	
3:2 PULLDOWN	
XGA MODE	
REFRESH RATE	
NOISE REDUCTION	
SYNC	
SDI THROUGH	54
Input signal display	
Options Adjustments	55
Weekly Command Timer	58
Shipping condition	59
Troubleshooting	60
List of Aspect Modes	61
Applicable input signals	
Command list of Weekly Command Timer	64
Specifications	65
Panasonic Professional Flat Panel Display	
Limited Warranty	66
LIMITED WARRANTY STATEMENT	67
Customer Service	68

# **FCC STATEMENT**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced technician for help.

This device complies with Part15 of the FCC Rules. Operation is subject to the following two conditions:(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

### **FCC CAUTION:**

To assure continued compliance, follow the attached installation instructions and use only shielded interface cables when connecting to computer or peripheral devices. Any changes or modifications not expressly approved by Panasonic Corp. of North America could void the user's authority to operate this device.

FCC Declaration of Conformity

Model No. TH-103PF12U

Responsible Party: Panasonic Corporation of North America

One Panasonic Way 1F-10, Secaucus, NJ 07094

Contact Source: Panasonic Professional Display Company

Panasonic Plasma Concierge 1-800-973-4390

### **CANADIAN NOTICE:**

This Class B digital apparatus complies with Canadian ICES-003.

### Note:

Do not allow a still picture to be displayed for an extended period, as this can cause a permanent image retention to remain on the Plasma Display.

Examples of still pictures include logos, video games, computer images, teletext and images displayed in 4:3 mode.

### **Trademark Credits**

- VGA is a trademark of International Business Machines Corporation.
- Macintosh is a registered trademark of Apple Inc. USA.
- SVGA, XGA, SXGA and UXGA are registered trademarks of the Video Electronics Standard Association.
   Even if no special notation has been made of company or product trademarks, these trademarks have been fully respected.
- HDMI, the HDMI logo and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLC.

# **Safety Precautions**

# M

### CAUTION

This Plasma Display is for use only with the following optional accessories. Use with any other type of optional accessories may cause instability which could result in the possibility of injury.

(All of the following accessories are manufactured by Panasonic Corporation.)

Pedestal	TY-ST103PF9
Wall-hanging bracket (vertical)	TY-WK103PV9
Ceiling-haging bracket	TY-CE103PS10
BNC Component Video Terminal Board	TY-42TM6A
BNC Composite Video Terminal Board	TY-42TM6B
BNC Dual Video Terminal Board	TY-FB9BD
• RCA Component Video Terminal Board	TY-42TM6Z
• RCA Composite Video Terminal Board	TY-42TM6V
RGB Active Through Terminal Board	TY-42TM6G
PC Input Terminal Board	TY-42TM6P
Composite / Component Video Terminal Board	TY-42TM6Y
BNC SDI Terminal Board	TY-FB7SD
HD-SDI Terminal Board	TY-FB9HD
HD-SDI Terminal Board with audio	TY-FB10HD
Dual Link HD-SDI Terminal Board	TY-FB11DHD
HDMI Terminal Board	TY-FB8HM
Dual HDMI Terminal Board	TY-FB10HMD
DVI-D Terminal Board	TY-FB11DD
Ir Through Terminal Board	TY-FB9RT
Wireless Presentation Board	TY-FB10WPU
AV Terminal Box	TY-TB10AV
LAN Control Board	TY-FB12LC

Always be sure to ask a qualified technician to carry out set-up.

Small parts can present choking hazard if accidentally swallowed. Keep small parts away from young children. Discard unneeded small parts and other objects, including packaging materials and plastic bags/sheets to prevent them from being played with by young children, creating the potential risk of suffocation.

### ■ When using the Plasma Display

Do not bring your hands, face or objects close to the ventilation holes of the Plasma Display.

 Top of the Plasma Display is usually very hot due to the high temperature of exhaust air being released through the ventilation holes. Burns or personal injuries can happen if any body parts are brought too close. Placing any object near the top of the display could also result in heat damages to the object as well as to the Display if its ventilation holes are blocked.

### Be sure to disconnect all cables before moving the Plasma Display.

 Moving the Display with its cables attached might damage the cables which, in turn, can cause fire or electric shock.

# Disconnect the power plug from the wall outlet as a safety precaution before carrying out any cleaning.

· Electric shocks can result if this is not done.

# Clean the power cable regularly to prevent it from becoming dusty.

 Built-up dust on the power cord plug can increase humidity which might damage the insulation and cause fire. Unplug the cord from the wall outlet and clean it with a dry cloth.

This Plasma Display radiates infrared rays, therefore it may affect other infrared communication equipment. Install your infrared sensor in a place away from direct or reflected light from your Plasma Display.

### Note:

Do not allow a still picture to be displayed for an extended period, as this can cause a permanent image retention to remain on the Plasma Display.

Examples of still pictures include logos, video games, computer images, teletext and images displayed in 4:3 mode.

### WARNING

### ■ Setup

Do not place the Plasma Display on sloped or unstable surfaces.

• The Plasma Display may fall off or tip over.

### Do not place any objects on top of the Plasma Display.

 If water spills onto the Plasma Display or foreign objects get inside it, a short-circuit may occur which could result in fire or electric shock. If any foreign objects get inside the Plasma Display, please consult an Authorized Service Center.

### Do not cover the ventilation holes.

 Doing so may cause the Plasma Display to overheat, which can cause fire or damage to the Plasma Display.

### Transport only in upright position!

 Transporting the unit with its display panel facing upright or downward may cause damage to the internal circuitry.

If using the pedestal (optional accessory), leave a space of 12.0" (30 cm) or more at the top, left and right, and 8.0" (20 cm) or more at the rear, and also keep the space between the bottom of the display and the floor surface. If using some other setting-up method, follow the manual of it. (If there is no specific indication of installation dimension in the installation manual, leave a space of 12.0" (30 cm) or more at the top, bottom, left and right, and 8.0" (20 cm) or more at the rear.)

An apparatus with CLASS I construction shall be connected to a mains socket outlet with a protective earthing connection.

### ■ AC Power Supply Cord

The Plasma Display is designed to operate on 200-240 V AC, 50/60 Hz.

• Contact an electrician for the 200 V power supply engineering.

Ensure that the mains plug is easily accessible.

Do not use any power supply cord other than that provided with this unit.

Doing so may cause fire or electric shocks.

### Securely insert the power cord plug as far as it will go.

 If the plug is not fully inserted, heat may be generated which could cause fire. If the plug is damaged or the wall socket plate is loose, they should not be used.

Do not handle the power cord plug with wet hands.

Doing so may cause electric shocks.

Do not do anything that might damage the power cable. When disconnecting the power cable, hold the plug, not the cable.

 Do not make any modifications, place heavy objects on, place near hot objects, heat, bend, twist or forcefully pull the power cable. Doing so may cause damage to the power cable which can cause fire or electric shock. If damage to the cable is suspected, have it repaired at an Authorized Service Center.

If the Plasma Display will not be used for a long period of time, unplug the power cord from the wall outlet.

### ■ If problems occur during use

If a problem occurs (such as no picture or no sound), or if smoke or an abnormal odor is detected from the Plasma Display, unplug the power cord immediately.

 Continuous use of the Display under these conditions might cause fire or permanent damage to the unit. Have the Display evaluated at an Authorized Service Center. Services to the Display by any unauthorized personnel are strongly discouraged due to its high voltage dangerous nature.

If water or foreign objects get inside the Plasma Display, if the Plasma Display is dropped, or if the cabinet becomes damaged, disconnect the power cord plug immediately.

 A short may occur, which could cause fire. Contact an Authorized Service Center for any repairs that need to be made.

# **Maintenance**

The front of the display panel has been specially treated. Wipe the panel surface gently using only a cleaning cloth or a soft, lint-free cloth.

- If the surface is particularly dirty, wipe with a soft, lint-free cloth which has been soaked in pure water or water in which neutral detergent has been diluted 100 times, and then wipe it evenly with a dry cloth of the same type until the surface is dry.
- Do not scratch or hit the surface of the panel with fingernails or other hard objects, otherwise the surface may become damaged. Furthermore, avoid contact with volatile substances such as insect sprays, solvents and thinner, otherwise the quality of the surface may be adversely affected.

### If the cabinet becomes dirty, wipe it with a soft, dry cloth.

- If the cabinet is particularly dirty, soak the cloth in water to which a small amount of neutral detergent has been added and then wring the cloth dry. Use this cloth to wipe the cabinet, and then wipe it dry with a dry cloth.
- Do not allow any detergent to come into direct contact with the surface of the Plasma Display. If water droplets get inside the unit, operating problems may result.
- Avoid contact with volatile substances such as insect sprays, solvents and thinner, otherwise the quality of the cabinet surface may be adversely affected or the coating may peel off. Furthermore, do not leave it for long periods in contact with articles made from rubber or PVC.

# **Accessories**


# **Accessories Supplied**

# Check that you have the Accessories and items shown Operating Instruction book Panasonic AC cord Allen wrench Eyebolt cap × 3 Batteries for the Remote Control Transmitter (AA Size × 2) AC cord Allen wrench Eyebolt cap × 3 Blind sheet × 1


# **Remote Control Batteries**

### Requires two AA batteries.

1. Pull and hold the hook, then open the battery cover.

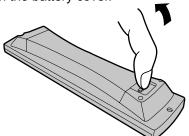

- 2. Insert batteries note correct polarity ( + and -).
  - "AA" size
- 3. Replace the cover.

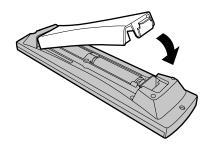

### **Helpful Hint:**

For frequent remote control users, replace old batteries with Alkaline batteries for longer life.

## riangle Precaution on battery use

Incorrect installation can cause battery leakage and corrosion that will damage the remote control transmitter. Disposal of batteries should be in an environment-friendly manner.


### Observe the following precautions:

- 1. Batteries should always be replaced as a pair. Always use new batteries when replacing the old set.
- 2. Do not combine a used battery with a new one.
- 3. Do not mix battery types (example: "Zinc Carbon" with "Alkaline").
- 4. Do not attempt to charge, short-circuit, disassemble, heat or burn used batteries.
- 5. Battery replacement is necessary when the remote control acts sporadically or stops operating the Plasma Display.
- 6. Do not burn or breakup batteries.

Batteries must not be exposed to excessive heat such as sunshine, fire or the like.


# **Connections**

# **AUDIO OUT Terminals connection**

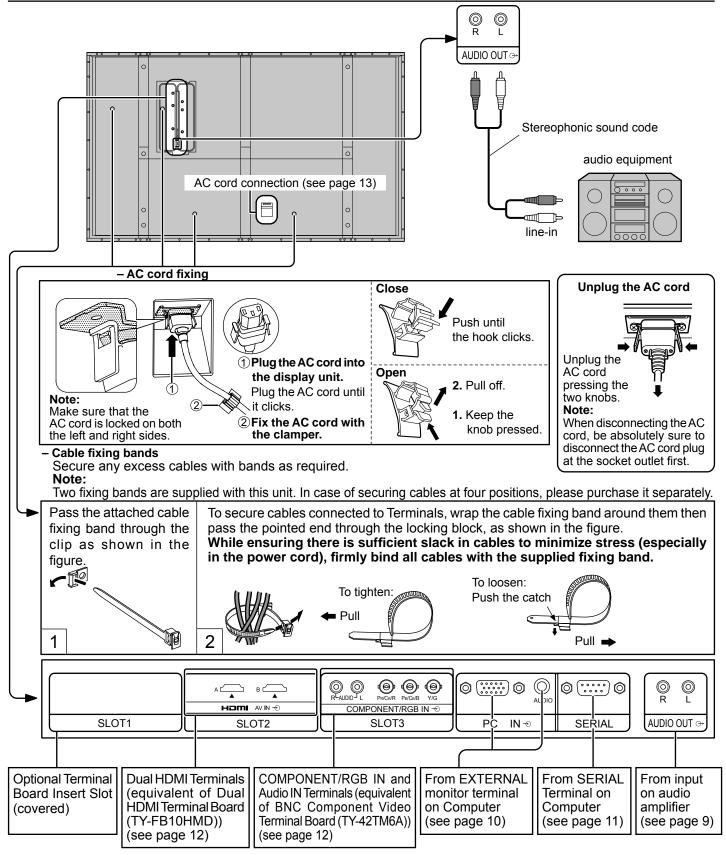

Note: At factory shipment, Terminal boards are installed in SLOT 2 and SLOT 3.


# **PC Input Terminals connection**

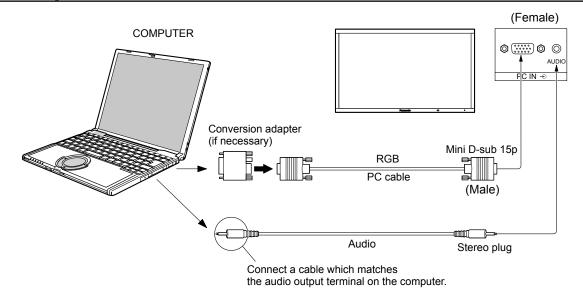

### Notes:

- With regard to the typical PC input signals that are described in the applicable input signals list (see page 62), adjustment values such as for the standard picture positions and sizes have already been stored in this unit. You can add up to eight PC input signal types that are not included in the list.
- Computer signals which can be input are those with a horizontal scanning frequency of 15 to 110 kHz and vertical scanning frequency of 48 to 120 Hz. (However, the image will not be displayed properly if the signals exceed 1,200 lines.)
- The display resolution is a maximum of 1,440 × 1,080 dots when the aspect mode is set to "4:3", and 1,920 × 1,080 dots when the aspect mode is set to "FULL". If the display resolution exceeds these maximums, it may not be possible to show fine detail with sufficient clarity.
- The PC input terminals are DDC2B-compatible. If the computer being connected is not DDC2B-compatible, you will need to make setting changes to the computer at the time of connection.
- · Some PC models cannot be connected to the set.
- There is no need to use an adapter for computers with DOS/V compatible Mini D-sub 15P terminal.
- The computer shown in the illustration is for example purposes only.
- Additional equipment and cables shown are not supplied with this set.
- Do not set the horizontal and vertical scanning frequencies for PC signals which are above or below the specified frequency range.
- Component Input is possible with the pin 1, 2, 3 of the Mini D-sub 15P Connector.
- Change the "COMPONENT/RGB-IN SELECT" setting in the "SET UP" menu to "COMPONENT" (when COMPONENT signal connection) or "RGB" (when RGB signal connection). (see page 50)

### Signal Names for Mini D-sub 15P Connector

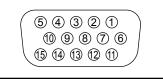



Pin Layout for PC Input Terminal

Pin No.	Signal Name	Pin No.	Signal Name	Pin No.	Signal Name
1	$R (P_R/C_R)$	6	GND (Ground)	11)	NC (not connected)
2	G (Y)	7	GND (Ground)	12	SDA
3	B (P <sub>B</sub> /C <sub>B</sub> )	8	GND (Ground)	13	HD/SYNC
4	NC (not connected)	9	+5 V DC	14)	VD
5	GND (Ground)	10	GND (Ground)	15	SCL

# **SERIAL Terminals connection**

The SERIAL terminal is used when the Plasma Display is controlled by a computer.

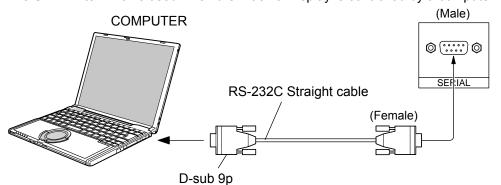

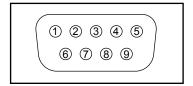

Pin layout for SERIAL Terminal

### Notes:

- Use the RS-232C straight cable to connect the computer to the Plasma Display.
- The computer shown is for example purposes only.
- Additional equipment and cables shown are not supplied with this set.

The SERIAL terminal conforms to the RS-232C interface specification, so that the Plasma Display can be controlled by a computer which is connected to this terminal.


The computer will require software which allows the sending and receiving of control data which satisfies the conditions given below. Use a computer application such as programming language software. Refer to the documentation for the computer application for details.

### **Communication parameters**

Signal level	RS-232C compliant
Synchronization method	Asynchronous
Baud rate	9600 bps
Parity	None
Character length	8 bits
Stop bit	1 bit
Flow control	-

### Basic format for control data

The transmission of control data from the computer starts with a STX signal, followed by the command, the parameters, and lastly an ETX signal in that order. If there are no parameters, then the parameter signal does not need to be sent.

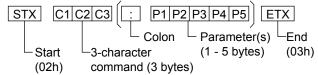

### Notes:

- If multiple commands are transmitted, be sure to wait for the response for the first command to come from this unit before sending the next command.
- If an incorrect command is sent by mistake, this unit will send an "ER401" command back to the computer.
- SL1A, SL1B, SL2A and SL2B of Command IMS are available only when a dual input terminal board is attached.

### Signal names for D-sub 9P connector

Pin No.	Details
2	RXD
3	TXD
(5)	GND
4.6	Non use
⑦ ⑧	(Shorted in this set)
1.9	NC

These signal names are those of computer specifications.

### Command

Command	Parameter	Control details
PON	None	Power ON
POF	None	Power OFF
AVL	**	Volume 00 - 63
AMT	0	Audio MUTE OFF
	1	Audio MUTE ON
IMS	None SL1 SL2 SL3 PC1 SL1A SL1B SL2A SL2B	Input select (toggle) Slot1 input Slot2 input Slot3 input PC input Slot1 input (INPUT1A) Slot1 input (INPUT1B) Slot2 input (INPUT2A) Slot2 input (INPUT2B)
DAM	None ZOOM FULL JUST NORM SELF SJST SNOM SFUL ZOM2	Screen mode select (toggle) ZOOM (For Video/SD/PC signal) FULL JUST (For Video/SD signal) 4:3 (For Video/SD/PC signal) Panasonic Auto (For Video signal) JUST (For HD signal) 4:3 (For HD signal) H-FILL (For HD signal) ZOOM (For HD signal)


With the power off, this display responds to PON command only.

# **HDMI** connection

This unit has terminal boards equivalent to Dual HDMI Terminal Board (TY-FB10HMD) and BNC Component Video Terminal Board (TY-42TM6A) as standard equipment.


### [Pin assignments and signal names]

Pin No.	Signal	Pin No.	Signal
1	T.M.D.S Data2+	11)	T.M.D.S Clock Shield
2	T.M.D.S Data2 Shield	12	T.M.D.S Clock-
3	T.M.D.S Data2-	13	CEC
4	T.M.D.S Data1+	_	Reserved
(5)	T.M.D.S Data1 Shield	4	(N.C. on device)
6	T.M.D.S Data1-	15)	SCL
7	T.M.D.S Data0+	16	SDA
8	T.M.D.S Data0 Shield	17	DDC/CEC Ground
9	T.M.D.S Data0-	18	+5V Power
10	T.M.D.S Clock+	19	Hot Plug Detect

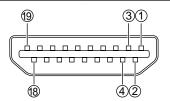



### Note:


Additional equipment and HDMI cables shown are not supplied with this set.

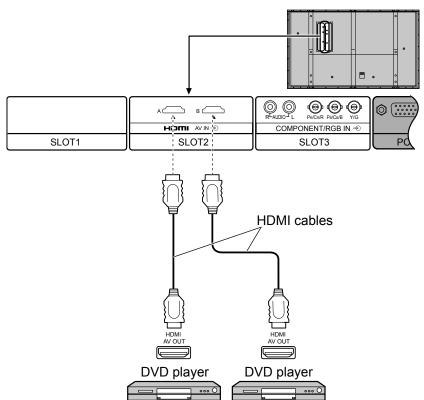

# **COMPONENT / RGB connection**

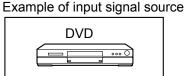

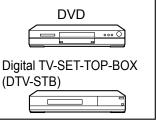

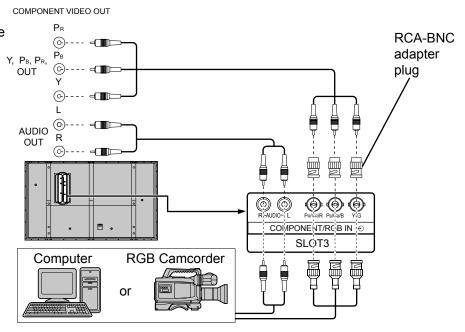


### Notes:

- Change the "COMPONENT/RGB-IN SELECT" setting in the "SET UP" menu to "COMPONENT" (when COMPONENT signal connection) or "RGB" (when RGB signal connection). (see page 50)
- · Additional equipment, cables and adapter plugs shown are not supplied with this set.
- SYNC ON G signal is needed. (see page 54)

# Power ON / OFF

### Connecting the AC cord plug to the Plasma Display.

Fix the AC cord plug securely to the Plasma Display with the clamper. (see page 9)

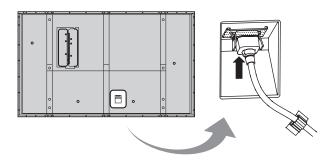


### Connecting the plug to the Wall Outlet.

### Note:

When disconnecting the AC cord, be absolutely sure to disconnect the AC cord plug at the socket outlet first.

Press the Power switch on the Plasma Display to turn the set on: Power-On.

Power Indicator: Green

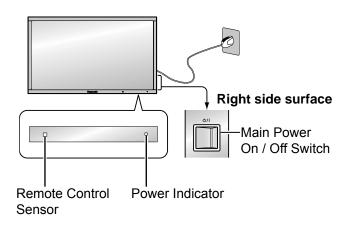



Press the off button on the remote control to turn the Plasma Display off.

Power Indicator: Red (standby)



Press the (b) button on the remote control to turn the Plasma Display on.

Power Indicator: Green

Turn the power to the Plasma Display off by pressing the  $\circlearrowleft/I$  switch on the unit, when the Plasma Display is on or in standby mode.

### Note:


During operation of the power management function, the power indicator turns orange in the power off state.




### When first switching on the unit

Following screen will be displayed when the unit is turned on for the first time. Select the items with the remote control. Unit buttons are invalid.


### **OSD LANGUAGE**

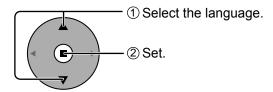

### PRESENT TIME SETUP

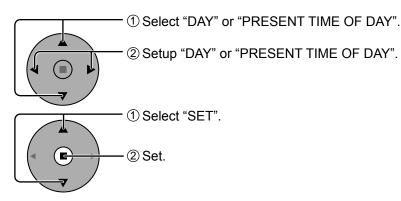

### **DISPLAY ORIENTATION**

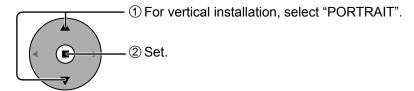











### Notes:

- Once the items are set, the screens won't be displayed when switching on the unit next time.
- After the setting, the items can be changed in the following menus.
   OSD LANGUAGE (see page 43)
   PRESENT TIME SETUP (see page 36)

From the second time on, the below screen is displayed for a while (setting condition is an example).



DISPLAY ORIENTATION (see page 44)

# Selecting the input signal

Select the input signals to be connected by installing the optional Terminal Boards.

Press to select the input signal to be played back from the equipment which has been connected to the Plasma Display.

Input signals will change as follows:

ightarrow INPUT1ightarrow INPUT2Bightarrow INPUT3ightarrow PC ightarrow

SLOT2 is for dual input so that you can select INPUT2A or INPUT2B for INPUT2.

INPUT2A: HDMI signal terminal in SLOT2 INPUT2B: HDMI signal terminal in SLOT2

Press the INPUT "1", "2", "3" or "PC" input mode selection button to select the INPUT mode.

Press 2 to switch the input mode between INPUT2A and INPUT2B.





### Notes:

- Selecting is also possible by pressing the INPUT button on the unit.
- Input terminal will not be selected if the terminal board is not installed into the SLOT.
- Select to match the signals from the source connected to the component/RGB input terminals. (see page 50)
- In 2 screen display, the same input mode cannot be selected for the main picture and sub picture.
- Image retention (image lag) may occur on the plasma display panel when a still picture is kept on the panel for an extended period. The function that darkens the screen slightly is activated to prevent image retention (see page 60), but this function is not the perfect solution to image retention.

# **Basic Controls**

### **Main Unit**

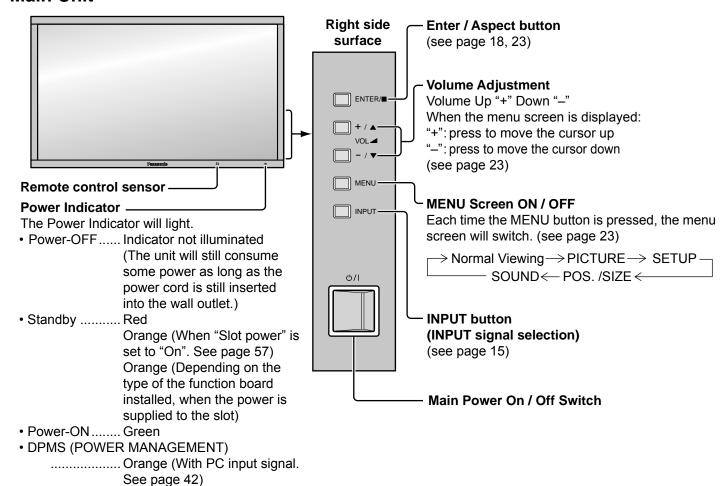

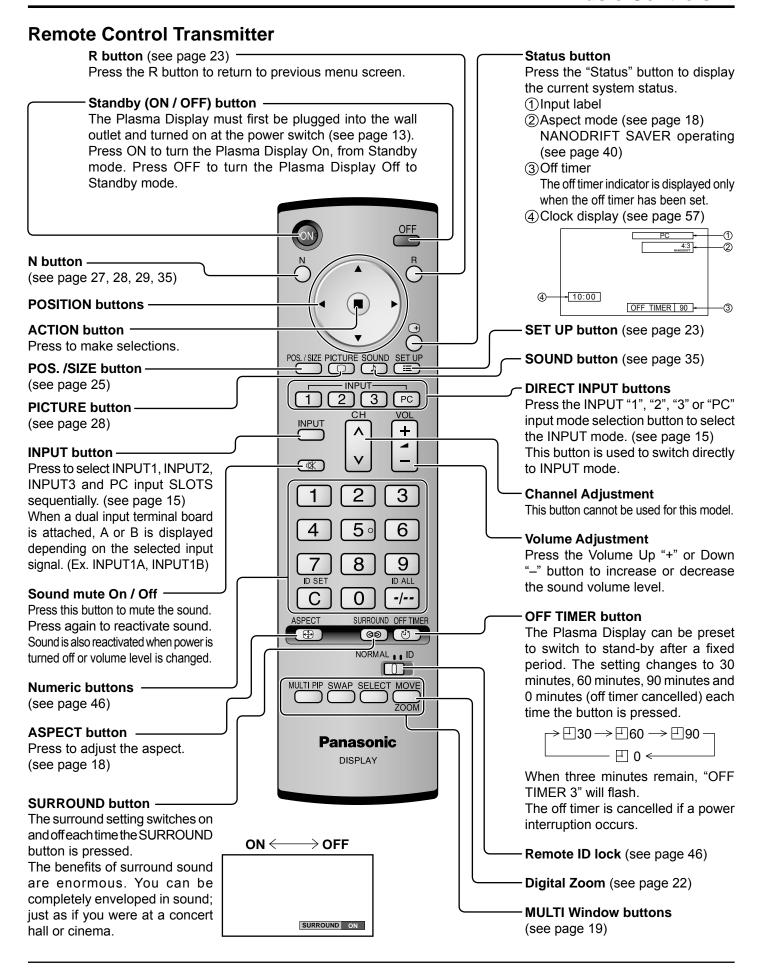

# ASPECT Controls

The Plasma Display will allow you to enjoy viewing the picture at its maximum size, including wide screen cinema format picture.

### Note:

Be aware that if you put the display in a public place for commercial purposes or a public showing and then use the aspect mode select function to shrink or expand the picture, you may be violating the copyright under copyright law. It is prohibited to show or alter the copyrighted materials of other people for commercial purposes without the prior permission of the copyright holder.




Press repeatedly to move through the aspect options:

For details about the aspect mode, please see "List of Aspect Modes" (page 61).

For VIDEO (S VIDEO) signal input:

[from the unit]

Right side surface

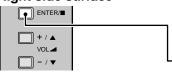


 $\rightarrow$  4:3  $\rightarrow$  ZOOM  $\rightarrow$  Panasonic AUTO - $-\mathsf{JUST} \longleftarrow \mathsf{FULL} \leftarrow$ 

When selecting an input slot that attaches BNC Dual Video Terminal Board (TY-FB9BD), Panasonic AUTO cannot be selected.

The aspect mode changes each time the ENTER button is pressed.

For PC signal input:

For SD signal input (525 (480) / 60i • 60p, 625 (575) / 50i • 50p):

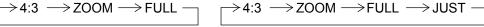

For HD signal input [1125 (1080) / 60i • 50i • 60p • 50p • 24p • 25p • 30p • 24sF, 1250 (1080) / 50i, 750 (720) / 60p • 50p]:

ightarrow 4:3 ightarrow H-FILL ightarrow ZOOM ightarrow FULL ightarrow JUST -

[During MULTI PIP Operations]

• Picture and Picture, Picture in Picture :


 Others : Aspect switching is not possible.

### Notes:


- Panasonic AUTO can be selected only during Video signal input.
- The aspect mode is memorized separately for each input terminal.
- Do not allow the picture to be displayed in 4:3 mode for an extended period, as this can cause a permanent image retention to remain on the Plasma Display Panel.


### **Panasonic AUTO**

The display will automatically become enlarged (depending on the picture source), allowing you to view the picture at its maximum size.

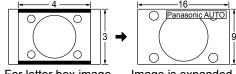

For letter box image

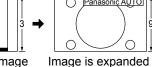

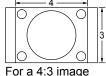

Changes in accordance with the Panasonic AUTO mode setting (see page 52).

### Notes:

· Panasonic AUTO mode is designed to automatically adjust the aspect ratio to handle a mix of 16:9 and 4:3 program material. Certain 4:3 program material, such as stock market data screens. may occasionally cause the image size to change unexpectedly. When viewing such programs, it is recommended that the ASPECT be set to 4:3.

(1)(2)(3)(0)

1 2 3

4 5 6

8 9 0 -/--

• If adjusting the PICTURE V-POS/V-SIZE in Panasonic AUTO with FULL mode, the adjustment is not memorized. When exiting the mode, the screen will return to a former adjustment.

### All Aspect mode

Set "All Aspect" to "On" in Options menu to enable the extended aspect mode (page 57). When All Aspect mode, the aspect mode of pictures is switched as follows. For details about the aspect mode, please see "List of Aspect Modes" (page 61).

For VIDEO (S VIDEO) signal input:

$$ightarrow$$
 4:3  $ightarrow$  Zoom2  $ightarrow$  Zoom3  $ightarrow$  Panasonic Auto  $ightarrow$ 16:9  $ightarrow$  14:9  $ightarrow$  Just  $-$ 

### Notes:

- When selecting an input slot that attaches BNC Dual Video Terminal Board (TY-FB9BD), Panasonic Auto cannot be selected.
- In All Aspect mode, "Panasonic AUTO" is displayed as "Panasonic Auto".

For PC signal input:

$$\rightarrow$$
 4:3  $\rightarrow$  Zoom  $\rightarrow$  16:9  $\neg$ 

For SD signal input (525 (480) / 60i • 60p, 625 (575) / 50i • 50p):

$$\rightarrow$$
 4:3  $\rightarrow$  Zoom1  $\rightarrow$  Zoom2  $\rightarrow$  Zoom3  $\rightarrow$  16:9 $\rightarrow$ 14:9  $\rightarrow$  Just  $\rightarrow$ 

For HD signal input [1125 (1080) / 60i • 50i • 60p • 50p • 24p • 25p • 30p • 24sF, 1250 (1080) / 50i, 750 (720) / 60p • 50p]:  $\Rightarrow$  4:3 Full  $\Rightarrow$  Zoom1  $\Rightarrow$  Zoom2  $\Rightarrow$  Zoom3  $\Rightarrow$  16:9  $\Rightarrow$  14:9  $\Rightarrow$  Just1  $\Rightarrow$  Just2  $\Rightarrow$  4:3 (1)  $\Rightarrow$  4:3 (2)  $\Rightarrow$ 

# **MULTI PIP**

You can display two pictures, such as a video image and computer image, in a two-screen display. (Use the remote control for this operation. It cannot be performed with the buttons on the main unit.)

### **MULTI PIP SETUP**

Set the functions and mode for two-screen display in "MULTI PIP SETUP" in the SET UP menu. (see page 47)



### **Selecting the Display Mode**


MULTI PIP

Each time this button is pressed, the screen changes.


### Note:

The screen changes in the same way when "DISPLAY MODE" in "MULTI PIP SETUP" is changed. (see page 47)

### **During PIP:**

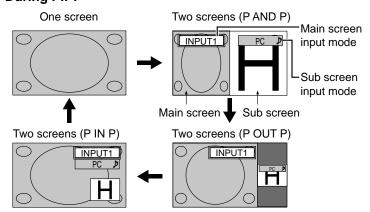

### **During Advanced PIP:**

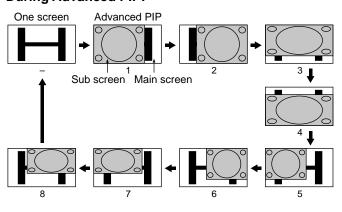


Note:

ASPECT and MOVE button operations are not available during advanced PIP.

### **During Blend PIP (Composite Screen Function):**

A composite picture is displayed with the sub screen positioned over the main screen. For example, text data such as a computer image can be displayed as a caption over a movie or still image.

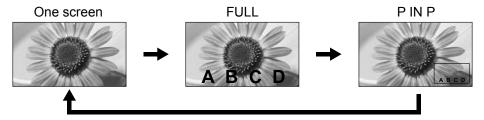

### **Transparent Function and Insertion Function**

Two functions are available for blend PIP: the transparent function and the insertion function. Set these functions with "TRANSPARENCY" or "INSERT" in "MULTI PIP SETUP". (see page 47)

### **Transparent Function**

Data such as text are displayed transparently on the background image.



### **Insertion Function**

The sub screen image is divided into transparent and non-transparent areas, and only the non-transparent areas are inserted and displayed on the background image.




### Note:

Be aware that if you put the display in a public place for commercial purposes or a public showing and then use the blend PIP function to make a composite screen display, you may be violating the copyright under copyright law. It is prohibited to show or alter the copyrighted materials of other people for commercial purposes without the prior permission of the copyright holder.

### **Swapping Screens**


SWAP Each time this button is pressed, the main screen and sub screen are swapped.

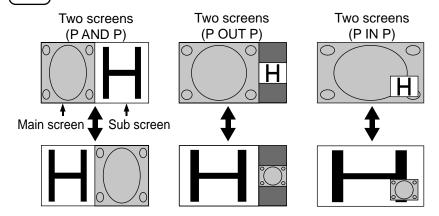

### **Selecting the Target Screen for Operations**

SELECT

Each time this button is pressed, the target screen for operations changes.

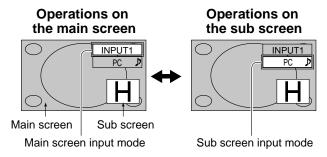

### Notes:

- When operations are performed for the sub screen, the sub screen audio is played.
- If no operations are performed, the operation target returns to the main screen after about 5 seconds\*.


  You can also return to main screen operations by operating the remote control buttons (except for \_\_\_\_\_).

  \* It takes more than 5 seconds if a slot mounted with a Dual HDMI Terminal Board (TY-FB10HMD) is selected.

### Selecting the Sub Screen Position (During P IN P Display)



Each time this button is pressed, the sub screen position changes.

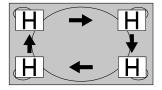

### Note:

Some sub screen positions may hide the display of the menu screen.


### Notes:


- Do not use the two-screen display for a long time. It will cause a permanent image retention to remain on the screen.
- If "INPUT lock" in Options menu is set to other than "Off", MULTI PIP function isn't available.
- Sound output is from the picture which is selected in AUDIO OUT (PIP) (see page 35).
- In two-screen display, the same input mode cannot be selected for the main picture and sub picture.
- The main picture and sub picture are processed by different circuits, resulting in a slight difference in the clarity of the pictures. There may also be a difference in the picture quality of the sub picture depending on the type of signals displayed on the main picture and depending on the two-screen display mode.
- · Due to the small dimensions of the sub pictures, these sub pictures cannot be shown in detail.
- · Computer screen picture is displayed in a simplified format, and it may not be possible to discern details on them satisfactorily.
- Following combinations of two analog signals cannot be displayed simultaneously;
   Component Component, Component PC (RGB), PC (RGB) Component, PC (RGB) PC (RGB)
- 2k1k signals that are received with the Dual Link HD-SDI Terminal Board (TY-FB11DHD) cannot be displayed in two-screen display.


# **Digital Zoom**

This displays an enlargement of the designated part of the displayed image.


1 Display the operation guide.

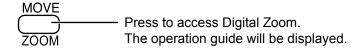

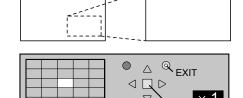


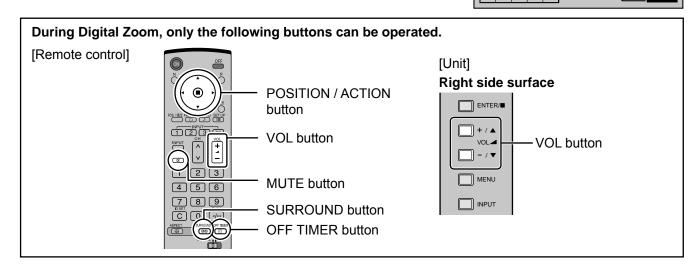

2 Select the area of the image to be enlarged.

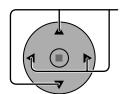

Press on the enlargement location to select.

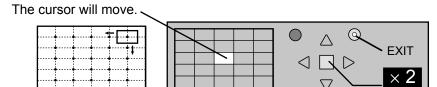


3 Select the magnification required for the enlarged display.



Each time this is pressed, the magnification factor changes.
 This is shown in the image being displayed.



4 Return to normal display (quit Digital Zoom).

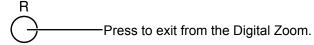

### Notes:

- When power goes OFF (including "Off Timer" operation), Digital Zoom terminates.
- The Digital Zoom function cannot be selected while in the following operation state: "Multi-viewer" (P AND P, P OUT P, P IN P) operation. (see page 19)
   When MULTI DISPLAY SETUP is ON (see page 45).

When PORTRAIT SETUP is ON (see page 48).

When SCREENSAVER (except for NEGATIVE IMAGE) is running. (see page 37)


• While Digital Zoom is in operation, "Adjusting POS. /SIZE" cannot be used.

# **On-Screen Menu Displays**


### Unit **Remote Control** Press several times. 1 Display the menu screen. Press to select. Each time the MENU button is pressed, the (Example: PICTURE menu) menu screen will switch. ightarrow Normal Viewing ightarrow PICTURE $\,$ -- SOUND $\leftarrow$ POS. /SIZE $\leftarrow$ SET UP $\leftarrow$ 2 Select the item. Select. PICTURE 2 Press. NORMALIZE NOR PICTURE MENU ( STANDARD ) PICTURE BRIGHTNESS COLOR (Example: TINT SHARPNESS PICTURE menu) COLOR TEMP COLOR MANAGEMENT ADVANCED SETTINGS MEMORY SAVE MEMORY LOAD MEMORY EDIT 3 Set. Set. 2 Press. VOL. 4 Exit the menu. MENU Press several times. Press. R Press ( ) to return to the previous menu.

### Overview


Note: Menu that cannot be adjusted is grayout. Adjustable menu changes depending on signal, input and menu setting.

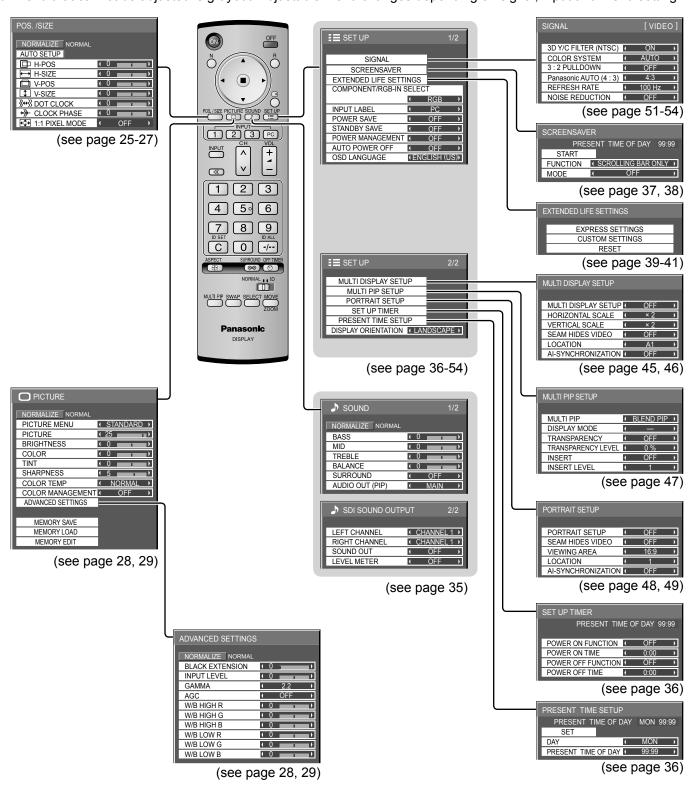


# Adjusting POS. /SIZE

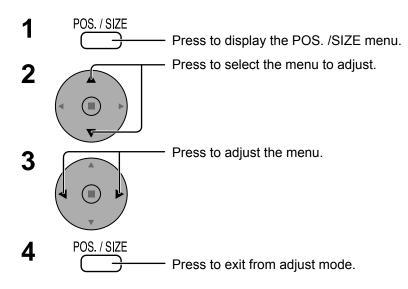

During "VIDEO (S VIDEO)", "Digital", "SDI" and "HDMI" input signal.

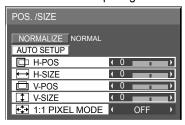

During "COMPONENT", "RGB" and "PC" input signal.

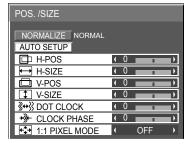

### Notes:

- Unadjustable items are grayed out.
  - Adjustable items differ depending on the input signal and the display mode.
- Adjustment details are memorized separately for different input signal formats.
   (Adjustments for component signals are memorized for 525 (480) / 60i · 60p, 625 (575) / 50i · 50p, 1125 (1080) / 60i · 50i · 60p · 50p · 24p · 25p · 30p · 24sF, 1250 (1080) / 50i, 750 (720) / 60p · 50p each, and RGB/PC/Digital signals are memorized for each frequency.)
- If a "Cue" or "Rew" signal from a VCR or DVD player is received, the picture position will shift up or down. This picture position movement cannot be controlled by the POS. /SIZE function.
- If adjusting the PICTURE V-POS / V-SIZE in Panasonic AUTO with FULL mode, the adjustment is not memorized. When exiting the mode, the screen will return to a former adjustment.

### AUTO SETUP

H-POS/V-POS, H-SIZE/V-SIZE, DOT CLOCK and CLOCK PHASE are automatically adjusted when the RGB or PC signal is received.

This setting is enabled under the following conditions:

- · This setting only support single screen display. Two screen display or multiple display are not supported.
- When "COMPONENT/RGB-IN SELECT" or "YUV/RGB-IN SELECT" in the "SET UP" menu (see page 52) is set to "RGB", this setting is enabled.
- When the signal is not PC format, this setting is enabled only if "OVER SCAN" (see page 26) is "OFF" or "1:1 PIXEL MODE" (see page 27) is "ON", and H-SIZE/V-SIZE is not automatically adjusted.

This setting will be invalid and will not work under the following conditions:

- Aspect is set to "JUST"
- "Display size" in the Options menu (see page 56) is set to "On"

### **Using Remote Control**

### Note:

To operate this function, please purchase remote controller sold separately. Object model: N2QAYB000432



When SETUP on the remote control is pressed, "AUTO SETUP" will be executed.

When AUTO SETUP does not work, "INVALID" is displayed.

### Auto mode

When the "Auto Setup" is set to "Auto" in the Options menu (see page 57), automatic position adjustment starts:


- When the display power is turned ON.
- · When the input signal is switched.

### Notes:


- If the dot clock frequency is 162 MHz or higher, DOT CLOCK and CLOCK PHASE cannot be made.
- When digital RGB signal input, DOT CLOCK and CLOCK PHASE cannot be made.
- AUTO SETUP may not work when a cropped or dark image is input. In such case, switch to a bright image with borders and other objects are clearly shown, and then try auto setup again.
- Depending on the signal, out of alignment may occur after AUTO SETUP. Carry out fine tuning for the position/size as required.
- If AUTO SETUP cannot set properly for vertical frequency 60Hz XGA signal (1024×768@60Hz, 1280×768@60Hz, and 1366×768@60Hz), pre-selecting the individual signal in "XGA MODE" (see page 52) may results in correct AUTO SETUP.
- AUTO SETUP does not work well when a signal such as additional information is superimposed out of valid image period or intervals between synchronizing and image signals are short, or for image signal with tri-level synchronizing signal added.
- If AUTO SETUP cannot adjust correctly, select "NORMALIZE" once and press ACTION (■) then adjust POS. /SIZE manually.

**V-POS** 


**H-POS** Adjust the horizontal position.

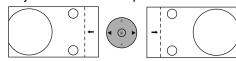


Adjust the vertical position.

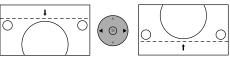

**H-SIZE** Adjust the horizontal size.

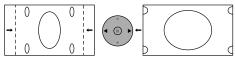

**V-SIZE** Adjust the vertical size.

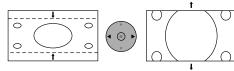

DOT (During "COMPONENT", "RGB" and "PC" input signal)

**CLOCK** Periodic striped pattern interference (noise) may occur when a striped pattern is displayed. If this happens, adjust so that any such noise is minimized.


**CLOCK** (During "COMPONENT", "RGB" and "PC" input signal)

**PHASE** Eliminate the flickering and distortion.

OVER Turn image over scan ON/OFF.

SCAN Configurable signals are as follows:

525i, 525p, 625i, 625p, 750/60p, 750/50p (Component Video, RGB, DVI, SDI, HDMI)

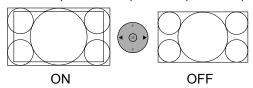


### Notes:

- When "OFF" is set, "H-SIZE" and "V-SIZE" cannot be adjusted.
- When the "Display size" is set to "On" in the Options menu, this setting will be invalid. (see page 56)

1:1 PIXEL MODE Adjusts the display size when 1125i, 1125p or 1250i signal is input.


- Select ON when you would like to replay 1920 × 1080 input signal.
- Applicable input signal; 1125 (1080) / 50i · 60i · 24sF · 24p · 25p · 30p · 50p · 60p, 1250 (1080) / 50i
- · Select OFF when flickering is shown around the image.
- H-SIZE and V-SIZE cannot be adjusted when ON is selected.

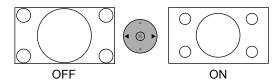

(2k1k)

1:1 PIXEL MODE When the input signal is a 2k1k signal (2048×1080 / 24p, 2048×1080 / 24sF), the display size is adjusted as follows.

(For 2k1k signals)

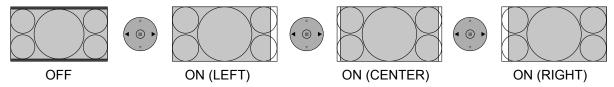

### Note:

2k1k signals can only be received when the Dual Link HD-SDI Terminal Board (TY-FB11DHD) is installed.


# Helpful Hint ( \( \sum / \) NORMALIZE Normalization)

While the POS. /SIZE display is active, if either the N button on the remote control is pressed at any time or the ACTION (**I**) button is pressed during "NORMALIZE", then all adjustment values are returned to the factory settings.

# **PICTURE Adjustments**

- PICTURE

  Press to display the PICTURE menu.
- Select to adjust each item.

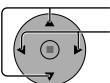


Press to select the menu to adjust.

Select the desired level by looking at the picture behind the menu.

### Note:

Menu that cannot be adjusted is grayout. Adjustable menu changes depending on signal, input and menu setting.

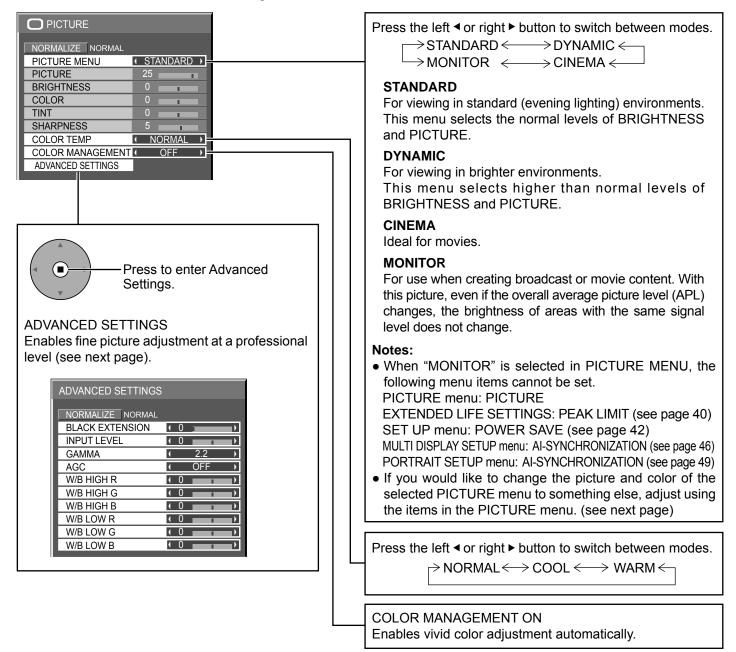

# Helpful Hint ( NORMALIZE Normalization)

While the "PICTURE" menu is displayed, if either the N button on the remote control is pressed at any time or the ACTION (**■**) button is pressed during "NORMALIZE", then all adjustment values are returned to the factory settings.

Item	Effect		Adjustments	
PICTURE	Less	More	Adjusts the proper picture contrast.	
BRIGHTNESS	<b>■</b> Darker	Brighter	Adjusts for easier viewing of dark pictures such as night scenes and black hair.	
COLOR	Less	More	Adjusts color saturation.	
TINT	Reddish	Greenish	Adjusts for natural flesh tones.	
SHARPNESS	Less	More	Adjusts picture sharpness.	

### Notes:

- "COLOR" and "TINT" settings cannot be adjusted for "RGB/PC" input signal.
- You can change the level of each function (PICTURE, BRIGHTNESS, COLOR, TINT, SHARPNESS) for each PICTURE MENU.
- The setting details for STANDARD, DYNAMIC and CINEMA respectively are memorized separately for each input terminal.
- The "TINT" setting can be adjusted for NTSC signal only during "VIDEO (S VIDEO)" input signal.
- In PICTURE, there is not a noticeable change even when contrast is increased with a bright picture or reduced with a dark picture.

# **ADVANCED SETTINGS**

Item	Eff	ect	Details	
BLACK EXTENSION	Less	More	Adjusts the dark shades of the image in gradation.	
INPUT LEVEL	Less	More	Adjustment of parts which are extremely bright and hard to see.	
GAMMA	Down	Up	S+ CURVE*1  S CURVE  2.0  2.2  2.5  2.6*2  *1 When "PICTURE MENU" is set to "DYNAMIC", GAMMA "S+ CURVE" can selected. When 2k1k signals are received with the Dual Link HD-SDI Termin Board (TY-FB11DHD), "S+ CURVE" cannot be selected.  *2 When 2k1k signals are received with the Dual Link HD-SDI Terminal Board (TFB11DHD), GAMMA "2.6" can also be selected.	
AGC	OFF	ON	Increases the brightness of dark signal automatically.	
W/B HIGH R	Less	More	Adjusts the white balance for light red areas.	
W/B HIGH G	Less	More	Adjusts the white balance for light green areas.	
W/B HIGH B	Less	More	Adjusts the white balance for light blue areas.	
W/B LOW R	Less	More	Adjusts the white balance for dark red areas.	
W/B LOW G	Less	More	Adjusts the white balance for dark green areas.	
W/B LOW B	Less	More	Adjusts the white balance for dark blue areas.	

### Notes:

- · Carry out "W/B" adjustment as follows.
  - 1. Adjust the white balance of the bright sections using the "W/B HIGH R", "W/B HIGH G" and "W/B HIGH B" settings.
  - 2. Adjust the white balance of the dark sections using the "W/B LOW R", "W/B LOW G" and "W/B LOW B" settings.
  - 3. Repeat steps 1 and 2 to adjust.

Steps 1 and 2 affect each other's settings, so repeat each step in turn to make the adjustment.


- The adjustment values are memorized separately for each input terminal.
- The adjustment range values should be used as an adjustment reference.

# Helpful Hint ( NORMALIZE Normalization)

On the remote control unit, while the "ADVANCED SETTINGS" menu is displayed, if either the N button is pressed at any time or the ACTION (**I**) button is pressed during "NORMALIZE", then all adjustment values are returned to the factory settings.

# **Picture Profiles**

Up to 8 combinations of picture adjustment values (in the PICTURE menu and ADVANCED SETTINGS) can be stored in the display memory as profiles and applied as needed, for a convenient way to enjoy your preferred picture settings.

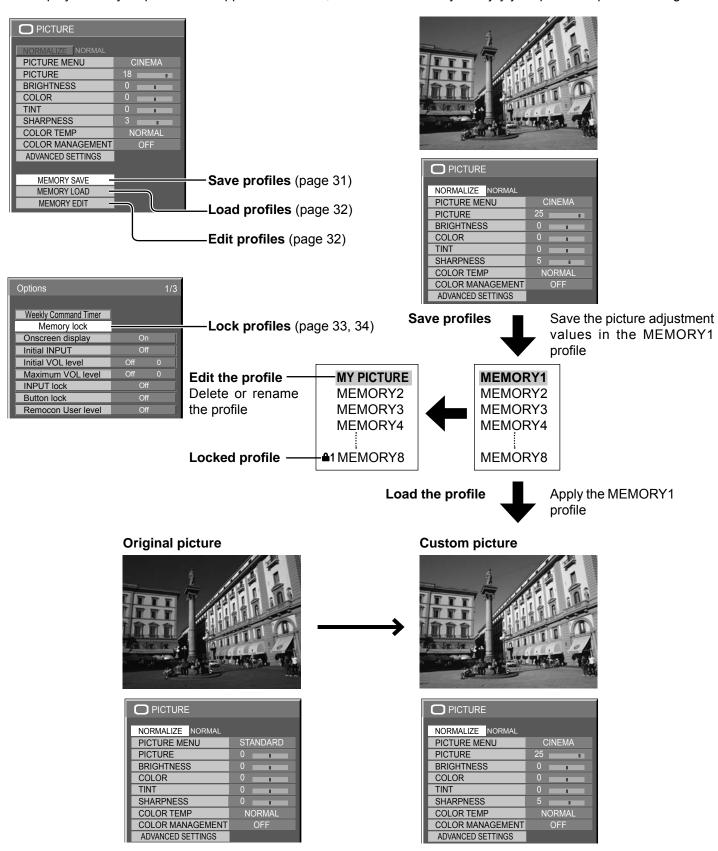

# Saving profiles

Follow these steps to save picture adjustment values as profiles.

### Note:

When the settings are locked in "EXTENDED LIFE SETTINGS", profiles cannot be saved.

- Specify the picture quality in the PICTURE menu and ADVANCED SETTINGS. (see page 28, 29)
- In the PICTURE menu, select "MEMORY SAVE".



Select a profile name for saving the picture adjustment values.



Profiles are labeled with these icons to indicate their locked status. (see page 33)

- [ ], [ ]:Settings can be saved in this profile.
- [\(\textit{1}\)], [\(\textit{2}\)]:Settings cannot be saved in this profile.
- ▲ Select "OK".




Enter a name for the profile.

### [Entering profile names]

Profile names can be up to 16 characters.

To enter text, select characters in the on-screen keyboard.

Edit the default profile name in the text box as desired.

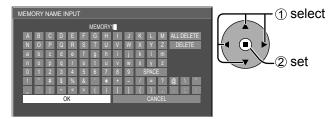

**Example: Specifying "MY PICTURE"** 




All text is deleted.

To delete individual characters, select "DELETE".

2 Select "M".


Opposit this process to optor the pov

Repeat this process to enter the next character.

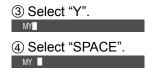

When you finished entering the profile name, select "OK".

To cancel saving the profile, select "CANCEL".

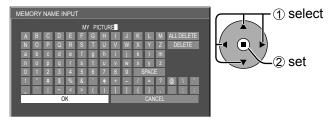

# **Loading profiles**

Load profiles and apply the picture adjustment values to the display as follows.

### Notes:

- Loaded profiles are stored in memory according to the selected input interface (SLOT1, 2, 3 or PC IN). (see page 15)
- When the settings are locked in "EXTENDED LIFE SETTINGS", profiles cannot be loaded.
- In the PICTURE menu, select "MEMORY LOAD".



Select the profile to load.



Profiles are labeled with these icons to indicate their locked status. (see page 33)

# **Editing profiles**

Delete or rename profiles as follows.

### <Deleting profiles>

### Note:

Locked profiles cannot be deleted.

1 In the PICTURE menu, select "MEMORY EDIT".



Select "MEMORY DELETE".




Select the profile to delete.

To delete all profiles, select "ALL DELETE".



Select "OK".

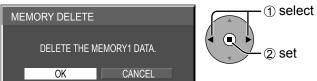

### <Renaming profiles>

### Note

Locked profiles cannot be renamed.

In the PICTURE menu, select "MEMORY EDIT".




Select "MEMORY NAME CHANGE".



Select the profile to rename.



Enter a name for the profile.
Entering profile names → page 31

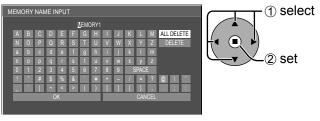

When you finished entering the profile name, select "OK". To cancel renaming the profile, select "CANCEL".



# **Locking profiles**

You can lock saved profiles to restrict operations when the profiles are loaded. You can also set passwords.


### Notes:


- When the lock is set in "EXTENDED LIFE SETTINGS", profile cannot be locked.
- If profile is locked, the menu operations of "EXTENDED LIFE SETTINGS" are restricted. (see page 40)

### <Locking and unlocking profiles>

Display the menu screen. (see page 55)

**9** Select "Memory lock".

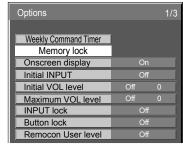

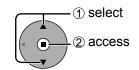

Select "Ok".


Input password

\* \* \* \*

Ok Cancel

2 set

5 Select the profile and specify the desired lock setting.

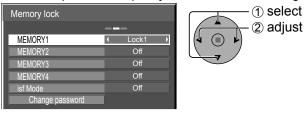

**6** Exit the menu.



**3** Enter a 4-digit password.

The default password is "0123". 1 2 3



Once a profile is locked, the following operations are restricted when the profile is loaded.

Setting	_	Editing Picture Adjustment Values via the Menu (PICTURE menu, ADVANCED SETTINGS)	Saving Picture Adjustment Values (MEMORY SAVE)
Off (unlocked)	Allowed	Allowed	Allowed
Lock1	Prohibited	Prohibited (picture adjustment values are shown)	Allowed
Lock2	Prohibited	Prohibited (picture adjustment values are hidden)	Prohibited

### Loading locked profiles...


In the PICTURE menu, profiles are labeled with these icons to indicate their locked status.



Picture adjustment values in the PICTURE menu cannot be changed, except for the "PICTURE MENU". Once you edit the "PICTURE MENU" setting, you can edit "PICTURE", "BRIGHTNESS", and other picture adjustment values.


### ≜1 Lock1

Picture adjustment values are shown.

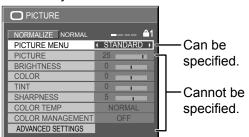

### <sup>≜2</sup> Lock2


Picture adjustment values are hidden.

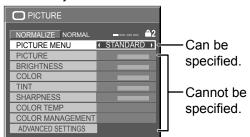


### **Picture Profiles**

### <Changing passwords>

- 1 Follow steps 1–4 in the previous procedure, <a href="Locking and unlocking profiles">Locking and unlocking profiles</a>.
- Select "Change password".

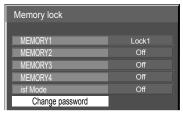

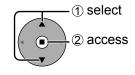


**2** Enter a new 4-digit password.



4



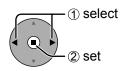

**5** Exit the menu.




### Note:


Make a note of the new password to remember it.

### <isf Mode Setting>

Switches to "PICTURE MENU" mode display.

- follow steps 1–4 in the previous procedure, <a href="Locking and unlocking profiles">Locking and unlocking profiles</a>.
- Select "isf Mode".

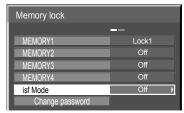

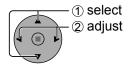


3 Specify "On" or "Off".

**1** Exit the menu.



Specifying "On" for isf Mode changes the "PICTURE MENU" mode display as follows.

### "PICTURE MENU" mode display

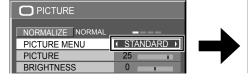

isf Mode: Off	isf Mode: On
STANDARD	STANDARD
DYNAMIC	isf Mode DAY
CINEMA	isf Mode NIGHT
MONITOR	MONITOR


# **SOUND Adjustment**

SOUND
Press to display the SOUND menu.

2 Select to adjust each item.

- Press to select the menu to adjust.

Select the desired level by listening to the sound.

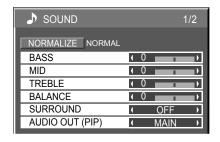

SOUND Press to exit from adjust mode.


Item	Details
BASS	Adjusts low pitch sounds.
MID	Adjusts normal sounds.
TREBLE	Adjusts pitch sound.
BALANCE	Adjusts left and right volumes.
SURROUND	Select ON or OFF.
AUDIO OUT (PIP)	MAIN: Selects main picture sound.  SUB: Selects PIP frame sound.  Musical note ₃ is displayed on right side of the audio output screen label.

# Helpful Hint ( NORMALIZE Normalization)

While the "SOUND" menu is displayed, if either the N button on the remote control is pressed at any time or the ACTION (**■**) button is pressed during "NORMALIZE", then all adjustment values are returned to the factory settings.

# **SDI SOUND OUTPUT**

This menu is displayed when HD-SDI Terminal Board with audio (TY-FB10HD) or Dual Link HD-SDI Terminal Board (TY-FB11DHD) is installed to the unit.

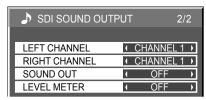

### Notes:

- This menu is available only when selecting a slot that HD-SDI Terminal Board with audio (TY-FB10HD) or Dual Link HD-SDI Terminal Board (TY-FB11DHD) is installed.
- This menu is unavailable when 2-picture display mode is active.

Item	Details
LEFT CHANNEL	CHANNEL 1 to CHANNEL 16 Selects left audio channel.
RIGHT CHANNEL	CHANNEL 1 to CHANNEL 16 Selects right audio channel.
SOUND OUT	ON ←→ OFF ON: Enables audio output. OFF: Disables audio output.
LEVEL METER	OFF ←→ 1-8CH ←→ 9-16CH Sets audio channels to show in the audio level meter. 8 channels are displayed in the audio level meter; 4 channels each on both right and left sides of the display. OFF: Hides the audio level meter. 1-8CH: Displays the audio level meter (1-8ch) 9-16CH: Displays the audio level meter (9-16ch)

# PRESENT TIME SETUP / SET UP TIMER

The timer can switch the Plasma Display ON or OFF.


Before attempting Timer Set, confirm the PRESENT TIME OF DAY and adjust if necessary. Then set POWER ON TIME / POWER OFF TIME.

1




Press to display the SET UP menu.

2

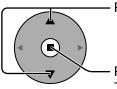

Press to select SET UP TIMER or PRESENT TIME SETUP.

Press to display the SET UP TIMER screen or PRESENT TIME SETUP screen.

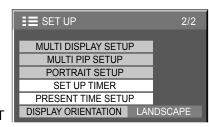

PRESENT TIME OF DAY MON 99:99

PRESENT TIME SETUP


PRESENT TIME OF DAY

SET

DAY

# PRESENT TIME SETUP

1

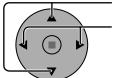

Press to select DAY or PRESENT TIME OF DAY.


Press to set up DAY or PRESENT TIME OF DAY.

- ▶ button: Forward
- button: Back

### Notes:

- Pressing "◄" or "▶" button once changes PRESENT TIME OF DAY 1 minute.
- Pressing "◄" or "►" button continuously changes PRESENT TIME OF DAY by 15 minutes.

2

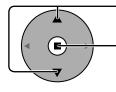

Press to select SET.

Press to store PRESENT TIME SETUP.

### Notes:

- SET cannot be selected unless PRESENT TIME OF DAY is set.
- Unless setting the present time other than "99:99", DAY setting is invalid.
- The settings of "DAY" and "PRESENT TIME OF DAY" are reset when leaving the display turned off for about 7 days for the following reasons:


Pressing 0/1 switch of the unit to turn off the display.

Disconnecting the AC cord.

Interruption of power supply.

# **SET UP TIMER**

1

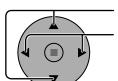

Press to select POWER ON TIME / POWER OFF TIME.

Press to set up POWER ON TIME / POWER OFF TIME.


► button: Forward **◆** button: Back

### Notes

- Pressing "◄" or "▶" button once changes POWER ON TIME
   / POWER OFF TIME 1 minute.
- Pressing "◄" or "▶" button continuously changes POWER ON TIME / POWER OFF TIME by 15 minutes.

Press to select POWER ON FUNCTION / POWER OFF FUNCTION.


2

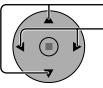

Press to select ON.


### Note:

Timer function will not work unless "PRESENT TIME OF DAY" is set.

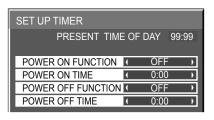

# **SCREENSAVER** (For preventing image retention)


Do not display a still picture, especially in 4:3 mode, for any length of time. If the display must remain on, a SCREENSAVER should be used.

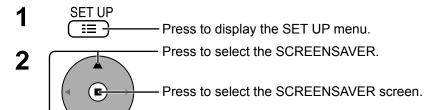

# SIGNAL SCREENSAVER EXTENDED LIFE SETTINGS COMPONENT/RGB-IN SELECT RGB INPUT LABEL PC POWER SAVE OFF STANDBY SAVE OFF POWER MANAGEMENT AUTO POWER OFF OSD LANGUAGE ENGLISH (US)

# SCREENSAVER PRESENT TIME OF DAY 99:99 START FUNCTION SCROLLING BAR ONLY MODE OFF

### **2** FUNCTION selection

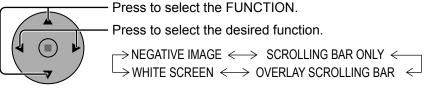

NEGATIVE IMAGE : A negative image will be displayed on the screen.


SCROLLING BAR ONLY: A white bar will scroll from left to right. The image won't be displayed. OVERLAY SCROLLING BAR: The brightness of the image will be decreased and a white bar


will scroll on it.

WHITE SCREEN : The whole screen will be white.


Note: OVERLAY SCROLLING BAR is not effective during two screen display.

### **▲** MODE selection

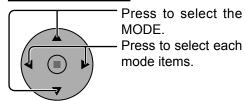

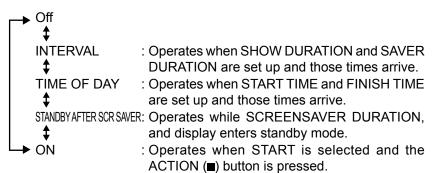

### 5 START setting

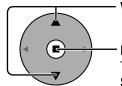

When the MODE is set to ON, press to select START.


Press to start SCREENSAVER.

The menu screen will disappear and the SCREENSAVER will be activated. To stop the SCREENSAVER under ON, press the R button or any buttons on the main unit.

**Note:** When the display is turned off, the SCREENSAVER will be deactivated.

# **Setup of SCREENSAVER Time**

After selecting TIME OF DAY, INTERVAL or STANDBY AFTER SCR SAVER, the relevant Time Setup will become available for selection and the Operating Time may be set. (Time cannot be set when "MODE" is "ON" or "OFF".)

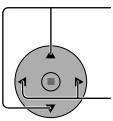

Press to select START TIME / FINISH TIME (when TIME OF DAY is selected).

Press to select SHOW DURATION / SAVER DURATION (when INTERVAL is selected).


Press to select SCREENSAVER DURATION (when STANDBY AFTER SCR SAVER is selected).


Press to setup.
▶ button: Forward
◀ button: Back


### Notes:

- Pressing "◄" or "▶" button once changes the Time 1 minute.
   [However, switching occurs every 15 minutes when Periodic Time is selected.]
- Pressing "◀" or "▶" button continuously changes the Time by 15 minutes.
- "SCREENSAVER DURATION" of the "STANDBY AFTER SCR SAVER" can be set from 0:00 to 23:59. When this is set to "0:00", "STANDBY AFTER SCR SAVER" will not be activated.

Note: Timer function will not work unless "PRESENT TIME OF DAY" is set.

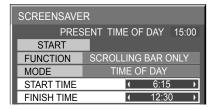

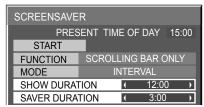


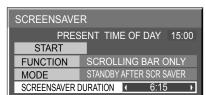

# Reduces screen image retention

# **EXTENDED LIFE SETTINGS**

The following settings are setup to reduce image retention:

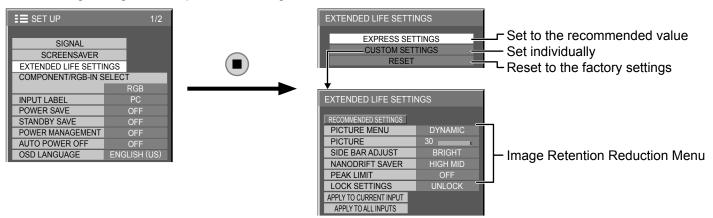

### **Image Retention Reduction Menu**

"EXTENDED LIFE SETTINGS" enables you to set the following 5 menus (Image Retention Reduction Menu) as recommended values or set them individually.

# PICTURE MENU PICTURE

"PICTURE MENU" and "PICTURE" are same as "PICTURE" menu items (see page 28). The settings of this menu will be reflected to the "PICTURE" menu.

### SIDE BAR ADJUST

Do not display a picture in 4:3 mode for an extended period, as this can cause an image retention to remain on the side bars on either side of the display field.

To reduce the risk of such an image retention, illuminate the side bars.


This function may be applicable to the non-picture area.

OFF: Darken both ends.

DARK: Make it dark gray.

MID: Make it gray.

BRIGHT: Make it light gray.

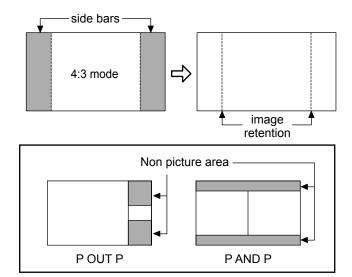

### Notes:

- To reduce the occurrence of image retention, set the SIDE BAR ADJUST to BRIGHT.
- The side bar may flash (alternate black/white) depending on the picture being shown on the screen. Using Cinema mode will reduce such flashing.

### Reduces screen image retention

### NANODRIFT SAVER

Moves the display position of the screen slightly to reduce image retention on the display panel.

**OFF:** NANODRIFT SAVER does not operate.

**MIN-MAX:** NANODRIFT SAVER operates. The display position of the screen moves at set time intervals. You can set the screen movement range. Some of the screen may appear to be missing as a result of this operation. If you change the value, a mask is displayed in the range where the picture is missing as a result of position

movement.

404

If this is set to other than "OFF", "NANODRIFT" is displayed below the aspect mode display.



### Note:

This function does not work in the following cases. When "MULTI DISPLAY SETUP" is set to "ON" When "PORTRAIT SETUP" is set to "ON" When in digital zoom mode

### **PEAK LIMIT**

**ON:** Suppresses image contrast (peak brightness).

Note: When a still picture is viewed for an extended time, the screen may become slightly darker. (see page 60)

### **EXTENDED LIFE SETTINGS when profile is locked**

If profile is locked with "Memory lock" of the Options menu, the operations of this settings menu are restricted as shown below. "Locking profiles" → page 33

EXPRESS SETTINGS: Cannot be set.

CUSTOM SETTINGS: "PICTURE MENU", "PICTURE" and "LOCK SETTINGS" cannot be set.

RESET: "PICTURE MENU" and "PICTURE" are not reset.

### **EXPRESS SETTINGS**

Set the "Image Retention Reduction" menu to the recommended settings.

All menus will be locked.

PICTURE MENU: STANDARD


PICTURE: 10

SIDE BAR ADJUST: BRIGHT NANODRIFT SAVER: HIGH MID

PEAK LIMIT: ON

Select "EXPRESS SETTINGS".



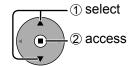


EXTENDED LIFE SETTINGS

APPLY TO CURRENT INPUT


YES NO

Select "YES".

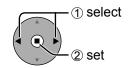

Select the input to apply the settings.



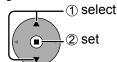


### **CUSTOM SETTINGS**


Set the individual "Image Retention Reduction" menu.


Select "CUSTOM SETTINGS".



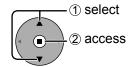


**2** To set each menu to the recommended setting: Select "RECOMMENDED SETTINGS".

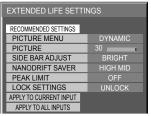


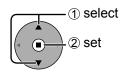


Each menu will be set as same as the "EXPRESS SETTINGS".


3 Set each menu.

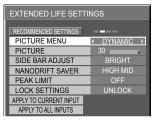

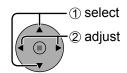

4 To lock each menu setting: Set the "LOCK SETTINGS" to "LOCK".

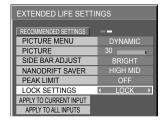

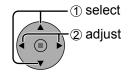



When a menu is locked, it is grayed out and cannot be set. "PICTURE MENU" and "PICTURE" will no longer be able to set in the "PICTURE" menu, and they are labeled with icon to indicate their locked status. Also, "NORMALIZE", "MEMORY SAVE" and "MEMORY

LOAD" are not available.




**5** Select the input to apply the settings.

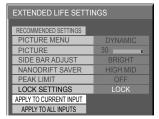

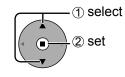

6 Select "YES".



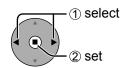


### RESET

Reset the "Image Retention Reduction" menu to the factory settings. Each menu will be unlocked.


Select "RESET".



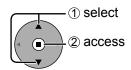


3 Select "YES".



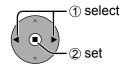

Select the input to reset the settings.



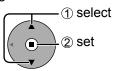

# Reduces power consumption

• POWER SAVE:

When this function is turned ON, luminous level of the Plasma Display is suppressed, so power consumption is reduced.

STANDBY SAVE:

When this function is turned ON, power consumption of the microcomputer is reduced during power supply standby (see page 13, 16, 17), so standby power of the set is reduced.

POWER MANAGEMENT:

When this function is set to ON, it operates under the following conditions to turn the power on or off automatically.

When no pictures (HD/VD sync signals) are detected for 30 or so seconds during PC signal input:

→ Power is turned off (standby); the power indicator lights up orange.

When pictures (HD/VD sync signals) are subsequently detected:

→ Power is turned on; the power indicator lights up green.

### Notes:

- This function operates only during PC signal input.
- This function is invalid during input from PC Input Terminal Board (TY-42TM6P).
- This function is effective when "SYNC" is set to "AUTO", "COMPONENT / RGB-IN SELECT" is set to "RGB" and during normal viewing (one picture screen).


• AUTO POWER OFF:


Equipment power supply is turned OFF when there is no signal.


When this is set to "ON", the power supply of the unit goes Off 10 minutes after the input signals stop.


### Note:

This function is effective during normal viewing (one picture screen) for input signals except PC IN terminal.

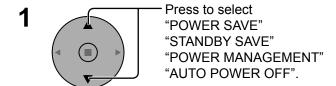

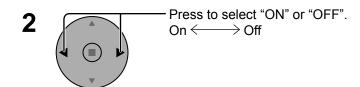

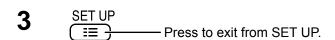

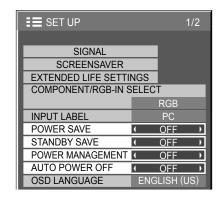

# **Customizing the Input labels**

This function can change the label of the Input signal to be displayed.

Select the input signal which you would like to change its label before customizing the Input labels. (see page 15, 17)

**≣** SET UP


INPUT LABEL

**POWER SAVE** 

STANDBY SAVE

POWER MANAGEMENT AUTO POWER OFF OSD LANGUAGE

SCREENSAVER
EXTENDED LIFE SETTINGS
COMPONENT/RGB-IN SELECT

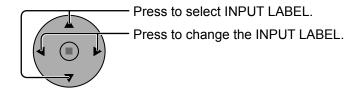

### Note:

While selecting a Input signal through Optional Terminal Board connected to Slot 1, Slot 2 and Slot 3, the Input label will depend on each Optional Terminal Board.


### INPUT LABELS for SLOT 1, 2, 3 and PC IN:

[SLOT1] INPUT1 / DVD1 / DVD2 / DVD3 / Blu-ray1 / Blu-ray2 / Blu-ray3 / CATV / VCR / STB [SLOT2] INPUT2 / DVD1 / DVD2 / DVD3 / Blu-ray1 / Blu-ray2 / Blu-ray3 / CATV / VCR / STB [SLOT3] INPUT3/ DVD1 / DVD2 / DVD3 / Blu-ray1 / Blu-ray2 / Blu-ray3 / CATV / VCR / STB [PC IN] PC / DVD1 / DVD2 / DVD3 / Blu-ray1 / Blu-ray2 / Blu-ray3 / CATV / VCR / STB

When BNC Dual Video Terminal Board (TY-FB9BD) is used, an "A" or "B" is added at the end of each input label, depending on the input selected (see below).


Addition sign	"A"	"B"
Selected Input	Composite	S VIDEO

# Selecting the On-Screen Menu Language

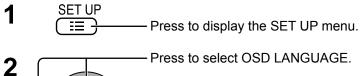


Press to select your preferred language.


### ■ Selectable languages

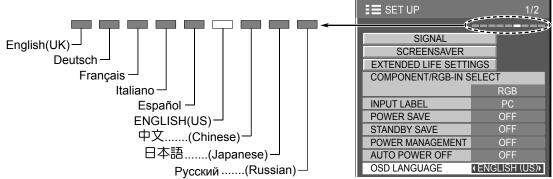

# **DISPLAY ORIENTATION**

Sets the fan control and the display style of on-screen menu for vertical installation.

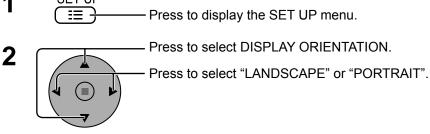

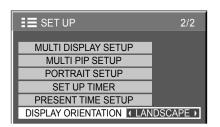





**LANDSCAPE** 



**PORTRAIT** 

Fan control for horizontal installation.

Fan control for vertical installation. On-screen menu will be rotated 90 degrees counterclockwise to be suitable for the setting.

### Notes:

- If the display is installed vertically, the power switch should be located at the bottom.
- Fan control will be switched when turning on the unit next time.

# **SET UP for MULTI DISPLAY**

By lining up Plasma Displays in groups, for example, as illustrated below, an enlarged picture may be displayed across all screens. For this mode of operation, each plasma display has to be set up with a Display number to determine its location.

(Example)

group of 4  $(2 \times 2)$  group of 9  $(3 \times 3)$ 



group of 16 (4 × 4)



group of 25 (5 × 5)




# **How to setup MULTI DISPLAY**

1 SET UP Press to display the SET UP menu.


Press to select the MULTI DISPLAY SETUP.

Press to display the "MULTI DISPLAY SETUP" menu.

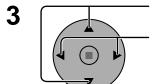

Press to select the MULTI DISPLAY SETUP.

Press to select "ON" or "OFF".

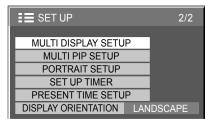

MULTI DISPLAY SETUP			
MULTI DISPLAY SETUP	1	OFF	
HORIZONTAL SCALE	•	× 2	j
VERTICAL SCALE	1	× 2	<u> </u>
SEAM HIDES VIDEO	1	OFF	<u> </u>
LOCATION	1	A1	<u> </u>
AI-SYNCHRONIZATION	(	OFF	-

Item		Details				
MULTI DISPLAY SETUP	Select "ON" or "OFF".  Note: If you set MULTI DISPLAY SETUP to ON, PORTRAIT SETUP will be unavailable.					
HORIZONTAL SCALE	Select "× 1", "× 2", "× 3", "× 4", "× 5".					
VERTICAL SCALE	Select "× 1", "× 2", "× 3", "× 4	4", "× 5".				
SEAM HIDES VIDEO	Select "ON" or "OFF".  To hide joints between displays.  To show joints between displays.  Suitable for moving image display.  ON  OFF					
LOCATION	Select the required arranger  Display Number locatio (Examples) (2 × 1) (2 × 3)  A1 A2 A1 A2 B1 B2 C1 C2	ns for each arrange		(5 × 4)  A1 A2 A3  B1 B2 B3  C1 C2 C3  D1 D2 D3  E1 E2 E3	A4 A5 B4 B5 C4 C5 D4 D5 E4 E5	

### **SET UP for MULTI DISPLAY**

Item	Details			
	Select "OFF" or "ON".	The brightness depends on each display's setting.	Equalize the brightness of all the displays.	
			A	
AI-SYNCRONIZATION		A	A	
		OFF	ON	
	Note:  If you set AI-SYNCRONIZATION to ON, the following menus will be unavailable and these settings will be fixed to the initial values.  PICTURE menu: COLOR, TINT, INPUT LEVEL (ADVANCED SETTINGS)			

SET UP

Press to exit from adjust mode.

## **ID Remote Control Function**

You can set the remote control ID when you want to use this remote control on one of several different displays.

- Switch NORMAL ... ID to NORMAL ... ID on the right side.
- 2 Press the C button on the remote control.
- **3** Press one of 1 9, 0 for the tens digit setting.
- 4 Press one of 1 9, 0 for the units digit setting.

### Notes:

- The numbers in 2, 3 and 4 should be set up quickly.
- Adjustable ID number range is 0 99.
- If a number button is pressed more than two times, the first two numbers become the ID number for the remote control.



### ID remote control button operation

The operation is the same as normal remote control except for the  $\binom{c}{v}$  button.

### **ID Cancellation**

Press  $\frac{10 \text{ ALL}}{-1/-}$  button on remote control. (This has the same effect as pressing the  $\frac{10 \text{ SET}}{\text{C}}$ ,  $\frac{1}{\text{O}}$ ,  $\frac{1}{\text{O}}$  buttons at the same time.)

### Notes:

- Set the Remote ID "On" to operate the ID remote control.

  If remote ID is set to "On", you can use the remote control without identical ID number during option menu display. (see page 56)
- The ID remote control cannot be used when ID select is set to anything other than 0, and the remote control ID is not the same as the ID select number (see page 56).

# **MULTI PIP SETUP**


Set the two-screen display function that is activated when  $\stackrel{\text{MULTI PIP}}{\frown}$  is pressed.

Press to display the SET UP menu.

Press to select the MULTI PIP SETUP.

2 Press to display the "MULTI PIP SETUP" menu.

Press to select the menu to adjust. 3 Press to adjust the menu.

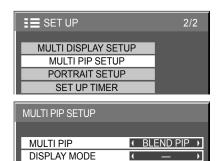


TRANSPARENCY TRANSPARENCY LEVEL

INSERT INSERT LEVEL

### **MULTI PIP**

### **DISPLAY MODE**

Set the two-screen function.

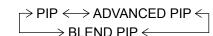

The display mode can be changed separately for each function that was set in "MULTI PIP SETUP". For "PIP":  $\rightarrow$  — (One screen)  $\Longleftrightarrow$  P AND P  $\Longleftrightarrow$  P OUT P  $\Longleftrightarrow$  P IN P  $\hookleftarrow$ 

For "ADVANCED PIP":  $\rightarrow$  — (One screen)  $\longleftrightarrow$  1 to 8  $\leftarrow$ For "BLEND PIP":  $\rightarrow$  — (One screen)  $\leftrightarrow$  FULL  $\leftrightarrow$  P IN P  $\leftarrow$ 

**Note:** The display mode changes in the same way when  $\bigcap^{\text{MULTI PIP}}$  is pressed.

### Transparent Display of the Sub Screen (During BLEND PIP)

- 1) Select "ON" in "TRANSPARENCY".
- ② Set the transparency level for the sub screen in "TRANSPARENCY LEVEL". (0 to 100 %) Setting example Transparent image (sub screen)










100 %: Fully transparent

Note: "INSERT" cannot be set when "TRANSPARENCY" is "ON".

### Sub Screen Insertion (During BLEND PIP)

- 1) Select "ON" in "INSERT".
- 2 Set the "INSERT LEVEL". (1 to 10 %)

Set the brightness level threshold for discriminating between the transparent areas and non-transparent areas on the sub screen. Setting example Image to insert (sub screen) INSERT LEVEL

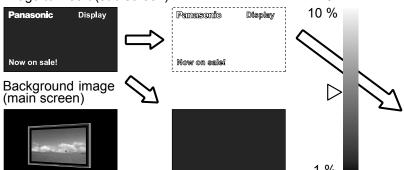

the "INSERT LEVEL" are displayed on the background image. Two-picture insertion

Only the areas on the overlay

image that are brighter than

Note: "TRANSPARENCY" cannot be set when "INSERT" is "ON".

# **SET UP for PORTRAIT**

Divide an input image into 3 parts, and display one of them to a plasma display which is set vertically. The image will be enlarged 3 times and rotated 90-degree.

(Example)



### Note:

When using the PORTRAIT function with displays set vertically, "DISPLAY ORIENTATION" in SET UP menu has to be set to "PORTRAIT" (see page 44).

# **How to setup PORTRAIT**

SET UP ☐ ☐ ☐ Press to display the SET UP menu.

Press to select the PORTRAIT SETUP.

Press to display the "PORTRAIT SETUP" menu.

Press to select the PORTRAIT SETUP.

Press to select "ON" or "OFF".


Note:


If you set PORTRAIT SETUP to ON, MULTI DISPLAY SETUP will be unavailable.


Press to select SEAM HIDES VIDEO.

Press to select "OFF", "ON".



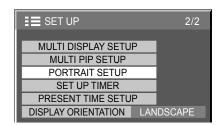

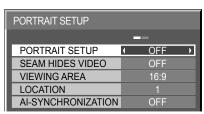


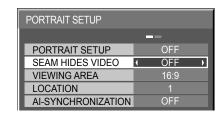

### **5** VIEWING AREA / LOCATION

VIEWING AREA: Set a mode of image division for PORTRAIT function.

**LOCATION:** Set a location of image to be displayed for PORTRAIT function.

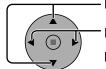

Press to select VIEWING AREA or LOCATION.


Press to select each function.

### Notes:

 For HD signal videos, the "VIEWING AREA" is set at "16:9", and cannot be changed.

HD signal: 1125 (1080) / 60i • 50i • 60p • 50p • 24p • 25p • 30p


- 24sF, 750 (720) / 60p 50p, 1250 (1080) / 50i
- When "VIEWING AREA" is "16:9", the aspect mode is set to "FULL".

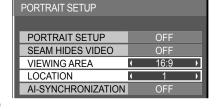

### **LOCATION** setting

### When PORTRAIT SETUP "ON":

Display the image of the selected LOCATION.

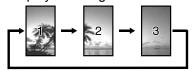

### When PORTRAIT SETUP is "OFF":

Represent an area of the selected LOCATION at a normal

brightness and darken the rest of it.



### **VIEWING AREA and LOCATION**

The mode of image division and the LOCATION by setting of VIEWING AREA is as follows.

VIEWING AREA: 16:9



LOCATION 1 L Undisplayed area (48 dots)



LOCATION 2



LOCATION 3


Suitable to display FULL images. NORMAL (4:3) images extend transversely.

Both right and left sides of the image are cut by 48 dots.


VIEWING AREA: 4:3



**LOCATION 1** 

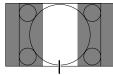

LOCATION 2

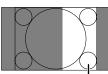

LOCATION 3

4:3 images are displayed without changing aspect ratio.

Although the images of each LOCATION overlap, you can adjust POS. / SIZE to display the image normally. (see page 25)


### 6 AI-SYNCHRONIZATION

Adjust to equalize the brightness of the 3 displays when using PORTRAIT setting.

Press to select AI-SYNCHRONIZATION.



Press to select "OFF", "ON".

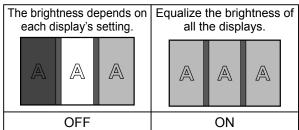

PORTRAIT SETUP

PORTRAIT SETUP
SEAM HIDES VIDEO
VIEWING AREA
16:9
LOCATION
1
AI-SYNCHRONIZATION OFF

### Note:

If you set AI-SYNCHRONIZATION to ON, the following menus will be unavailable and these settings will be fixed to the initial values.

PICTURE menu: COLOR, TINT, INPUTLEVEL (ADVANCED SETTINGS)

7 SET UP :::


Press to exit from adjust mode.


# **SET UP for Input Signals**

### COMPONENT / RGB IN SELECT


Select to match the signals from the source connected to the COMPONENT / RGB input terminals. Y,  $P_B$ ,  $P_R$  signals  $\Longrightarrow$  "COMPONENT"

RGB signals ⇒ "RGB"

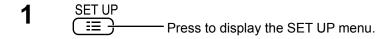

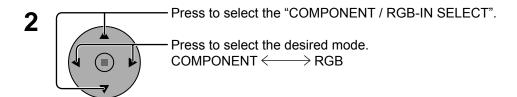



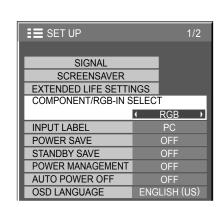


### Notes:


- Selection may not be possible, depending on which optional board is installed.
- Make setting of the selected input terminal (SLOT1, SLOT2, SLOT3 or PC IN).

# YUV / RGB IN SELECT

Select to match the signals from the source connected to the DVI input terminals. YUV signals => "YUV"

RGB signals ⇒ "RGB"

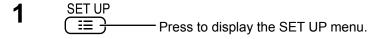

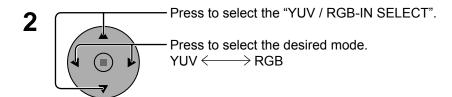



# SIGNAL SCREENSAVER EXTENDED LIFE SETTINGS YUV/RGB-IN SELECT INPUT LABEL PC POWER SAVE STANDBY SAVE POWER MANAGEMENT AUTO POWER OFF OSD LANGUAGE PNIZE OFF OSD LANGUAGE POSITION 1/2 SIGNAL RGB RGB OFF OFF OFF OFF OFF OFF OSD LANGUAGE ENGLISH (US)


### Notes:

- Selection may not be possible, depending on which optional board is installed.
- Make setting of the selected input terminal (SLOT1 or SLOT2).

# SIGNAL menu


### Note:

"SIGNAL" setup menu displays a different setting condition for each input signal.

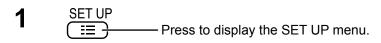


Press to select the "SIGNAL".


Press to display the SIGNAL menu.

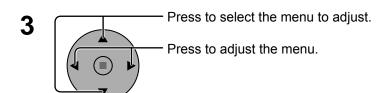


Press to exit from adjust mode.

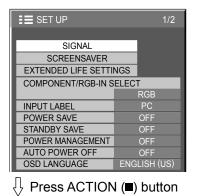


For VIDEO (S VIDEO)

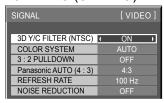



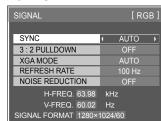

For COMPONENT

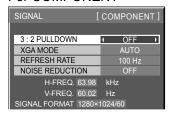






3D Y/C FILTER (NTSC) ON

# 3D Y/C FILTER - For NTSC AV images

Select "SIGNAL" from the "SET UP" menu during VIDEO (S VIDEO) input signal mode. ("SIGNAL [VIDEO]" menu is displayed.)

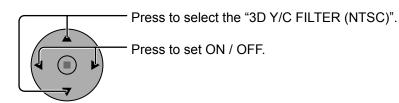


### Note:

When ON, this setting only affects NTSC input signals.

# **COLOR SYSTEM / Panasonic AUTO**

Select SIGNAL from the "SET UP" menu during VIDEO (S VIDEO) input signal mode. ("SIGNAL [VIDEO]" menu is displayed.)

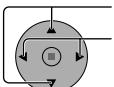

 Press to select the "COLOR SYSTEM" or "Panasonic AUTO (4:3)".
 Press to select each function.

### If the image becomes unstable:

With the system set on Auto, under conditions of low level or noisy input signals the image may in rare cases become unstable. Should this occur, set the system to match the format of the input signal.

SIGNAL		[ VIDE	[0]
3D Y/C FILTER (NTSC)		ON	
COLOR SYSTEM	1	AUTO	•
3:2 PULLDOWN		OFF	
Panasonic AUTO (4:3)	1	4:3	•

Mode	Function
COLOR SYSTEM	Set the color system to match the input signal. When selecting "AUTO", the color system is automatically selected from NTSC/PAL/SECAM, however, M.NTSC signal is not displayed properly depending on the attached terminal board. To display M.NTSC signal, select "M.NTSC" in COLOR SYSTEM. To display PAL60 signal, select "PAL" when BNC Dual Video Terminal Board (TY-FB9BD) is used. For other Video Terminal Boards, select "M.NTSC".  AUTO  PAL  SECAM  M.NTSC  NTSC
Panasonic AUTO (4:3)	Set to "4:3" to view 4:3 images in an unchanged format when Panasonic AUTO is selected. If you would like to view 4:3 images in Just format, set to "JUST".

### Note:

Panasonic AUTO does not function when BNC Dual Video Terminal Board (TY-FB9BD) is used.

### 3:2 PULLDOWN


**3:2 PULLDOWN:** When ON, the display attempts to reproduce a more natural interpretation of sources such as movie pictures, which are recorded at 24 frames per second.

If the picture is not stable, turn the setting to OFF.

### Note:

When ON, this setting only affects the following signal input:

- NTSC / PAL signal input during "VIDEO (S VIDEO)" input signal.
- 525i(480i), 625i(575i), 1125(1080)/60i signal input during "COMPONENT" input signal.

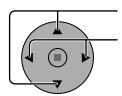

- Press to select "3:2 PULLDOWN".


Press to set ON/OFF.



# **XGA MODE**

This menu is displayed when the input signal is analog (Component/PC).

This unit supports three types of XGA signals with 60Hz vertical frequency having different aspect ratios and sampling rates  $(1,024 \times 768 \otimes 60Hz, 1,280 \times 768 \otimes 60Hz)$ .

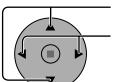

- Press to select "XGA MODE".

XGA MODE 4 AUTO

Press to select "AUTO", "1024×768", "1280×768", "1366×768".

**AUTO:** Automatically selected from 1024×768/1280×768/1366×768.

Switch the setting to suit the input signal for better display depends on the angle of view or display resolution condition.

### Note:

After making this setting, be sure to make each adjustment (such as "AUTO SETUP") on the "POS. /SIZE" menu as necessary. (see page 25)

# REFRESH RATE

This function sets the refresh rate of the display.


This menu is displayed when the input signal is 50 Hz system (50i, 50p, 25p, 24p, 24sF) of vertical scan rate.

100 Hz: Reduce screen flicker.

50 Hz: Enhance the resolution of moving images.

### Note:


It is recommended to set to 100 Hz normally.

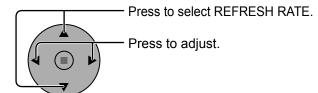



# **NOISE REDUCTION**


Sets the following three NR (Noise Reduction) functions together. VIDEO NR, MOSQUITO NR, BLOCK NR

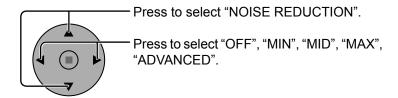





### **Advanced NR**

Sets the three NR functions separately.

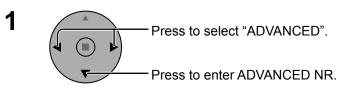

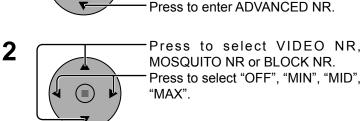

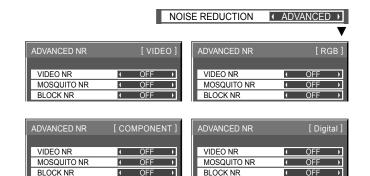

**VIDEO NR:** Automatically reduces unwanted picture noise.

**MOSQUITO NR:** Reduces mosquito noise around subtitles on MPEG videos.


**BLOCK NR:** Reduces block noise when playing MPEG videos.


### Note:

NOISE REDUCTION cannot be adjusted while a PC signal is being applied.

### SYNC

Select SIGNAL from the "SET UP" menu during RGB input signal.

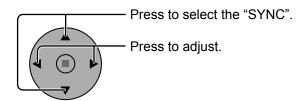

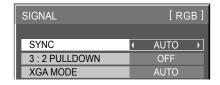

### **Setting RGB sync signal**

Confirm that the input is set to RGB INPUT (this setting is valid only for RGB INPUT signal).

AUTO: The H and V sync or synchronized signal are automatically selected.


If both input, it is selected the H and V sync.

ON G: Uses a synchronized signal on the Video G signal, which is input from

the G connector.

VBS: Uses a synchronized signal of Composite Sync input, which is input

from the HD connector.

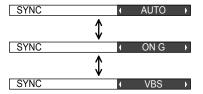



# **SDI THROUGH**

Set the active through function of the Dual Link HD-SDI Terminal Board (TY-FB11DHD).

### Note:

Settings can only be performed for this menu when a slot mounted with a Dual Link HD-SDI Terminal Board (TY-FB11DHD) is selected.

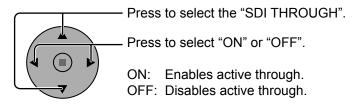

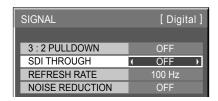

# Input signal display

Displays the frequency and the type of the current input signal.

This display is valid only for COMPONENT/RGB/PC and Digital input signal.


Display range: Horizontal 1

Horizontal 15 - 110 kHz Vertical 48 - 120 Hz H-FREQ. 63.98 kHz V-FREQ. 60.02 Hz SIGNAL FORMAT 1280×1024/60

The dot clock frequency is displayed during digital signal input.

H-FREQ. 63.98 kHz V-FREQ. 60.02 Hz DOT CLOCK FREQ. 108.0 MHz SIGNAL FORMAT 1280×1024/60

# **Options Adjustments**

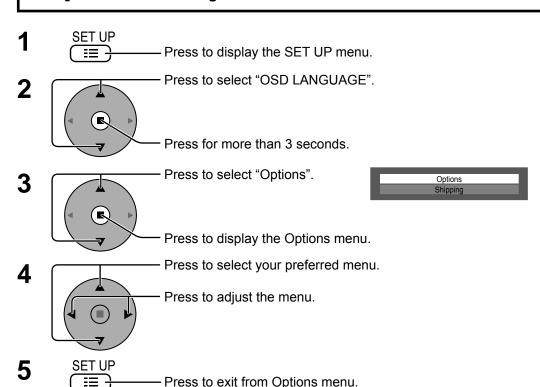

5 SET UP	— Press to exit from Options menu.				
Item	Adjustments				
<b>Weekly Command Timer</b>	Sets Weekly Command Timer. (see page 58)				
Memory lock	Locks or unlocks saved profiles. Also for setting passwords. (see page 33)				
Onscreen display	<ul> <li>On: Displays all the following on screen.</li> <li>Power on display</li> <li>Input signal switch display</li> <li>No signal display</li> <li>Mute and the remaining time of off-timer after was pressed.</li> <li>Off: Hides all the items above from view.</li> </ul>				
Initial INPUT	Off  PC INPUT1 INPUT2 INPUT3 Adjusts the input signal when the unit is turned on. Notes: Only the adjusted signal is displayed. (see page 15) Signal can be displayed when the Terminal board is installed. This menu is available only when "INPUT lock" is "Off". When a dual input terminal board is attached, A or B is displayed depending on the selected input signal. (Ex. INPUT1A, INPUT1B)				
Initial VOL level	Press button to adjust the volume when the unit is turned on.  Off On  Off: Sets normal volume.  On: Sets your preferred volume.  Notes:  • When "Maximum VOL level" is "On", the volume can only be adjusted between 0 and your maximum range.  • You can hear the changed volume regardless of your volume setting before opening the options menu if you adjust the volume when "Initial VOL level" is "On" and cursor is on the menu.				
Maximum VOL level	Press button to adjust the maximum volume.  Off  on  Off: Sets auto maximum volume.  On: Sets your preferred maximum volume.				

Weekly Command Timer

Memory lock Onscreen display

Maximum VOL level INPUT lock Button lock

Remocon User level

Off-timer function

Initial Power Mode

ID select Remote ID

Serial ID Display size

Studio W/B

Studio Gain

Slot power

All Aspect

Auto Setup

Power On Screen Delay Clock Display

Initial INPUT Initial VOL level On

Enable I

Normal

Off

Off

Off

Off

Manual

Item	Adjustments		
INPUT lock	Off ←> PC ←> INPUT1 ←> INPUT2 ←> INPUT3 Locks the input switch operation. Notes:  Only the adjusted signal is displayed (see page 15). Signal can be displayed when the Terminal board is installed. Input switch can be used when this is set to "Off". In two screen display mode, if anything other than "Off" is set, the value will be fixed as the value input in the single screen display mode. When a dual input terminal board is attached, A or B is displayed depending on the selected input signal. (Ex. INPUT1A, INPUT1B)		
Button lock	Off: All the buttons at the right side of the main unit can be used.  MENU&ENTER:  Locks ☐ MENU and ☐ ENTERV® buttons on right side of main unit.  On: Locks all the button on right side of main unit.  Sets Button lock with the unit buttons in the following procedure.  Off: Press ☐ +/▲ four times→Press ☐ NPUT four times→Press ☐ -/▼ four times→Press ☐ ENTERV®  MENU&ENTER: Press ☐ ENTERV® four times→Press ☐ +/▲ four times→Press ☐ ENTERV®  On: Press ☐ -/▼ four times→Press ☐ ENTERV® four times→Press ☐ +/▲ four times→Press ☐ ENTERV®		
Remocon User level	Off  User1  User2  User3 Off: You can use all of the buttons on the remote control. User1: You can only use , OFF, NPUT , 123 PC, OFF, SURPOUND, OFF, SURPOUND, OFF, DUTCH OFF, DUTCH OFF, DUTCH OFF, OFF, DUTCH		
Off-timer function	Enable: Enables the "Off-timer function".  Disable: Disables the "Off-timer function".  Note: When "Disable" is set, the Off-timer is cancelled.		
Initial Power Mode	Normal ←→ Standby ←→ On  Sets the power mode of the unit for when the power recovers from failure or after plugging off and in again.  Normal: Power returns in as the same state as before the power interruption.  Standby: Power returns in standby mode. (Power Indicator : red/orange)  On: Power returns in power On. (Power Indicator : green)  Note: When using multiple displays, "Standby" is preferred to be set in order to reduce a power load.		
ID select	Sets panel ID number when panel is used in "Remote ID" or "Serial ID".  Set value range: 0 - 100 (Standard value: 0)		
Remote ID	The setting of this menu is valid only when using ID remote control.  Off: Disables ID remote control functions. You can use normal remote control operations.  On: Enable ID remote control functions.  Note: To use the ID remote control function, it is necessary to set each ID number of remote control and display unit. About the setting method, please refer to "ID Remote Control Function" (see page 46) and "ID select" (above-mentioned).		
Serial ID	Sets the panel ID Control.  Off: Disables external control by the ID.  On: Enables the external control by the ID.		
Display size	Adjusts the image display size on screen.  Off: Sets the normal image display size on screen.  On: Sets the image display size approximately 95 % of the normal image display.  Off  On  Notes:  This setting is valid only when the input signals are as follows;  NTSC, PAL, SECAM, M.NTSC, PAL60, PAL-M, PAL-N (BNC Dual Video Terminal Board (TY-FB9BD))  525i, 525p, 625i, 625p, 750/60p, 750/50p, 1125/60i, 1125/24sF, 1125/25p, 1125/24p, 1125/30p, 1125/60p, 1125/50p, 1250/50i (Component Video, RGB, DVI, SDI, HDMI)  This setting is invalid when two screen display, digital zoom, Multi display or Portrait display is selected.  When "Display size" is set to "On", "H-POS" and "V-POS" in "POS. /SIZE" can be adjusted.  Refer to each board's operating instruction for DVI, SDI, HDMI's corresponding signals.		

Item	Adjustments		
Studio W/B	Off: Nullify all the settings adjusted. On: Sets the color temperature for TV studio. Note: Valid only when the "WARM" is set as "COLOR TEMP" in PICTURE menu.		
Studio Gain	Sharpens the contrast for a better view when a part of the image is too light to see.  Off: Disables "Studio Gain".  On: Enables "Studio Gain".  Note: This setting is valid only when the input signals are as follows: Component Video, RGB (analog), SDI, HDMI		
Slot Power	Off ←→ Auto ←→ On Off: Power is not transmitted to the slot power. Auto: Power is transmitted to the slot power only when main power is on. On: Power is transmitted to the slot power when main power is on or in the standby state. Note: In some cases, power is transmitted to the slot power when main power is on or in the standby state regardless of the slot power setting.		
Power On Screen Delay	Off ←> 1 ←> 2 ←> 3 ←> 30  You can set the power-on delay time of the displays to reduce the power load, when you press ₾/  to turn on the multiple displays that are set together, for example, on MULTI DISPLAY system.  Set each display's setting individually.  Off: The display will be turned on at the same time as ₾/  is pressed.  1 to 30 (sec.): Set the power-on delay time (second).  After pressing ₾/ , the display will be powered on with time delay depending on this setting.  Notes:  • During this function is working, the power indicator is blinking green.  • This function also works when the power recovers from failure or after plugging off and in again the power cord. After you unplug and plug the power cord in while the unit is in standby mode and also the power is being supplied to a terminal board, the unit will start supplying the power to the board with time delay according to the setting.  The power indicator lights up red first and it turns orange when the power starts being supplied to the board.		
Clock Display	Off: Not display the clock. On: Display the clock. The clock is displayed at the lower left of the screen when button is pressed.  Note: When "PRESENT TIME SETUP" is not set, the clock is not displayed even if "Clock Display" is "On" (see page 36)		
All Aspect	Sets All Aspect mode (advanced aspect setting) or default aspect mode.  With each press of (B) button, the aspect changes in the selected mode.  Off: Default aspect mode  On: All Aspect mode  Aspect mode of each setting is as follows:  (Example: HD signal)  Off 4:3→H-FILL→ZOOM→FULL→JUST  On 4:3 (1)→4:3 (2)→4:3 Full→Zoom1→Zoom2→Zoom3→16:9→14:9→Just1→Just2		
Auto Setup	Sets the operational mode of the automatic position adjustment in the POS./SIZE menu.  Manual: Automatic position adjustment starts when is pressed on the remote control or automatic position adjustment is executed from the POS./SIZE menu.  Other than remote control or menu operation, automatic position adjustment starts:  When the display power is turned ON.  When the input signal is switched.		
Rotate	Off: Does not rotate the image. On: Rotates the image 180 degrees.		
Serial Slot Select	Slot1 Slot2 Slot3 Selects the slot which communicates serial.  Note: The setting of an external command can be set only from the fixed serial terminal. (see page 11)		

### Normalization

When both main unit buttons and remote control are disabled due to the "Button lock", "Remocon User level" or "Remote ID" adjustments, set all the values "Off" so that all the buttons are enabled again.

Press the ——— button on main unit together with button on the remote control and hold for more than 5 seconds. The "Shipping" menu is displayed and the lock is released when it disappears.


# **Weekly Command Timer**

You can set 7-day timer programming by setting time and command.

### Note:

Before setting Weekly Command Timer, set PRESENT TIME SETUP. (see page 36)

1

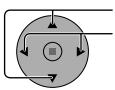


Press to select Function.

Press to select "On".

### Note:

 When Function is set to On, SET UP TIMER (see page 36) is unavailable and INTERVAL / TIME OF DAY in MODE of SCREENSAVER (see page 37) cannot be selected.

2

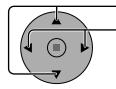


Press to select a day.

Press to select a program number.

### Note:

- You can set the program from 1 to 7.
  - --- indicates unset.


3

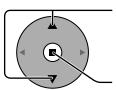

Press to select Program Edit.

Press to show the Program Edit screen.


4

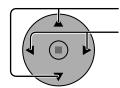

Press to select Program.

Press to change the program numbers (1-7).


5

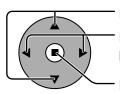

Press to select a command number.

Press to show the previous / next command pages (1-8) of the selected program.

Press to show the command setting screen.

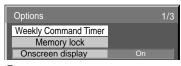

Press ACTION (■) button





Program number

Thursday	Program3
Friday	
Saturday	Program6
Sunday	Program4
Program Edit	


### Program Edit screen



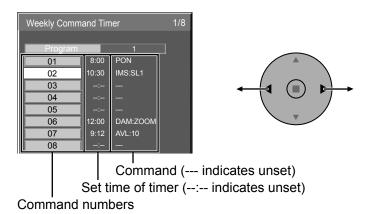

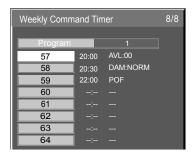


6

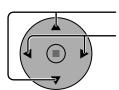


Press to select Command No.

Press to select a command number.

Command setting screen

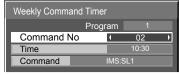

Weekly Command Timer Command No Time Command |

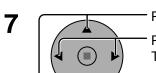

Press to select Time / Command.

Press to set each item.

Time: Set the time to execute a command program.

Pressing "

or "

button once changes "Time" 1 minute.

Pressing "◀" or "▶" button continuously changes "Time" by 15 minutes.

Command: Select a command to execute at the set time. This unit has 64 commands to set. (see page 64)

### Notes:

- Command is performed in order of execution time, regardless of the command number.
- · If a command execution time overlaps with that of other commands, these commands are performed in number order.

Note:

Press 


to return to the previous screen.

# **Shipping condition**

This function allows you to reset the unit to the factory setting.


Press to display the SET UP menu.

2

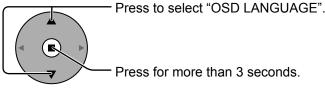

Press for more than 3 seconds.


3

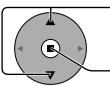

Press to select "Shipping".

Press to display the Shipping menu.

4

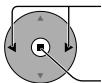

Press to select "YES".

Press to confirm.

[from the unit]

- 1 Press the MENU button till the SET UP menu is displayed.
- 2 Press the Volume Up "+" or Down "-" button to select "OSD LANGUAGE".
- 3 Press and hold the ENTER button till the Shipping menu is displayed.
- 4 Press the Volume Up "+" or Down "-" button to select "YES".
- 5 Press the ENTER button and wait for 10 sec.







# **Troubleshooting**

### Before you call for service, determine the symptoms and make a few simple checks as shown below.

Symptoms		Checks
Picture	Sound	Cilecks
Interference	Noisy Sound	Electrical Appliances Cars / Motorcycles Fluorescent light
Normal Picture	No Sound	Volume (Check whether the mute function has been activated on the remote control.)
? No Picture	No Sound	Not plugged into AC outlet Not switched on PICTURE and BRIGHTNESS/Volume setting (Check by pressing the power switch or stand-by button on the remote control.)
? No Picture	Normal Sound	If a signal with a non-applicable color system format, or frequency is input, only the input terminal indication is displayed.
No Color	Normal Sound	Color controls set at minimum level. (see page 28, 29) COLOR SYSTEM (see page 52)
No remote control operations can be performed.		Check whether the batteries have discharged completely and, if they have not, whether they were inserted properly.  Check whether the remote control sensor is exposed to an outdoor light or a strong fluorescent light.  Check whether the remote control designed specifically for use with the unit is being used. (The unit cannot be operated by any other remote control.)
A cracking sound is sometimes heard from the unit.		If there is nothing wrong with the picture or sound, this is the sound of the cabinet undergoing very slight contractions in response to changes in the room temperature. There are no adverse effects on the performance or other aspects.
The top or bottom of the picture on the screen is cut off when I use the zoom function.		Adjust the position of the picture on the screen.
Areas at the top and bottom of the screen where the image is missing appear when I use the zoom function.		When using a video software program (such as a cinema size program) with a screen wider than one in the 16:9 mode, blank areas separate from the images are formed at the top and bottom of the screen.
I can hear sounds coming	I can hear sounds coming from inside the unit. When the power is turned on, a sound of the display panel being driven may be heard: normal and not indicative of malfunctioning.	
This Plasma Display uses special image processing. Hence a slight time lag may occur between image and audio, depending on the type of inpu signal. However, this is not a malfunction.		

Plasma Display panel

Symptoms	Check
The screen darkens slightly when bright pictures with minimal movements are shown.	The screen will darken slightly when photos, still images of a computer or other pictures with minimal movements are shown for an extended period. This is done to reduce image retention on the screen and the shortening of the screen's service life: It is normal and not indicative of malfunctioning.
It takes a while for the picture to appear.	The unit digitally processes the various signals in order to reproduce esthetically pleasing images. As such, it sometimes takes a few moments for the picture to appear when the power has been turned on, when the input has been switched or when the images for the main picture and sub picture on the two screens are swapped.
The edges of the images flicker.	Due to the characteristics of the system used to drive the panel, the edges may appear to flicker in the fast-moving parts of the images: This is normal and not indicative of malfunctioning.
The brightness on both sides of images in 4:3 mode changes.	When viewing the side panels at the "BRIGHT" or "MID" setting, the brightness on both sides may change depending on the kind of program shown: This is normal and not indicative of malfunctioning.
Some parts of the screen do not light up.	The plasma display panel is manufactured using an extremely high level of precision technology, however, sometimes some parts of the screen may be missing picture elements or have luminous spots. This is not a malfunction.
Image retention appears	Do not allow a still picture to be displayed for an extended period, as this can cause a permanent image retention to remain on the Plasma Display.  Examples of still pictures include logos, video games, computer images, teletext and images displayed in 4:3 mode.  Note:  The permanent image retention on the Plasma Display resulting from fixed image use is not an operating defect and as such is not covered by the Warranty.  This product is not designed to display fixed images for extended periods of time.
Whirring sounds can be heard from the display unit.	The display unit is fitted with a cooling fan to dissipate heat generated during normal use. The whirring sound is caused by rotation of the fan and is not a malfunction.

# **List of Aspect Modes**

Aspect mode					
All Aspect: On	Factory setting All Aspect: Off	Picture → Enlarged screen	Description		
16:9	FULL		The display of the pictures fills the screen. In the case of SD signals, pictures with a 4:3 aspect ratio are enlarged horizontally, and displayed. This mode is suited to displaying anamorphic pictures with a 16:9 aspect ratio.		
14:9	_	→ O	Letterbox pictures with a 14:9 aspect ratio are enlarged vertically and horizontally so that their display fills the screen vertically and is slightly smaller than the screen horizontally. The top and bottom edges of the pictures are cut off. Side panels are displayed at the left and right edges of the screen.		
Just Just1	JUST	•	Pictures with a 4:3 aspect ratio are enlarged horizontally so that the picture distortion is minimized. The display of the areas around the left and right edges of the screen is slightly elongated.		
Just2	JUST	• • • • • • • • • • • • • • • • • • •	Pictures with a 4:3 aspect ratio are enlarged horizontally so that the picture distortion is minimized. The left and right edges of the pictures are cut off. The display of the areas around the left and right edges of the screen is slightly elongated.		
4:3 4:3 (1)	4:3	<b>→</b> •	Pictures with a 4:3 aspect ratio are displayed with their original aspect ratio. Side panels are displayed at the left and right edges of the screen.		
4:3 (2)	4:3	• • • • • • • • • • • • • • • • • • •	Pictures with a 4:3 aspect ratio are displayed with their original aspect ratio. The left and right edges of the pictures are masked by side panels.		
4:3 Full	H-FILL	•	Pictures with a 4:3 aspect ratio are enlarged horizontally so that their display fills the screen. The left and right edges of the pictures are cut off.		
Zoom Zoom1	ZOOM	•	Letterbox pictures with a 16:9 aspect ratio are enlarged vertically and horizontally so that their display fills the screen. The top and bottom edges of the pictures are cut off.		
Zoom2	ZOOM	<b>→</b>	Letterbox pictures with a 16:9 aspect ratio are enlarged vertically and horizontally so that their display fills the screen. The top and bottom edges as well as the left and right edges of the pictures are cut off.		
Zoom3	_	<b>→</b>	Letterbox pictures with a 2.35:1 aspect ratio are enlarged vertically and horizontally so that their display fills the screen vertically and is slightly larger than the screen horizontally. The top and bottom edges as well as the left and right edges of the pictures are cut off.		

# **Applicable Input Signals**

\*Mark: Applicable input signal

					rk: Applicable input signal
	0:224	Horizontal frequency	Vertical frequency	COMPONENT / RGB IN	DVI-D IN *8
	Signal name	(kHz)	(Hz)	/ PC IN	(Dot clock (MHz))
$\vdash$	F0F (400) / C0:		i i	(Dot clock (MHz))	(= == == ( == , ,
1	525 (480) / 60i	15.73	59.94	* (13.5)	* (07.0)
2	525 (480) / 60p	31.47	59.94	* (27.0) *5	* (27.0)
3	625 (575) / 50i	15.63	50.00	* (13.5)	
4	625 (575) / 50p	31.25	50.00	* (27.0)	
5	625 (576) / 50p	31.25	50.00		* (27.0)
6	750 (720) / 60p	45.00	60.00	* (74.25)	* (74.25)
7	750 (720) / 50p	37.50	50.00	* (74.25)	* (74.25)
8	1,125 (1,080) / 60p	67.50	60.00	* (148.5) *1	* (148.5)
9	1,125 (1,080) / 60i	33.75	60.00	* (74.25) *1	* (74.25)
10	1,125 (1,080) / 50p	56.26	50.00	* (148.5) *1	* (148.5)
11	1,125 (1,080) / 50i	28.13	50.00	* (74.25) *1	* (74.25)
12	1,125 (1,080) / 24sF	27.00	48.00	* (74.25) *2	
13	1,125 (1,080) / 30p	33.75	30.00	* (74.25) *1	* (74.25)
14	1,125 (1,080) / 25p	28.13	25.00	* (74.25) *1	* (74.25)
15	1,125 (1,080) / 24p	27.00	24.00	* (74.25) *1	* (74.25)
16	1,250 (1,080) / 50i	31.25	50.00	* (74.25) *3	
17	2,048 × 1,080 / 24sF *7	27.00	48.00		
18	2,048 × 1,080 / 24p *7	27.00	24.00		
19	640 × 400 @70 Hz	31.46	70.07	* (25.17)	
20	640 × 480 @60 Hz	31.47	59.94	* (25.18) *6	* (25.18)
21	640 × 480 @72 Hz	37.86	72.81	* (31.5)	·
22	640 × 480 @75 Hz	37.50	75.00	* (31.5)	
23	640 × 480 @85 Hz	43.27	85.01	* (36.0)	
24	800 × 600 @56 Hz	35.16	56.25	* (36.0)	
25	800 × 600 @60 Hz	37.88	60.32	* (40.0)	* (40.0)
26	800 × 600 @72 Hz	48.08	72.19	* (50.0)	,
27	800 × 600 @75 Hz	46.88	75.00	* (49.5)	
28	800 × 600 @85 Hz	53.67	85.06	* (56.25)	
29	852 × 480 @60 Hz	31.47	59.94	* (33.54) *6	* (34.24)
30	1,024 × 768 @50 Hz	39.55	50.00	) /	* (51.89)
31	1,024 × 768 @60 Hz	48.36	60.00	* (65.0)	* (65.0)
32	1,024 × 768 @70 Hz	56.48	70.07	* (75.0)	()
33	1,024 × 768 @75 Hz	60.02	75.03	* (78.75)	
34	1,024 × 768 @85 Hz	68.68	85.00	* (94.5)	
35	1,066 × 600 @60 Hz	37.64	59.94	* (53.0)	* (53.0)
36	1,152 × 864 @60 Hz	53.70	60.00	(222)	* (81.62)
37	1,152 × 864 @75 Hz	67.50	75.00	* (108.0)	\-\frac{1}{2}
38	1,280 × 768 @60 Hz	47.70	60.00	* (80.14)	
39	1,280 × 960 @60 Hz	60.00	60.00	* (108.0)	
40	1,280 × 960 @85 Hz	85.94	85.00	* (148.5)	
41	1,280 × 1,024 @60 Hz	63.98	60.02	* (108.0)	* (108.0)
42	1,280 × 1,024 @75 Hz	79.98	75.03	* (135.0)	\/
43	1,280 × 1,024 @85 Hz	91.15	85.02	* (157.5)	
44	1,366 × 768 @50 Hz	39.55	50.00	(13.13)	* (69.92)
45	1,366 × 768 @60 Hz	48.36	60.00	* (86.71)	* (87.44)
46	1,400 × 1,050 @60 Hz	65.22	60.00	(33)	* (122.61)
47	1,600 × 1,200 @60 Hz	75.00	60.00	* (162.0)	* (162.0)
48	1,600 × 1,200 @65 Hz	81.25	65.00	* (175.5)	(102.0)
49	1,920 × 1,080 @60 Hz	67.50	60.00	* (148.5) *4	* (148.5)
50	1,920 × 1,200 @60 Hz	74.04	59.95	(110.0)	* (154.0)
51	Macintosh13" (640 × 480)	35.00	66.67	* (30.24)	(101.0)
52	Macintosh16" (832 × 624)	49.72	74.54	* (57.28)	
53	Macintosh1" (1,152 × 870)	68.68	75.06	* (100.0)	
	Maointoonz   (1,102 ~ 070)	00.00	7 0.00	(100.0)	

<sup>\*1:</sup> Based on SMPTE 274M standard.

**Note:** Signals without above specification may not be displayed properly.

<sup>\*2:</sup> Based on SMPTE RP211 standard.

<sup>\*3:</sup> Based on SMPTE 295M standard.

<sup>\*4:</sup> The input signal is recognized as 1,125 (1,080) / 60p.

<sup>\*5:</sup> When selected the RGB format and 525p signal input to the Mini D-sub 15P terminal, it is recognized as VGA 60Hz signal.

<sup>\*6:</sup> When inputted VGA 60Hz format signal from the other than Mini D-sub 15P terminal, it is recognized as 525p signal.

<sup>\*7:</sup> Based on SMPTE 292M and 372M standards. These signals can be received when the Dual Link HD-SDI Terminal Board (TY-FB11DHD) is installed.

<sup>\*8:</sup> These signals can be received when the DVI-D Terminal Board (TY-FB11DD) is installed.

# VIDEO input (HDMI)

S	ignal format	Vertical frequency (Hz)	Horizontal frequency (kHz)	Dot clock (MHz)	Number of active pixels	Total number of pixels	Number of active lines	Total number of lines
1	VGA60	59.94	31.47	25.18	640	800	480	525
2	525/60p	59.94	31.47	27.00	720	858	480	525
3	625/50p	50.00	31.25	27.00	720	864	576	625
4	750/60p	60.00	45.00	74.25	1280	1650	720	750
5	750/50p	50.00	37.50	74.25	1280	1980	720	750
6	1125/60i	60.00	33.75	74.25	1920	2200	1080	1125
7	1125/50i	50.00	28.13	74.25	1920	2640	1080	1125
8	1125/60p*	60.00	67.50	148.50	1920	2200	1080	1125
9	1125/50p*	50.00	56.26	148.50	1920	2640	1080	1125
10	1125/24p*	24.00	27.00	74.25	1920	2750	1080	1125

<sup>\*</sup>Not compatible with HDMI Terminal Board (TY-FB8HM). Audio signal Linear PCM: 48/44.1/32 kHz

# **Command list of Weekly Command Timer**

No.   Command   Audio Menu (Clear)			
AAC:MENDYN*    Audio Menu (Standard)	No.	Command	Control details
AAC.SURMON   Surround (ON)			
4         AAC;SURNOFF         Surround (OFF)           6         AMT:0         Audio Mute (OFF)           7         AMT:1         Audio Mute (OFF)           8         ASO:M         Audio out when PIP mode (Main Picture)           9         ASO:S         Audio volume (00)           10         AVL:00         Audio Volume (00)           11         AVL:10         Audio Volume (20)           12         AVL:30         Audio Volume (30)           14         AVL:40         Audio Volume (30)           15         AVL:50         Audio Volume (60)           16         AVL:60         Audio Volume (60)           17         DAM:FULL         Aspect (FULL)           18         DAM:JUST         Aspect (FULL)           18         DAM:JUST         Aspect (FULL)           19         DAM:SOMM         Aspect (2COOM)           20         DAM:SOMM         Aspect (FULL)           21         DAM:OOM         Aspect (PULL)           22         DWA:OVI-1         Advanced PIP mode (1) (see page 19)           24         DWA:OVI-1         Advanced PIP mode (3) (see page 19)           25         DWA:OVI-2         Advanced PIP mode (6) (see page 19)			` ' '
5         AAK:SUROFF         Surround (OFF)           6         AMT:0         Audio Mute (OFF)           7         AMT:1         Audio Mute (ON)           8         ASO:M         Audio out when PIP mode (Sub Picture)           10         AVI::00         Audio Volume (00)           11         AVI::10         Audio Volume (10)           12         AVI::20         Audio Volume (20)           13         AVI::30         Audio Volume (30)           14         AVI::40         Audio Volume (40)           15         AVI::50         Audio Volume (60)           16         AVI::60         Audio Volume (60)           17         DAM:FULL         Aspect (FULL)           18         DAM:JUST         Aspect (FULL)           19         DAM:SUST         Aspect (Panasonic Auto)           20         DAM:SELF         Aspect (Panasonic Auto)           21         DAM:ORM         Aspect (COOM)           22         DWA:OVI-1         Advanced PIP mode (2) (see page 19)           24         DWA:OVI-1         Advanced PIP mode (2) (see page 19)           25         DWA:OVI-1         Advanced PIP mode (6) (see page 19)           26         DWA:OVI-1         Advanced PIP mode (6) (s			
6         AMT:0         Audio Mute (OFF)           7         AMT:1         Audio Mute (ON)           8         ASC:M         Audio out when PIP mode (Main Picture)           9         ASC:S         Audio volume (00)           10         AVL:00         Audio Volume (00)           11         AVL:10         Audio Volume (20)           13         AVL:20         Audio Volume (30)           14         AVL:40         Audio Volume (50)           15         AVL:50         Audio Volume (50)           16         AVL:50         Audio Volume (60)           17         DAM:FULL         Aspect (JUST)           18         DAM:JUST         Aspect (JUST)           19         DAM:NORM         Aspect (JUST)           19         DAM:NORM         Aspect (ZOOM)           20         DAM:ZOOM         Aspect (ZOOM)           21         DWA:OVE         Aspeat (Panasonic Auto)           21         DWA:OVE         Advanced PIP mode (1) (see page 19)           25         DWA:OVE         Advanced PIP mode (1) (see page 19)           26         DWA:OVE         Advanced PIP mode (3) (see page 19)           27         DWA:OVE         Advanced PIP mode (6) (see page 19)			
7         AMT:1         Audio Out When PIP mode (Main Picture)           9         ASO:S         Audio out when PIP mode (Sub Picture)           10         AVL:00         Audio Volume (00)           11         AVL:10         Audio Volume (10)           12         AVL:20         Audio Volume (20)           13         AVL:30         Audio Volume (30)           14         AVL:40         Audio Volume (60)           15         AVL:50         Audio Volume (60)           16         AVL:60         Audio Volume (60)           17         DAM:PULL         Aspect (FULL)           18         DAM:JUST         Aspect (FULL)           19         DAM:SELF         Aspect (PLUL)           19         DAM:SELF         Aspect (Panasonic Auto)           21         DAM:SELF         Aspect (Panasonic Auto)           21         DAM:OVI.A         Aspect (Panasonic Auto)           22         DWA:OVI.A         Advanced PIP mode (0FF)           23         DWA:OVI.A         Advanced PIP mode (1) (see page 19)           24         DWA:OVI.A         Advanced PIP mode (3) (see page 19)           27         DWA:OVI.A         Advanced PIP mode (6) (see page 19)           28         DWA:OVI.A <td></td> <td></td> <td></td>			
8         ASC:M         Audio out when PIP mode (Sub Picture)           10         ASC:S         Audio ovi when PIP mode (Sub Picture)           10         AVI-00         Audio Volume (00)           11         AVI-10         Audio Volume (20)           13         AVI-30         Audio Volume (30)           14         AVI-40         Audio Volume (40)           15         AVI-50         Audio Volume (60)           16         AVI-60         Audio Volume (60)           17         DAM:PULL         Aspect (FULL)           18         DAM:JUST         Aspect (FULL)           19         DAM:MORM         Aspect (JUST)           19         DAM:MORM         Aspect (ZOOM)           20         DAM:SELF         Aspect (Panasonic Auto)           21         DAM:ZOOM         Aspect (ZOOM)           22         DWA:OFF         Dual Picture mode (OFF)           23         DWA:OVI-1         Advanced PIP mode (1) (see page 19)           24         DWA:OVI-2         Advanced PIP mode (6) (see page 19)           25         DWA:OVI-3         Advanced PIP mode (6) (see page 19)           26         DWA:OVI-4         Advanced PIP mode (6) (see page 19)           27         DWA:OVI-5			
9   ASC:S   Audio out when PIP mode (Sub Picture)			
10			
AVL:10			
12			` ,
AVI.:30			
AVL:40			, ,
15			, ,
16			
17 DAM:PULL Aspect (FULL) 18 DAM:JUST Aspect (JUST) 19 DAM:NORM Aspect (4:3) 20 DAM:SELF Aspect (Panasonic Auto) 21 DAM:ZOOM Aspect (ZOOM) 22 DWA:OFF Dual Picture mode (OFF) 23 DWA:OVL1 Advanced PIP mode (1) (see page 19) 24 DWA:OVL2 Advanced PIP mode (2) (see page 19) 25 DWA:OVL3 Advanced PIP mode (3) (see page 19) 26 DWA:OVL4 Advanced PIP mode (3) (see page 19) 27 DWA:OVL5 Advanced PIP mode (6) (see page 19) 28 DWA:OVL6 Advanced PIP mode (6) (see page 19) 29 DWA:OVL6 Advanced PIP mode (6) (see page 19) 29 DWA:OVL0F Advanced PIP mode (6) (see page 19) 30 DWA:OVL0F Advanced PIP mode (OFF) (normal two screen display mode) 31 DWA:PINO The location of the sub picture (lower right) 32 DWA:PINO The location of the sub picture (lower left) 33 DWA:PINO The location of the sub picture (upper left) 34 DWA:PINO The location of the sub picture (upper left) 35 DWA:PINO The location of the sub picture (upper left) 36 DWA:PIP Dual Picture mode (Picture in Picture) 37 DWA:PIP Dual Picture mode (Picture out Picture) 38 DWA:PIP Dual Picture mode (Picture and Picture) 39 DWA:PIP Dual Picture mode (Picture and Picture) 40 IMS:SL1 Input select (SLOT1) (Main Picture when PIP mode) 41 IMS:SL1 Input select (SLOT1) (Main Picture when PIP mode) 42 IMS:SL1 Input select (SLOT1) (Main Picture when PIP mode) 43 IMS:SL2 Input select (SLOT1) (Main Picture when PIP mode) 44 IMS:SL2 Input select (SLOT3) (Main Picture when PIP mode) 45 IMS:SL2 Input select (SLOT2) (Main Picture when PIP mode) 46 IMS:SL3 Input select (SLOT3) (Main Picture when PIP mode) 47 ISS:PC1 Sub Picture Input Select (SLOT1) 49 ISS:SL1 Sub Picture Input Select (SLOT1) 50 ISS:SL1 Sub Picture Input Select (SLOT1) 51 ISS:SL2 Sub Picture Input Select (SLOT3) 52 ISS:SL2 Sub Picture Input Select (SLOT3) 53 ISS:SL2 Sub Picture Input Select (SLOT3) 54 ISS:SL1 Sub Picture Input Select (SLOT3) 55 OSP:SCR0 Screen Saver SCROLLING BAR ONLY (ON) 56 SSC:FNC1 Screen Saver GROLLING BAR ONLY (ON) 57 POF Power OF 58 PON Power OF 58 PON Power OF 59 SSC:FNC0 Screen Saver function (NEGATIVE IMAG			
18			
19			,
DAM:SELF Aspect (Panasonic Auto) Aspect (ZOOM) Aspect (ZOOM) DWA:OFF Dual Picture mode (OFF)  Dual Picture mode (1) (see page 19) Advanced PIP mode (3) (see page 19)  Advanced PIP mode (3) (see page 19)  DWA:OVL2 Advanced PIP mode (3) (see page 19)  DWA:OVL3 Advanced PIP mode (4) (see page 19)  DWA:OVL5 Advanced PIP mode (6) (see page 19)  DWA:OVL5 Advanced PIP mode (6) (see page 19)  DWA:OVL6 Advanced PIP mode (6) (see page 19)  DWA:OVL0F Advanced PIP mode (6) (see page 19)  DWA:OVL0N Advanced PIP mode (OFF) (normal two screen display mode)  DWA:OVL0N Advanced PIP mode (OFF) (normal two screen display mode)  DWA:PIN0 The location of the sub picture (lower right)  DWA:PIN1 The location of the sub picture (lower left)  DWA:PIN2 The location of the sub picture (upper left)  DWA:PIN3 The location of the sub picture (upper left)  DWA:PIN3 The location of the sub picture (upper left)  DWA:PIN2 The location of the sub picture (upper left)  DWA:PIN3 The location of the sub picture (upper left)  DWA:PIN3 The location of the sub picture (upper left)  DWA:PIN3 The location of the sub picture wipper left)  DWA:PIN3 The location of the sub picture wipper left)  DWA:PIN2 The location of the sub picture (upper left)  DWA:PIN3 The location of the sub picture wipper left)  DWA:PIN3 The location of the sub picture wipper left)  DWA:PIN3 The location of the sub picture when PIP mode  DWA:POP Dual Picture mode (Picture and Picture)  DWA:SWP Swap main picture and sub picture when PIP mode  IMS:SCI Input select (SCOT1) (Main Picture when PIP mode)  IMS:SCI Input select (SCOT1) (Main Picture when PIP mode)  IMS:SCI Input select (SCOT2A) (Main Picture when PIP mode)  IMS:SCI Input select (SCOT2A) (Main Picture when PIP mode)  IMS:SCI Input select (SCOT2A) (Main Picture when PIP mode)  IMS:SCI Input select (SCOT2A) (Main Picture when PIP mode)  IMS:SCI Input select (SCOT1) (Main Picture when PIP mode)  IMS:SCI Input select (SCOT1) (Main Picture when PIP mode)  IMS:SCI Input select (SCOT1) (Main Picture when PIP mode)  IMS:SCI Input se			. , ,
21         DAM:ZOOM         Aspect (ZOOM)           22         DWA:OFF         Dual Picture mode (OFF)           23         DWA:OVL1         Advanced PIP mode (1) (see page 19)           24         DWA:OVL2         Advanced PIP mode (2) (see page 19)           25         DWA:OVL3         Advanced PIP mode (3) (see page 19)           26         DWA:OVL5         Advanced PIP mode (5) (see page 19)           27         DWA:OVL6         Advanced PIP mode (6) (see page 19)           28         DWA:OVL6         Advanced PIP mode (0F) (normal two screen display mode)           30         DWA:OVL6         Advanced PIP mode (0F)           30         DWA:OVLON         Advanced PIP mode (OFF)           31         DWA:OVLON         Advanced PIP mode (OFF)           32         DWA:PIN0         The location of the sub picture (lower right)           33         DWA:PIN1         The location of the sub picture (upper left)           34         DWA:PIN2         The location of the sub picture (upper left)           35         DWA:PIN3         The location of the sub picture (upper left)           36         DWA:PIN3         The location of the sub picture (upper left)           37         DWA:PIN3         The location of the sub picture (upper left)           38			
22         DWA:OFF         Dual Picture mode (OFF)           23         DWA:OVL1         Advanced PIP mode (1) (see page 19)           24         DWA:OVL3         Advanced PIP mode (2) (see page 19)           25         DWA:OVL4         Advanced PIP mode (3) (see page 19)           26         DWA:OVL5         Advanced PIP mode (6) (see page 19)           27         DWA:OVL6         Advanced PIP mode (6) (see page 19)           28         DWA:OVL0F         Advanced PIP mode (0FF) (normal two screen display mode)           30         DWA:OVLOF         Advanced PIP mode (OFF) (normal two screen display mode)           31         DWA:PIN0         Advanced PIP mode (OFF) (normal two screen display mode)           32         DWA:PIN1         The location of the sub picture (lower right)           33         DWA:PIN1         The location of the sub picture (lower left)           34         DWA:PIN2         The location of the sub picture (upper right)           35         DWA:PIN1         The location of the sub picture (upper right)           36         DWA:PIP         Dual Picture mode (Picture in Picture)           36         DWA:PIP         Dual Picture mode (Picture out Picture)           37         DWA:SWP         Swap main picture and sub picture hen PIP mode)           38         DWA:TWN<			,
DWA:OVL1 Advanced PIP mode (1) (see page 19)  Advanced PIP mode (2) (see page 19)  DWA:OVL2 Advanced PIP mode (3) (see page 19)  DWA:OVL3 Advanced PIP mode (4) (see page 19)  MA:OVL5 Advanced PIP mode (5) (see page 19)  DWA:OVL5 Advanced PIP mode (6) (see page 19)  DWA:OVL6 Advanced PIP mode (6) (see page 19)  DWA:OVL0F Advanced PIP mode (6) (see page 19)  DWA:OVL0F Advanced PIP mode (7) (see page 19)  DWA:OVL0N Advanced PIP mode (7) (see page 19)  DWA:PINO The location of the sub picture (lower right)  DWA:PINO The location of the sub picture (lower left)  DWA:PIN1 The location of the sub picture (lower left)  DWA:PIN2 The location of the sub picture (upper left)  DWA:PIN3 The location of the sub picture (upper right)  DWA:PIN3 The location of the sub picture (upper right)  DWA:PIN3 The location of the sub picture (upper right)  DWA:PIN3 The location of the sub picture (upper right)  DWA:PIN3 The location of the sub picture (upper right)  DWA:PIN3 The location of the sub picture (upper right)  DWA:PIN3 The location of the sub picture (upper right)  DWA:PIN3 The location of the sub picture (upper right)  DWA:PIN3 The location of the sub picture (upper right)  DWA:PIN3 The location of the sub picture (upper right)  DWA:PIN3 The location of the sub picture (upper right)  DWA:PIN3 The location of the sub picture when PIP mode  DWA:PIN3 The location of the sub picture when PIP mode  DWA:PIN3 The location of the sub picture when PIP mode  IMS:SL1 Input select (SLOT1) (Main Picture when PIP mode)  IMS:SL1 Input select (SLOT1) (Main Picture when PIP mode)  IMS:SL1 Input select (SLOT2) (Main Picture when PIP mode)  IMS:SL2 Input select (SLOT2) (Main Picture when PIP mode)  IMS:SL2 Input select (SLOT2) (Main Picture when PIP mode)  IMS:SL2 Input select (SLOT2) (Main Picture when PIP mode)  IMS:SL2 Input select (SLOT3) (Main Picture when PIP mode)  IMS:SL1 Sub Picture Input Select (SLOT1)  SS:SL1 Sub Picture Input Select (SLOT1)  SS:SL1 Sub Picture Input Select (SLOT1)  SS:SL2 Sub Picture Input Select (SLOT2)  SS:SL2 Sub			
24         DWA:OVL2         Advanced PIP mode (2) (see page 19)           25         DWA:OVL3         Advanced PIP mode (3) (see page 19)           26         DWA:OVL5         Advanced PIP mode (4) (see page 19)           27         DWA:OVL6         Advanced PIP mode (5) (see page 19)           28         DWA:OVLOF         Advanced PIP mode (OF) (normal two screen display mode)           30         DWA:OVLON         Advanced PIP mode (ON)           31         DWA:PIN0         The location of the sub picture (lower right)           32         DWA:PIN1         The location of the sub picture (lower left)           33         DWA:PIN2         The location of the sub picture (upper left)           34         DWA:PIN3         The location of the sub picture (upper right)           35         DWA:PIN3         The location of the sub picture (upper right)           36         DWA:PIP         Dual Picture mode (Picture out Picture)           37         DWA:SWP         Swap main picture and sub picture when PIP mode           38         DWA:TWN         Dual Picture mode (Picture and Picture)           40         IMS:SL1         Input select (SLOT1) (Main Picture when PIP mode)           41         IMS:SL1A         Input select (SLOT1) (Main Picture when PIP mode)           42         IMS:SL1B			
25 DWA:OVL3 Advanced PIP mode (3) (see page 19) 26 DWA:OVL4 Advanced PIP mode (4) (see page 19) 27 DWA:OVL5 Advanced PIP mode (6) (see page 19) 28 DWA:OVL6 Advanced PIP mode (6) (see page 19) 29 DWA:OVL0F Advanced PIP mode (6) (see page 19) 30 DWA:OVL0F Advanced PIP mode (OFF) (normal two screen display mode) 31 DWA:PIN0 The location of the sub picture (lower right) 32 DWA:PIN1 The location of the sub picture (lower left) 33 DWA:PIN2 The location of the sub picture (upper left) 34 DWA:PIN3 The location of the sub picture (upper left) 35 DWA:PIN3 The location of the sub picture (upper right) 36 DWA:PIP Dual Picture mode (Picture in Picture) 37 DWA:SWP Swap main picture and sub picture when PIP mode 38 DWA:POP Dual Picture mode (Picture and Picture) 39 IMS:PC1 Input select (PC1) (Main Picture when PIP mode) 40 IMS:SL1 Input select (SLOT1) (Main Picture when PIP mode) 41 IMS:SL1A Input select (SLOT1A) (Main Picture when PIP mode) 42 IMS:SL1B Input select (SLOT1B) (Main Picture when PIP mode) 43 IMS:SL2 Input select (SLOT2A) (Main Picture when PIP mode) 44 IMS:SL2A Input select (SLOT2B) (Main Picture when PIP mode) 45 IMS:SL2B Input select (SLOT2B) (Main Picture when PIP mode) 46 IMS:SL3 Input select (SLOT2B) (Main Picture when PIP mode) 47 ISS:PC1 Sub Picture Input Select (SLOT1) 48 ISS:SL1 Sub Picture Input Select (SLOT1) 50 ISS:SL1B Sub Picture Input Select (SLOT1) 51 ISS:SL2 Sub Picture Input Select (SLOT1) 52 ISS:SL3 Sub Picture Input Select (SLOT1) 53 ISS:SL3 Sub Picture Input Select (SLOT2) 54 ISS:SL3 Sub Picture Input Select (SLOT2) 55 OSP:SCR0 Screen Saver SCROLLING BAR ONLY (ON) 57 POF Power OF 58 PON Power ON 59 SSC:FNC0 Screen Saver function (SCROLLING BAR ONLY) 60 SSC:FNC1 Screen Saver function (NEGATIVE IMAGE) 61 SSC:MOD3 Screen Saver function (NEGATIVE IMAGE) 63 VMT:0*2			
26 DWA:OVL4 Advanced PIP mode (4) (see page 19) 27 DWA:OVL5 Advanced PIP mode (5) (see page 19) 28 DWA:OVL6 Advanced PIP mode (6) (see page 19) 29 DWA:OVLOF Advanced PIP mode (6) (see page 19) 30 DWA:OVLON Advanced PIP mode (OFF) (normal two screen display mode) 31 DWA:PIN0 The location of the sub picture (lower right) 32 DWA:PIN1 The location of the sub picture (lower left) 33 DWA:PIN2 The location of the sub picture (upper left) 34 DWA:PIN3 The location of the sub picture (upper right) 35 DWA:PIP Dual Picture mode (Picture in Picture) 36 DWA:POP Dual Picture mode (Picture out Picture) 37 DWA:SWP Swap main picture and sub picture when PIP mode 38 DWA:TWN Dual Picture mode (Picture and Picture) 40 IMS:SC1 Input select (PC1) (Main Picture when PIP mode) 41 IMS:SL1A Input select (SLOT1) (Main Picture when PIP mode) 42 IMS:SL1B Input select (SLOT1) (Main Picture when PIP mode) 43 IMS:SL2 Input select (SLOT2) (Main Picture when PIP mode) 44 IMS:SL2B Input select (SLOT2) (Main Picture when PIP mode) 45 IMS:SL2B Input select (SLOT2) (Main Picture when PIP mode) 46 IMS:SL3 Input select (SLOT2) (Main Picture when PIP mode) 47 ISS:PC1 Sub Picture Input Select (SLOT1) 48 ISS:SL1 Sub Picture Input Select (SLOT1) 50 ISS:SL1A Sub Picture Input Select (SLOT1) 51 ISS:SL2 Sub Picture Input Select (SLOT1) 52 ISS:SL2A Sub Picture Input Select (SLOT2) 53 ISS:SL2B Sub Picture Input Select (SLOT2) 54 ISS:SL3 Sub Picture Input Select (SLOT2) 55 OSP:SCR0 Screen Saver SCROLLING BAR ONLY (OFF) 56 OSP:SCR1 Screen Saver SCROLLING BAR ONLY (ON) 57 POF Power OFF 58 PON Power ON 59 SSC:FNC1 Screen Saver function (NEGATIVE IMAGE) 60 SSC:FNC1 Screen Saver function (NEGATIVE IMAGE) 61 SSC:MOD0 Screen Saver (Mode (ON))			
DWA:OVL5 Advanced PIP mode (5) (see page 19)  Advanced PIP mode (6) (see page 19)  DWA:OVLOF Advanced PIP mode (0) (see page 19)  DWA:OVLOF Advanced PIP mode (OFF) (normal two screen display mode)  DWA:OVLON Advanced PIP mode (OFF)  DWA:PIN0 The location of the sub picture (lower right)  DWA:PIN1 The location of the sub picture (lower right)  DWA:PIN2 The location of the sub picture (upper right)  DWA:PIN3 The location of the sub picture (upper right)  DWA:PIN3 The location of the sub picture (upper right)  DWA:PIP Dual Picture mode (Picture in Picture)  DWA:PIP Dual Picture mode (Picture out Picture)  DWA:PIP Dual Picture mode (Picture and sub picture when PIP mode)  MS:SWA:PIP Dual Picture mode (Picture and Picture)  DWA:SWP Swap main picture and sub picture when PIP mode  MS:SL1 Input select (PC1) (Main Picture when PIP mode)  IMS:SL1 Input select (SLOT1) (Main Picture when PIP mode)  MS:SL1 Input select (SLOT1) (Main Picture when PIP mode)  MS:SL1 Input select (SLOT1) (Main Picture when PIP mode)  MS:SL2 Input select (SLOT1) (Main Picture when PIP mode)  MS:SL2 Input select (SLOT2) (Main Picture when PIP mode)  MS:SL2 Input select (SLOT2) (Main Picture when PIP mode)  MS:SL3 Input select (SLOT2) (Main Picture when PIP mode)  MS:SL3 Input select (SLOT2) (Main Picture when PIP mode)  MS:SL3 Input select (SLOT3) (Main Picture when PIP mode)  MS:SL3 Input select (SLOT3) (Main Picture when PIP mode)  MS:SL3 Input select (SLOT3) (Main Picture when PIP mode)  MS:SL3 Input select (SLOT3) (Main Picture when PIP mode)  MS:SL3 Input select (SLOT3) (Main Picture when PIP mode)  MS:SL3 Input select (SLOT3) (Main Picture when PIP mode)  MS:SL3 Input select (SLOT3) (Main Picture when PIP mode)  MS:SL3 Input select (SLOT3) (Main Picture when PIP mode)  MS:SL3 Input select (SLOT3) (Main Picture when PIP mode)  MS:SL3 Input select (SLOT3) (Main Picture when PIP mode)  MS:SL3 Input select (SLOT3) (Main Picture when PIP mode)  MS:SL3 Input select (SLOT3) (Main Picture when PIP mode)  MS:SL3 Input select (SLOT3) (Main Picture w			
28 DWA:OVL6 Advanced PIP mode (6) (see page 19) 29 DWA:OVLON Advanced PIP mode (OFF) (normal two screen display mode) 30 DWA:OVLON Advanced PIP mode (ON) 31 DWA:PIN0 The location of the sub picture (lower right) 32 DWA:PIN1 The location of the sub picture (lower left) 33 DWA:PIN2 The location of the sub picture (upper left) 34 DWA:PIN3 The location of the sub picture (upper right) 35 DWA:PIN3 The location of the sub picture (upper right) 36 DWA:PIP Dual Picture mode (Picture in Picture) 37 DWA:POP Dual Picture mode (Picture and Ficture) 38 DWA:TWN Dual Picture mode (Picture and Picture) 39 IMS:PC1 Input select (PC1) (Main Picture when PIP mode) 40 IMS:SL1 Input select (SLOT1) (Main Picture when PIP mode) 41 IMS:SL1A Input select (SLOT1A) (Main Picture when PIP mode) 42 IMS:SL1B Input select (SLOT1A) (Main Picture when PIP mode) 43 IMS:SL2 Input select (SLOT2A) (Main Picture when PIP mode) 44 IMS:SL2A Input select (SLOT2A) (Main Picture when PIP mode) 45 IMS:SL2B Input select (SLOT2B) (Main Picture when PIP mode) 46 IMS:SL3 Input select (SLOT2B) (Main Picture when PIP mode) 47 ISS:PC1 Sub Picture Input Select (PC1) 48 ISS:SL1 Sub Picture Input Select (SLOT1A) 50 ISS:SL1B Sub Picture Input Select (SLOT1A) 51 ISS:SL2 Sub Picture Input Select (SLOT2A) 52 ISS:SL2A Sub Picture Input Select (SLOT2A) 53 ISS:SL2B Sub Picture Input Select (SLOT2A) 54 ISS:SL3 Sub Picture Input Select (SLOT2A) 55 OSP:SCR0 Screen Saver SCROLLING BAR ONLY (OFF) 56 OSP:SCR1 Screen Saver SCROLLING BAR ONLY (OFF) 57 POF Power OFF 58 PON Power OF 59 SSC:FNC1 Screen Saver function (SCROLLING BAR ONLY) 60 SSC:FNC1 Screen Saver function (NEGATIVE IMAGE) 61 SSC:MOD3 Screen Saver (Mode (OFF)) 62 SSC:MOD3 Screen Saver (Mode (OFF))			Advanced PIP mode (5) (see page 19)
29 DWA:OVLOF Advanced PIP mode (OFF) (normal two screen display mode) 30 DWA:OVLON Advanced PIP mode (ON) 31 DWA:PIN0 The location of the sub picture (lower right) 32 DWA:PIN1 The location of the sub picture (lower left) 33 DWA:PIN2 The location of the sub picture (upper left) 34 DWA:PIN3 The location of the sub picture (upper left) 35 DWA:PIN3 The location of the sub picture (upper right) 36 DWA:PIN3 The location of the sub picture (upper right) 37 DWA:SWP Dual Picture mode (Picture in Picture) 38 DWA:PIP Dual Picture mode (Picture out Picture) 39 IMS:PC1 Input select (PC1) (Main Picture when PIP mode) 40 IMS:SL1 Input select (SLOT1) (Main Picture when PIP mode) 41 IMS:SL1A Input select (SLOT1) (Main Picture when PIP mode) 42 IMS:SL1B Input select (SLOT1B) (Main Picture when PIP mode) 43 IMS:SL2 Input select (SLOT1B) (Main Picture when PIP mode) 44 IMS:SL2A Input select (SLOT2A) (Main Picture when PIP mode) 45 IMS:SL2B Input select (SLOT2B) (Main Picture when PIP mode) 46 IMS:SL3 Input select (SLOT2B) (Main Picture when PIP mode) 47 ISS:PC1 Sub Picture Input Select (PC1) 48 ISS:SL1 Sub Picture Input Select (SLOT1A) 50 ISS:SL1A Sub Picture Input Select (SLOT1A) 51 ISS:SL2 Sub Picture Input Select (SLOT1B) 52 ISS:SL2A Sub Picture Input Select (SLOT2B) 53 ISS:SL2B Sub Picture Input Select (SLOT2B) 54 ISS:SL3 Sub Picture Input Select (SLOT2B) 55 OSP:SCR0 Screen Saver SCROLLING BAR ONLY (OFF) 56 OSP:SCR1 Screen Saver SCROLLING BAR ONLY (OFF) 57 POF Power OFF 58 PON Power ON 59 SSC:FNC1 Screen Saver function (SCROLLING BAR ONLY) 60 SSC:FNC1 Screen Saver function (SCROLLING BAR ONLY) 61 SSC:MOD3 Screen Saver (Mode (OFF)) 62 SSC:MOD3 Screen Saver (Mode (OFF)) 63 VMT:0*2 Picture Mute (OFF)			
30         DWA:OVLON         Advanced PIP mode (ON)           31         DWA:PIN0         The location of the sub picture (lower right)           32         DWA:PIN1         The location of the sub picture (lower left)           33         DWA:PIN2         The location of the sub picture (upper left)           34         DWA:PIN3         The location of the sub picture (upper right)           35         DWA:PIP         Dual Picture mode (Picture in Picture)           36         DWA:POP         Dual Picture mode (Picture out Picture)           37         DWA:SWP         Swap main picture and sub picture when PIP mode           38         DWA:TWN         Dual Picture mode (Picture and Picture)           39         IMS:PC1         Input select (SLOT1) (Main Picture when PIP mode)           40         IMS:SL1         Input select (SLOT1) (Main Picture when PIP mode)           41         IMS:SL1         Input select (SLOT1B) (Main Picture when PIP mode)           42         IMS:SL2         Input select (SLOT2) (Main Picture when PIP mode)           43         IMS:SL2         Input select (SLOT2B) (Main Picture when PIP mode)           44         IMS:SL2B         Input select (SLOT2B) (Main Picture when PIP mode)           45         IMS:SL2B         Input select (SLOT2B)           46         IM			
DWA:PIN0   The location of the sub picture (lower right)			
DWA:PIN1 The location of the sub picture (lower left)  DWA:PIN2 The location of the sub picture (upper left)  DWA:PIN3 The location of the sub picture (upper left)  DWA:PIN3 The location of the sub picture (upper right)  DWA:PIP Dual Picture mode (Picture in Picture)  DWA:POP Dual Picture mode (Picture out Picture)  DWA:SWP Swap main picture and sub picture when PIP mode  BUM:TWN Dual Picture mode (Picture and Picture)  IMS:PC1 Input select (PC1) (Main Picture when PIP mode)  IMS:SL1 Input select (SLOT1) (Main Picture when PIP mode)  IMS:SL1A Input select (SLOT1) (Main Picture when PIP mode)  IMS:SL1B Input select (SLOT1) (Main Picture when PIP mode)  IMS:SL2 Input select (SLOT2) (Main Picture when PIP mode)  IMS:SL2A Input select (SLOT2) (Main Picture when PIP mode)  IMS:SL2B Input select (SLOT2) (Main Picture when PIP mode)  IMS:SL3 Input select (SLOT2) (Main Picture when PIP mode)  IMS:SL1 Input select (SLOT2) (Main Picture when PIP mode)  IMS:SL2B Input select (SLOT2) (Main Picture when PIP mode)  ISS:PC1 Sub Picture Input Select (PC1)  SS:SL1 Sub Picture Input Select (PC1)  ISS:SL1 Sub Picture Input Select (SLOT1)  SS:SL1 Sub Picture Input Select (SLOT1)  SS:SL2 Sub Picture Input Select (SLOT1)  SS:SL2 Sub Picture Input Select (SLOT2)  ISS:SL2 Sub Picture Input Select (SLOT2)  SS:SL2 Sub Picture Input Select (SLOT2B)  ISS:SL2 Sub Picture Input Select (SLOT2B)  SS:SL2 Sub Picture Input Select (SLOT3)  SS:SC:ROD Screen Saver SCROLLING BAR ONLY (OFF)  SS:SC:FNC0 Screen Saver function (SCROLLING BAR ONLY)  SSC:FNC1 Screen Saver function (NEGATIVE IMAGE)  SC:MOD0 Screen Saver function (NEGATIVE IMAGE)  SC:MOD0 Screen Saver function (NEGATIVE IMAGE)			
DWA:PIN2 The location of the sub picture (upper left)  DWA:PIN3 The location of the sub picture (upper left)  DWA:PIP Dual Picture mode (Picture in Picture)  DWA:POP Dual Picture mode (Picture out Picture)  DWA:SWP Swap main picture and sub picture when PIP mode  DWA:TWN Dual Picture mode (Picture and Picture)  MS:PC1 Input select (PC1) (Main Picture when PIP mode)  IMS:PC1 Input select (SLOT1) (Main Picture when PIP mode)  IMS:SL1 Input select (SLOT1) (Main Picture when PIP mode)  IMS:SL1 Input select (SLOT1) (Main Picture when PIP mode)  IMS:SL1 Input select (SLOT1) (Main Picture when PIP mode)  IMS:SL2 Input select (SLOT2) (Main Picture when PIP mode)  IMS:SL2 Input select (SLOT2) (Main Picture when PIP mode)  IMS:SL2 Input select (SLOT2) (Main Picture when PIP mode)  IMS:SL3 Input select (SLOT2) (Main Picture when PIP mode)  IMS:SL1 Input select (SLOT2) (Main Picture when PIP mode)  IMS:SL2 Input select (SLOT3) (Main Picture when PIP mode)  ISS:PC1 Sub Picture Input Select (PC1)  Sub Picture Input Select (SLOT1)  ISS:SL1 Sub Picture Input Select (SLOT1)  SS:SL1 Sub Picture Input Select (SLOT1)  SS:SL1 Sub Picture Input Select (SLOT1)  SS:SL2 Sub Picture Input Select (SLOT2)  ISS:SL2 Sub Picture Input Select (SLOT2)  SS:SL2 Sub Picture Input Select (SLOT3)  SS:SCRO Screen Saver SCROLLING BAR ONLY (ON)  POF Power OFF  Power OFF  SR PON Power ON  SS:SC:FNC0 Screen Saver function (SCROLLING BAR ONLY)  SC:FNC1 Screen Saver function (NEGATIVE IMAGE)  SC:MOD0 Screen Saver (Mode (OFF))  SS:SC:MOD0 Screen Saver (Mode (OFF))			
DWA:PIN3 The location of the sub picture (upper right)  DWA:PIP Dual Picture mode (Picture in Picture)  DWA:POP Dual Picture mode (Picture out Picture)  DWA:SWP Swap main picture and sub picture when PIP mode  BWA:TWN Dual Picture mode (Picture and Picture)  WA:TWN Dual Picture mode (Picture and Picture)  Mis:PC1 Input select (PC1) (Main Picture when PIP mode)  IMS:PC1 Input select (SLOT1) (Main Picture when PIP mode)  IMS:SL1 Input select (SLOT1) (Main Picture when PIP mode)  IMS:SL1 Input select (SLOT1) (Main Picture when PIP mode)  IMS:SL2 Input select (SLOT2) (Main Picture when PIP mode)  IMS:SL2 Input select (SLOT2) (Main Picture when PIP mode)  IMS:SL2 Input select (SLOT2A) (Main Picture when PIP mode)  IMS:SL2 Input select (SLOT2A) (Main Picture when PIP mode)  IMS:SL2 Input select (SLOT2B) (Main Picture when PIP mode)  IMS:SL2 Input select (SLOT2B) (Main Picture when PIP mode)  IMS:SL3 Input select (SLOT3) (Main Picture when PIP mode)  IMS:SL1 Sub Picture Input Select (PC1)  SS:PC1 Sub Picture Input Select (SLOT1)  JSS:SL1 Sub Picture Input Select (SLOT1)  SUB Picture Input Select (SLOT1A)  SUB Picture Input Select (SLOT1B)  ISS:SL2 Sub Picture Input Select (SLOT2B)  SUB Picture Input Select (SLOT2B)  SS:SL2 Sub Picture Input Select (SLOT3B)  SS:SL3 Sub Picture			
DWA:PIP   Dual Picture mode (Picture in Picture)			The location of the sub picture (upper right)
36         DWA:POP         Dual Picture mode (Picture out Picture)           37         DWA:SWP         Swap main picture and sub picture when PIP mode           38         DWA:TWN         Dual Picture mode (Picture and Picture)           39         IMS:PC1         Input select (PC1) (Main Picture when PIP mode)           40         IMS:SL1         Input select (SLOT1) (Main Picture when PIP mode)           41         IMS:SL1A         Input select (SLOT1A) (Main Picture when PIP mode)           42         IMS:SL1B         Input select (SLOT2) (Main Picture when PIP mode)           43         IMS:SL2         Input select (SLOT2) (Main Picture when PIP mode)           44         IMS:SL2A         Input select (SLOT2) (Main Picture when PIP mode)           45         IMS:SL2B         Input select (SLOT3) (Main Picture when PIP mode)           46         IMS:SL3         Input select (SLOT2)           47         ISS:PC1         Sub Picture Input Select (PC1)           48         ISS:SL1         Sub Picture Input Select (SLOT1A)           50         ISS:SL1A         Sub Picture Input Select (SLOT1B)           51         ISS:SL2         Sub Picture Input Select (SLOT2A)           53         ISS:SL2B         Sub Picture Input Select (SLOT2B)           54         ISS:SL3         Sub Picture			
37         DWA:SWP         Swap main picture and sub picture when PIP mode           38         DWA:TWN         Dual Picture mode (Picture and Picture)           39         IMS:PC1         Input select (PC1) (Main Picture when PIP mode)           40         IMS:SL1         Input select (SLOT1) (Main Picture when PIP mode)           41         IMS:SL1A         Input select (SLOT1A) (Main Picture when PIP mode)           42         IMS:SL1B         Input select (SLOT2) (Main Picture when PIP mode)           43         IMS:SL2         Input select (SLOT2A) (Main Picture when PIP mode)           44         IMS:SL2A         Input select (SLOT2A) (Main Picture when PIP mode)           45         IMS:SL2B         Input select (SLOT3) (Main Picture when PIP mode)           46         IMS:SL3         Input select (SLOT3) (Main Picture when PIP mode)           47         ISS:PC1         Sub Picture Input Select (PC1)           48         ISS:SL1         Sub Picture Input Select (SLOT1)           49         ISS:SL1A         Sub Picture Input Select (SLOT1A)           50         ISS:SL1B         Sub Picture Input Select (SLOT2)           51         ISS:SL2         Sub Picture Input Select (SLOT2A)           52         ISS:SL2B         Sub Picture Input Select (SLOT2B)           53         ISS:SL3			
38DWA:TWNDual Picture mode (Picture and Picture)39IMS:PC1Input select (PC1) (Main Picture when PIP mode)40IMS:SL1Input select (SLOT1) (Main Picture when PIP mode)41IMS:SL1AInput select (SLOT1A) (Main Picture when PIP mode)42IMS:SL1BInput select (SLOT1B) (Main Picture when PIP mode)43IMS:SL2Input select (SLOT2) (Main Picture when PIP mode)44IMS:SL2AInput select (SLOT2A) (Main Picture when PIP mode)45IMS:SL2BInput select (SLOT2B) (Main Picture when PIP mode)46IMS:SL3Input select (SLOT3) (Main Picture when PIP mode)47ISS:PC1Sub Picture Input Select (PC1)48ISS:SL1Sub Picture Input Select (SLOT1A)50ISS:SL1ASub Picture Input Select (SLOT1A)51ISS:SL2Sub Picture Input Select (SLOT1B)52ISS:SL2ASub Picture Input Select (SLOT2A)53ISS:SL2BSub Picture Input Select (SLOT2B)54ISS:SL3Sub Picture Input Select (SLOT3)55OSP:SCR0Screen Saver SCROLLING BAR ONLY (OFF)56OSP:SCR1Screen Saver SCROLLING BAR ONLY (ON)57POFPower OFF58PONPower OFF59SSC:FNC0Screen Saver function (NEGATIVE IMAGE)61SSC:MOD0Screen Saver (Mode (OFF))62SSC:MOD3Screen Saver (Mode (OFF))63VMT:0*2Picture Mute (OFF)			, ,
Input select (PC1) (Main Picture when PIP mode)   Imput select (SLOT1) (Main Picture when PIP mode)   Imput select (SLOT1) (Main Picture when PIP mode)   Imput select (SLOT1A) (Main Picture when PIP mode)   Imput select (SLOT1B) (Main Picture when PIP mode)   Imput select (SLOT1B) (Main Picture when PIP mode)   Imput select (SLOT2) (Main Picture when PIP mode)   Imput select (SLOT2) (Main Picture when PIP mode)   Imput select (SLOT2A) (Main Picture when PIP mode)   Imput select (SLOT2B) (Main Picture when PIP mode)   Imput select (SLOT2B) (Main Picture when PIP mode)   Imput select (SLOT3) (SID Picture Input Select (SLOT3)   Imput select (SLOT3) (Main Picture Input Select (SLOT3)			
IMS:SL1			
41 IMS:SL1A Input select (SLOT1A) (Main Picture when PIP mode) 42 IMS:SL1B Input select (SLOT1B) (Main Picture when PIP mode) 43 IMS:SL2 Input select (SLOT2) (Main Picture when PIP mode) 44 IMS:SL2A Input select (SLOT2A) (Main Picture when PIP mode) 45 IMS:SL2B Input select (SLOT2A) (Main Picture when PIP mode) 46 IMS:SL3 Input select (SLOT3) (Main Picture when PIP mode) 47 ISS:PC1 Sub Picture Input Select (PC1) 48 ISS:SL1 Sub Picture Input Select (SLOT1) 49 ISS:SL1A Sub Picture Input Select (SLOT1A) 50 ISS:SL1B Sub Picture Input Select (SLOT1B) 51 ISS:SL2 Sub Picture Input Select (SLOT2A) 52 ISS:SL2A Sub Picture Input Select (SLOT2A) 53 ISS:SL2B Sub Picture Input Select (SLOT2B) 54 ISS:SL3 Sub Picture Input Select (SLOT3) 55 OSP:SCR0 Screen Saver SCROLLING BAR ONLY (OFF) 56 OSP:SCR1 Screen Saver SCROLLING BAR ONLY (ON) 57 POF Power ON 59 SSC:FNC0 Screen Saver function (SCROLLING BAR ONLY) 60 SSC:FNC1 Screen Saver function (NEGATIVE IMAGE) 61 SSC:MOD0 Screen Saver (Mode (OFF)) 62 SSC:MOD3 Screen Saver (Mode (ON)) 63 VMT:0*2 Picture Mute (OFF)			
Image	41		
Image			
44IMS:SL2AInput select (SLOT2A) (Main Picture when PIP mode)45IMS:SL2BInput select (SLOT2B) (Main Picture when PIP mode)46IMS:SL3Input select (SLOT3) (Main Picture when PIP mode)47ISS:PC1Sub Picture Input Select (PC1)48ISS:SL1Sub Picture Input Select (SLOT1)49ISS:SL1ASub Picture Input Select (SLOT1A)50ISS:SL1BSub Picture Input Select (SLOT2B)51ISS:SL2Sub Picture Input Select (SLOT2)52ISS:SL2ASub Picture Input Select (SLOT2A)53ISS:SL2BSub Picture Input Select (SLOT2B)54ISS:SL3Sub Picture Input Select (SLOT3)55OSP:SCR0Screen Saver SCROLLING BAR ONLY (OFF)56OSP:SCR1Screen Saver SCROLLING BAR ONLY (ON)57POFPower OFF58PONPower ON59SSC:FNC0Screen Saver function (SCROLLING BAR ONLY)60SSC:FNC1Screen Saver function (NEGATIVE IMAGE)61SSC:MOD0Screen Saver (Mode (OFF))62SSC:MOD3Screen Saver (Mode (ON))63VMT:0*2Picture Mute (OFF)			
45 IMS:SL2B Input select (SLOT2B) (Main Picture when PIP mode) 46 IMS:SL3 Input select (SLOT3) (Main Picture when PIP mode) 47 ISS:PC1 Sub Picture Input Select (PC1) 48 ISS:SL1 Sub Picture Input Select (SLOT1) 49 ISS:SL1A Sub Picture Input Select (SLOT1) 50 ISS:SL1B Sub Picture Input Select (SLOT1B) 51 ISS:SL2 Sub Picture Input Select (SLOT2) 52 ISS:SL2A Sub Picture Input Select (SLOT2A) 53 ISS:SL2B Sub Picture Input Select (SLOT2B) 54 ISS:SL3 Sub Picture Input Select (SLOT2B) 55 OSP:SCR0 Screen Saver SCROLLING BAR ONLY (OFF) 56 OSP:SCR1 Screen Saver SCROLLING BAR ONLY (ON) 57 POF Power OFF 58 PON Power ON 59 SSC:FNC0 Screen Saver function (SCROLLING BAR ONLY) 60 SSC:FNC1 Screen Saver function (NEGATIVE IMAGE) 61 SSC:MOD0 Screen Saver (Mode (OFF)) 62 SSC:MOD3 Screen Saver (Mode (ON)) 63 VMT:0*2 Picture Mute (OFF)			
46         IMS:SL3         Input select (SLOT3) (Main Picture when PIP mode)           47         ISS:PC1         Sub Picture Input Select (PC1)           48         ISS:SL1         Sub Picture Input Select (SLOT1)           49         ISS:SL1A         Sub Picture Input Select (SLOT1A)           50         ISS:SL1B         Sub Picture Input Select (SLOT1B)           51         ISS:SL2         Sub Picture Input Select (SLOT2)           52         ISS:SL2A         Sub Picture Input Select (SLOT2A)           53         ISS:SL2B         Sub Picture Input Select (SLOT2B)           54         ISS:SL3         Sub Picture Input Select (SLOT3)           55         OSP:SCR0         Screen Saver SCROLLING BAR ONLY (OFF)           56         OSP:SCR1         Screen Saver SCROLLING BAR ONLY (ON)           57         POF         Power OFF           58         PON         Power ON           59         SSC:FNC0         Screen Saver function (SCROLLING BAR ONLY)           60         SSC:FNC1         Screen Saver function (NEGATIVE IMAGE)           61         SSC:MOD0         Screen Saver (Mode (OFF))           62         SSC:MOD3         Screen Saver (Mode (OFF))	45		
47         ISS:PC1         Sub Picture Input Select (PC1)           48         ISS:SL1         Sub Picture Input Select (SLOT1)           49         ISS:SL1A         Sub Picture Input Select (SLOT1A)           50         ISS:SL1B         Sub Picture Input Select (SLOT1B)           51         ISS:SL2         Sub Picture Input Select (SLOT2)           52         ISS:SL2A         Sub Picture Input Select (SLOT2A)           53         ISS:SL2B         Sub Picture Input Select (SLOT2B)           54         ISS:SL3         Sub Picture Input Select (SLOT3)           55         OSP:SCR0         Screen Saver SCROLLING BAR ONLY (OFF)           56         OSP:SCR1         Screen Saver SCROLLING BAR ONLY (ON)           57         POF         Power OFF           58         PON         Power ON           59         SSC:FNC0         Screen Saver function (SCROLLING BAR ONLY)           60         SSC:FNC1         Screen Saver function (NEGATIVE IMAGE)           61         SSC:MOD3         Screen Saver (Mode (OFF))           62         SSC:MOD3         Screen Saver (Mode (OFF))           63         VMT:0*2         Picture Mute (OFF)	46	IMS:SL3	Input select (SLOT3) (Main Picture when PIP mode)
48         ISS:SL1         Sub Picture Input Select (SLOT1)           49         ISS:SL1A         Sub Picture Input Select (SLOT1A)           50         ISS:SL1B         Sub Picture Input Select (SLOT1B)           51         ISS:SL2         Sub Picture Input Select (SLOT2)           52         ISS:SL2A         Sub Picture Input Select (SLOT2A)           53         ISS:SL2B         Sub Picture Input Select (SLOT2B)           54         ISS:SL3         Sub Picture Input Select (SLOT3)           55         OSP:SCR0         Screen Saver SCROLLING BAR ONLY (OFF)           56         OSP:SCR1         Screen Saver SCROLLING BAR ONLY (ON)           57         POF         Power OFF           58         PON         Power ON           59         SSC:FNC0         Screen Saver function (SCROLLING BAR ONLY)           60         SSC:FNC1         Screen Saver function (NEGATIVE IMAGE)           61         SSC:MOD0         Screen Saver (Mode (OFF))           62         SSC:MOD3         Screen Saver (Mode (ON))           63         VMT:0*2         Picture Mute (OFF)	47	ISS:PC1	Sub Picture Input Select (PC1)
49         ISS:SL1A         Sub Picture Input Select (SLOT1A)           50         ISS:SL1B         Sub Picture Input Select (SLOT1B)           51         ISS:SL2         Sub Picture Input Select (SLOT2)           52         ISS:SL2A         Sub Picture Input Select (SLOT2A)           53         ISS:SL2B         Sub Picture Input Select (SLOT2B)           54         ISS:SL3         Sub Picture Input Select (SLOT3)           55         OSP:SCR0         Screen Saver SCROLLING BAR ONLY (OFF)           56         OSP:SCR1         Screen Saver SCROLLING BAR ONLY (ON)           57         POF         Power OFF           58         PON         Power ON           59         SSC:FNC0         Screen Saver function (SCROLLING BAR ONLY)           60         SSC:FNC1         Screen Saver function (NEGATIVE IMAGE)           61         SSC:MOD0         Screen Saver (Mode (OFF))           62         SSC:MOD3         Screen Saver (Mode (ON))           63         VMT:0*2         Picture Mute (OFF)	48		
51         ISS:SL2         Sub Picture Input Select (SLOT2)           52         ISS:SL2A         Sub Picture Input Select (SLOT2A)           53         ISS:SL2B         Sub Picture Input Select (SLOT2B)           54         ISS:SL3         Sub Picture Input Select (SLOT3)           55         OSP:SCR0         Screen Saver SCROLLING BAR ONLY (OFF)           56         OSP:SCR1         Screen Saver SCROLLING BAR ONLY (ON)           57         POF         Power OFF           58         PON         Power ON           59         SSC:FNC0         Screen Saver function (SCROLLING BAR ONLY)           60         SSC:FNC1         Screen Saver function (NEGATIVE IMAGE)           61         SSC:MOD0         Screen Saver (Mode (OFF))           62         SSC:MOD3         Screen Saver (Mode (ON))           63         VMT:0*2         Picture Mute (OFF)	49	ISS:SL1A	
51         ISS:SL2         Sub Picture Input Select (SLOT2)           52         ISS:SL2A         Sub Picture Input Select (SLOT2A)           53         ISS:SL2B         Sub Picture Input Select (SLOT2B)           54         ISS:SL3         Sub Picture Input Select (SLOT3)           55         OSP:SCR0         Screen Saver SCROLLING BAR ONLY (OFF)           56         OSP:SCR1         Screen Saver SCROLLING BAR ONLY (ON)           57         POF         Power OFF           58         PON         Power ON           59         SSC:FNC0         Screen Saver function (SCROLLING BAR ONLY)           60         SSC:FNC1         Screen Saver function (NEGATIVE IMAGE)           61         SSC:MOD0         Screen Saver (Mode (OFF))           62         SSC:MOD3         Screen Saver (Mode (ON))           63         VMT:0*2         Picture Mute (OFF)	50	ISS:SL1B	
53         ISS:SL2B         Sub Picture Input Select (SLOT2B)           54         ISS:SL3         Sub Picture Input Select (SLOT3)           55         OSP:SCR0         Screen Saver SCROLLING BAR ONLY (OFF)           56         OSP:SCR1         Screen Saver SCROLLING BAR ONLY (ON)           57         POF         Power OFF           58         PON         Power ON           59         SSC:FNC0         Screen Saver function (SCROLLING BAR ONLY)           60         SSC:FNC1         Screen Saver function (NEGATIVE IMAGE)           61         SSC:MOD0         Screen Saver (Mode (OFF))           62         SSC:MOD3         Screen Saver (Mode (ON))           63         VMT:0*2         Picture Mute (OFF)	51		Sub Picture Input Select (SLOT2)
54         ISS:SL3         Sub Picture Input Select (SLOT3)           55         OSP:SCR0         Screen Saver SCROLLING BAR ONLY (OFF)           56         OSP:SCR1         Screen Saver SCROLLING BAR ONLY (ON)           57         POF         Power OFF           58         PON         Power ON           59         SSC:FNC0         Screen Saver function (SCROLLING BAR ONLY)           60         SSC:FNC1         Screen Saver function (NEGATIVE IMAGE)           61         SSC:MOD0         Screen Saver (Mode (OFF))           62         SSC:MOD3         Screen Saver (Mode (ON))           63         VMT:0*2         Picture Mute (OFF)	52	ISS:SL2A	
55         OSP:SCR0         Screen Saver SCROLLING BAR ONLY (OFF)           56         OSP:SCR1         Screen Saver SCROLLING BAR ONLY (ON)           57         POF         Power OFF           58         PON         Power ON           59         SSC:FNC0         Screen Saver function (SCROLLING BAR ONLY)           60         SSC:FNC1         Screen Saver function (NEGATIVE IMAGE)           61         SSC:MOD0         Screen Saver (Mode (OFF))           62         SSC:MOD3         Screen Saver (Mode (ON))           63         VMT:0*2         Picture Mute (OFF)	53		
56         OSP:SCR1         Screen Saver SCROLLING BAR ONLY (ON)           57         POF         Power OFF           58         PON         Power ON           59         SSC:FNC0         Screen Saver function (SCROLLING BAR ONLY)           60         SSC:FNC1         Screen Saver function (NEGATIVE IMAGE)           61         SSC:MOD0         Screen Saver (Mode (OFF))           62         SSC:MOD3         Screen Saver (Mode (ON))           63         VMT:0*2         Picture Mute (OFF)			Sub Picture Input Select (SLOT3)
57         POF         Power OFF           58         PON         Power ON           59         SSC:FNC0         Screen Saver function (SCROLLING BAR ONLY)           60         SSC:FNC1         Screen Saver function (NEGATIVE IMAGE)           61         SSC:MOD0         Screen Saver (Mode (OFF))           62         SSC:MOD3         Screen Saver (Mode (ON))           63         VMT:0*2         Picture Mute (OFF)	55		Screen Saver SCROLLING BAR ONLY (OFF)
58         PON         Power ON           59         SSC:FNC0         Screen Saver function (SCROLLING BAR ONLY)           60         SSC:FNC1         Screen Saver function (NEGATIVE IMAGE)           61         SSC:MOD0         Screen Saver (Mode (OFF))           62         SSC:MOD3         Screen Saver (Mode (ON))           63         VMT:0*2         Picture Mute (OFF)			
59         SSC:FNC0         Screen Saver function (SCROLLING BAR ONLY)           60         SSC:FNC1         Screen Saver function (NEGATIVE IMAGE)           61         SSC:MOD0         Screen Saver (Mode (OFF))           62         SSC:MOD3         Screen Saver (Mode (ON))           63         VMT:0*2         Picture Mute (OFF)			
60         SSC:FNC1         Screen Saver function (NEGATIVE IMAGE)           61         SSC:MOD0         Screen Saver (Mode (OFF))           62         SSC:MOD3         Screen Saver (Mode (ON))           63         VMT:0*2         Picture Mute (OFF)			
61         SSC:MOD0         Screen Saver (Mode (OFF))           62         SSC:MOD3         Screen Saver (Mode (ON))           63         VMT:0*2         Picture Mute (OFF)			
62         SSC:MOD3         Screen Saver (Mode (ON))           63         VMT:0*2         Picture Mute (OFF)			
63 VMT:0*2 Picture Mute (OFF)			
64   VMT:1*2   Picture Mute (ON)			
	64	VMT:1*2	Picture Mute (ON)

<sup>\*1</sup> These commands are unavailable on this model.

<sup>\*2</sup> Picture Mute cannot be unlocked by powering off/on with the remote control. Turn off and on again with the button on the unit or enter the command VMT:0 to unlock Picture Mute.

# **Specifications**

		TH-103PF12U		
Power Source		200-240 V AC, 50/60 Hz		
Power Consumption				
Power on		1,400 W		
Stand-by condition		Save OFF 1.2 W, Save ON 0.7 W		
	Power off condition	0.4 W		
Pla	sma Display panel	Drive method : AC type 103-inch, 16:9 aspect ratio		
Scr	een size	89.3" (2,269 mm) (W) × 50.2" (1,276 mm) (H) × 102.4" (2,603 mm) (diagonal)		
	(No.of pixels)	2,073,600 (1,920 (W) × 1,080 (H))		
		[5,760 × 1,080 dots]		
Ор	erating condition			
	Temperature	32 °F - 104 °F (0 °C - 40 °C)		
	Humidity	20 % - 80 %		
Ap	plicable signals			
' '	Scanning format	525 (480) / 60i · 60p, 625 (575) / 50i · 50p, 750 (720) / 60p · 50p, 1125 (1080) / 60i · 60p · 50i · 50p		
		· 24p · 25p · 30p · 24sF, 1250 (1080) / 50i		
	PC signals	VGA, SVGA, XGA, SXGA		
		UXGA ···· (compressed)		
		Horizontal scanning frequency 15 - 110 kHz		
		Vertical scanning frequency 48 - 120 Hz		
Co	nnection terminals			
	HDMI A-B	TYPE A Connector × 2		
	COMPONENT/RGB IN	Y/G (BNC) with sync 1.0 Vp-p (75 Ω)		
		P <sub>B</sub> /B (BNC), P <sub>R</sub> /R (BNC) 0.7 Vp-p (75 Ω)		
		AUDIO IN (RCA PIN JACK × 2) 0.5 Vrms		
	PC IN	(HIGH-DENSITY MINI D-SUB 15PIN) Y or G with sync 1.0 Vp-p (75 Ω)		
		Y or G without sync 0.7 Vp-p (75 Ω)		
		B/P <sub>B</sub> /C <sub>B</sub> : 0.7 Vp-p (75 Ω)		
		R/Pr/Cr: 0.7 Vp-p (75 Ω)		
		HD/VD: 1.0 - 5.0 Vp-p (high impedance)		
		AUDIO IN (M3 JACK) 0.5 Vrms		
	SERIAL	EXTERNAL CONTROL TERMINAL (D-SUB 9PIN) RS-232C COMPATIBLE		
	AUDIO OUT	RCA PIN JACK × 2 (L / R)		
		OUTPUT LEVEL : VARIABLE (-∞ — 0 dB) [INPUT 1 kHz / 0 dB, 10 kΩ Load]		
Aco	cessories Supplied			
	Remote Control Transmitter	EUR7636070R		
	Batteries	AA Size × 2		
	Fixing band	TMME203 × 2		
Dimensions (W × H × D)		95.0" (2,412 mm) × 55.9" (1,419 mm) × 5.1" (129 mm)		
		(5.6" (141 mm) when including protruding portion of slots)		
Mass (weight)		apporox. 443.2 lbs		

### Note:

Design and specifications are subject to change without notice. Mass and dimensions shown are approximate.

### (for the U.S.A and Puerto Rico)

Panasonic Professional Display Company Unit of Panasonic Corporation of North America One Panasonic Way 1F-10 Secaucus, NJ 07094

### Panasonic Professional Flat Panel Display Limited Warranty

Panasonic Professional Display Company. (referred to as "the Warrantor") will repair this product and all included accessories with new or refurbished parts, free of charge in the USA or Puerto Rico, of the original purchase in the event of a defect in materials or workmanship as follows:

Models or Parts	Part Warranty	Labor Warranty	
Professional Flat Panel Display	3 Years	3 Years	

On-site or carry-in service in the **USA** and **Puerto Rico** may be obtained during the warranty period by contacting Panasonic Professional Display Company Service toll free at 1-800-973-4390.

This warranty is extended only to the original purchaser and is non transferable. A purchase receipt or other proof of date of original purchase will be required before warranty service is rendered.

This warranty only covers failures due to defects in materials or workmanship, which occur during normal use. The warranty does not cover damage which occur in shipment, or failures which are caused by products not supplied by the warrantor, or failures which result from improper installation, set-up adjustments, improper antenna, inadequate signal pickup, maladjustment of consumer controls, improper operation, power line surge, improper voltage supply, lighting damage, or service by anyone other than an authorized repair facility, or damage that is attributable to acts of God.

### LIMITS AND EXCLUSIONS

There are no express warranties except as listed above.

THE WARRANTOR SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES (INCLUDING, WITHOUT LIMITION, DAMAGE TO DISCS) RESULTING FROM THE USE OF THIS PRODUCT, OR ARISING OUT OF ANY BREACH OF THE WARRANTY. ALL EXPRESS AND IMPLIED WARRANTIES, INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR PARTICULAR PURPOSE, ARE LIMITED TO THE APPLICABLE WARRANTY PERIOD SET FORTH ABOVE.

Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts, so the above exclusions or limitations may nor apply to you. This warranty gives you specific legal rights and you may other rights, which vary from state to state.

If you have a problem with this product that is not handled to your satisfaction, then write the Consumer Affairs Department at the Company address indicated above.

In the USA and Puerto Rico FOR SERVICE CALL TOLL FREE 1-800-973-4390

### Panasonic Canada Inc.

5770 Ambler Drive, Mississauga, Ontario L4W 2T3

### LIMITED WARRANTY STATEMENT

Panasonic Canada Inc. (also known as PCI) warrants this product to be free of defects in material and workmanship under normal use during the applicable warranty coverage period described below. PCI agrees to repair, or at its option, exchange, any part that becomes defective. However, the product must be purchased and serviced in Canada. The product or part that shows evidence of defect must be delivered prepaid or carried in to an authorized Panasonic Broadcast Service Center. This warranty does not cover shipping costs.

The warranty coverage period is one year for both parts and labour beginning with the date of original end user purchase, subject to the exceptions as stated below. Repaired or replacement parts supplied during the warranty coverage period carry the unexpired portion of the original warranty coverage period. Proof of product purchase is a condition of warranty service. The owner must produce the product purchase receipt or other satisfactory evidence of date of original purchase.

This warranty does not apply to external appearance items, such as handles, knobs, safety windows, etc. This warranty does not apply to any part, or parts, of the product, installed, altered, repaired or misused in any way that, in the opinion of PCI, affects the reliability of or detracts from the performance of the product.

For products requiring routine preventive maintenance, that maintenance must be performed in order to maintain warranty coverage.

Serial numbers that have been altered, defaced or removed void this warranty. This warranty does not cover replacements or repairs necessitated by loss or damage resulting from any cause beyond the control of PCI.

Marking or retained images (sometimes called "burn-in") resulting from the display of fixed images on video display products are not defects and are not covered under

THIS EXPRESS, LIMITED WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING ANY IMPLIED
WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR
PURPOSE. IN NO EVENT WILL PANASONIC CANADA INC. BE LIABLE FOR ANY SPECIAL, INDIRECT OR CONSEQUENTIAL DAMAGES.

In certain instances, some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, or the exclusion of implied warranties, so the above limitations and exclusions may not be applicable.

### WARRANTY COVERAGE PERIOD EXCEPTIONS

Item	Parts	Labour
Video Tape	30 days—Replacement only (content not covered)	N/A
P2/SD Cards	(Content not covered)	N/A
Video Heads	1 year or 2,000 hrs. (prorated) Whichever comes first	1 year or 2,000 hrs. Whichever comes first
D5 Video heads	1 year or 1,000 hrs. Whichever comes first	1 year or 1,000 hrs. Whichever comes first
Maintenance Items	90 days	90 days
Colour Camera CCD Imaging Block	2 years	1 year
BT-H Series LCD Monitors	2 years	1 year
* DLP™ Projectors	3 years or 17,000 hrs. Whichever comes first	3 years or 17,000 hrs. Whichever comes first
* LCD Projectors above 2,500 ANSI Lumens	3 years or 2,500 hrs. Whichever comes first	3 years or 2,500 hrs. Whichever comes first.
* LCD Projectors below 2,500 ANSI Lumens	3 years or 1,500 hrs. Whichever comes first	3 years or 1,500 hrs. Whichever comes first
Projector Lamps	50% of the rated lamp life or 1 year. Whichever comes first	50% of the rated lamp life or 1 year Whichever comes first.
103 inch Plasma displays	3 year (burn-in not covered)	3 year
Hard Drive Disk Unit	1 year plus balance (if any) of the original Manufacturer's Limited Warranty.	1 year

· Dust, smoke, rental/staging environment and twenty-four/seven operation, dramatically decreases the interval between performances of routine preventive maintenance required to maintain this warranty coverage.

(Content not covered)

### **Warranty Service**

ና*ጴ*ሁናጴሁናጴሁናጴሁናጴሁናጴሁናጴሁናጴሁናጴሁናጴሁናጴሁናጴሁናል

warranty Service
If the product needs to be shipped for service, carefully pack (preferably in the original carton) and enclose a letter, detailing the complaint. Send prepaid and adequately insured to the local authorized Panasonic Service Centre in your area or to Panasonic Technical Support and Product Services Department, 5770 Ambler Drive, Mississauga, Ontario, L4W 2T3. Shipping to the latter location requires a return authorization before shipment. No liability is assumed for loss or damage to the product while in transit.

The personal analysis and a constant and a constant

## **Customer Service**

# **Customer Service Directory**

Obtain information products and operative assistant; localize the closer distributor or Service Center; buy spare parts and accessories by our web site to Latin American:

# http://www.lar.panasonic.com

Also you may contact us directly by our Contact Center:

Panama 800-PANA (800-7262)

Colombia 1-8000-94PANA (1-8000-947262) - National Line

635-PANA (635-7262) - Bogota Line

**Ecuador** 1800-PANASONIC (1800-726276)

Costa Rica 800-PANA737 (800-7262737)

El Salvador 800-PANA (800-7262)

**Guatemala** 1-801-811-PANA (1-801-811-7262)

Chile 800-260602

From a cell phone: 245-2520

Venezuela 800-PANA-800 (800-7262-800)

**Uruguay** 0-800-PANA (0800-7262)

# Mexico Service


To obtain information in the Republic of Mexico contact us at:

# email: atencion.clientes@mx.panasonic.com


Or you may contact us in the next following phones numbers:

01800-VIP-PANA (01800-847-7262) - Interior

(55) 5000-1200 - Mexico D.F. and Metropolitan Area

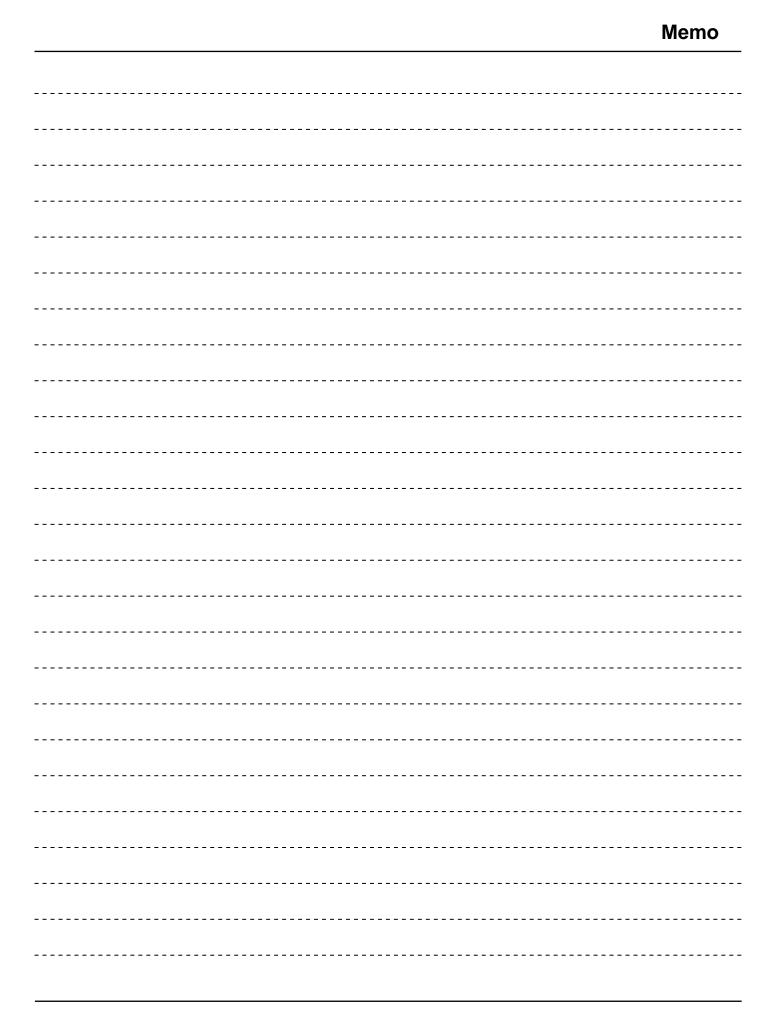

Memo

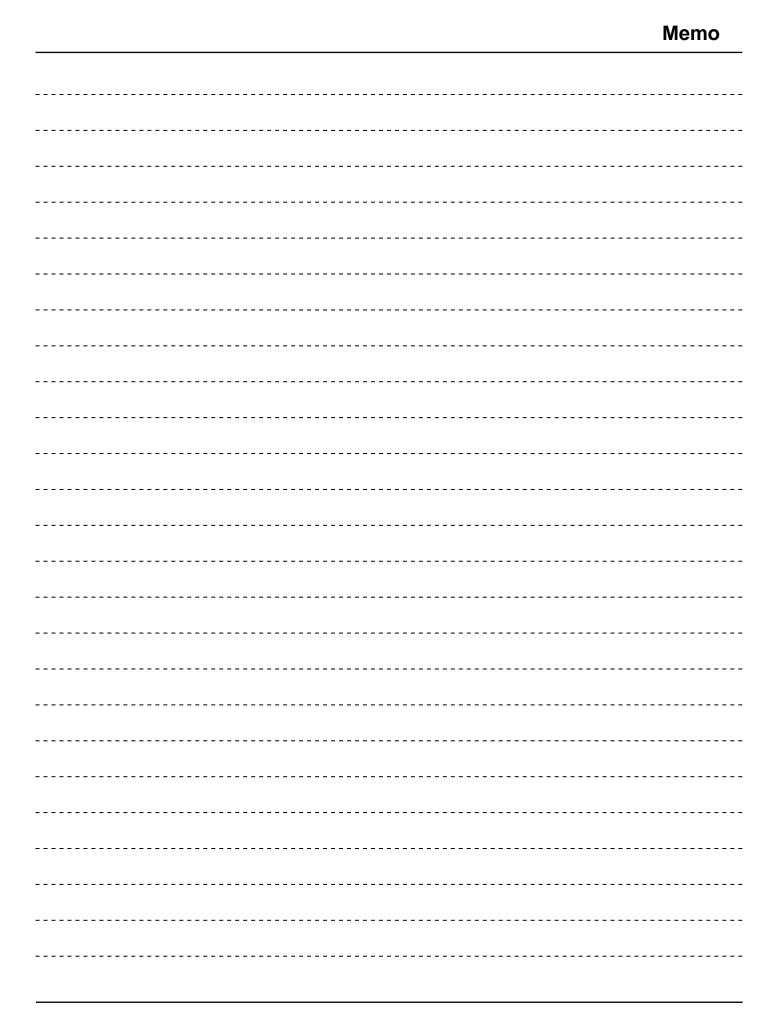

Customer's Record  The model number and serial number of this product can be found on its back cover. You should note this serial number in the space provided below and retain this book, plus your purchase receipt, as a permanent record of your purchase to aid in identification in the event of theft or loss, and for Warranty Service purposes.

Model Number

**Executive Office:** 

L4W 2T3

Panasonic Canada Inc. 5770 Ambler Drive Mississauga, Ontario

© Panasonic Corporation 2009

Panasonic Professional Display Company Unit of Panasonic Corporation of North America

One Panasonic Way 1F-10, Secaucus, NJ 07094

Serial Number

Printed in Japan M1009S0