

802.11g Wireless LAN

Access Point

with

PoE

User Guide

Regulatory notes and statements

Wireless LAN, Health and Authorization for use

Radio frequency electromagnetic energy is emitted from Wireless LAN devices. The energy levels of these emissions however are far much less than the electromagnetic energy emissions from wireless devices like for example mobile phones. Wireless LAN devices are safe for use frequency safety standards and recommendations. The use of Wireless LAN devices may be restricted in some situations or environments for example:

- On board of airplanes, or
- In an explosive environment, or
- In case the interference risk to other devices or services is perceived or identified as harmful

In case the policy regarding the use of Wireless LAN devices in specific organizations or environments (e.g. airports, hospitals, chemical/oil/gas industrial plants, private buildings etc.) is not clear, please ask for authorization to use these devices prior to operating the equipment.

Regulatory Information/disclaimers

Installation and use of this Wireless LAN device must be in strict accordance with the instructions included in the user documentation provided with the product. Any changes or modifications made to this device that are not expressly approved by the manufacturer may void the user's authority to operate the equipment. The Manufacturer is not responsible for any radio or television interference caused by unauthorized modification of this device, of the substitution or attachment. Manufacturer and its authorized resellers or distributors will assume no liability for any damage or violation of government regulations arising from failing to comply with these guidelines.

USA-FCC (Federal Communications Commission) statement

This device complies with Part 15 of FCC Rules.

Operation is subject to the following two conditions:

1. This device may not cause interference, and
2. This device must accept any interference, including interference that may cause undesired operation of this device.

FCC Radio Frequency Exposure statement

This Wireless LAN radio device has been evaluated under FCC Bulletin OET 65 and found compliant to the requirements as set forth in CFR 47 Sections 2.1091, 2.1093, and 15.247 (b) (4) addressing RF Exposure from radio frequency devices. The radiated output power of this Wireless LAN device is far below the FCC radio frequency exposure limits. Nevertheless, this device shall be used in such a manner that the potential for human contact during normal operation is minimized.

When nearby persons has to be kept to ensure RF exposure compliance, in order to comply with RF exposure limits established in the ANSI C95.1 standards, the distance between the antennas and the user should not be less than 20 cm.

FCC Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses, and can radiate radio frequency energy. If not installed and used in accordance with the instructions, it may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try and correct the interference by one or more of the following measures:

1. Reorient or relocate the receiving antenna.
2. Increase the distance between the equipment and the receiver.
3. Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
4. Consult the dealer or an experienced radio/TV technician for help.

Export restrictions

This product or software contains encryption code that may not be exported or transferred from the US of Canada without an approved US Department of Commerce export license.

Safety Information

Your device contains a low power transmitter. When device is transmitted it sends out radio frequency (RF) signal.

CAUTION: To maintain compliance with FCC's RF exposure guidelines, this equipment should be installed and operated with minimum distance 20cm between the radiator and your body. Use on the supplied antenna. Unauthorized antenna, modification, or attachments could damage the transmitter and may violate FCC regulations.

The antenna(s) used for this transmitter must be installed to provide a separation distance of at least 20 cm from all persons and must not be co-located or operating in conjunction with any other antenna or transmitter.

CE Mark Warning

This is a Class B product. In a domestic environment, this product may cause radio interference, in which case the user may be required to take adequate measures.

Protection requirements for health and safety – Article 3.1a

Testing for electric safety according to EN 60950 has been conducted. These are considered relevant and sufficient.

Protection requirements for electromagnetic compatibility – Article 3.1b

Testing for electromagnetic compatibility according to EN 301 489-1, EN 301 489-17 and EN 55024 has been conducted. These are considered relevant and sufficient.

Effective use of the radio spectrum – Article 3.2

Testing for radio test suites according to EN 300 328-2 has been conducted. These are considered relevant and sufficient.

CE in which Countries where the product may be used freely:

Germany, UK, Italy, Spain, Belgium, Netherlands, Portugal, Greece, Ireland, Denmark, Luxembourg, Austria, Finland, Sweden, Norway and Iceland.

France: The use of other channels that the channel 10 through 13 is prohibited by law.



TABLE OF CONTENT

About This Guide	1
Purpose.....	1
Overview of this User's Guide	1
Unpacking and Setup.....	2
Unpacking	2
Setup	2
Hardware Installation.....	3
Front panel	3
Rear Panel	3
Hardware connections	4
Connect to the Switch/Hub	4
Check the installation.....	4
Configuring the Wireless LAN Access Point.....	5
Login to the Wireless AP through WLAN	5
Login.....	5
Main Screen of the Access Point.....	6
Wizard.....	7
Status.....	9
Basic Setting	11
Access Point Mode	11
AP Client mode.....	14
WDS mode.....	17
AP+WDS mode	20
Repeater mode	21
IP Setting	24
Advanced Setting.....	25
Security	26
Tools	27
Technical Specifications.....	28

ABOUT THIS GUIDE

Congratulations on your purchase of this IEEE 802.11g Wireless LAN Access Point. This manual helps to features the innovating wireless technology that can help you build a wireless network easily! This manual contains detailed instructions in operation of this product. Please keep this manual for future reference.

With a WLAN (IEEE 802.11g) Access Point, a mobile computer can share data with another mobile computer in a wireless way. Easy-to-use utilities are bundled with WLAN Access Point for configuration and monitoring purposes.

WLAN networking can wirelessly transmit and receive data, minimizing the need for wired connections, at a speed of up to Fifty-four megabit per second. With WLAN networking, you can locate your PC wherever you want without wires and cables.

WLAN networking provides users with an access to real-time information anywhere in their organization. The mobility provides productivity and service, which are not available under wired networks.

The Access Point has an integrated 802.3af Power over Ethernet (PoE) support, allowing installation of this device in areas where power outlets are not readily available

Purpose

This manual discusses how to install the WLAN Access Point.

Overview of this User's Guide

Introduction. Describes the WLAN Access Point and its features.

Unpacking and Setup. Helps you get started with the basic installation of the WLAN Access Point.

Hardware Installation. Describes the LED indicators of the AP.

Software Installation. Tells how to setup the driver and the utility setting.

Technical Specifications. Lists the technical (general, physical and environmental) specifications of the WLAN Access Point.

UNPACKING AND SETUP

This chapter provides unpacking and setup information for the Access Point.

Unpacking

Open the box of the Access Point and carefully unpack it. The box should contain the following items:

- ◆ One Wireless Access Point
- ◆ One external power adapter
- ◆ One CD-Rom (User's guide)

If any item is found missing or damaged, please contact your local reseller for replacement.

Setup

The setup of the Wireless Access Point can be performed using the following steps:

- ◆ Locate an optimum location for the Wireless LAN Access Point (AP). The best place for your AP is usually the center of your wireless network, with line of sight to all of your mobile stations.
- ◆ Visually inspect the Ethernet RJ45 port connector and make sure that it is fully plugged in to the system's Ethernet switch/hub port.
- ◆ Fix the direction of the antennas. Try to place the AP in a position that can best cover your wireless network. Normally, the higher you place the antenna, the better the performance will be. The antenna's position enhances the receiving sensitivity.
- ◆ Visually inspect if the Power Adapter was fully plugged to the device power jack.

HARDWARE INSTALATION

Front panel

The figure below shows the LED Indicator of the Wireless LAN Access Point.



Power:

This indicator lights green when the Access Point receives power. Otherwise, it turns off.

WLAN:


The indicator blinking green whiles the wireless LAN activity.

LAN (Link/ACT):

The indicator lights green when the LAN port is connected to a Ethernet network successful. Otherwise, the indicator blinking green while transmitting or receiving data on the Ethernet network.

Rear Panel

The figure below shows the rear panel of the Access Point

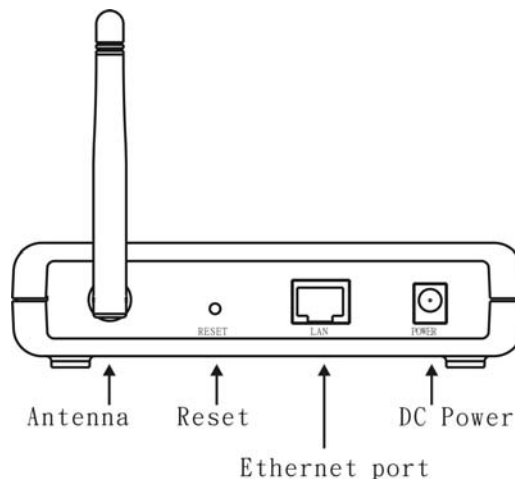

Rear Panel

LAN

Ethernet port with 10/100Mbps Fast Ethernet connections, connect this port to switch/hub.

RESET

The Reset function is to reset the setting back to factory default setting, once you press the “RESET” button more than 5 seconds.


Power

Connect the Power Adapter DC plug to the AP's power jack.

Antenna

One external dipole antenna.

Hardware connections

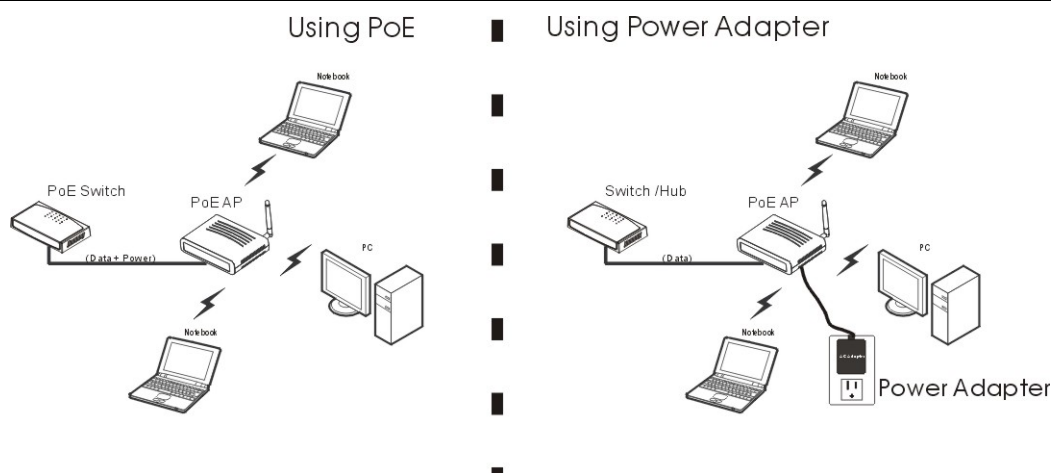

Connecting with power adapter

1. Plug in network cable to the Ethernet port of the Switch/Hub, and plug in the other end to the Ethernet port of the Wireless Access Point.
2. Plug in DC plug of the power adapter to the DC jack of the Wireless Access Point, and plug in the power adapter to the power outlet.

Connecting with PoE switch

1. Plug in network cable to the Ethernet port of the **PoE Switch**, and plug in the other end to the Ethernet port of the Wireless Access Point.

Check the installation

The LEDs of the Access Point are clearly visible and the status of the network link can be seen instantly:

1. With the power source on, once the device is connected, the Power, LAN and WLAN port LEDs will light up indicating a normal status.
2. If the LAN Port's Link indicator does not light up then check the RJ-45 cable if it is firmly feed to the RJ45 port, while the LAN is link up to the Switch/Hub, the LAN port's LED will light up.

CONFIGURING THE WIRELESS LAN ACCESS POINT

The Wireless Access Point has a Web GUI interface for the configuration. The AP can be configured through the Web Browser. A network manager can manage, control and monitor the AP from the local LAN. This section indicates how to configure the AP to enable its functions.

Login to the Wireless AP through WLAN

Before configuring the Wireless AP through WLAN, make sure that the SSID, Channel and the WEP was set properly.

The default setting of the Wireless AP that you will use:


- ◆ SSID: default
- ◆ Channel: 6
- ◆ WEP Encryption: disable
- ◆ IP address: 192.168.1.1

Login

Before you configure this device, note that when the AP is configured through an Ethernet connection, make sure the manager PC must be set on same the **IP network**. For example, when the default network address of the default IP address of the AP is **192.168.1.1**, then the manager PC should be set at 192.168.1.x (where x is a number between 2 and 254), and the default subnet mask is 255.255.255.0.

Open Internet Explorer 5.0 or above Web browser.

Enter IP address ***http://192.168.1.1*** (the factory-default IP address setting) to the address location.



When there is a screen needs to enter the User name and Password, both of the default Username and Password is “admin”



Main Screen of the Access Point

The screen will show the status of the AP when you login to the AP.

There are seven main functions included in the top side of the main screen: Wizard, Status, Basic Setting, IP Setting, Advanced Setting, Security and Tools. Point the selections in the top side of the menu screen.



Wizard

Setup wizard is provided as the part of the web configuration utility. User can simply follow the step-by-step process to get Access Point configuration ready to run in 4 easy steps by clicking on the **“Wizard”** button on the function menu. The following screen will appear. Please click **“Next”** to continue.



Step 1: Set Password

User can change the password and then click **“Next”** to continue.



Step2: Set WLAN Connection

Please type the name of SSID and select the Channel. Then, click **“Next”** to continue.




Step 3: Set WEP Encryption

If user wants to enable WEP, please click **“Enabled”**. Then, select the key size of WEP encryption and enter the key value in the key text box. Please click **“Next”** to continue.



Step 4: Restart

The Setup wizard is now completed. The new settings will be effective after the Access Point restarted. Please click **“Restart”** to reboot the Access Point. If user does not want to make any changes, please click **“exit”** to quit without any changes. User also can go back to modify the setting by clicking **“back”**.

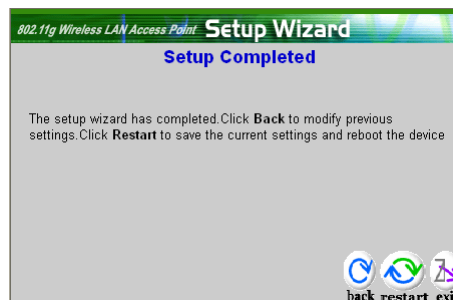

Status

This page as below shows the following information.




Firmware Version: Shows the current firmware version and released date code.

LAN: Shows the Mac address, IP address (default: 192.168.1.1), Subnet Mask, Gateway Address. The current LAN traffic calculated in terms of number of packets sent and received by AP through wired connection is also displayed.

Wireless: Shows the Mac address, current SSID, the status of Encryption Function (Enable or Disable), the current using channel. The current wireless traffic calculated in terms of number of packets sent and received by AP through wireless communication is also displayed.

View Log: Once clicked, the page will change to login page. The login page records every event and the time that it happens.

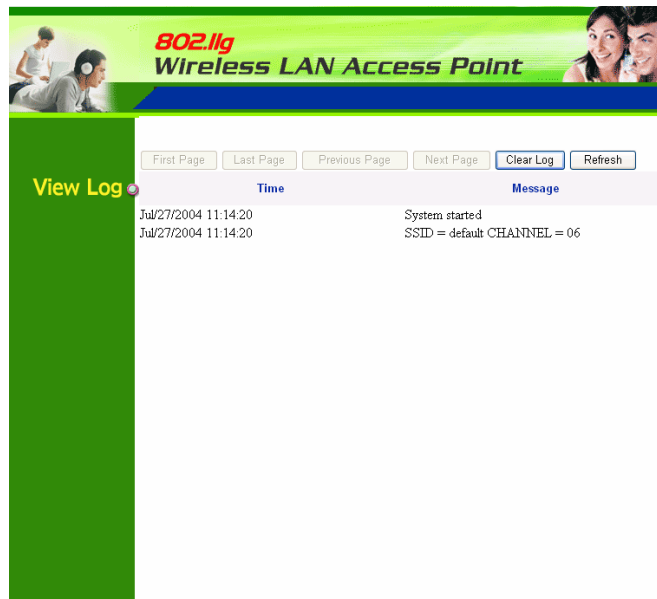

User may clear the entries recorded in the log by clicking the “Clear Log” button, and refresh the screen to show the latest log entries by clicking the “Refresh” button.

Basic Setting

This is the page allow user to change the access point settings.



The screenshot shows the 'Basic Setting' page for an 802.11g Wireless LAN Access Point. The page has a green header with the title '802.11g Wireless LAN Access Point' and a navigation bar with links: Wizard, Status, Basic Setting (highlighted), IP Setting, Advanced Setting, Security, and Tools. On the left, there is a green sidebar with the text 'Basic Setting'. The main content area is white and contains the following settings:


- AP Name: 802.11g Wireless LAN
- Mode: Access Point (dropdown menu)
- Channel: 1 (dropdown menu)
- SSID: default (text input field) with a 'Site Survey' button
- Authentication: ☒ Open System, ☐ Shared Key, ☐ WPA-PSK, ☐ WPA2-PSK, ☐ WPA, ☐ WPA2
- WEP Key: ☐ Enabled, ☒ Disabled
- Buttons: Apply, Cancel, Help

AP Name: The name of the AP, which can be used to identify the Access Point among the all the Access Points in the wireless network.

Mode: The WLAN AP supports five operation mode for Access Point, AP Client, WDS (Wireless Distribution System), AP+WDS and Repeater mode.

Access Point Mode

Configure the AP to Access Point mode; with this mode, WLAN clients can access LAN or other WLAN clients through this AP.

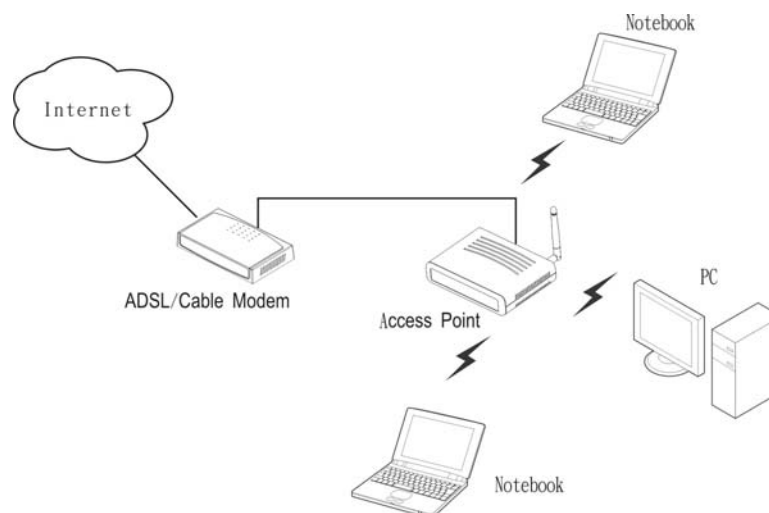

AP mode application

AP Name: 802.11g Wireless LAN

Mode: Access Point

Channel: 9

SSID: OM-TEST Site Survey

Authentication: ☒ Open System ☐ Shared Key
☐ WPA-PSK ☐ WPA2-PSK
☐ WPA ☐ WPA2

WEP Key: ☐ Enabled ☒ Disabled

Apply Cancel Help

AP mode configuration

Channel: The channel that AP will operate in. User can select the channel range from 1 to 11 for North America (FCC) domain, 1 to 13 for European (ETSI) domain and 1 to 14 for Japanese domain.

SSID: Service Set Identifier, which is a unique name shared among all clients and nodes in a wireless network. The SSID must be identical for each clients and nodes in the wireless network.

Authentication Type: The authentication type default is set to Open system. There are six options: Open system; Shared Key; WPA-PSK, WPA2-PSK, WPA and WPA2. User may want to set to Shared Key when the clients and AP in the same wireless network enable the encryption. All the nodes and hosts on the network must use the same authentication type.

WEP Key: To disable WEP security, click on the “Disable” option. To enable WEP security, there are 2 types to select – 64bits and 128 bits. When it is selected, the key value must be entered in ASCII or HEX format.

Note: When the WEP security is enabled, all the wireless clients that wish to connect to the Access Point must also have WEP enabled with the identical WEP Key value entered.

802.11g Wireless LAN Access Point

Wired | Status | **Basic Setting** | IP Setting | Advanced Setting | Security | Tools

Basic Setting

AP Name: 802.11g Wireless LAN

Mode: Access Point

Channel: 1

SSID: default

Authentication: ☒ Open System ☐ Shared Key
☐ WPA-PSK ☐ WPA2-PSK
☐ WPA ☐ WPA2

WEP Key: ☒ Enabled ☐ Disabled

WEP Type: ☒ 64bits ☐ 128bits

Key Mode: HEX

Key: 1.
2.
3.
4.

Apply Cancel Help

WPA-PSK / WPA2-PSK:

If WPA-PSK or WPA2-PSK is selected, user needs to set the key in the passphrase field as the below screen. The key length should be 8 characters at least.

802.11g Wireless LAN Access Point

Wired | Status | **Basic Setting** | IP Setting | Advanced Setting | Security | Tools

Basic Setting

AP Name: 802.11g Wireless LAN

Mode: Access Point

Channel: 1

SSID: default

Authentication: ☒ Open System ☐ Shared Key
☒ WPA-PSK ☒ WPA2-PSK
☐ WPA ☐ WPA2

Passphrase:

Confirmed Passphrase:

Apply Cancel Help

WPA / WPA2:

If WPA or WPA2 is selected, the below screen is shown. Please set the length of the encryption key and the parameters for the RADIUS server.

802.11g Wireless LAN Access Point

Wired | Status | **Basic Setting** | IP Setting | Advanced Setting | Security | Tools

Basic Setting

AP Name: 802.11g Wireless LAN

Mode: Access Point

Channel: 1

SSID: default

Authentication: ☒ Open System ☐ Shared Key
☐ WPA-PSK ☐ WPA2-PSK
☒ WPA ☒ WPA2

Radius server 1: IP:
Port: 1812
Shared Secret:

Radius server 2: (Optional) IP:
Port: 1812
Shared Secret:

Apply Cancel Help

RADIUS Server 1:

Enter the IP address of and the Port used by the Primary Radius Server, enter the Shared Secret, which is used by the Radius Server.


RADIUS Server 2: (optional)

Enter the IP address of and the Port used by the Secondary Radius Server, enter the Shared Secret, which is used by the Radius Server.

Apply: For the changes made to any of the items above to be effective, click “Apply”. The new settings are now been saved to Access Point and will be effective once the Access Point restarts.

AP Client mode

Configure the AP to AP Client mode; the AP will be a wireless Ethernet adapter transforms any Ethernet-enabled devices to have the wireless function.

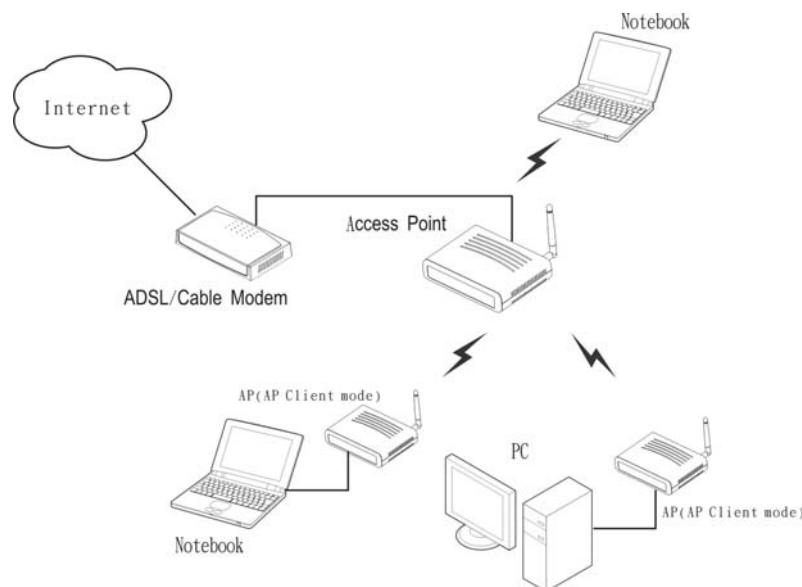

AP Client mode application

AP Name: 802.11g Wireless LAN

Mode: AP Client

Channel: 9

SSID: OM-TEST Site Survey

Authentication: ☒ Open System ☐ Shared Key
☐ WPA-PSK ☐ WPA2-PSK
☐ WPA ☐ WPA2


WEP Key: ☐ Enabled ☒ Disabled

Apply Cancel Help

AP Client mode configuration

SSID: Service Set Identifier, which is a unique name shared among all clients and nodes in a wireless network. The SSID must be identical for each clients and nodes in the wireless network.

Site Survey: This button allows user to enable the Site Survey function to scan for the available wireless network (wireless clients and Access Points) and establish wireless communications with one. Selected one of them in list to establish communications and click “Connect” button.

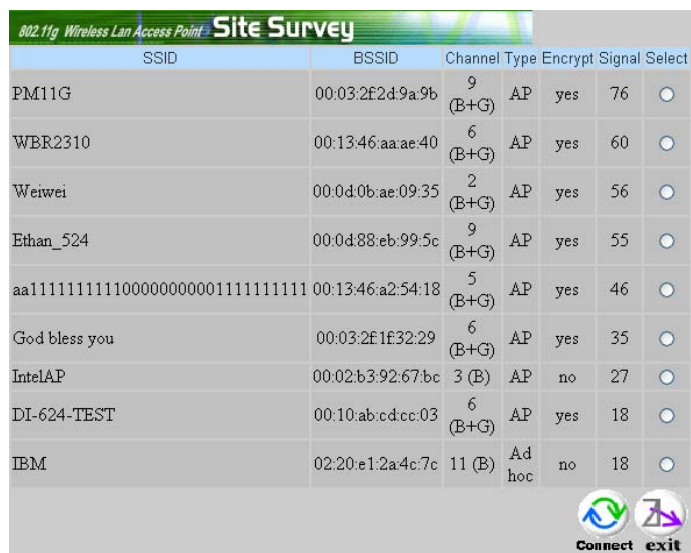

SSID	BSSID	Channel	Type	Encrypt	Signal	Select
PM11G	00:03:2f2d:9a:9b	9 (B+G)	AP	yes	76	<input type="radio"/>
WBR2310	00:13:46:aa:ae:40	6 (B+G)	AP	yes	60	<input type="radio"/>
Weiwei	00:0d:0b:ae:09:35	2 (B+G)	AP	yes	56	<input type="radio"/>
Ethan_524	00:0d:88:eb:99:5c	9 (B+G)	AP	yes	55	<input type="radio"/>
aa11111111110000000000111111111111	00:13:46:a2:54:18	5 (B+G)	AP	yes	46	<input type="radio"/>
God bless you	00:03:2f1f32:29	6 (B+G)	AP	yes	35	<input type="radio"/>
IntelAP	00:02:b3:92:67:bc	3 (B)	AP	no	27	<input type="radio"/>
DL-624-TEST	00:10:ab:cd:cc:03	6 (B+G)	AP	yes	18	<input type="radio"/>
IBM	02:20:e1:2a:4c:7c	11 (B)	Ad hoc	no	18	<input type="radio"/>

Authentication Type: The authentication type default is set to Open system. There are four options: Open system; Shared Key; WPA-PSK and WPA2-PSK. User may want to set to Shared Key when the clients and AP in the same wireless network enable the WEP encryption. All the nodes and hosts on the network must use the same authentication type.

WEP Key: To disable WEP security, click on the “Disable” option. To enable WEP security, there are 2 types to select – 64bits and 128 bits. When it is selected, the key value must be entered in ASCII or HEX format.

Note: When WEP security is enabled, all the wireless clients that wish to connect to the Access Point must also have WEP enabled with the identical WEP Key value entered.

BOZ.11g Wireless LAN Access Point

Wizard | Status | Basic Setting | IP Setting | Advanced Setting | Security | Tools

Basic Setting

AP Name: BOZ.11g Wireless LAN

Mode: AP Client

Channel:

SSID: PM11G

Authentication: ☒ Open System ☐ Shared Key

WPA-PSK ☐ WPA2-PSK

WPA ☐ WPA2

WEP Key: ☒ Enabled ☐ Disabled

WEP Type: ☒ 64bits ☐ 128bits

Key Mode: HEX

Key: 1.

☐ 2.

☐ 3.

☐ 4.

WPA-PSK / WPA2-PSK:

If WPA-PSK or WPA2-PSK is selected, user needs to set the key in the passphrase field as the below screen. The key length should be 8 characters at least.

BOZ.11g Wireless LAN Access Point

Wizard | Status | Basic Setting | IP Setting | Advanced Setting | Security | Tools

Basic Setting

AP Name: BOZ.11g Wireless LAN

Mode: AP Client

Channel: (Domain: ETSI)

SSID: PM11G

Authentication: ☒ Open System ☐ Shared Key

WPA-PSK ☐ WPA2-PSK

WPA ☐ WPA2

Passphrase:

Confirmed Passphrase:

Apply: For the changes made to any of the items above to be effective, click “Apply”. The new settings are now been saved to Access Point and will be effective once the Access Point restarts.

Note: For entering to the Web Setting page after changing to AP Client mode, change your PC/Notebook IP address to 192.168.1.x. After changing your IP address, type 192.168.1.1 on the Web browser to enter the setting of this Wireless AP.


WDS mode

With WDS (Wireless Distribution System) mode, user can use wireless media to communicate two or more LANs through the AP with WDS mode, all of the LAN will be combined in the WDS group, for example:

Single WDS group application:

When there are three APs joined to the WDS group, one of the AP in WDS mode will be the Master, the other two APs will be the Slave, all of the APs in the WDS group must use the same wireless channel and the same security setting, the Master need to fill all the Slave's MAC address in the "Remote AP Mac" list, and the Slave need to fill the Master's MAC address in the "Remote AP Mac" list, the maximum of one Master can join eight Slave to be one WDS group.

In this example, LAN-A can communicate with LAN-B and LAN-C, and LAN-B can communicate with LAN-C through the AP-A. All of LANs will be at the same LAN environment coming through LAN-A.

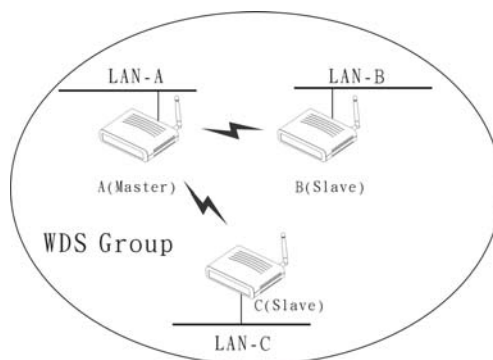

WDS mode application (Single WDS group)

<div><p>AP Name: 802.11g Wireless LAN</p><p>Mode: WDS</p><p>Channel: 9</p><p>Remote AP Mac: 1. The MAC address of AP-B 2. The MAC address of AP-C</p><p>3. 4.</p><p>5. 6.</p><p>7. 8.</p><p>WDS Security: WEP 64bits</p><p>WEP Key: ASCII</p><p>Passphrase: (8~63 char.)</p><p>Apply Cancel Help</p></div>	<div><p>AP Name: 802.11g Wireless LAN</p><p>Mode: WDS</p><p>Channel: 9</p><p>Remote AP Mac: 1. The MAC address of AP-A 2.</p><p>3. 4.</p><p>5. 6.</p><p>7. 8.</p><p>WDS Security: WEP 64bits</p><p>WEP Key: ASCII</p><p>Passphrase: (8~63 char.)</p><p>Apply Cancel Help</p></div>
--	--

Master setting (AP-A)

Slave setting (AP-B and AP-C)

WDS mode configuration for Example-1


Multiple WDS group application:

When there are five APs to be join into two separated WDS group, the member of WDS group 1 is AP-A, AP-B and AP-C, and member of the WDS group 2 is AP-C, AP-D and AP-E, the AP-C will join both of WDS group 1 and WDS group 2, each WDS Group 1 will be one master and the other will be slave.

The AP-A and AP-C will be both as a Master AP for both WDS Groups, the AP-A represent for the master of WDS Group 1, the AP-C represent for the master of the WDS Group 2 and at the same time AP-C will be the slave of WDS Group 1, so all of the APs in the two WDS groups must use the same wireless channel and same security, the Master need to fill all of Slave's MAC address in the "Remote AP Mac" list, and the Slave need to fill the Master's MAC address in the "Remote AP Mac" list, maximum allow one Master can be join eight Slaves to be one WDS group.

In this example, LAN-A can communicate with LAN-B and LAN-C, and LAN-B can communicate with LAN-C through the AP-A. LAN-B will have the same LAN environment coming through LAN-A.

LAN-E can communicate with LAN-B and LAN-D, LAN-E can communicate with LAN-D through AP-C, LAN-E can communicate with LAN-B through AP-C and AP-A, LAN-E will have the same LAN environment coming through LAN-A.

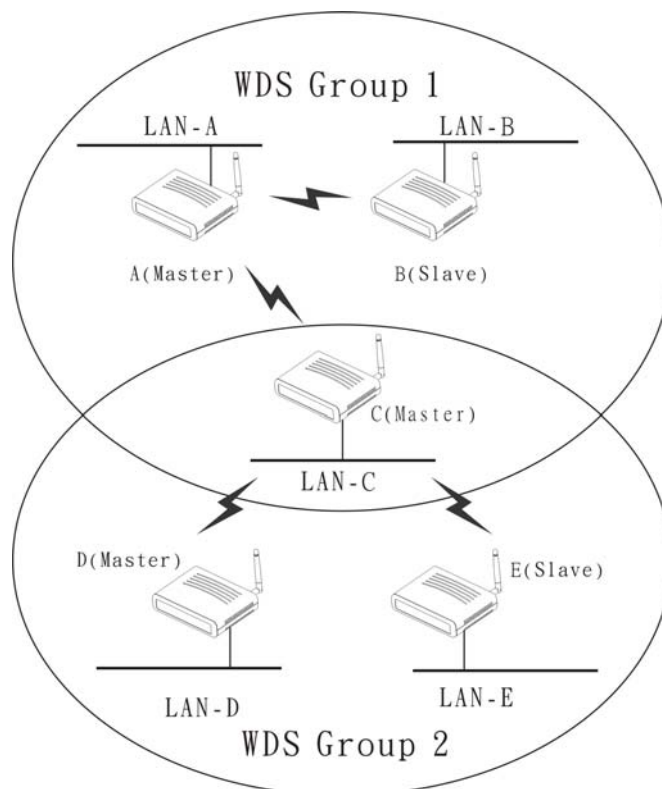

WDS mode application (Multiple WDS group)

AP Name: 802.11g Wireless LAN

Mode: WDS

Channel: 9

Remote AP Mac: 1. The MAC address of AP-B 2. The MAC address of AP-C

3. 4.

5. 6.

7. 8.

WDS Security: WEP 64bits

WEP Key: ASCII

Passphrase: (8~63 char.)

Apply Cancel Help

Master setting (AP-A, WDS Group 1)

AP Name: 802.11g Wireless LAN

Mode: WDS

Channel: 9

Remote AP Mac: 1. The MAC address of AP-A 2.

3. 4.

5. 6.

7. 8.

WDS Security: WEP 64bits

WEP Key: ASCII

Passphrase: (8~63 char.)

Apply Cancel Help

Slave setting (AP-B, WDS Group 1)

AP Name: 802.11g Wireless LAN

Mode: WDS

Channel: 9

Remote AP Mac: 1. The MAC address of AP-A 2. The MAC address of AP-D

3. The MAC address of AP-E 4.

5. 6.

7. 8.

WDS Security: WEP 64bits

WEP Key: ASCII

Passphrase: (8~63 char.)

Apply Cancel Help

Master setting (AP-C, WDS Group 2)

AP Name: 802.11g Wireless LAN

Mode: WDS

Channel: 9

Remote AP Mac: 1. The MAC address of AP-C 2.

3. 4.

5. 6.

7. 8.

WDS Security: WEP 64bits

WEP Key: ASCII

Passphrase: (8~63 char.)


Apply Cancel Help

Slave setting (AP-D and AP-E, WDS Group 2)

WDS mode configuration for Example-2

AP+WDS mode

With WDS+AP mode, user can use wireless media to communicate two or more LANs through the AP with WDS+AP mode, all of LAN will be combined in the WDS group and WLAN client can access to the AP with AP+WDS mode.

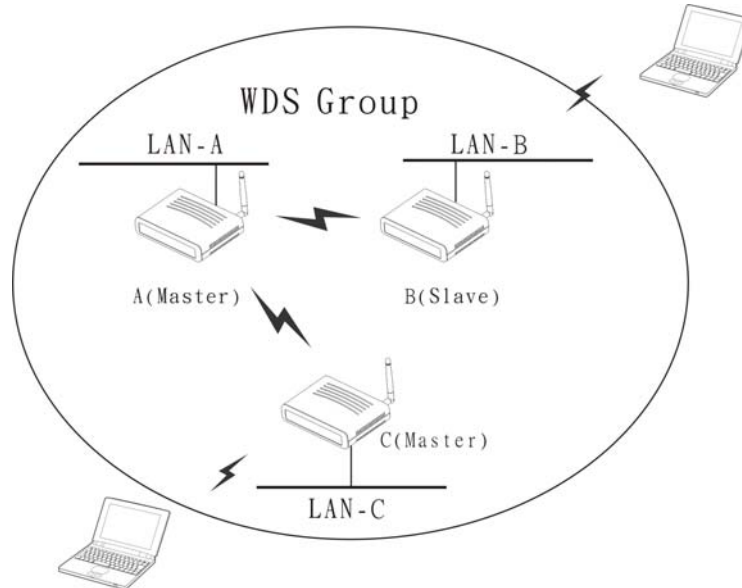

WDS+AP mode application

The screenshot shows the configuration interface for an AP in WDS+AP mode. The "Mode" is set to "AP+WDS". The "Channel" is set to "9". The "SSID" is "OM-TEST". The "Authentication" is set to "WPA-PSK". The "Passphrase" is "12345678". The "Remote AP Mac" is "000d88eb995c". The "WDS Security" is set to "WEP 64bits". The "WEP Key" is "12345678". The "Passphrase" is "12345678".


AP configuration

WDS configuration

Please refer the AP mode and WDS mode for detail configuration.

Repeater mode

Configure the AP to Repeater mode; the AP will be a wireless LAN repeater that will be extended the WLAN coverage range.

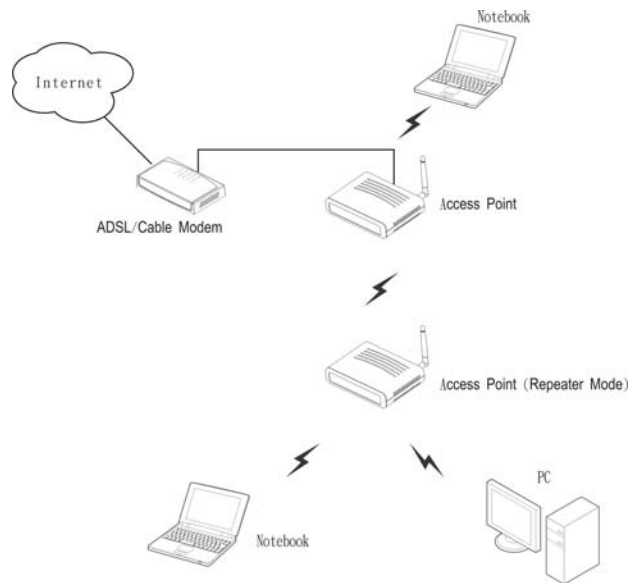

Repeater mode application

AP Name: 802.11g Wireless LAN

Mode:

Channel:

SSID:

☒ Open System ☐ Shared Key

Authentication: ☐ WPA-PSK ☐ WPA2-PSK

☐ WPA ☐ WPA2

WEP Key: ☐ Enabled ☒ Disabled

Repeater mode configuration

SSID: Service Set Identifier, which is a unique name shared among all clients and nodes in a wireless network. The SSID must be identical for each clients and nodes in the wireless network.

Site Survey: This button allows user to enable the Site Survey function to scan for the available wireless network (wireless clients and Access Points) and establish wireless communications with one. Selected one of them in list to establish communications and click “Connect” button.

802.11g Wireless Lan Access Point

Site Survey

SSID	BSSID	Channel	Type	Encrypt	Signal	Select
PM11G	00:03:2f:2d:9a:9b	9 (B+G)	AP	yes	70	<input type="radio"/>
Weirwei	00:0d:0b:ae:09:35	1 (B+G)	AP	yes	56	<input type="radio"/>
Weirwei	00:0d:0b:ae:09:35	2 (B+G)	AP	yes	56	<input type="radio"/>
Ethan_524	00:0d:88:eb:99:5c	9 (B+G)	AP	yes	55	<input type="radio"/>
WBR2310	00:13:46:aa:ae:40	6 (B+G)	AP	yes	49	<input type="radio"/>
God bless you	00:03:2f:1f:32:29	6 (B+G)	AP	yes	36	<input type="radio"/>
aa11111111110000000000111111111111	00:13:46:a2:54:18	5 (B+G)	AP	yes	36	<input type="radio"/>
IntelAP	00:02:b3:92:67:bc	3 (B)	AP	no	21	<input type="radio"/>
allen	00:03:2d:12:34:59	6 (B+G)	AP	no	18	<input type="radio"/>
802.11g-SSID	00:03:2f:10:32:93	11 (B+G)	AP	no	10	<input type="radio"/>

Connectexit

Authentication Type: The authentication type default is set to Open system. There are four options: Open system; Shared Key; WPA-PSK and WPA2-PSK. User may want to set to Shared Key when the clients and AP in the same wireless network enable the WEP encryption. All the nodes and hosts on the network must use the same authentication type.

WEP Key: To disable WEP security, click on the “Disable” option. To enable WEP security, there are 2 types to select – 64bits and 128 bits. When it is selected, the key value must be entered in ASCII or HEX format.

Note: When WEP security is enabled, all the wireless clients that wish to connect to the Access Point must also have WEP enabled with the identical WEP Key value entered.

AP Name: 802.11g Wireless LAN

Mode: Repeater

Channel: 9

SSID:

Site Survey

☒ Open System
 ☐ Shared Key

Authentication:
 ☐ WPA-PSK
 ☐ WPA2-PSK
 ☐ WPA
 ☐ WPA2

WEP Key:
 ☒ Enabled
 ☐ Disabled

WEP Type:
 ☒ 64bits
 ☐ 128bits

Key Mode: HEX

Key:

☒ 1:

☐ 2:

☐ 3:

☐ 4:

WPA-PSK / WPA2-PSK:

If WPA-PSK or WPA2-PSK is selected, user needs to set the key in the passphrase field as the below screen. The key length should be 8 characters at least.




The screenshot displays a configuration window for an Access Point (AP) named "802.11g Wireless LAN". The "Mode" is set to "Repeater". The "Channel" is set to "0". The "SSID" field is empty, and a "Site Survey" button is visible. The "Authentication" section is highlighted with a red box and contains the following options: "Open System", "Shared Key", "WPA-PSK" (selected), "WPA2-PSK", "WPA", and "WPA2". Below the authentication options, there are two fields: "Passphrase:" and "Confirmed Passphrase:", both containing eight asterisks. At the bottom of the highlighted section are three buttons: "Apply", "Cancel", and "Help".

Apply: For the changes made to any of the items above to be effective, click “Apply”. The new settings are now been saved to Access Point and will be effective once the Access Point restarts.

IP Setting

This page allows user to configure the IP and DHCP settings of the Access Point.

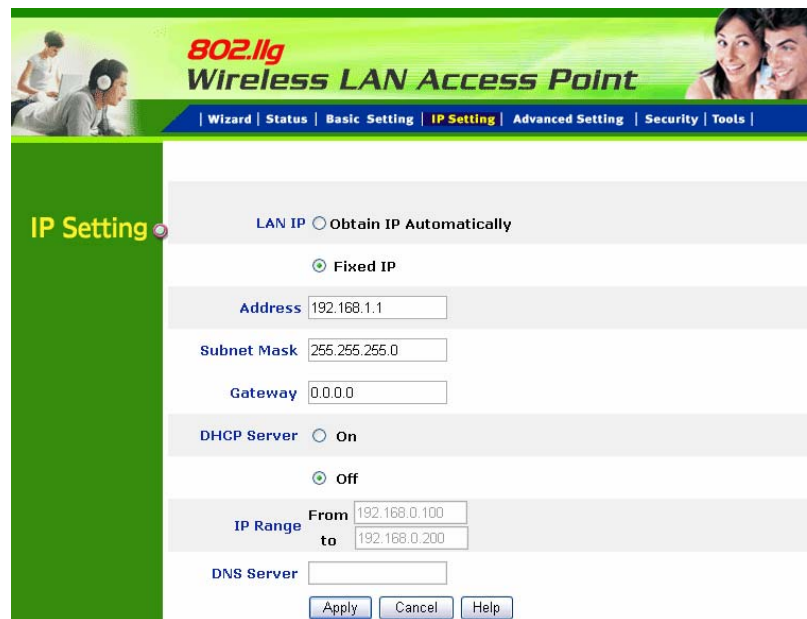

The default IP address of this access point is 192.168.1.1 with the subnet mask of 255.255.255.0. User can type in other values for IP Address, Subnet Mask and Gateway and click “**Apply**” button for the changes to be effective.

User can also set the Access Point to obtain the IP from a DHCP server, but it is not recommended. Select the option “Obtain IP Automatically” and click “**Apply**” button for the changes to be effective.


DHCP Server: It is not recommended to enable the DHCP Server if user has a DHCP server running in LAN network because it probably will cause possible the conflict of IP assignment. Enable the DHCP server function by selecting the option “**On**”, and enter the IP range.

DNS Server: Type up to DNS IP address in the text boxes. Your ISP will provide you with this information.

Click “**Apply**” for the changes to be effective

Advanced Setting

This page contains configurations for advanced users, which the change reflects the wireless performance and operating modes.

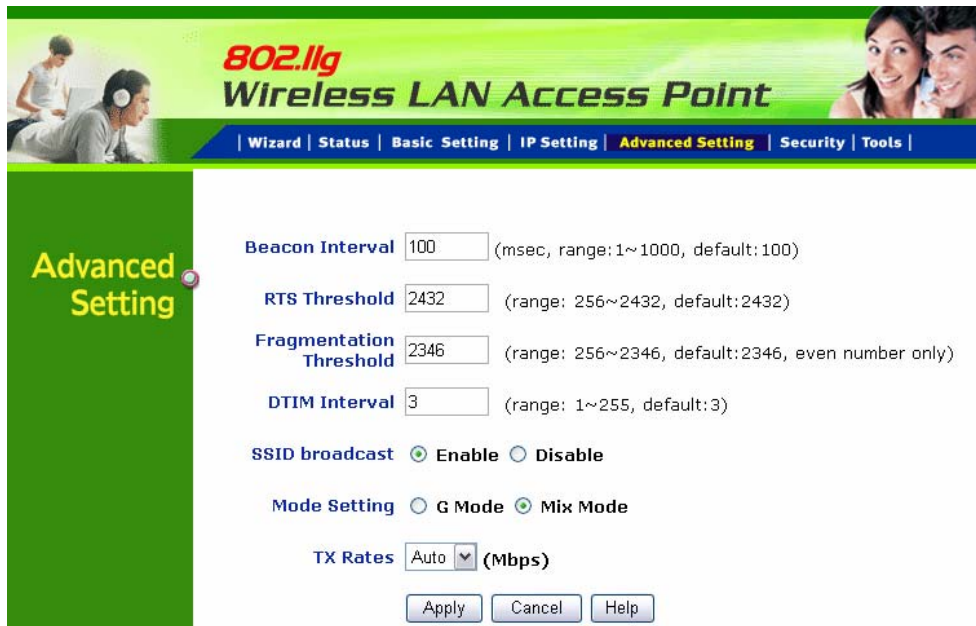

802.11g Wireless LAN Access Point

| Wizard | Status | Basic Setting | IP Setting | **Advanced Setting** | Security | Tools |

Advanced Setting

Beacon Interval (msec, range: 1~1000, default: 100)

RTS Threshold (range: 256~2432, default: 2432)

Fragmentation Threshold (range: 256~2346, default: 2346, even number only)

DTIM Interval (range: 1~255, default: 3)

SSID broadcast ☒ Enable ☐ Disable

Mode Setting ☐ G Mode ☒ Mix Mode

TX Rates (Mbps)

Beacon Interval: To set the period of time in milliseconds that AP sends out a beacon. Default is 100 milliseconds.

RTS Threshold: To set the size of RTS/CTS packet size. Default is 2432 bytes.

Fragmentation Threshold: To set the number of bytes used for the fragmentation boundary for directed messages. Default is 2346 bytes.

DTIM Interval: This value indicates the interval of the Delivery Traffic Indication Message (DTIM). A DTIM field is a countdown field informing clients of the next window for listening to broadcast and multicast messages. When the access point has buffered broadcast or multicast messages for associated clients, it sends the next DTIM with a DTIM interval value. Access point clients hear the beacons and awaken to receive the broadcast and multicast messages.

SSID Broadcast: While SSID Broadcast is enabled, all wireless clients will be able to communicate with the access point. For secure purpose, user may want to disable SSID broadcast to allow only those wireless clients with the AP SSID to communicate with the access point.

Mode Setting: To setting the AP operation mode for 802.11g only or 802.11b/802.11g mix mode

TX Rates: Select one of the wireless communications transfer rates, measured in megabytes per second, based upon the speed of wireless adapters connected to the WLAN.

Security

This page is where user configures the security features supported by this Access Point.

802.11g Wireless LAN Access Point

| Wizard | Status | Basic Setting | IP Setting | Advanced Setting | **Security** | Tools |

Security

Password

AP Password New: [masked]
Confirm: [masked]
[Apply] [Cancel] [Help]

MAC Filter

☒ Disabled MAC Filters
☐ Only **allow** PCs with MAC listed below to access device
☐ Only **deny** PCs with MAC listed below to access device

MAC address [] - [] - [] - [] - [] - [] [Clear]

Connected PCs [00-04-23-4f-30-c6] [Clone]
[Apply] [Cancel] [Help]

MAC Filter List

MAC Address

Password: Allow user to change the new login password. Here are the necessary steps:

1. Enter the new password in the “**AP Password New:**” field.
2. Enter the new password again in the “**Confirm**” field.
3. Click “**Apply**”

MAC Filter: MAC Filter function controls the MAC of the network devices that are listed in this table for access authorization or denial. There have three choices:


- ◆ Disable MAC Filters
- ◆ Only **allow** PCs with MAC listed below to access device
- ◆ Only **deny** PCs with MAC listed below to access device

The maximum number of MAC addresses that can be stored is 50. User can browse through the MAC address saved by selecting the MAC Filter List.

For any changes made in the security page, click “Apply” for the changes to be effective.

Tools

Four functions are provided in this page, Backup, Restore Settings, Restore default settings and Firmware Upgrade.

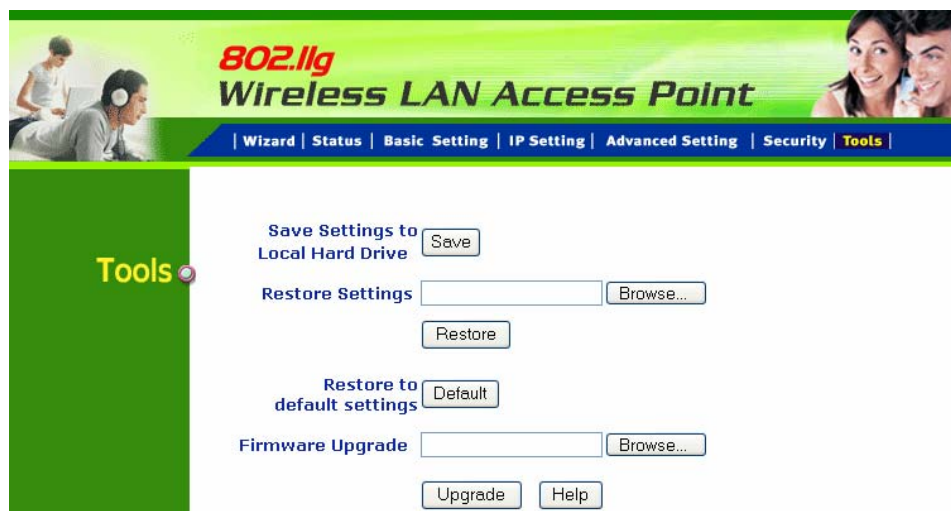

Save Settings to Local Hard Drive: Click on “Save Settings to Local Hard Drive” button, which will open a FileSave Dialog box, where user gets to save all the current settings and configurations to a file.

Restore Settings: Click on the “Browse” button to open a FileOpen Dialog box, where user gets to select the file, which saves previous settings and configurations. Upon selecting the saved file, click “Restore” and complete the restore process when the access point re-operates after it restarts.

Restore to default settings: Click on “Default” button to restore the access point back to its manufacture default settings.

Firmware Upgrade: Click on the “Browse” button to open a FileOpen Dialog box, where gets to select the firmware file, which download from the web for the latest version. Upon selecting the firmware file, click “Upgrade” and complete the firmware upgrade process when the Access Point re-operates after it restarts.

TECHNICAL SPECIFICATIONS

General	
Standards	IEEE 802.11b/g IEEE 802.3u 10/100BASE-TX Fast Ethernet IEEE 802.3af Power over Ethernet
Signal Type:	DSSS (802.11b) OFDM (802.11g)
Modulation:	QPSK / BPSK / CCK / OFDM
LED Indicators:	Power, LAN (Link/Activity), WLAN (Link)
Frequency	2412 MHz ~ 2462 MHz (FCC) 2412 MHz ~ 2472 MHz (ETSI) 2400 MHz ~ 2484 MHz (Japan)
Channel	1 ~ 11 Channels (FCC) 1 ~ 13 Channels (ETSI) 1 ~ 14 Channels (Japan)
Data Encryption:	64 bit / 128 bit WEP Encryption, WPA, WPA2, WPA-PSK, WPA2-PSK
Data Transfer Rate	Fast Ethernet: 10/100Mbps Wireless: Up to 54Mbps (with Automatic Scale Back)
Receiver Sensitivity	54Mbps: Typical -68 dBm @ 10% PER 11Mbps: Typical -81 dBm @ 8% PER
Transmit Power	802.11g: Minimum 13dBm typically 802.11b: Minimum 15dBm typically
Transmission Range:	Outdoor: 100~300M (depends on environment) Indoor: 50~100M (depends on environment)
Network Cables	2-pair UTP/STP Cat. 3,4,5 (100 m)
Interface	1 x 10/100Mbps RJ45 port
Antenna:	1 x 2 dBi Dipole Antenna

Physical and Environmental	
DC inputs	DC 7.5V /1A
Power Consumption	4.2W (Max)
Temperature	Operating: 0 ~ 40 °C, Storage: -10 ~ 70 °C
Humidity	Operating: 10% ~ 90%, Storage: 5% ~ 90%
Dimensions	140 x 98 x 30 mm (W x H x D) without Antenna
EMI:	FCC Class B, CE Mark B,