



HP Pavilion 11 x360 PC

Maintenance and Service Guide

IMPORTANT! This document is intended for HP authorized service providers only.

© Copyright 2014 Hewlett-Packard
Development Company, L.P.

Intel and Pentium are trademarks of Intel Corporation in the U.S. and other countries. Bluetooth is a trademark owned by its proprietor and used by Hewlett-Packard Company under license. Microsoft, Windows, Windows 7, and Windows 8 are U.S. registered trademarks of the Microsoft group of companies. SD Logo is a trademark of its proprietor.

The information contained herein is subject to change without notice. The only warranties for HP products and services are set forth in the express warranty statements accompanying such products and services. Nothing herein should be construed as constituting an additional warranty. HP shall not be liable for technical or editorial errors or omissions contained herein.

First Edition: February 2014

Document Part Number: 753646-001

Product notice

This guide describes features that are common to most models. Some features may not be available on your computer.

Not all features are available on all editions of Windows 8. This computer may require upgraded and/or separately purchased hardware, drivers, and/or software to take full advantage of Windows 8 functionality. See <http://www.microsoft.com> for details.

This computer may require upgraded and/or separately purchased hardware and/or a DVD drive to install the Windows 7 software and take full advantage of Windows 7 functionality. See <http://windows.microsoft.com/en-us/windows7/get-know-windows-7> for details.

Safety warning notice

⚠ WARNING! To reduce the possibility of heat-related injuries or of overheating the device, do not place the device directly on your lap or obstruct the device air vents. Use the device only on a hard, flat surface. Do not allow another hard surface, such as an adjoining optional printer, or a soft surface, such as pillows or rugs or clothing, to block airflow. Also, do not allow the AC adapter to contact the skin or a soft surface, such as pillows or rugs or clothing, during operation. The device and the AC adapter comply with the user-accessible surface temperature limits defined by the International Standard for Safety of Information Technology Equipment (IEC 60950).

Table of contents

| | |
|--|-----------|
| 1 Product description | 1 |
| 2 External component identification | 4 |
| Right side | 4 |
| Left side | 5 |
| Display | 7 |
| Changing your notebook to an entertainment stand | 8 |
| Changing your notebook to a tablet | 8 |
| Top | 9 |
| TouchPad | 9 |
| Speakers | 9 |
| Lights | 10 |
| Keys | 11 |
| Service tag and PCID label | 12 |
| Service tag | 12 |
| PCID label | 13 |
| 3 Illustrated parts catalog | 14 |
| Computer major components | 14 |
| Display assembly subcomponents | 17 |
| Mass storage devices | 18 |
| Miscellaneous parts | 18 |
| Sequential part number listing | 19 |
| 4 Removal and replacement procedures preliminary requirements | 22 |
| Tools required | 22 |
| Service considerations | 22 |
| Plastic parts | 22 |
| Cables and connectors | 23 |
| Drive handling | 23 |
| Grounding guidelines | 24 |
| Electrostatic discharge damage | 24 |
| Packaging and transporting guidelines | 25 |
| Workstation guidelines | 25 |

| | |
|---|-----------|
| 5 Removal and replacement procedures for Authorized Service Provider parts | 27 |
| Component replacement procedures | 27 |
| Bottom cover | 28 |
| USB/audio board | 31 |
| WLAN module | 32 |
| WWAN module | 34 |
| Hard drive | 36 |
| RTC battery | 39 |
| Memory module | 41 |
| Power button board | 43 |
| Fan | 45 |
| Heat sink | 46 |
| Battery | 49 |
| Speakers | 50 |
| TouchPad button board | 51 |
| Display assembly | 53 |
| Power connector cable | 59 |
| System board | 60 |
| Keyboard | 62 |
| | |
| 6 Using Setup Utility (BIOS) and HP PC Hardware Diagnostics (UEFI) | 64 |
| Starting Setup Utility (BIOS) | 64 |
| Updating the BIOS | 64 |
| Determining the BIOS version | 64 |
| Downloading a BIOS update | 65 |
| Using HP PC Hardware Diagnostics (UEFI) | 66 |
| Downloading HP PC Hardware Diagnostics (UEFI) to a USB device | 66 |
| | |
| 7 Specifications | 67 |
| Computer specifications | 67 |
| Hard drive specifications | 68 |
| | |
| 8 Backing up, restoring, and recovering | 69 |
| Creating recovery media and backups | 69 |
| Creating HP Recovery media | 69 |
| Restore and recovery | 70 |
| Recovering using HP Recovery Manager | 71 |
| What you need to know | 71 |
| Using the HP Recovery partition (select models only) | 71 |
| Using HP Recovery media to recover | 72 |

| | |
|---|-----------|
| Changing the computer boot order | 72 |
| Removing the HP Recovery partition | 72 |
| 9 Power cord set requirements | 73 |
| Requirements for all countries | 73 |
| Requirements for specific countries and regions | 73 |
| 10 Recycling | 75 |
| Index | 76 |

1 Product description


| Category | Description |
|------------------------|---|
| Product Name | HP Pavilion 11 x360 PC |
| Processor | Intel® Pentium N3520 processor (2.17GHz/2.42GHz, 2 MB L2, 1333MHz) Intel Celeron N2820 processor (2.13GHz/2.39GHz, 1 MB L2, 1066MHz) |
| Chipset | Intel Bay Trail-M SoC |
| Graphics | Internal graphics: Intel HD Graphics Support for DX11 Support for HD playback, streaming, and recording @ 720p 30fps |
| Panel | 11.6-in [29.5-cm] (1366×768), high-definition (HD), white light emitting diode (WLED), AntiGlare, TouchScreen with MultiTouch enabled; 16:9 ultra-wide aspect ratio; typical brightness: 200 nits; slim (3.6-mm) Supports low-voltage differential signaling (LVDS) (co-layout with eDP1.3+PSR) |
| Memory | One customer-accessible/upgradable memory module slot Support for DDR3L-1333-MHz (DDR3L-1600-MHz downgrade to DDR3L-1333-MHz) – for use with Pentium processors Support for DDR3L-1066-MHz (DDR3L-1600-MHz downgrade to DDR3L-1066-MHz) – for use with Celeron processors Support for 8192-MB of system RAM in the following configurations: <ul style="list-style-type: none">• 8192 MB × 1• 4096 MB × 1• 2048 MB × 1 |
| Hard drive | Support for 6.35-cm (2.5-in) hard drives in 7.0-mm (.28-in) thickness Support for Serial ATA Support for Accelerometer hard drive protection Support for the following hard drives: <ul style="list-style-type: none">• 750-GB, 5400-rpm, 7.2-mm• 500-GB, 5400-rpm, 7.0-mm• 500-GB, 5400-rpm + 8 GB NAND Hybrid, 7.0-mm• 320-GB, 5400-rpm, 7.0-mm |
| Optical drive | Support for external 9.5 mm tray load, SATA, DVD+/-RW DL SuperMulti drive only |
| Audio and video | Integrated HP TrueVision camera: HD (1280×720 by 30 frames per second), fixed (no tilt), with activity light Realtek ALC3227-CG audio codec Two speakers |

| Category | Description |
|----------------------------------|--|
| | <p>Beats Audio</p> <p>Dual Speakers support 25 mm x 14 mm speaker</p> <p>Formats: MP3, AAC,AAC+, EAAC+ OGG, MIDI</p> |
| Ethernet | <p>Integrated 10/100 network interface card (NIC)</p> <p>Co-layout with Giga-LAN</p> |
| Sensor | <p>Sensor Hub (Accelerometer + Gyroscope + e-Compass)</p> <p>Support Proximity Sensor for SAR certification (WWAN option)</p> |
| Wireless | <p>Integrated wireless local area network (WLAN) options by way of wireless module</p> <p>Support for the following WLAN formats:</p> <ul style="list-style-type: none"> • Atheros AR9485 802.11b/g/n WiFi Adapter with 1 antenna • Qualcomm QCA9565 802.11bgn 1x1 Wi-Fi + BT4.0 Combo Adapter with 1 antenna • Ralink RT3290LE 802.11b/g/n 1x1 WiFi and Bluetooth 4.0 Combo Adapter with 1 antenna • Realtek RTL8188EE 802.11bgn Wi-Fi Adapter with 1 antenna <p>Integrated wireless wide area network (WWAN) options by way of wireless module</p> <p>Support for the following WWAN formats:</p> <p>HP hs3110 HSPA+ Mobile Broadband Module</p> <p>Compatible with Miracast-certified devices</p> |
| External media cards | <p>HP Multi-Format Digital Media Card Reader with push-push technology. Supports SD/SDHC/SDXC.</p> <p>SIM card slot</p> |
| Ports | <ul style="list-style-type: none"> • AC adapter: HP Smart pin plug (4.5-mm barrel) • Audio: one combo audio-out (headphone)/audio-in (microphone) jack, supports jack auto-detection • HDMI: v. 1.4, supporting up to 1080p, 1920×1080 at 60 Hz • RJ-45/Ethernet • (1) USB 3.0 • (2) USB 2.0 • Video: VGA (Dsub 15-pin) supporting 1920×1200 external resolution at 60 Hz, hot plug/unplug and auto-detection for correct output to wide-aspect vs. standard aspect video |
| Keyboard/pointing devices | <p>97%-size, textured, island-style keyboard (no numerical keypad)</p> <p>Touchpad requirements:</p> <p>HP Imagepad - Clickpad with image sensor</p> <p>Taps enabled as default</p> <p>Multitouch gestures enabled: 2-finger scroll, pinch</p> <p>Support for PS/2 and SMB interface</p> <p>Support for Windows 8.1 Modern TouchPad Gestures</p> |
| Power requirements | <p>Support for the following AC adapters:</p> <ul style="list-style-type: none"> • 45-W HP Smart AC adapter (non-PFC, MSH) (for Germany only) |

| Category | Description |
|-------------------------|--|
| | <ul style="list-style-type: none">• 45-W HP Smart AC adapter (non-PFC, with 26.5 mm z-height adapter [non-slim]) (not for India/People's Republic of China)• 65-W HP Smart AC adapter (non-PFC, EM, 4.5-mm) (only for India/People's Republic of China) <p>Embedded 2-cell, 29-Wh, Li-ion battery</p> <p>Supports battery fast charge</p> |
| Security | Kensington Lock slot |
| Operating system | Preinstalled: Windows 8.1 Windows 8.1 Small Screen Touch |
| Serviceability | End user replaceable parts: <ul style="list-style-type: none">• AC adapter• WWAN SIM card |


2 External component identification

Right side

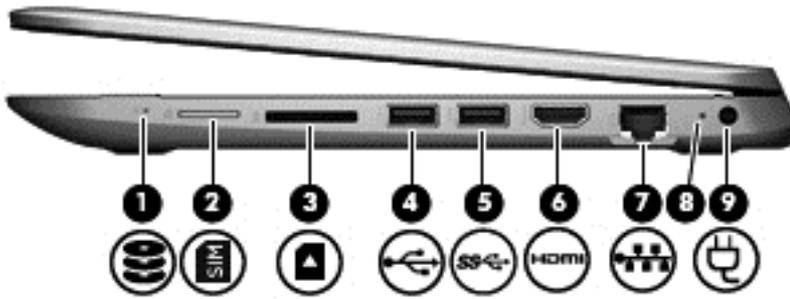

| Component | Description |
|--|---|
| (1)  Hard drive light | <ul style="list-style-type: none">Blinking white: The hard drive is being accessed.Amber: HP 3D DriveGuard has temporarily parked the hard drive. |
| (2)  SIM slot (select models only) | Supports a wireless subscriber identity module (SIM). |
| (3)  Memory card reader | <p>Reads optional memory cards that store, manage, share, or access information.</p> <p>To insert a card, hold the card label-side up, with connectors facing the slot, insert the card into the slot, and then push in on the card until it is firmly seated.</p> <p>To remove a card, press in on the card until it pops out.</p> |
| (4)  USB 2.0 port | Connects an optional USB device, such as a keyboard, mouse, external drive, printer, scanner or USB hub. |
| (5)  USB 3.0 port | Connects an optional USB device, such as a keyboard, mouse, external drive, printer, scanner or USB hub. |
| (6)  HDMI port | Connects an optional video or audio device, such as a high-definition television, any compatible digital or audio component, or a high-speed HDMI device. |
| (7)  RJ-45 (network) jack/status lights | <p>Connects a network cable.</p> <ul style="list-style-type: none">White: The network is connected.Amber: Activity is occurring on the network. |
| (8)  AC adapter light | <ul style="list-style-type: none">On: The AC adapter is connected and the battery is charged.Off: The computer is using battery power. |
| (9)  Power connector | Connects an AC adapter. |


Left side

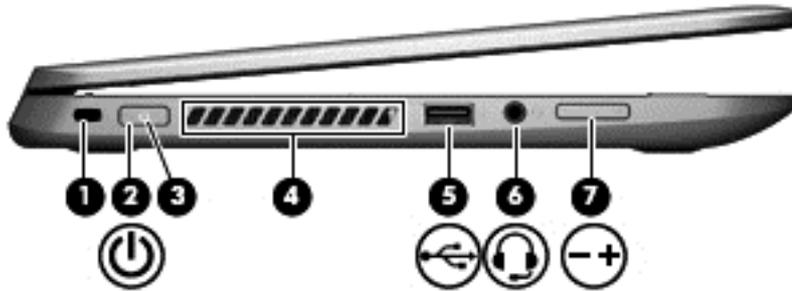

| Component | Description |
|--|--|
| (1) Security cable slot | Attaches an optional security cable to the computer. NOTE: The security cable is designed to act as a deterrent, but it may not prevent the computer from being mishandled or stolen. |
| (2)  Power button | <ul style="list-style-type: none"> When the computer is off, press the button to turn on the computer. When the computer is on, press the button briefly to initiate Sleep. When the computer is in the Sleep state, press the button briefly to exit Sleep. When the computer is in Hibernation, press the button briefly to exit Hibernation. <p>CAUTION: Pressing and holding down the power button will result in the loss of unsaved information.</p> <p>If the computer has stopped responding and Windows shutdown procedures are ineffective, press and hold the power button down for at least 5 seconds to turn off the computer.</p> <p>To learn more about your power settings, see your power options. From the Start screen, type <code>power</code>, select Power and sleep settings, and then select Power and sleep from the list of applications.</p> |
| (3) Power light | <ul style="list-style-type: none"> On: The computer is on. Blinking: The computer is in the Sleep state, a power-saving state. The computer shuts off power to the display and other unneeded components. Off: The computer is off or in Hibernation. Hibernation is a power-saving state that uses the least amount of power. |
| (4) Vent | Enables airflow to cool internal components. NOTE: The computer fan starts up automatically to cool internal components and prevent overheating. It is normal for the internal fan to cycle on and off during routine operation. |
| (5)  USB 2.0 port | Connects an optional USB device, such as a keyboard, mouse, external drive, printer, scanner or USB hub. |

| Component | Description |
|---|---|
| <p>(6)  Audio-out (headphone)/Audio-in (microphone) jack</p> | <p>Connects optional powered stereo speakers, headphones, earbuds, a headset, or a television audio cable. Also connects an optional headset microphone. This jack does not support optional microphone-only devices.</p> <p>WARNING! To reduce the risk of personal injury, adjust the volume before putting on headphones, earbuds, or a headset. For additional safety information, refer to the <i>Regulatory, Safety, and Environmental Notices</i>. To access this guide, from the Start screen, type <code>support</code>, and then select the HP Support Assistant app.</p> <p>NOTE: When a device is connected to the jack, the computer speakers are disabled.</p> <p>NOTE: Be sure that the device cable has a 4-conductor connector that supports both audio-out (headphone) and audio-in (microphone).</p> |
| <p>(7)  Volume button</p> | <p>Controls speaker volume.</p> <p>To decrease speaker volume, press the – edge of the button.</p> <p>To increase speaker volume, press the + edge of the button.</p> |

Display

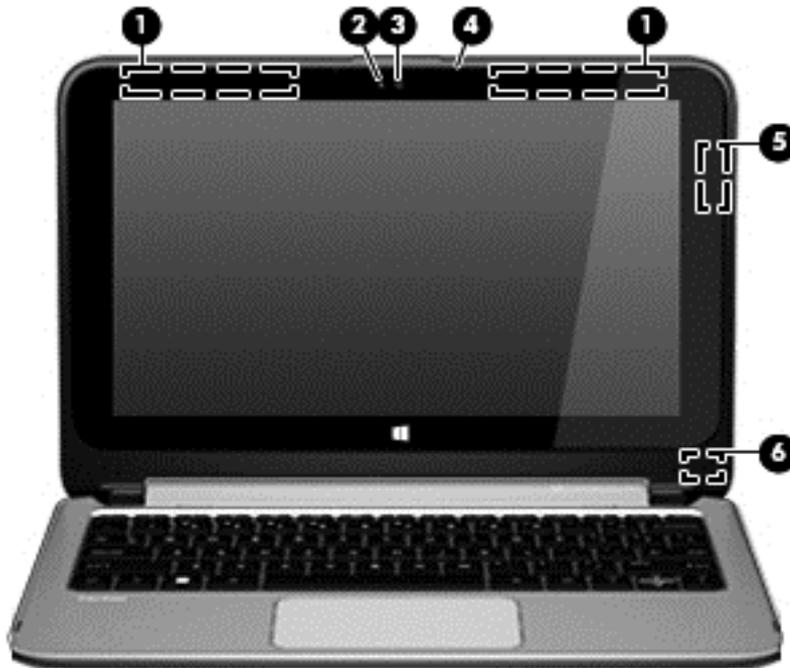

| Component | Description |
|---|---|
| (1) WWAN antennas (2)* (select models only) | Send and receive wireless signals to communicate with wireless wide area networks (WWAN). |
| (2) Webcam light | On: The webcam is in use. |
| (3) Webcam | Records video and captures photographs. Some models allow you to video conference and chat online using streaming video. To use the webcam, from the Start screen, type <code>camera</code> , and then select Camera from the list of applications. |
| (4) Internal microphone | Records sound. |
| (5) WLAN antenna* | Sends and receives wireless signals to communicate with wireless local area networks (WLANs). |
| (6) Internal display switch | Turns off the display and initiates Sleep if the display is closed while the power is on. NOTE: The internal display switch is not visible from the outside of the computer. |

*The antennas are not visible from the outside of the computer. For optimal transmission, keep the areas immediately around the antennas free from obstructions. For wireless regulatory notices, see the section of the *Regulatory, Safety, and Environmental Notices* that applies to your country or region. To access this guide, from the Start screen, type `support`, and then select the **HP Support Assistant** app.

Your computer can function as a classic notebook, and in addition, the display can be rotated so that the computer transforms into an entertainment stand or a tablet.


Changing your notebook to an entertainment stand

To change your notebook to an entertainment stand, raise the display, and then rotate the display backward to a stand position (about 315 degrees).



Changing your notebook to a tablet

To change your notebook to a tablet, raise the display, and then rotate the display backward until it is flush with the computer bottom (360 degrees).

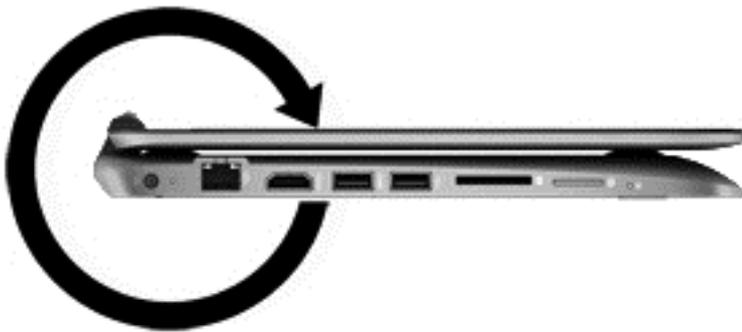

Top

TouchPad




| Component | Description |
|---------------------------|---|
| (1) TouchPad zone | Moves the on-screen pointer and selects or activates items on the screen. NOTE: The TouchPad also supports edge-swipe gestures. |
| (2) Left TouchPad button | Functions like the left button on an external mouse. |
| (3) Right TouchPad button | Functions like the right button on an external mouse. |

Speakers




| Component | Description |
|--------------|----------------|
| Speakers (2) | Produce sound. |

Lights

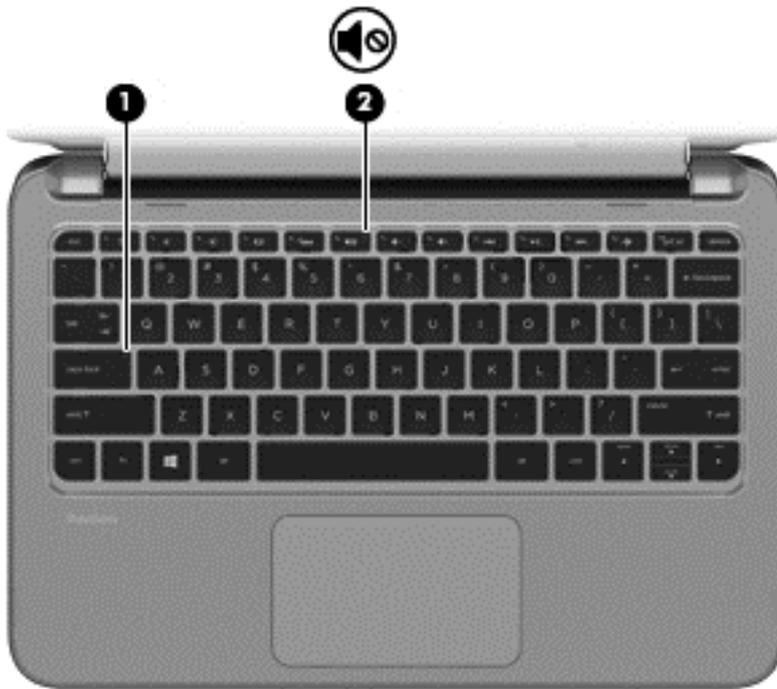

| Component | Description |
|--|--|
| (1) Caps lock light | On: Caps lock is on, which switches the keys to all capital letters. |
| (2)  Mute light | <ul style="list-style-type: none">• Amber: Computer sound is off.• Off: Computer sound is on. |

Keys

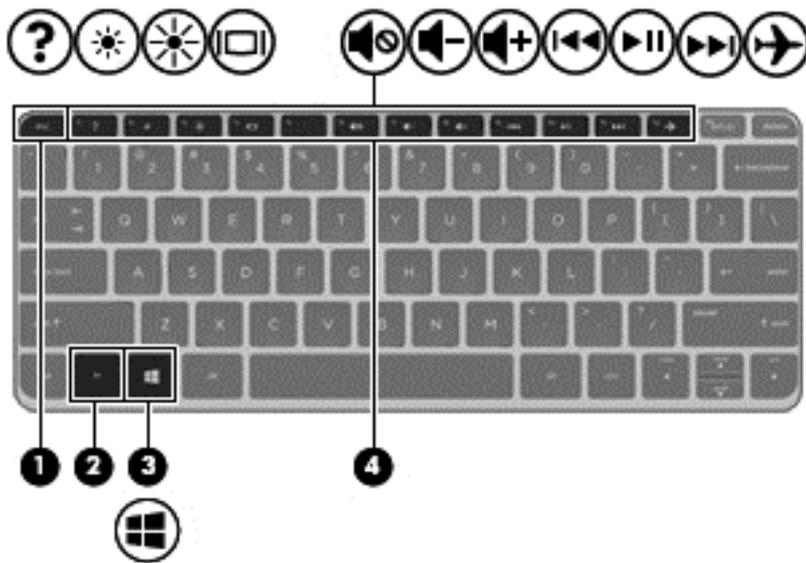


| Component | Description |
|---|--|
| (1) esc key | Displays system information when pressed in combination with the fn key. |
| (2) fn key | Executes frequently used system functions when pressed in combination with the b key, the spacebar , or the esc key. |
| (3)  Windows key | Returns you to the Start screen from an open app or the Windows desktop. NOTE: Pressing the Windows key again will return you to the previous screen. |
| (4) Action keys | Execute frequently used system functions. |

Service tag and PCID label

Service tag

When ordering parts or requesting information, provide the computer serial number and model description provided on the service tag.

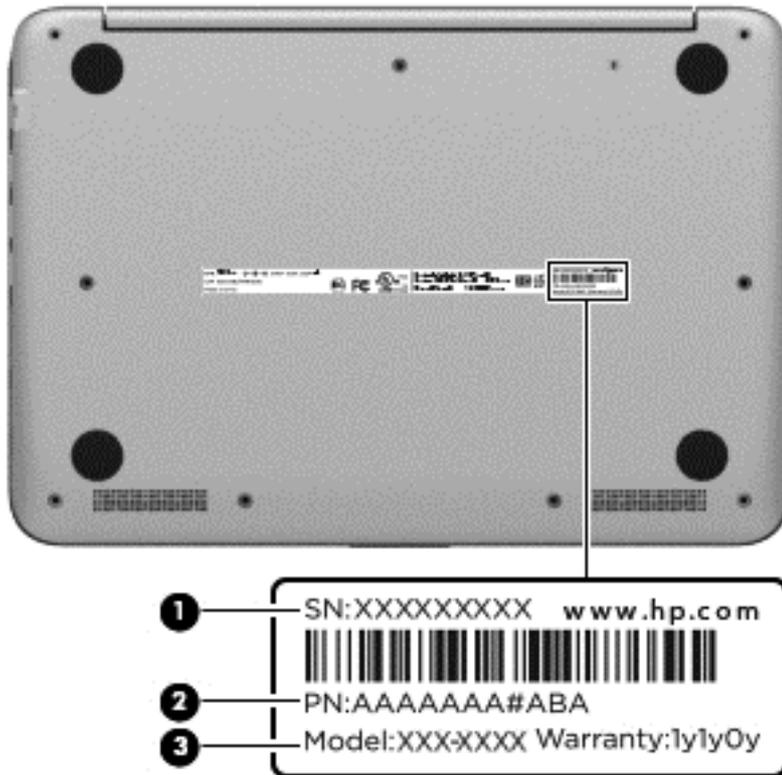

- Serial number (s/n) **(1)**. This is an alphanumeric identifier that is unique to each product.
- Part number/Product number (p/n) **(2)**. This number provides specific information about the product's hardware components. The part number helps a service technician to determine what components and parts are needed.
- Model/Warranty period **(3)**.

Model is the alphanumeric identifier used to locate documents, drivers, and support for the computer.

Warranty describes the duration (in years) of the warranty period for the computer.

PCID label

The PCID label provides the information required to properly reset the notebook firmware (BIOS) back to factory shipped specifications when replacing the system board. The label may have a different number of characters depending on the operating system on the computer.

Windows 8 models




Non-Windows 8 models



3 Illustrated parts catalog

Computer major components

 **NOTE:** HP continually improves and changes product parts. For complete and current information on supported parts for your computer, go to <http://partsurfer.hp.com>, select your country or region, and then follow the on-screen instructions.

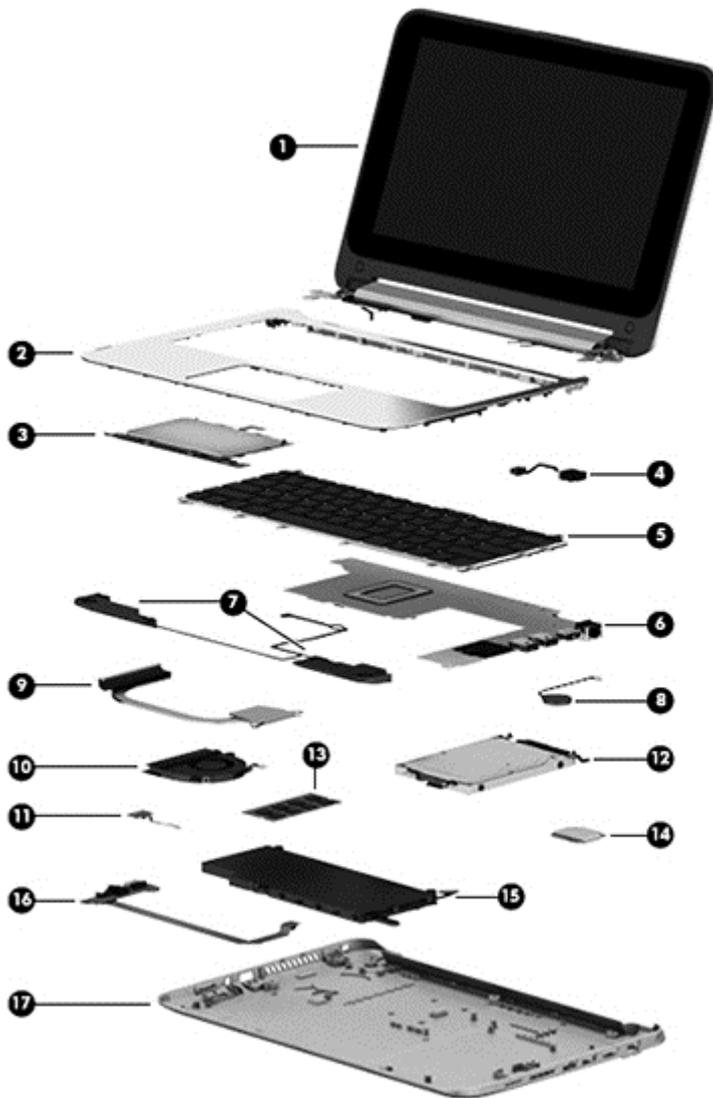


| Item | Component | Spare part number |
|------|---|-------------------|
| (1) | Display assembly (11.6-in [29.5-cm], AG, SVA, LED TouchScreen) (includes webcam/microphone module) | |
| | For use in red models without WWAN | 755730-001 |
| | For use in red models with WWAN | 756108-001 |

| Item | Component | Spare part number |
|-------------|--|--------------------------|
| (2) | Top cover (includes TouchPad) | |
| | For use in silver models | 756116-001 |
| | For use in red models | 759976-001 |
| (3) | TouchPad button board (includes bracket and cable) | not spared |
| (4) | Power connector cable | 755727-001 |
| (5) | Keyboard | |
| | For use in Belgium | 755896-A41 |
| | For use in Brazil | 755896-201 |
| | For use in Bulgaria | 755896-BA1 |
| | For use in Canada | 755896-DB1 |
| | For use in the Czech Republic and Slovakia | 755896-FL1 |
| | For use in Denmark, Finland, and Norway | 755896-DH1 |
| | For use in France | 755896-051 |
| | For use in Germany | 755896-041 |
| | For use in Hungary | 755896-211 |
| | For use in Israel | 755896-BB1 |
| | For use in Italy | 755896-061 |
| | For use in Japan | 755896-291 |
| | For use in Latin America | 755896-161 |
| | For use in the Netherlands | 755896-B31 |
| | For use in Portugal | 755896-131 |
| | For use in Russia | 755896-251 |
| | For use in Saudi Arabia | 755896-171 |
| | For use in Spain | 755896-071 |
| | For use in Switzerland | 755896-BG1 |
| | For use in Turkey | 755896-141 |
| | For use in the United Kingdom and Singapore | 755896-031 |
| | For use in the United States | 755896-001 |
| (6) | System board (includes replacement thermal material): | |
| | Equipped with an Intel Pentium N3520 processor and the Windows 8.1 Standard operating system | 755724-501 |
| | Equipped with an Intel Pentium N3520 processor and a non-Windows 8 operating system | 755724-001 |
| | Equipped with an Intel Celeron N2820 processor and the Windows 8.1 Standard operating system | 755723-501 |
| | Equipped with an Intel Celeron N2820 processor and a non-Windows 8 operating system | 755723-001 |

| Item | Component | Spare part number |
|-------------|---|--------------------------|
| (7) | Speaker Kit (includes left and right speakers and cable) | 755738-001 |
| (8) | RTC battery (includes cable) | 755735-001 |
| (9) | Heat sink (includes replacement thermal material) | 755728-001 |
| (10) | Fan | 755729-001 |
| (11) | Power button board (includes cable) | 755733-001 |
| (12) | Hard drive (does not include hard drive bracket, hard drive connector cable, or screws): | |
| | 500-GB, 5400-rpm, 7.0-mm | 683802-005 |
| | 500-GB, 5400-rpm, 8 GB hybrid SSD, 7.0-mm | 732000-005 |
| | Hard Drive Hardware Kit (not illustrated, includes hard drive bracket, hard drive connector cable, and screws) | 755740-001 |
| (13) | Memory module (PC3L, 12800, 1600-MHz): | |
| | 8-GB | 693374-005 |
| | 4-GB | 691740-005 |
| | 2-GB | 691739-005 |
| (14) | WLAN module: | |
| | Atheros AR9485 802.11b/g/n WiFi Adapter | 675794-005 |
| | Qualcomm QCA9565 802.11bgn 1x1 Wi-Fi + BT4.0 Combo Adapter | 733476-005 |
| | Ralink RT3290LE 802.11b/g/n 1×1 WiFi and Bluetooth 4.0 Combo Adapter | 690020-005 |
| | Realtek RTL8188EE 802.11bgn Wi-Fi Adapter | 709848-005 |
| (15) | 2-cell, 29-Wh, 3.82-Ah, Li-ion battery | 751875-005 |
| (16) | USB board (includes cable) | 755734-001 |
| (17) | Bottom cover | |
| | For use in red models | 755725-001 |
| | For use in silver models | 755726-001 |
| | For use in red models with WWAN | 755743-001 |
| | For use in silver models with WWAN | 755744-001 |

Display assembly subcomponents

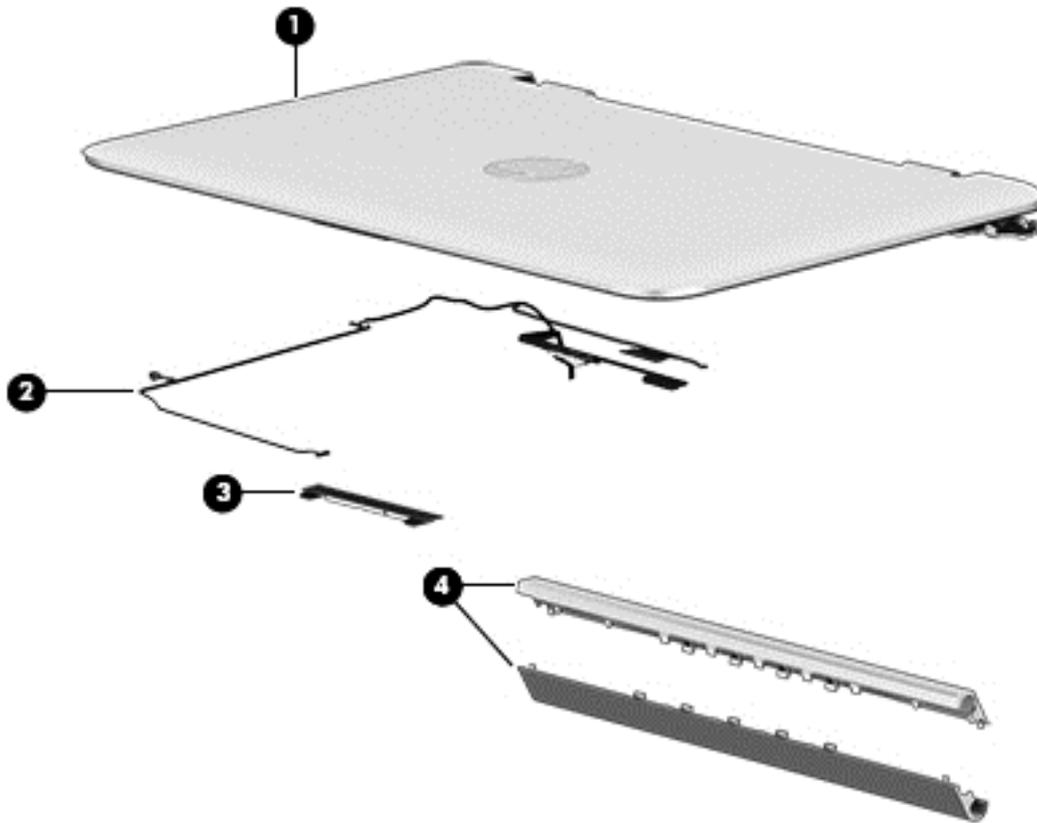

| Item | Component | Spare part number |
|------|-----------------------------|-------------------|
| (1) | Display enclosure | 739573-001 |
| | For use in silver models | 758845-001 |
| | For use in red models | 758846-001 |
| (2) | Display cable | 761350-001 |
| (3) | Webcam | 758848-001 |
| (4) | Display hinge covers | |
| | For use in red models | 758847-001 |
| | For use in silver models | 759503-001 |

Mass storage devices

| Component | Spare part number |
|---|-------------------|
| Hard drive (does not include hard drive bracket, hard drive connector cable, or screws): | |
| 500-GB, 5400-rpm, 7.0-mm | 683802-005 |
| 500-GB, 5400-rpm, 8 GB hybrid SSD, 7.0-mm | 732000-005 |
| Hard Drive Hardware Kit , includes: | 755740-001 |
| Hard drive bracket | |
| Hard drive connector cable | |
| Screws | |
| External DVD±RW Double-Layer with SuperMulti Drive | 747080-001 |

Miscellaneous parts

| Component | Spare part number |
|--|-------------------|
| AC adapter | |
| 45-W HP Smart AC adapter (non-PFC, 4.5-mm, non-slim) | 741727-001 |
| 65-W HP Smart AC adapter (non-PFC, EM, 4.5-mm) | 714657-001 |
| Power cord (3-pin, black, 1.83-m): | |
| For use in Argentina | 755530-D01 |
| For use in Australia | 755530-011 |
| For use in Brazil | 755530-202 |
| For use in the People's Republic of China | 755530-AA1 |
| For use in Europe | 755530-021 |
| For use in India | 755530-D61 |
| For use in Israel | 755530-BB1 |
| For use in Italy | 755530-061 |
| For use in Japan | 755530-291 |
| For use in North America | 755530-001 |
| For use in Thailand | 755530-201 |
| For use in the United Kingdom and Singapore | 755530-031 |
| Rubber Feet Kit (includes 2 rear rubber feet) | 755736-001 |
| Screw Kit | 755737-001 |

Sequential part number listing

| Spare part number | Description |
|-------------------|--|
| 675794-005 | Atheros AR9485 802.11b/g/n WiFi Adapter |
| 683802-005 | 500-GB, 5400-rpm, SATA, 7.0-mm hard drive (does not include hard drive bracket, hard drive connector cable, or screws) NOTE: The hard drive bracket, hard drive connector cable, and screws are included in the Hard Drive Hardware Kit, spare part number 755740-001. |
| 690020-005 | Ralink RT3290LE 802.11b/g/n 1×1 WiFi and Bluetooth 4.0 Combo Adapter |
| 691739-005 | 2-GB memory module (PC3L, 12800, 1600-MHz) |
| 691740-005 | 4-GB memory module (PC3L, 12800, 1600-MHz) |
| 693374-005 | 8-GB memory module (PC3L, 12800, 1600-MHz) |
| 709848-005 | Realtek RTL8188EE 802.11bgn Wi-Fi Adapter |
| 714657-001 | 65-W HP Smart AC adapter (non-PFC, EM, 4.5-mm) |
| 732000-005 | 500-GB, 5400-rpm, 8 GB hybrid SSD, 7.0-mm NOTE: The hard drive bracket, hard drive connector cable, and screws are included in the Hard Drive Hardware Kit, spare part number 755740-001. |
| 733476-005 | Qualcomm QCA9565 802.11bgn 1x1 Wi-Fi + BT4.0 Combo Adapter |
| 741727-001 | 45-W HP Smart AC adapter (non-PFC, 4.5-mm, non-slim) |
| 747080-001 | External DVD±RW Double-Layer with SuperMulti Drive |
| 748599-001 | HP hs3110 HSPA+ Mobile Broadband Module |
| 751875-005 | 2-cell, 29-Wh, 3.82-Ah, Li-ion battery |
| 755530-001 | Power cord for use in North America (3-pin, black, 1.83-m) |
| 755530-011 | Power cord for use in Australia (3-pin, black, 1.83-m) |
| 755530-021 | Power cord for use in Europe (3-pin, black, 1.83-m) |
| 755530-031 | Power cord for use in the United Kingdom and Singapore (3-pin, black, 1.83-m) |
| 755530-061 | Power cord for use in Italy (3-pin, black, 1.83-m) |
| 755530-201 | Power cord for use in Thailand (3-pin, black, 1.83-m) |
| 755530-202 | Power cord for use in Brazil (3-pin, black, 1.83-m) |
| 755530-291 | Power cord for use in Japan (3-pin, black, 1.83-m) |
| 755530-AA1 | Power cord for use in the People's Republic of China (3-pin, black, 1.83-m) |
| 755530-BB1 | Power cord for use in Israel (3-pin, black, 1.83-m) |
| 755530-D01 | Power cord for use in Argentina (3-pin, black, 1.83-m) |
| 755530-D61 | Power cord for use in India (3-pin, black, 1.83-m) |
| 755723-001 | System board equipped with an Intel Celeron N2820 processor and a non-Windows 8 operating system (includes replacement thermal material) |
| 755723-501 | System board equipped with an Intel Celeron N2820 processor and the Windows 8.1 Standard operating system (includes replacement thermal material) |

| Spare part number | Description |
|--------------------------|---|
| 755724-001 | System board equipped with an Intel Pentium N3520 processor and a non-Windows 8 operating system (includes replacement thermal material) |
| 755724-501 | System board equipped with an Intel Pentium N3520 processor and the Windows 8.1 Standard operating system (includes replacement thermal material) |
| 755726-001 | Bottom cover for use in silver models |
| 755727-001 | Power connector cable |
| 755728-001 | Heat sink (includes replacement thermal material) |
| 755729-001 | Fan |
| 755730-001 | 11.6-in [29.5-cm], AG, SVA, LED TouchScreen display assembly for use in red models without WWAN |
| 755733-001 | Power button board (includes cable) |
| 755734-001 | USB board (includes cable) |
| 755735-001 | RTC battery (includes cable) |
| 755736-001 | Rubber Feet Kit (includes 2 rubber feet) |
| 755737-001 | Screw Kit |
| 755738-001 | Speaker Kit (includes left and right speakers and cable) |
| 755740-001 | Hard Drive Hardware Kit (includes hard drive bracket, hard drive connector cable, and screws) |
| 755896-001 | Keyboard for use in the United States (includes keyboard cable and TouchPad) |
| 755896-031 | Keyboard for use in the United Kingdom and Singapore (includes keyboard cable and TouchPad) |
| 755896-041 | Keyboard for use in Germany (includes keyboard cable and TouchPad) |
| 755896-051 | Keyboard for use in France (includes keyboard cable and TouchPad) |
| 755896-061 | Keyboard for use in Italy (includes keyboard cable and TouchPad) |
| 755896-071 | Keyboard for use in Spain (includes keyboard cable and TouchPad) |
| 755896-131 | Keyboard for use in Portugal (includes keyboard cable and TouchPad) |
| 755896-141 | Keyboard for use in Turkey (includes keyboard cable and TouchPad) |
| 755896-161 | Keyboard for use in Latin America (includes keyboard cable and TouchPad) |
| 755896-171 | Keyboard for use in Saudi Arabia (includes keyboard cable and TouchPad) |
| 755896-201 | Keyboard for use in Brazil (includes keyboard cable and TouchPad) |
| 755896-211 | Keyboard for use in Hungary (includes keyboard cable and TouchPad) |
| 755896-251 | Keyboard for use in Russia (includes keyboard cable and TouchPad) |
| 755896-291 | Keyboard for use in Japan (includes keyboard cable and TouchPad) |
| 755896-A41 | Keyboard for use in Belgium (includes keyboard cable and TouchPad) |
| 755896-B31 | Keyboard for use in the Netherlands (includes keyboard cable and TouchPad) |
| 755896-BA1 | Keyboard for use in Bulgaria (includes keyboard cable and TouchPad) |
| 755896-BB1 | Keyboard for use in Israel (includes keyboard cable and TouchPad) |
| 755896-BG1 | Keyboard for use in Switzerland (includes keyboard cable and TouchPad) |

| Spare part number | Description |
|--------------------------|--|
| 755896-DB1 | Keyboard for use in Canada (includes keyboard cable and TouchPad) |
| 755896-DH1 | Keyboard for use in Denmark, Finland, and Norway (includes keyboard cable and TouchPad) |
| 755896-FL1 | Keyboard for use in the Czech Republic and Slovakia (includes keyboard cable and TouchPad) |
| 756108-001 | 11.6-in [29.5-cm], AG, SVA, LED TouchScreen display assembly for use in red models with WWAN |
| 756116-001 | Top cover for use in silver models (includes TouchPad) |
| 758845-001 | Display rear cover for use in silver models |
| 758846-001 | Display rear cover for use in red models |
| 758847-001 | Display hinge covers for use in red models |
| 758848-001 | Webcam |
| 759503-001 | Display hinge covers for use in silver models |
| 759976-001 | Top cover for use in red models (includes TouchPad) |
| 761350-001 | Display cable |

4 Removal and replacement procedures preliminary requirements

Tools required

You will need the following tools to complete the removal and replacement procedures:

- Flat-bladed screw driver
- Magnetic screw driver
- Phillips P0 and P1 screw drivers

Service considerations

The following sections include some of the considerations that you must keep in mind during disassembly and assembly procedures.



NOTE: As you remove each subassembly from the computer, place the subassembly (and all accompanying screws) away from the work area to prevent damage.

Plastic parts



CAUTION: Using excessive force during disassembly and reassembly can damage plastic parts. Use care when handling the plastic parts. Apply pressure only at the points designated in the maintenance instructions.

Cables and connectors

⚠ CAUTION: When servicing the computer, be sure that cables are placed in their proper locations during the reassembly process. Improper cable placement can damage the computer.

Cables must be handled with extreme care to avoid damage. Apply only the tension required to unseat or seat the cables during removal and insertion. Handle cables by the connector whenever possible. In all cases, avoid bending, twisting, or tearing cables. Be sure that cables are routed in such a way that they cannot be caught or snagged by parts being removed or replaced. Handle flex cables with extreme care; these cables tear easily.

Drive handling

⚠ CAUTION: Drives are fragile components that must be handled with care. To prevent damage to the computer, damage to a drive, or loss of information, observe these precautions:

Before removing or inserting a hard drive, shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.

Before handling a drive, be sure that you are discharged of static electricity. While handling a drive, avoid touching the connector.

Before removing a diskette drive or optical drive, be sure that a diskette or disc is not in the drive and be sure that the optical drive tray is closed.

Handle drives on surfaces covered with at least one inch of shock-proof foam.

Avoid dropping drives from any height onto any surface.

After removing a hard drive, an optical drive, or a diskette drive, place it in a static-proof bag.

Avoid exposing an internal hard drive to products that have magnetic fields, such as monitors or speakers.

Avoid exposing a drive to temperature extremes or liquids.

If a drive must be mailed, place the drive in a bubble pack mailer or other suitable form of protective packaging and label the package "FRAGILE."

Grounding guidelines

Electrostatic discharge damage

Electronic components are sensitive to electrostatic discharge (ESD). Circuitry design and structure determine the degree of sensitivity. Networks built into many integrated circuits provide some protection, but in many cases, ESD contains enough power to alter device parameters or melt silicon junctions.

A discharge of static electricity from a finger or other conductor can destroy static-sensitive devices or microcircuitry. Even if the spark is neither felt nor heard, damage may have occurred.

An electronic device exposed to ESD may not be affected at all and can work perfectly throughout a normal cycle. Or the device may function normally for a while, then degrade in the internal layers, reducing its life expectancy.

⚠ CAUTION: To prevent damage to the computer when you are removing or installing internal components, observe these precautions:

Keep components in their electrostatic-safe containers until you are ready to install them.

Before touching an electronic component, discharge static electricity by using the guidelines described in this section.

Avoid touching pins, leads, and circuitry. Handle electronic components as little as possible.

If you remove a component, place it in an electrostatic-safe container.

The following table shows how humidity affects the electrostatic voltage levels generated by different activities.

⚠ CAUTION: A product can be degraded by as little as 700 V.

Typical electrostatic voltage levels

| Event | Relative humidity | | |
|---------------------------------|-------------------|----------|---------|
| | 10% | 40% | 55% |
| Walking across carpet | 35,000 V | 15,000 V | 7,500 V |
| Walking across vinyl floor | 12,000 V | 5,000 V | 3,000 V |
| Motions of bench worker | 6,000 V | 800 V | 400 V |
| Removing DIPS from plastic tube | 2,000 V | 700 V | 400 V |
| Removing DIPS from vinyl tray | 11,500 V | 4,000 V | 2,000 V |
| Removing DIPS from Styrofoam | 14,500 V | 5,000 V | 3,500 V |
| Removing bubble pack from PCB | 26,500 V | 20,000 V | 7,000 V |
| Packing PCBs in foam-lined box | 21,000 V | 11,000 V | 5,000 V |

Packaging and transporting guidelines

Follow these grounding guidelines when packaging and transporting equipment:

- To avoid hand contact, transport products in static-safe tubes, bags, or boxes.
- Protect ESD-sensitive parts and assemblies with conductive or approved containers or packaging.
- Keep ESD-sensitive parts in their containers until the parts arrive at static-free workstations.
- Place items on a grounded surface before removing items from their containers.
- Always be properly grounded when touching a component or assembly.
- Store reusable ESD-sensitive parts from assemblies in protective packaging or nonconductive foam.
- Use transporters and conveyors made of antistatic belts and roller bushings. Be sure that mechanized equipment used for moving materials is wired to ground and that proper materials are selected to avoid static charging. When grounding is not possible, use an ionizer to dissipate electric charges.

Workstation guidelines

Follow these grounding workstation guidelines:

- Cover the workstation with approved static-shielding material.
- Use a wrist strap connected to a properly grounded work surface and use properly grounded tools and equipment.
- Use conductive field service tools, such as cutters, screw drivers, and vacuums.
- When fixtures must directly contact dissipative surfaces, use fixtures made only of static-safe materials.
- Keep the work area free of nonconductive materials, such as ordinary plastic assembly aids and Styrofoam.
- Handle ESD-sensitive components, parts, and assemblies by the case or PCM laminate. Handle these items only at static-free workstations.
- Avoid contact with pins, leads, or circuitry.
- Turn off power and input signals before inserting or removing connectors or test equipment.

Equipment guidelines

Grounding equipment must include either a wrist strap or a foot strap at a grounded workstation.

- When seated, wear a wrist strap connected to a grounded system. Wrist straps are flexible straps with a minimum of one megohm $\pm 10\%$ resistance in the ground cords. To provide proper ground, wear a strap snugly against the skin at all times. On grounded mats with banana-plug connectors, use alligator clips to connect a wrist strap.
- When standing, use foot straps and a grounded floor mat. Foot straps (heel, toe, or boot straps) can be used at standing workstations and are compatible with most types of shoes or boots. On conductive floors or dissipative floor mats, use foot straps on both feet with a minimum of one megohm resistance between the operator and ground. To be effective, the conductive must be worn in contact with the skin.

The following grounding equipment is recommended to prevent electrostatic damage:

- Antistatic tape
- Antistatic smocks, aprons, and sleeve protectors
- Conductive bins and other assembly or soldering aids
- Nonconductive foam
- Conductive tabletop workstations with ground cords of one megohm resistance
- Static-dissipative tables or floor mats with hard ties to the ground
- Field service kits
- Static awareness labels
- Material-handling packages
- Nonconductive plastic bags, tubes, or boxes
- Metal tote boxes
- Electrostatic voltage levels and protective materials

The following table lists the shielding protection provided by antistatic bags and floor mats.

| Material | Use | Voltage protection level |
|-----------------------|------------|--------------------------|
| Antistatic plastics | Bags | 1,500 V |
| Carbon-loaded plastic | Floor mats | 7,500 V |
| Metallized laminate | Floor mats | 5,000 V |

5 Removal and replacement procedures for Authorized Service Provider parts

 **CAUTION:** Components described in this chapter should only be accessed by an authorized service provider. Accessing these parts can damage the computer or void the warranty.

 **NOTE:** HP continually improves and changes product parts. For complete and current information on supported parts for your computer, go to <http://partsurfer.hp.com>, select your country or region, and then follow the on-screen instructions.

Component replacement procedures

This chapter provides removal and replacement procedures for Authorized Service Provider only parts.

There are as many as 76 screws that must be removed, replaced, and/or loosened when servicing the computer. Make special note of each screw size and location during removal and replacement.

Bottom cover


| Description | Spare part number |
|---|-------------------|
| Bottom cover for use in red models | 755725-001 |
| Bottom cover for use in silver models | 755726-001 |
| Bottom cover for use in red models with WWAN | 755743-001 |
| Bottom cover for use in silver models with WWAN | 755744-001 |
| Rubber Kit (includes rear feet) | 755736-001 |

Before removing the bottom cover, follow these steps:


1. Turn off the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect the power from the computer by unplugging the power cord from the computer.
3. Disconnect all external devices from the computer.

Remove the bottom cover:

1. Position the computer upside-down.
2. Pry the two rear rubber feet off the bottom cover **(1)**.
3. Remove the two Phillips PM2.5×8.0 screws **(2)** that secure the bottom cover to the computer.

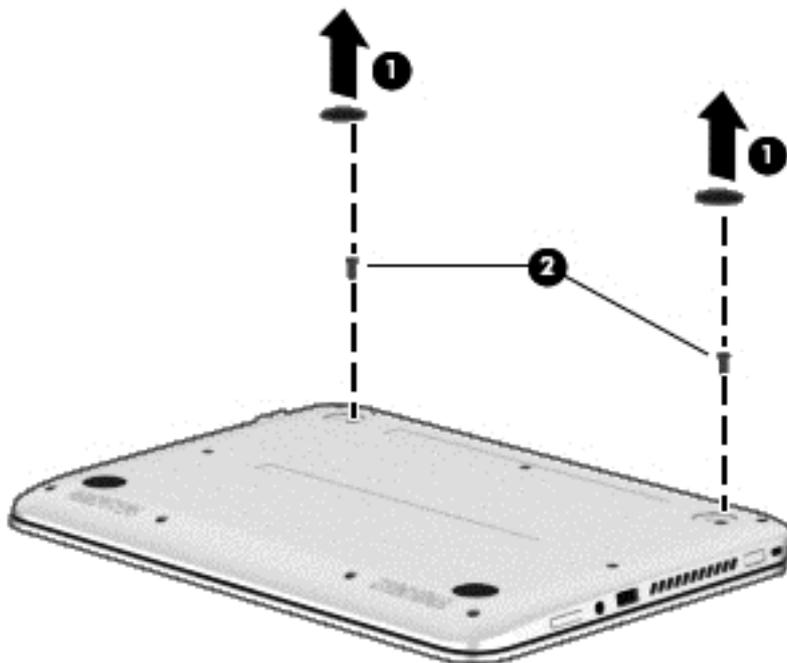


4. Remove the two Phillips PM2.5×8.0 screws **(1)** and the seven Phillips PM2.0×7.0 screws **(2)** that secure the bottom cover to the computer.

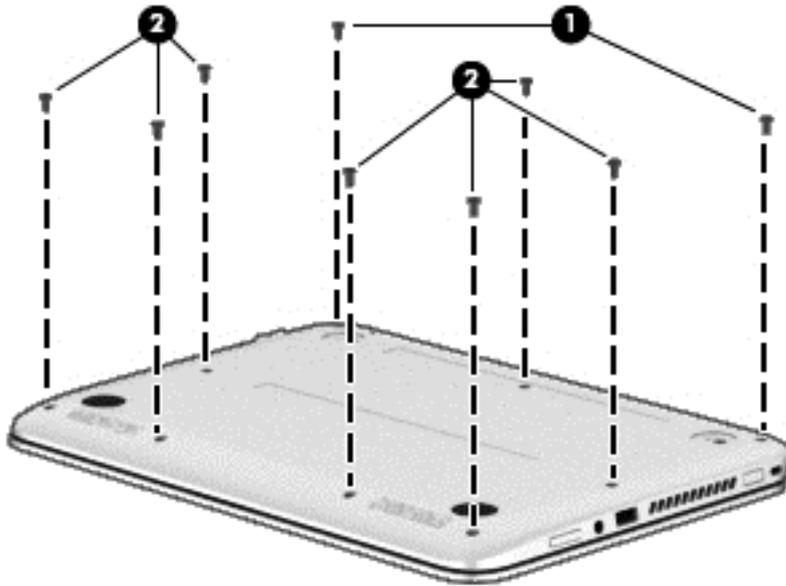


5. Separate the bottom cover from the computer by lifting up at the seam near the display hinges **(1)**, and then lift the cover up and off the computer **(2)** far enough to access the USB/audio board connector on the system board.

 **NOTE:** When you lift the bottom cover, a cable is connected from the USB/audio board (installed on the inside of the bottom cover) to the system board. Be sure not to pull the cable loose when lifting the bottom cover.

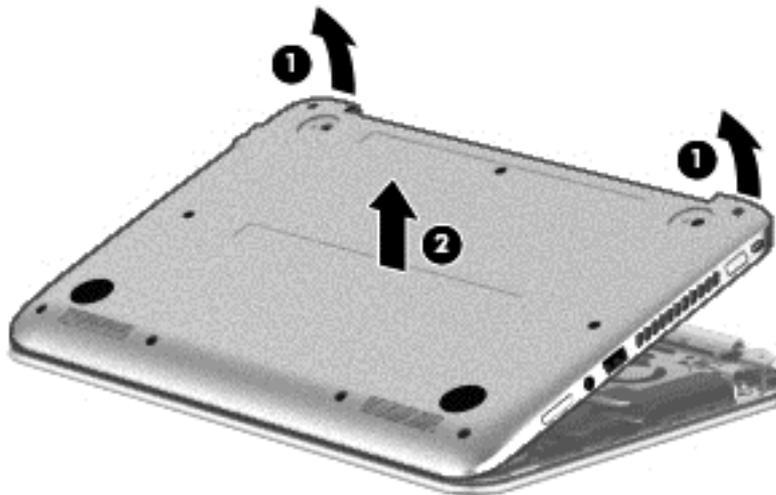

6. Disconnect the USB/audio board cable from the system board by lifting the ZIF connector **(1)**, and then removing the USB/audio board cable from the system board connector **(2)**.

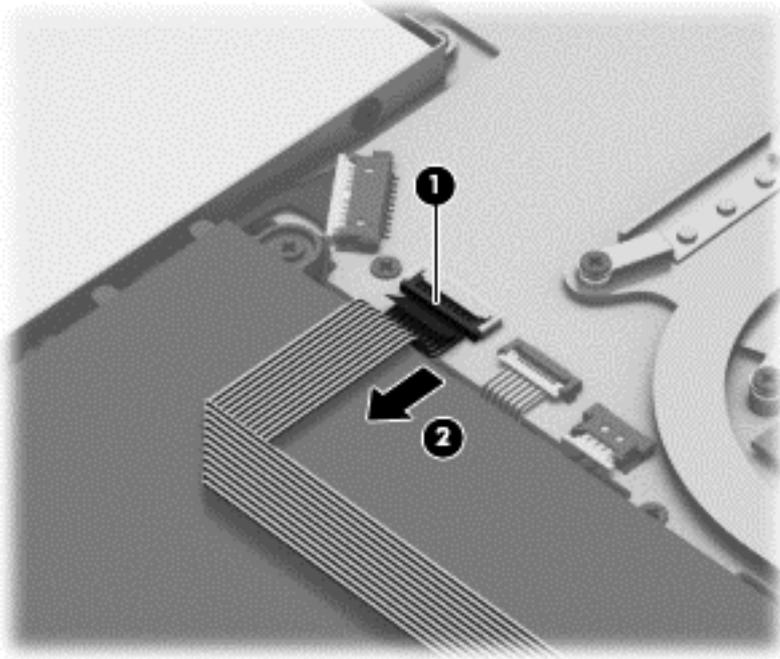

Reverse this procedure to install the bottom cover.

USB/audio board


| Description | Spare part number |
|----------------------------------|-------------------|
| USB/audio board (includes cable) | 755734-001 |

Before removing the USB/audio board, follow these steps:

1. Shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet and then unplugging the AC adapter from the computer.
4. Remove the bottom cover (see [Bottom cover on page 28](#)).

To remove the USB/audio board:

1. Position the bottom cover upside-down.
2. Remove the Phillips PM2.0×3.0 screw **(1)**.
3. Lift up on the rear of the board and lift the board off the bottom cover **(2)**.

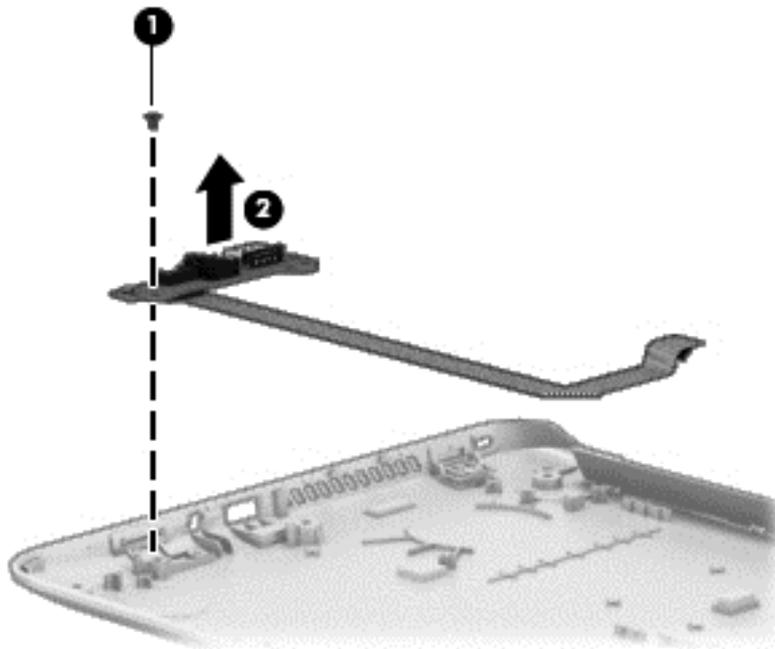

Reverse this procedure to install the USB/audio board.


WLAN module

| Description | Spare part number |
|--|-------------------|
| Atheros AR9485 802.11b/g/n WiFi Adapter | 675794-005 |
| Qualcomm QCA9565 802.11bgn 1x1 Wi-Fi + BT4.0 Combo Adapter | 733476-005 |
| Ralink RT3290LE 802.11b/g/n 1x1 WiFi and Bluetooth 4.0 Combo Adapter | 690020-005 |
| Realtek RTL8188EE 802.11bgn Wi-Fi Adapter | 709848-005 |

CAUTION: To prevent an unresponsive system, replace the wireless module only with a wireless module authorized for use in the computer by the governmental agency that regulates wireless devices in your country or region. If you replace the module and then receive a warning message, remove the module to restore device functionality, and then contact technical support.

Before removing the WLAN module, follow these steps:

1. Turn off the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect the power from the computer by unplugging the power cord from the computer.
3. Disconnect all external devices from the computer.
4. Remove the bottom cover (see [Bottom cover on page 28](#)).
5. Disconnect the battery.

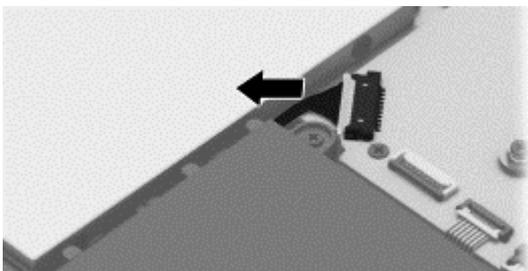

Remove the WLAN module:


1. Disconnect the WLAN antenna cable **(1)** from the terminal on the WLAN module.



NOTE: The WLAN antenna cable connects to the WLAN module “Main” terminal labeled “1”.

2. Remove the two Phillips PM2.0×3.5 screws **(2)** that secure the WLAN module to the system board. (The WLAN module tilts up.)

3. Remove the WLAN module (3) by pulling the module away from the slot at an angle.

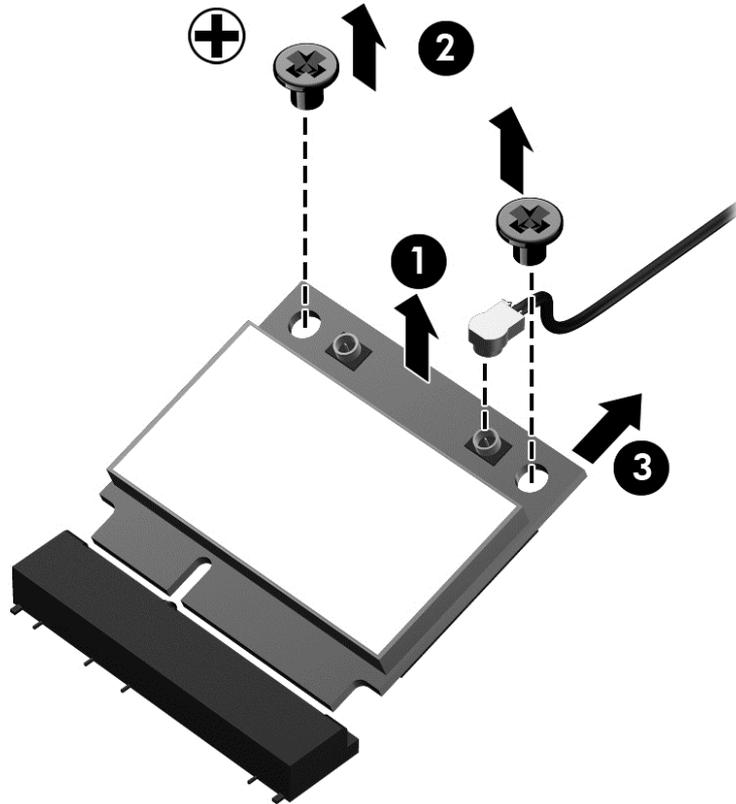

 **NOTE:** If the WLAN antenna cables are not connected to the terminals on the WLAN module, the protective sleeves must be installed on the antenna connectors, as shown in the following illustration.



Reverse this procedure to install the WLAN module.

WWAN module




NOTE: The WWAN module and the WLAN module are not interchangeable.

| Description | Spare part number |
|---|-------------------|
| HP hs3110 HSPA+ Mobile Broadband Module | 748599-001 |

Before removing the WWAN module, follow these steps:

1. Turn off the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect the power from the computer by unplugging the power cord from the computer.
3. Disconnect all external devices from the computer.
4. Remove the bottom cover (see [Bottom cover on page 28](#)).
5. Disconnect the battery.

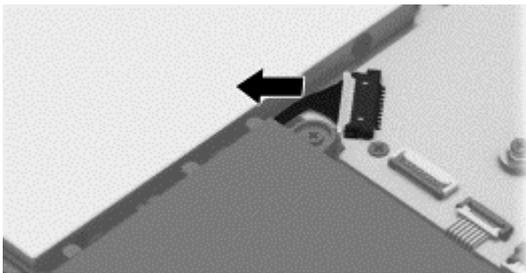

Remove the WWAN module:

1. Disconnect the WWAN antenna cables **(1)** from the terminals on the WWAN module.




NOTE: The red WWAN antenna cable is connected to the WWAN module “Main” terminal. The blue WWAN antenna cable is connected to the WWAN module “Aux” terminal.

2. Remove the Phillips PM2.0×3.0 screw **(2)** that secures the WWAN module to the system board.

3. Remove the WWAN module (3) by pulling the module away from the slot.

 **NOTE:** WWAN modules are designed with a notch to prevent incorrect insertion.

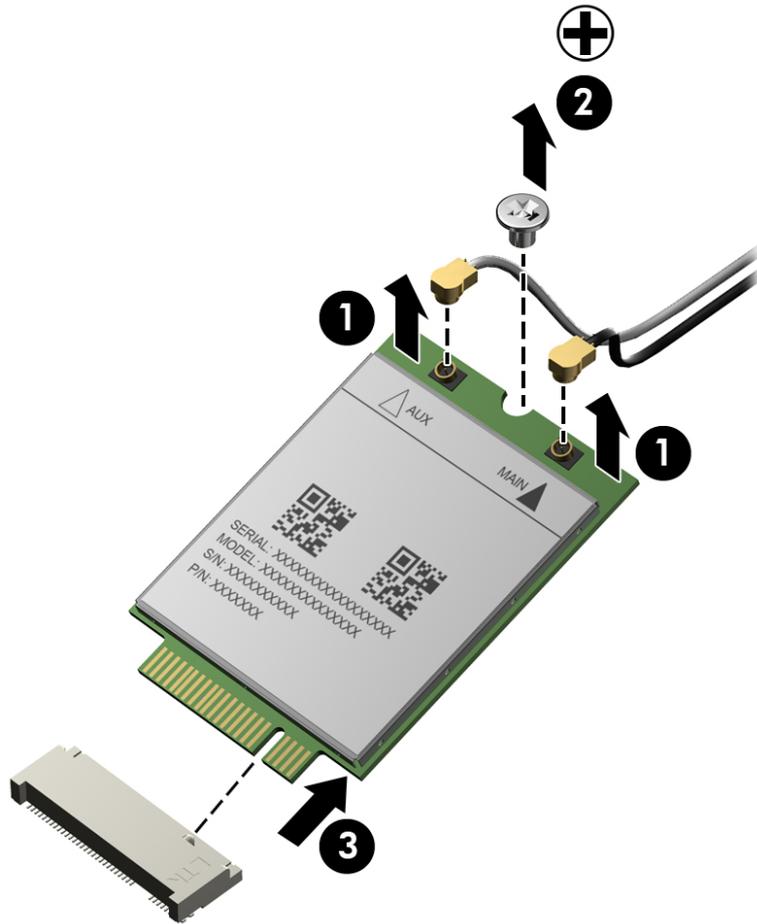

 **NOTE:** If the WWAN antennas are not connected to the terminals on the WWAN module, the protective sleeves must be installed on the antenna connectors, as shown in the following illustration.



Reverse this procedure to install the WWAN module.

Hard drive




NOTE: The hard drive spare part kit does not include the hard drive bracket, hard drive connector cable, and screws. These components are included in the Hard Drive Hardware Kit, spare part number 755740-001.

| Description | Spare part number |
|---|-------------------|
| 500-GB, 5400-rpm, 7.0-mm | 683802-005 |
| 500-GB, 5400-rpm, 8 GB hybrid SSD, 7.0-mm | 732000-005 |

Before removing the hard drive, follow these steps:


1. Turn off the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect the power from the computer by unplugging the power cord from the computer.
3. Disconnect all external devices from the computer.
4. Remove the bottom cover (see [Bottom cover on page 28](#)).
5. Disconnect the battery.

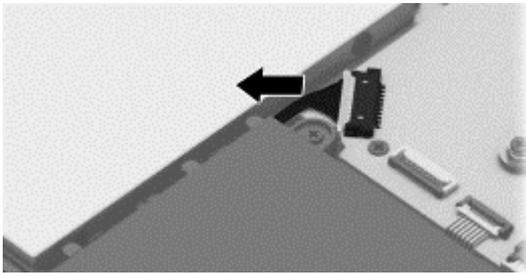

Remove the hard drive:


1. Disconnect the hard drive connector cable **(1)** from the system board.
2. Remove the Phillips PM2.0×7.0 screw **(2)** that secures the hard drive and battery to the computer.
3. Remove the three Phillips PM2.0×3.0 screws **(3)** that secure the hard drive to the computer.

4. A small part of the hard drive sits under one of the battery screw tabs (4). To remove it, slide the hard drive toward the top of the computer (5), and then lift it out of the computer (6).

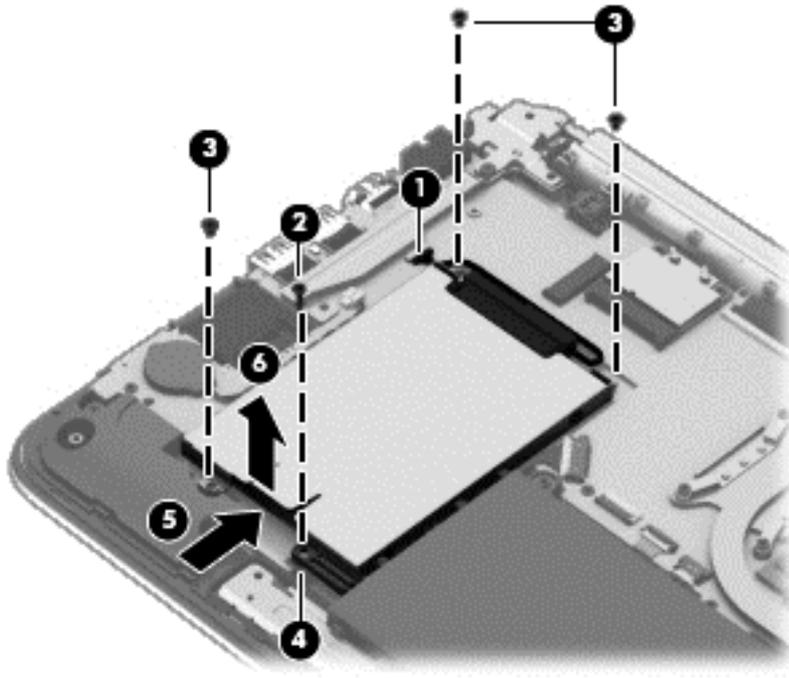

5. If it is necessary to disassemble the hard drive, perform the following steps:
 - a. Disconnect the hard drive connector cable (1) from the hard drive.
 - b. Remove the four Phillips PM3.0×3.0 screws (2) that secure the hard drive bracket to the hard drive.
 - c. Remove the hard drive bracket (3) from the hard drive.

The hard drive bracket, hard drive connector cable, and screws are available in the Hard Drive Hardware Kit, spare part number 755740-001.

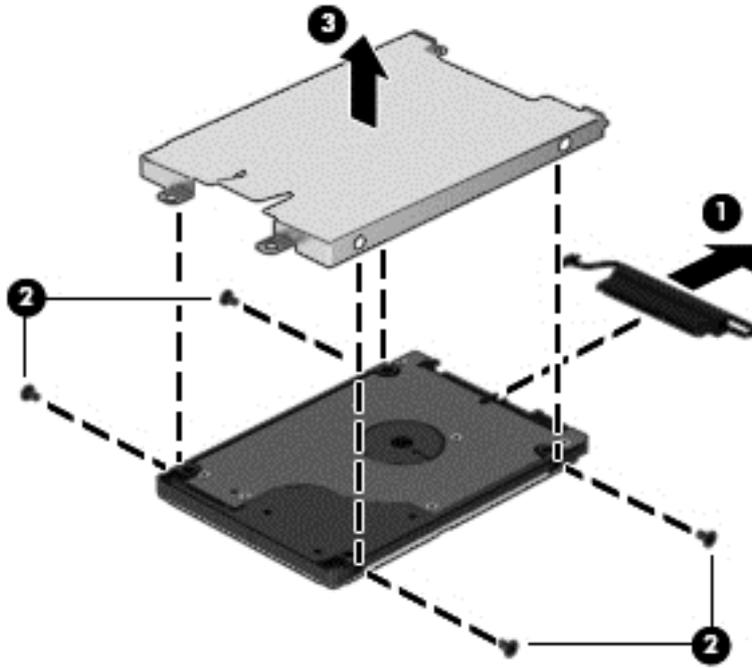


Reverse this procedure to install the hard drive.

RTC battery

| Description | Spare part number |
|------------------------------|-------------------|
| RTC battery (includes cable) | 755735-001 |

Before removing the RTC battery, follow these steps:


1. Turn off the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect the power from the computer by unplugging the power cord from the computer.
3. Disconnect all external devices from the computer.
4. Remove the bottom cover (see [Bottom cover on page 28](#)).
5. Disconnect the battery.

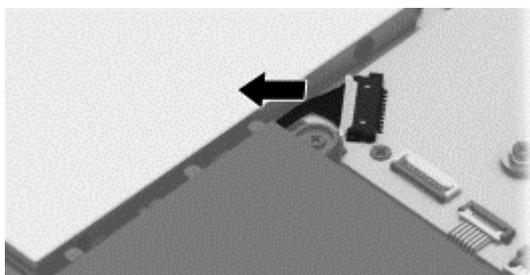

Remove the RTC battery:

1. Disconnect the RTC battery cable **(1)** from the system board.

2. Detach the RTC battery (2) from the system board. (The RTC battery is secured with double-sided tape.)

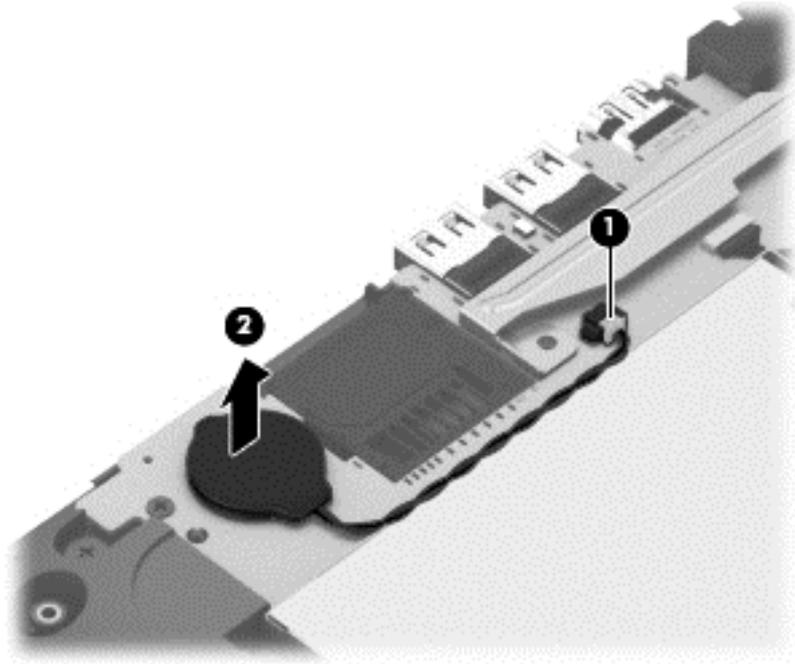

3. Remove the RTC battery.

Reverse this procedure to install the RTC battery.

Memory module

| Description | Spare part number |
|------------------------------|-------------------|
| 8-GB (PC3L, 12800, 1600-MHz) | 693374-005 |
| 4-GB (PC3L, 12800, 1600-MHz) | 691740-005 |
| 2-GB (PC3L, 12800, 1600-MHz) | 691739-005 |

Update BIOS before adding memory modules

Before adding new memory, make sure you update the computer to the latest BIOS.


CAUTION: Failure to update the computer to the latest BIOS prior to installing new memory may result in various system problems.

To update BIOS:

1. Navigate to www.hp.com.
2. Click **Support & Drivers > click Drivers & Software**.
3. In the **Enter a product name/number box**, type the computer model information, and then click **Search**.
4. Click the link for the computer model.
5. Select the operating system, and then click **Next**.
6. Under **Step 2: Select a Download**, click the **BIOS** link.
7. Click the link for the most recent BIOS.
8. Click the **Download** button, and then follow the on-screen instructions.

Before removing a memory module, follow these steps:


1. Turn off the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect the power from the computer by unplugging the power cord from the computer.
3. Disconnect all external devices from the computer.
4. Remove the bottom cover (see [Bottom cover on page 28](#)).
5. Disconnect the battery.

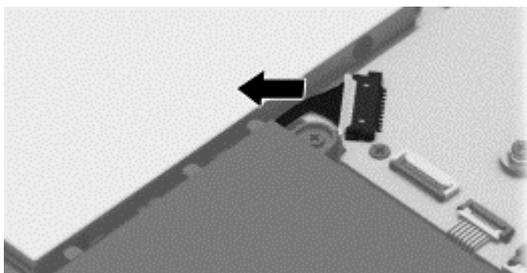

Remove the memory module:

1. Spread the retaining tabs **(1)** on each side of the memory module slot to release the memory module. (The memory module tilts up.)

2. Remove the memory module (2) by pulling the module away from the slot at an angle.

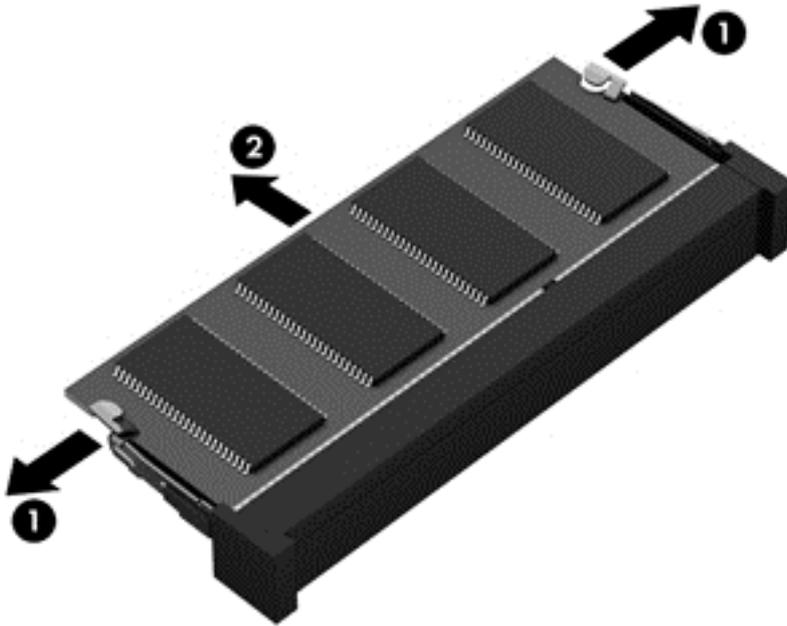


Reverse this procedure to install a memory module.

Power button board

| Description | Spare part number |
|-------------------------------------|-------------------|
| Power button board (includes cable) | 755733-001 |

Before removing the power button board, follow these steps:


1. Turn off the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect the power from the computer by unplugging the power cord from the computer.
3. Disconnect all external devices from the computer.
4. Remove the bottom cover (see [Bottom cover on page 28](#)).
5. Disconnect the battery.

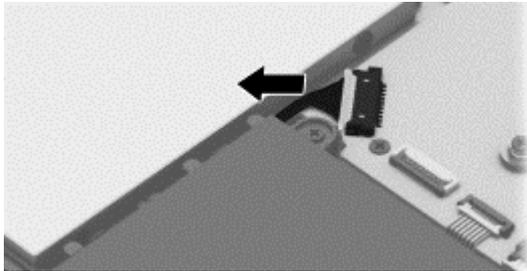

Remove the power button board:

1. Disconnect the power button board cable **(1)** from the system board.
2. Remove the two Phillips PM2.0×3.0 screws **(2)** that secure the power button board to the computer.

3. Remove the power button board and cable (3).

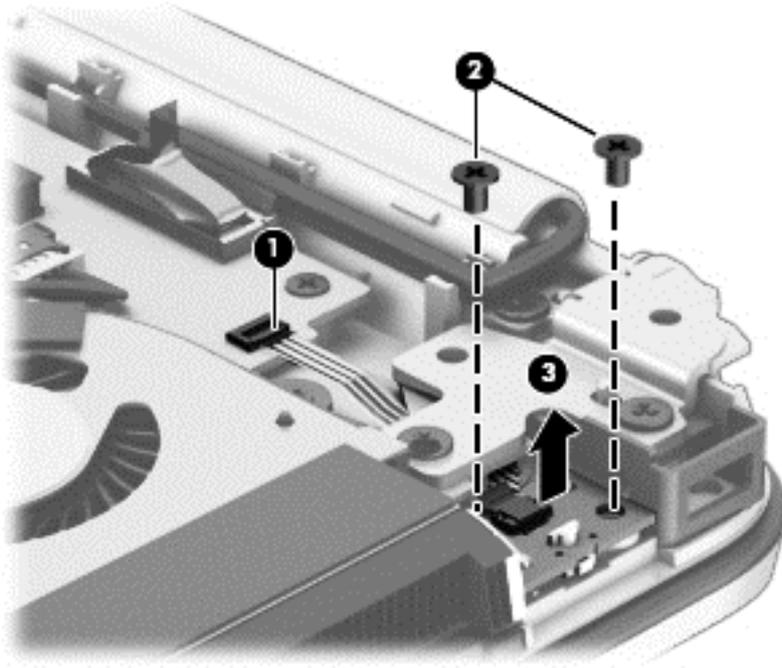


Reverse this procedure to install the power button board.

Fan

| Description | Spare part number |
|-------------|-------------------|
| Fan | 755729-001 |

Before removing the fan, follow these steps:

1. Turn off the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect the power from the computer by unplugging the power cord from the computer.
3. Disconnect all external devices from the computer.
4. Remove the bottom cover (see [Bottom cover on page 28](#)).
5. Disconnect the battery.

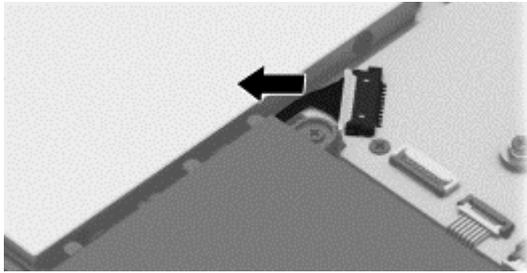


Remove the fan:

 **NOTE:** You do not have to remove the heat sink to remove the fan. You must disengage the tape that secures the fan to the heat sink.

1. Disconnect the fan cable **(1)** from the system board.
2. Remove the two Phillips PM2.0×3.0 screws **(2)** that secure the fan to the system board.
3. Detach the tape **(3)** from the heat sink.

 **NOTE:** You do not need to remove the tape from the fan.

4. Remove the fan (4).

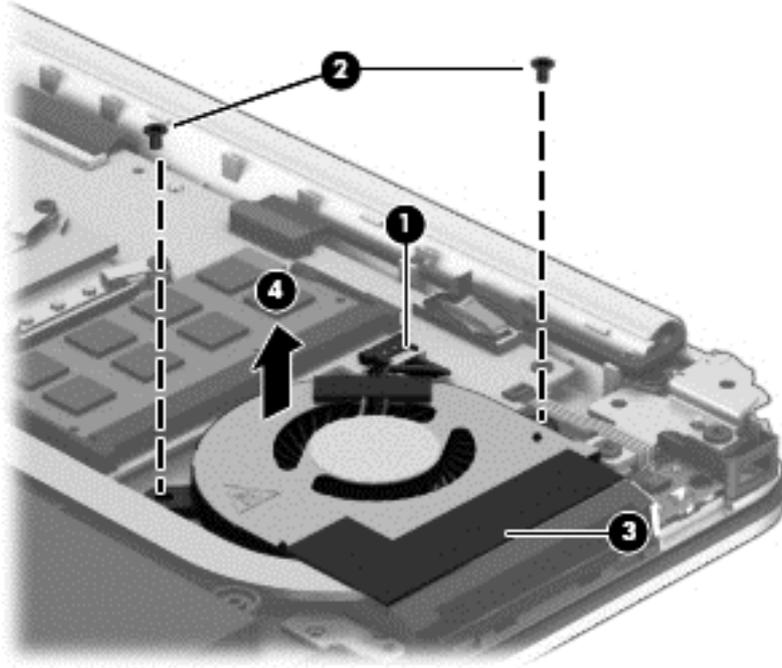


Reverse this procedure to install the fan.

Heat sink

| Description | Spare part number |
|---|-------------------|
| Heat sink (includes replacement thermal material) | 755728-001 |

Before removing the heat sink, follow these steps:

1. Turn off the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect the power from the computer by unplugging the power cord from the computer.
3. Disconnect all external devices from the computer.
4. Remove the bottom cover (see [Bottom cover on page 28](#)).
5. Disconnect the battery.

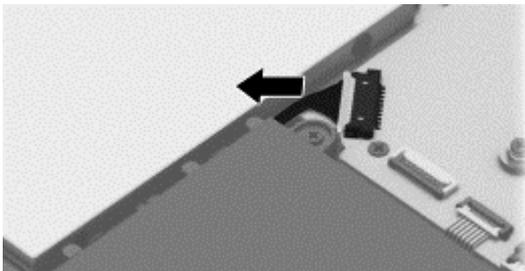


6. Remove the fan (see [Fan on page 45](#)).

Remove the heat sink:


 **NOTE:** You do not have to remove the fan to remove the heat sink. You must disengage the tape that secures the heat sink to the fan.

1. Following the 1 through 4 sequence stamped into the heat sink, remove the four Phillips PM2.0×3.0 screws **(1)** that secure the heat sink to the system board.
2. Detach the tape **(2)** that secures the heat sink to the fan.
3. Remove the heat sink **(3)**.

 **NOTE:** Due to the adhesive quality of the thermal material located between the heat sink and the system board components, it may be necessary to move the heat sink from side to side to detach it.

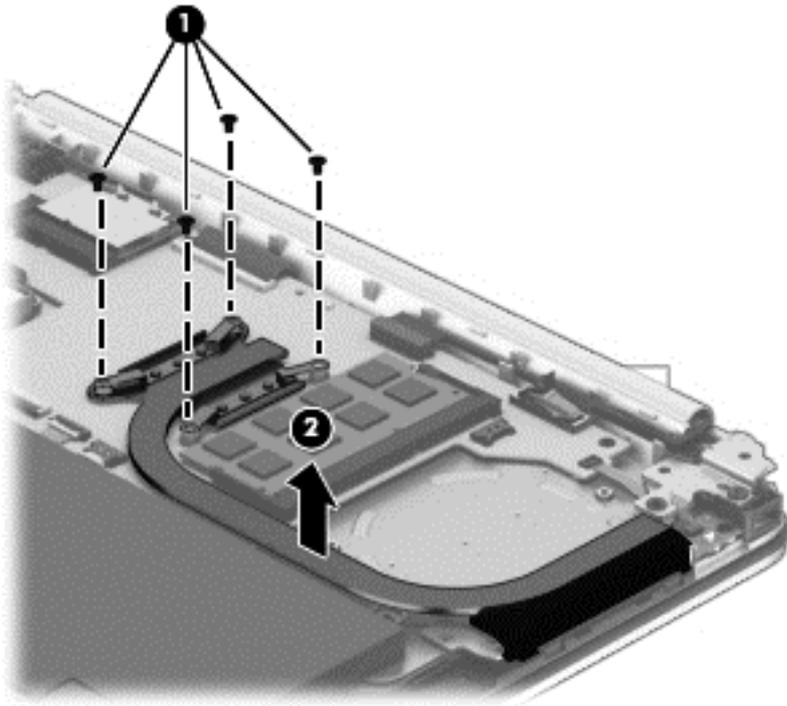

 **NOTE:** The thermal material must be thoroughly cleaned from the surfaces of the heat sink and the system board components each time the heat sink is removed. Thermal paste is used on the processor **(1)** and the heat sink section **(2)** that services it

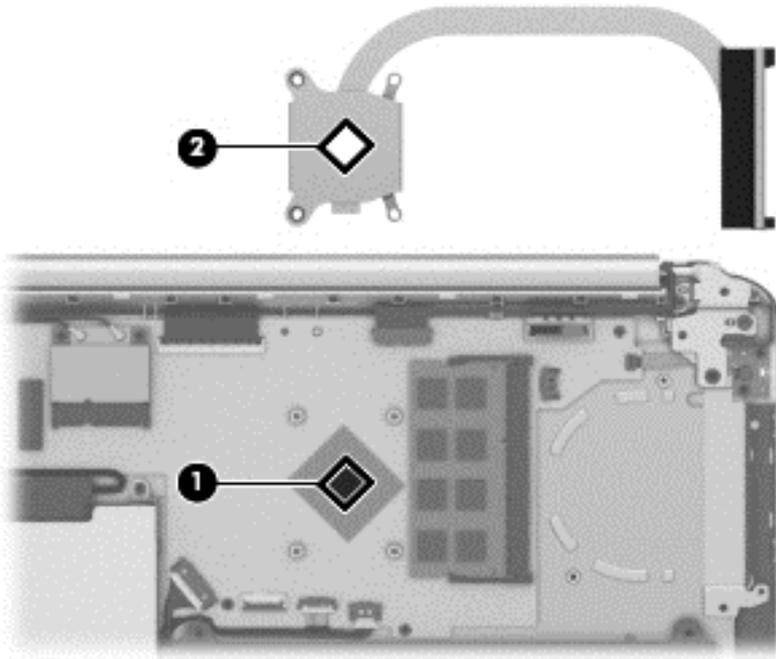

Reverse this procedure to install the heat sink.

Battery

| Description | Spare part number |
|--|-------------------|
| 2-cell, 29-Wh, 3.82-Ah, Li-ion battery | 751875-005 |


Before removing the battery, follow these steps:

1. Turn off the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect the power from the computer by unplugging the power cord from the computer.
3. Disconnect all external devices from the computer.
4. Remove the bottom cover (see [Bottom cover on page 28](#)).

Remove the battery:

⚠ WARNING! To reduce potential safety issues, use only the battery provided with the computer, a replacement battery provided by HP, or a compatible battery purchased from HP.

1. Disconnect the battery cable from the system board (1).
2. Remove the four Phillips PM2.0×7.0 screws (2) that secure the battery to the computer.
3. Remove the battery (3).

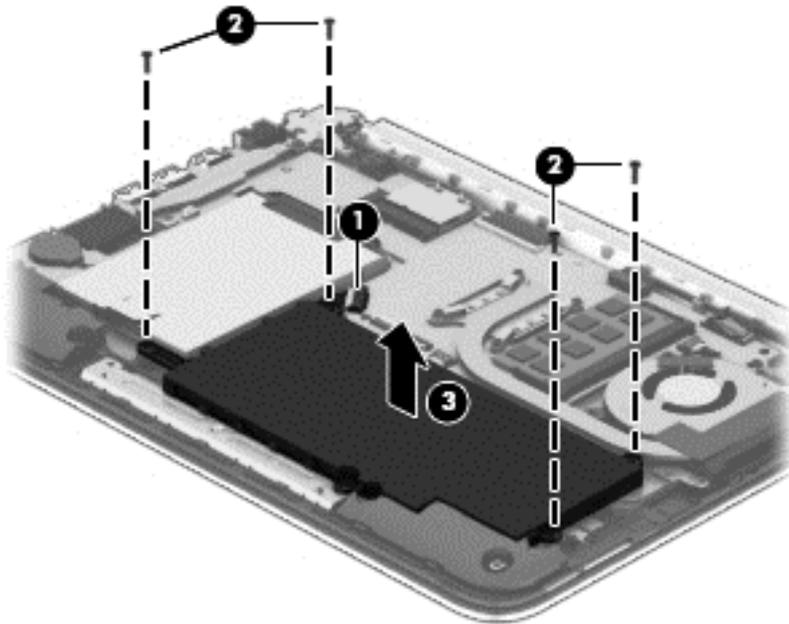

Reverse this procedure to install the battery.

Speakers

| Description | Spare part number |
|--|-------------------|
| Speaker Kit (includes left and right speakers and cable) | 755738-001 |

Before removing the speakers, follow these steps:


1. Turn off the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect the power from the computer by unplugging the power cord from the computer.
3. Disconnect all external devices from the computer.
4. Remove the bottom cover (see [Bottom cover on page 28](#)).
5. Remove the battery (see [Battery on page 49](#)).

Remove the speakers:

1. Disconnect the speaker cable from the system board **(1)**.
2. Remove the four Phillips PM2.0×6.0 broadhead screws **(2)** that secure the speakers to the computer.

 **NOTE:** Make note of the rubber gaskets **(3)** that fit around each screw. For installation, make sure the gaskets are properly installed.

3. Remove the speakers **(4)**.

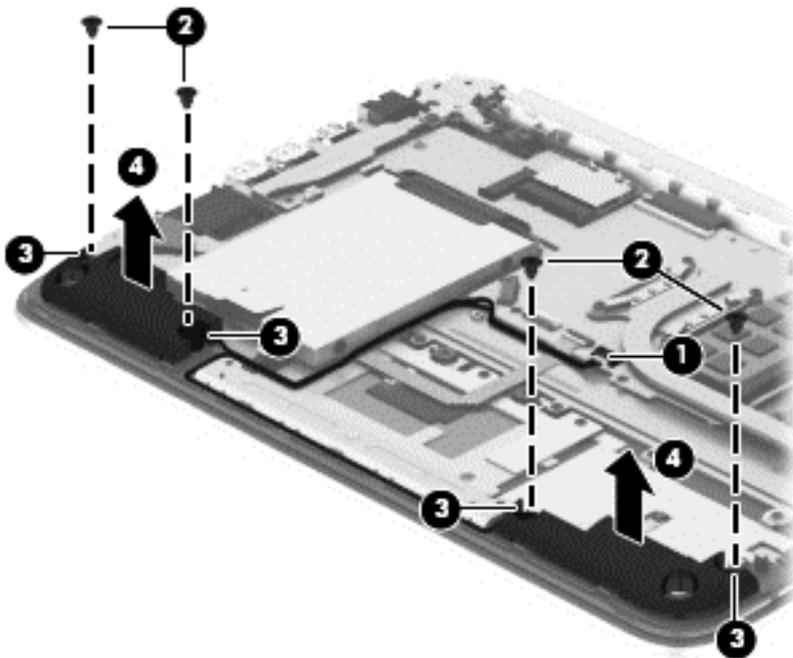

Reverse this procedure to install the speakers.

TouchPad button board


| Description | Spare part number |
|--|-------------------|
| TouchPad button board (includes bracket and cable) | not spared |

Before removing the TouchPad button board, follow these steps:

1. Turn off the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect the power from the computer by unplugging the power cord from the computer.
3. Disconnect all external devices from the computer.
4. Remove the bottom cover (see [Bottom cover on page 28](#)).
5. Remove the battery (see [Battery on page 49](#)).


Remove the TouchPad button board:

1. Disconnect the TouchPad board cable from the system board **(1)**.
2. Remove the two Phillips PM2.0×3.0 screws **(2)** that secure the bracket, and then rotate the front of the bracket up and lift it off the computer **(4)**.
3. Remove the three Phillips PM2.0×2.0 broadhead screws **(5)** that secure the TouchPad button board to the computer.

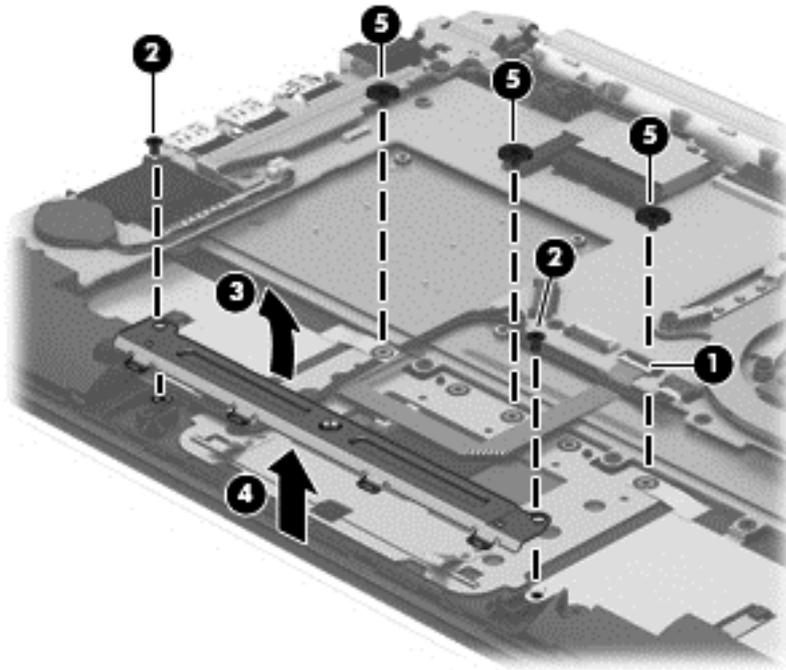

4. Lift the foil and rubber gaskets from atop the left and right broadhead screw holes **(1)**.

5. Lift the bottom of the touchpad upward **(2)**, and then lift it off the computer **(3)**.

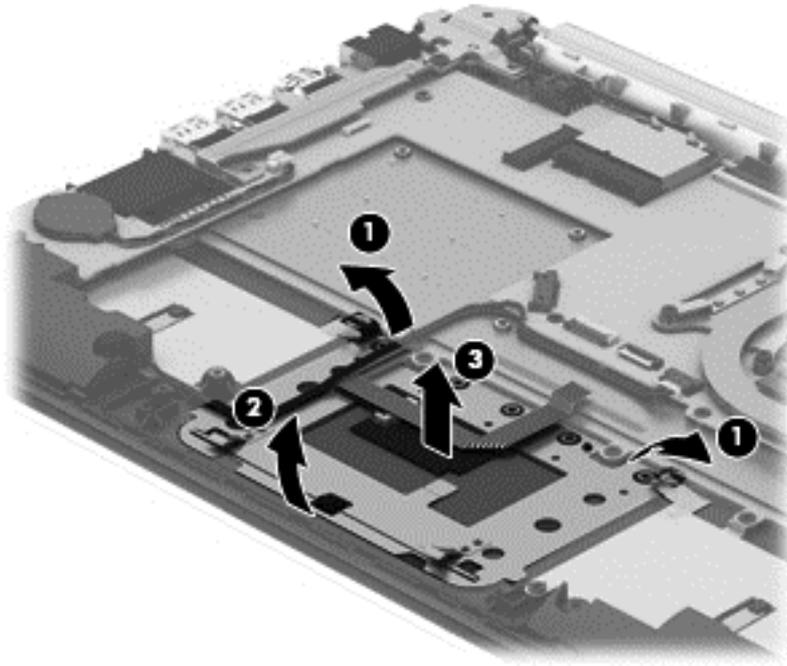

Reverse this procedure to install the TouchPad button board.

Display assembly

| Description | Spare part number |
|--|-------------------|
| Display assembly (11.6-in [29.5-cm] HD, anti-glare, touchscreen, for use in red models without WWAN) | 755730-001 |
| Display assembly, 11.6-in [29.5-cm] HD, anti-glare, touchscreen, for use in red models with WWAN | 756108-001 |
| Webcam | 758848-001 |
| Display cable | 761350-001 |
| Display enclosure for use in silver models | 758845-001 |
| Display enclosure for use in red models | 758846-001 |
| Hinge covers for use in red models | 758847-001 |
| Hinge covers for use in silver models | 759503-001 |

Before removing the display assembly, follow these steps:

1. Shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet and then unplugging the AC adapter from the computer.
4. Remove the bottom cover (see [Bottom cover on page 28](#)).
5. Remove the battery (see [Battery on page 49](#)).

To remove the display assembly:


1. Release the wireless antenna cables from the clips **(1)** built into the base enclosure.



NOTE: The number of antenna cables may vary.

2. Disconnect the webcam cable **(2)** from the system board.

3. Disconnect the display panel cable **(3)** from the system board.

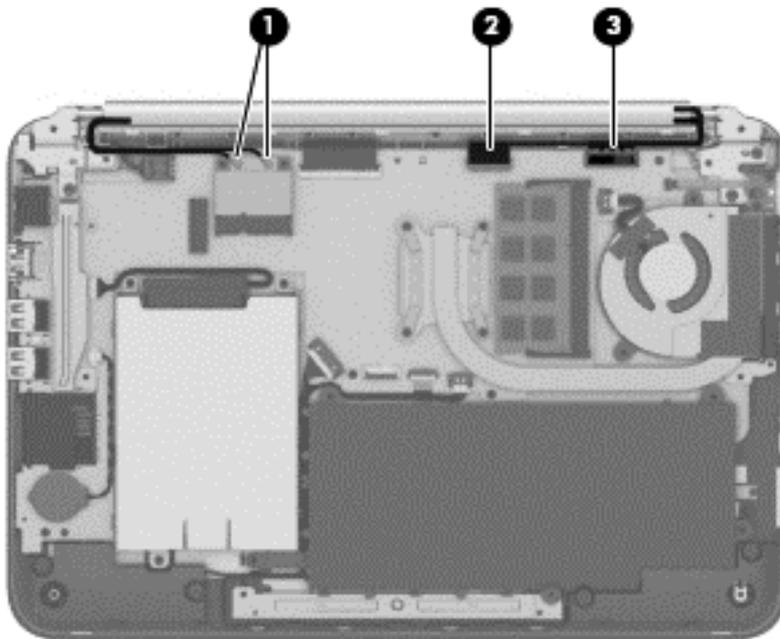


4. Lift the black foam piece that covers the right screw on the right hinge **(1)**.
5. Remove the two silver Phillips PM2.5×4.0 screws **(2)** and the two black Phillips PM2.5×5.0 screws **(3)** that secure the display assembly and bracket to the computer.

⚠ CAUTION: Support the display assembly when removing the screws. Failure to support the display assembly can result in damage to the display assembly and other computer components.

6. Lift the computer to force the hinges to rotate upward to an angle **(4)**.

7. Separate the display assembly from the computer (5).

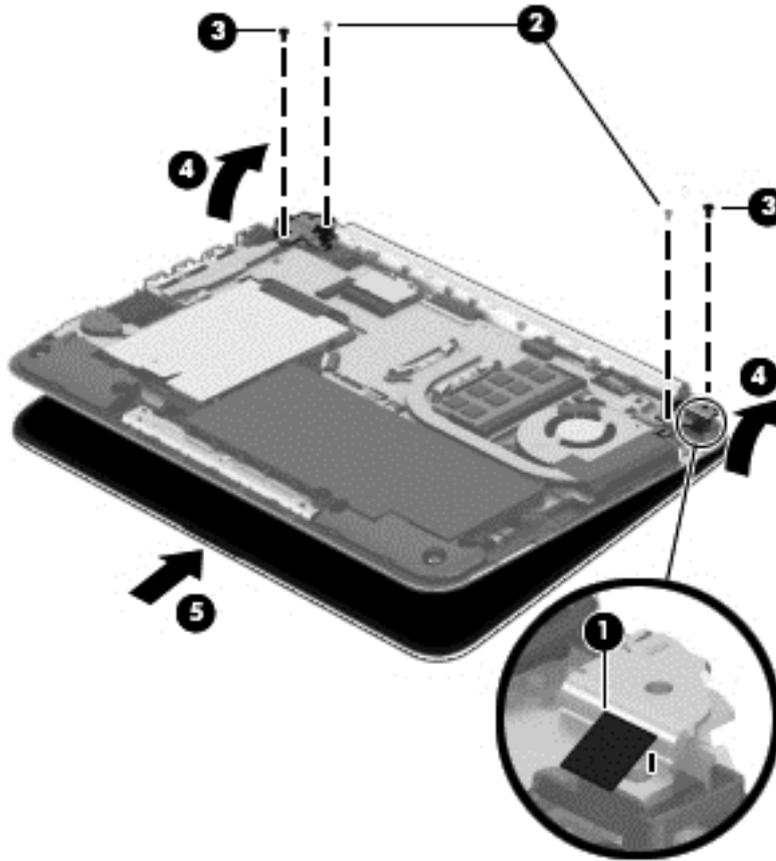


If it is necessary to replace any of the display assembly subcomponents:

1. To remove the display enclosure:

 **NOTE:** The display enclosure is available using spare part number 758846-001 for red models and 758845-001 for silver models.

- a. Remove the two screw covers (1).
- b. Remove the two Phillips PM2.5×4.0 screws (2) that secure the enclosure to the display.


- c. Pry from the side to separate the enclosure from the display **(3)**.

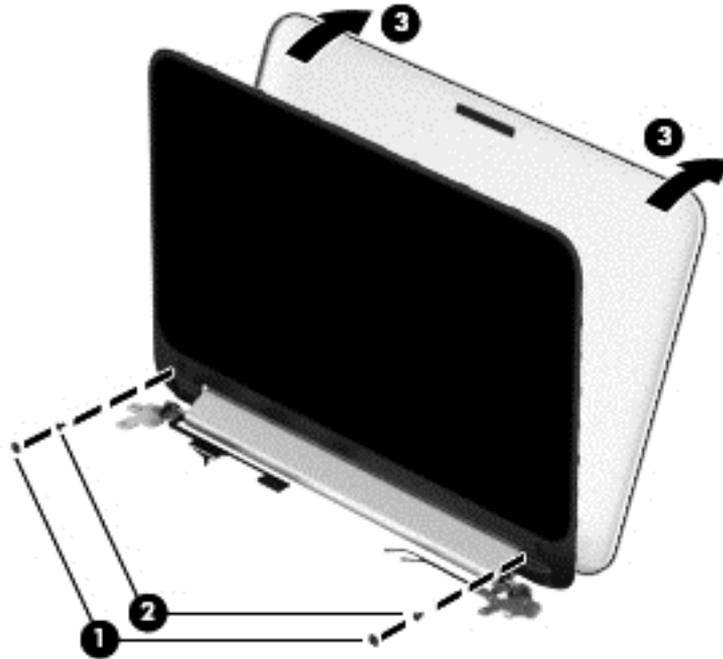

2. To remove the webcam module:

 **NOTE:** The webcam is available using spare part number 758848-001.


- a. Lift the webcam module **(1)** enough to gain access to the cable.
- b. Disconnect the cable **(2)** from the module.

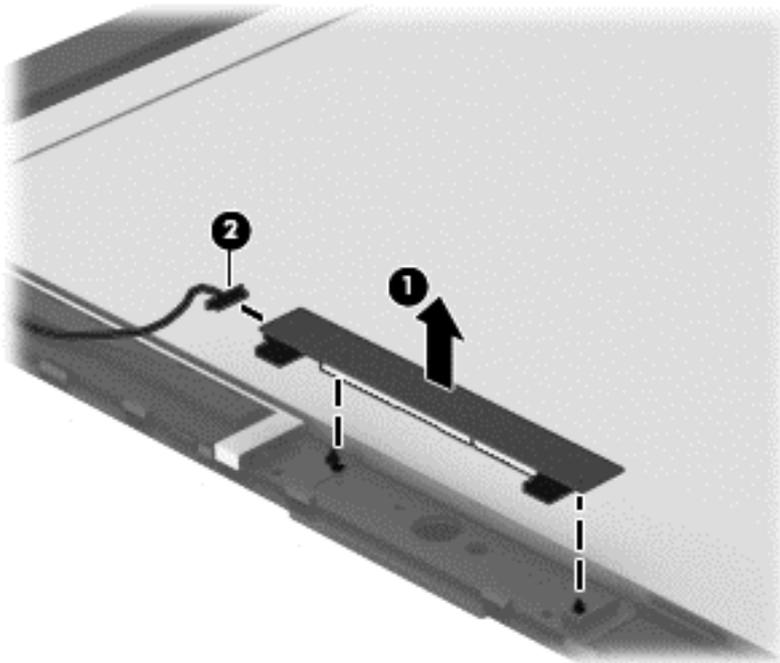

3. To remove the display hinge covers:

 **NOTE:** The display hinge covers are available using spare part number 758847-001 for red models and 759503-001 for silver models.

- a. Separate the top hinge cover by prying and rotating it off **(1)**.
- b. Remove the four Phillips PM2.5×5.0 screws **(2)** that secure the bottom hinge cover to the display.
- c. Remove the bottom display hinge cover from the display **(3)**.

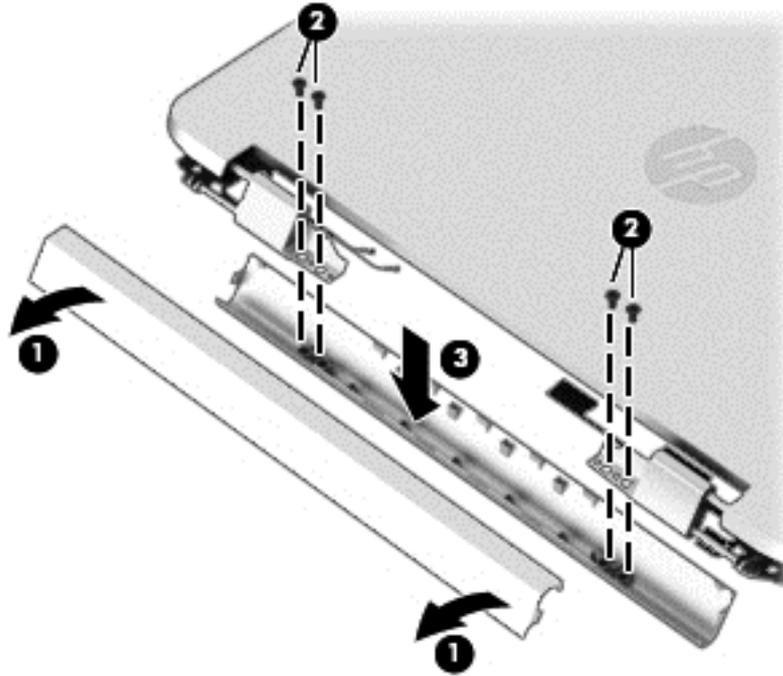


4. To remove the display cable:

 **NOTE:** The display cable is available using spare part number 761350-001.

- a. Disconnect the end of the display cable from the small connector at the bottom of the display panel **(1)**.
- b. Disconnect the display cable from the large connector on the bottom of the display panel **(2)**.

- c. Remove the cable from the tape **(3)** and clips **(4)** that secure it to the display enclosure , and then lift the display cable from the display enclosure **(5)**.

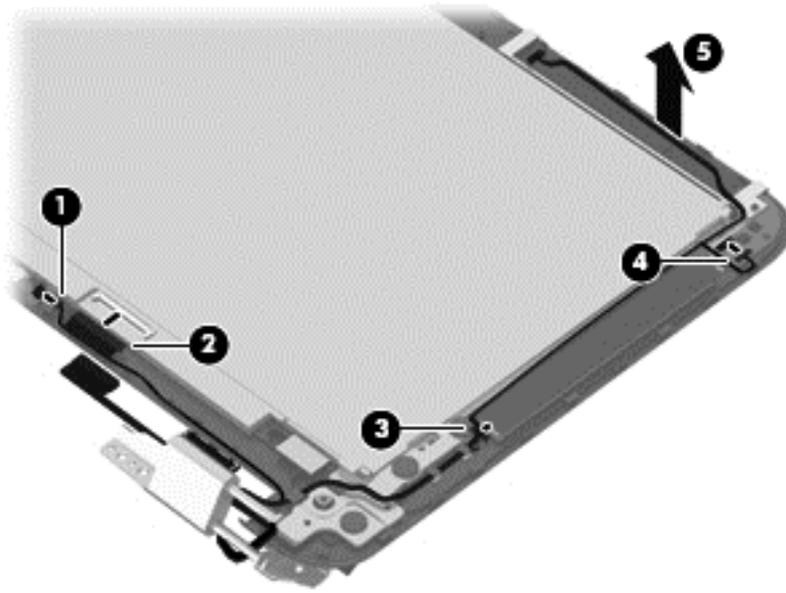

Reverse this procedure to reassemble and install the display assembly.

Power connector cable


| Description | Spare part number |
|-----------------------|-------------------|
| Power connector cable | 755727-001 |

Before removing the power connector cable, follow these steps:

1. Turn off the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect the power from the computer by unplugging the power cord from the computer.
3. Disconnect all external devices from the computer.
4. Remove the bottom cover (see [Bottom cover on page 28](#)).
5. Remove the battery (see [Battery on page 49](#)).

Remove the power connector cable:

1. Remove the black Phillips PM2.5×6.0 screw **(1)** that secures the bracket to the computer and the silver Phillips PM3.0×5.0 screw **(2)** that secures the right display hinge.
2. Open the display assembly right hinge **(3)** as far as it will open.
3. Remove the bracket from the computer **(4)**.
4. Disconnect the power connector cable **(5)** from the system board.
5. Remove the power connector **(6)** from the computer.

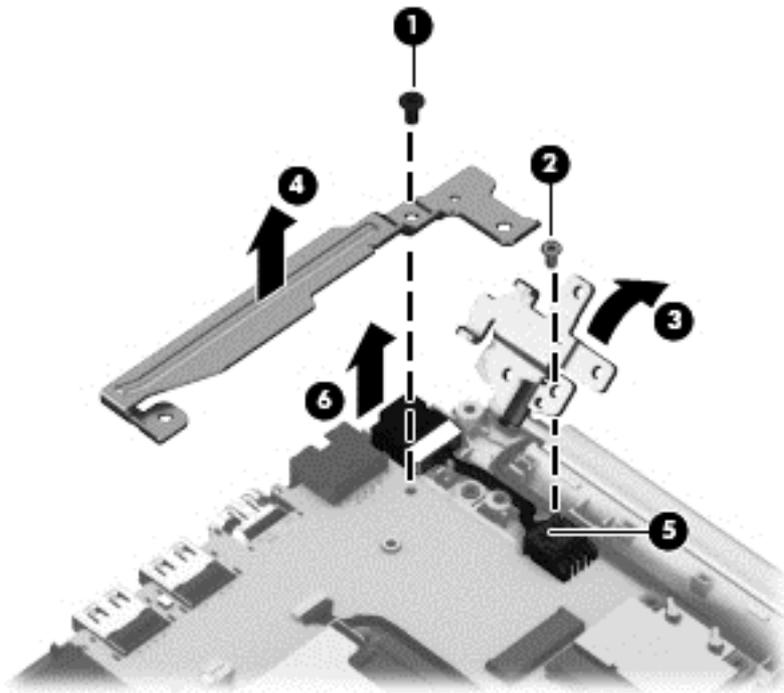

6. Remove the power connector cable.

Reverse this procedure to install the power connector cable.

System board



NOTE: The system board spare part kit includes replacement thermal material.

| Description | Spare part number |
|---|-------------------|
| Intel Pentium N3520 processor and the Windows 8.1 Standard operating system | 755724-501 |
| Intel Pentium N3520 processor and a non-Windows 8 operating system | 755724-001 |
| Intel Celeron N2820 processor and the Windows 8.1 Standard operating system | 755723-501 |
| Intel Celeron N2820 processor and a non-Windows 8 operating system | 755723-001 |

Before removing the system board, follow these steps:

1. Turn off the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect the power from the computer by unplugging the power cord from the computer.
3. Disconnect all external devices from the computer.
4. Remove the bottom cover (see [Bottom cover on page 28](#)).
5. Remove the battery (see [Battery on page 49](#)).




NOTE: When replacing the system board, be sure that the following components are removed from the defective system board and installed on the replacement system board:


- WLAN module (see [WLAN module on page 32](#))
- WWAN module (see [WWAN module on page 34](#))
- Memory module (see [Memory module on page 41](#))
- Heat sink (see [Heat sink on page 46](#))
- Fan (see [Fan on page 45](#))

Remove the system board:

1. Disconnect the following cables from the system board:
 - (1): Power connector cable
 - (2): Wireless antennas (may include one or two antennas)
 - (3): Keyboard cable
 - (4): Webcam cable
 - (5): Display cable
 - (6): Power button board cable
 - (7): Fan cable
 - (8): Speaker cable
 - (9): Touchpad board cable
 - (10): Hard drive cable

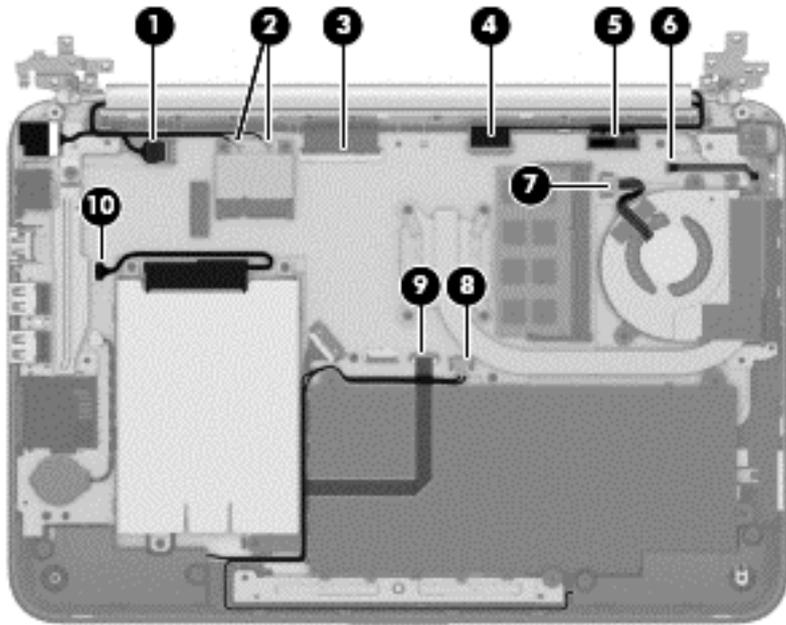

2. Remove the four Phillips PM2.0×3.0 screws **(1)** that secure the system board to the computer.
3. Remove the system board **(2)** from the computer.

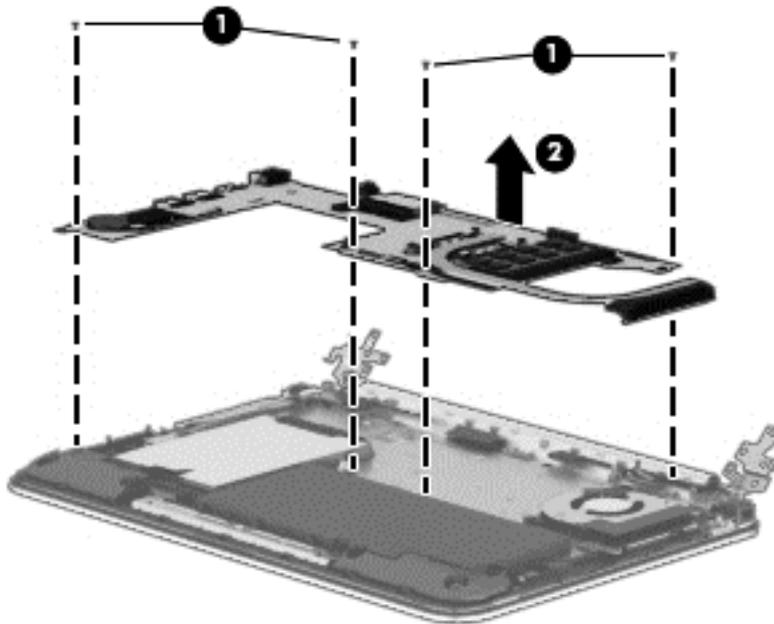

Reverse this procedure to install the system board.

Keyboard

| Description | Spare part number |
|---------------------------|-------------------|
| Keyboard (includes cable) | 755896-001 |


NOTE: For a detailed list of available keyboards, see [Sequential part number listing on page 19](#).

Before removing the keyboard, follow these steps:


1. Turn off the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect the power from the computer by unplugging the power cord from the computer.
3. Disconnect all external devices from the computer.
4. Remove the bottom cover (see [Bottom cover on page 28](#)).
5. Remove the hard drive (see [Hard drive on page 36](#)).
6. Remove the fan (see [Fan on page 45](#)).
7. Remove the heat sink (see [Heat sink on page 46](#)).
8. Remove the battery (see [Battery on page 49](#)).
9. Remove the system board (see [System board on page 60](#)).

Remove the keyboard:

1. Remove the 16 Phillips PM2.0×3.0 screws that secure the keyboard to the top cover.

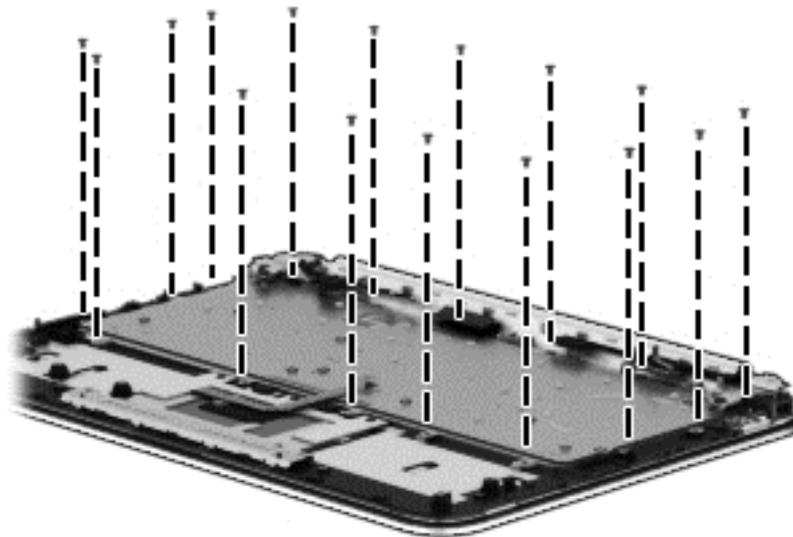

2. Remove the keyboard from the top cover.

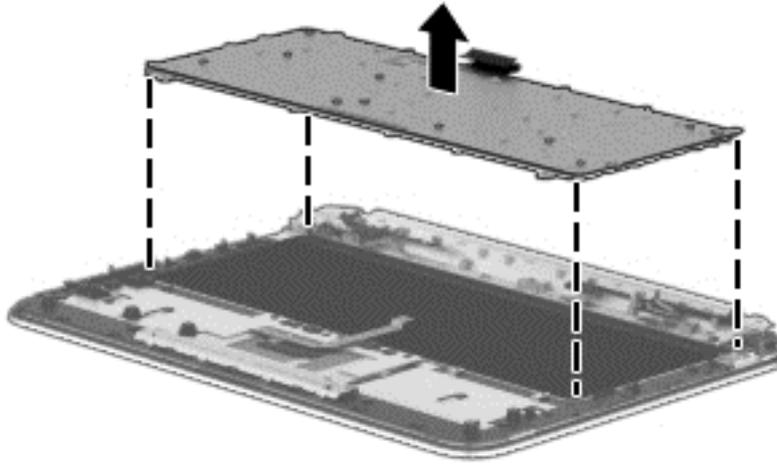

Top covers are available using spare part number 759976-001 for red models and 756116-001 for silver models.

Reverse this procedure to install the keyboard.

6 Using Setup Utility (BIOS) and HP PC Hardware Diagnostics (UEFI)

Setup Utility, or Basic Input/Output System (BIOS), controls communication between all the input and output devices on the system (such as disk drives, display, keyboard, mouse, and printer). Setup Utility (BIOS) includes settings for the types of devices installed, the startup sequence of the computer, and the amount of system and extended memory.

Starting Setup Utility (BIOS)

To start Setup Utility (BIOS), turn on or restart the computer, quickly press **esc**, and then press **f10**.



NOTE: Use extreme care when making changes in Setup Utility (BIOS). Errors can prevent the computer from operating properly.

Updating the BIOS

Updated versions of the BIOS may be available on the HP website.

Most BIOS updates on the HP website are packaged in compressed files called *SoftPaqs*.

Some download packages contain a file named *Readme.txt*, which contains information regarding installing and troubleshooting the file.

Determining the BIOS version

To determine whether available BIOS updates contain later BIOS versions than those currently installed on the computer, you need to know the version of the system BIOS currently installed.

BIOS version information (also known as *ROM date* and *System BIOS*) can be revealed by pressing **fn+esc** (if you are already in Windows) or by using Setup Utility (BIOS).

1. Start Setup Utility (BIOS) (see [Starting Setup Utility \(BIOS\) on page 64](#)).
2. Use the arrow keys to select **Main**, and then make note of your current BIOS version.
3. To exit Setup Utility (BIOS) without saving your changes, use the arrow keys to select **Exit**, select **Exit Discarding Changes**, and then press **enter**.
4. Select **Yes**.

Downloading a BIOS update

 **CAUTION:** To reduce the risk of damage to the computer or an unsuccessful installation, download and install a BIOS update only when the computer is connected to reliable external power using the AC adapter. Do not download or install a BIOS update while the computer is running on battery power, docked in an optional docking device, or connected to an optional power source. During the download and installation, follow these instructions:

Do not disconnect power from the computer by unplugging the power cord from the AC outlet.

Do not shut down the computer or initiate Sleep.

Do not insert, remove, connect, or disconnect any device, cable, or cord.

1. From the Start screen, type `hp support assistant`, and then select the **HP Support Assistant** app.
2. Click **Updates and tune-ups**, and then click **Check for HP updates now**.
3. Follow the on-screen instructions.
4. At the download area, follow these steps:
 - a. Identify the most recent BIOS update and compare it to the BIOS version currently installed on your computer. If the update is more recent than your BIOS, make a note of the date, name, or other identifier. You may need this information to locate the update later, after it has been downloaded to your hard drive.
 - b. Follow the on-screen instructions to download your selection to the hard drive.

If the update is more recent than your BIOS, make a note of the path to the location on your hard drive where the BIOS update is downloaded. You will need to access this path when you are ready to install the update.



NOTE: If you connect your computer to a network, consult the network administrator before installing any software updates, especially system BIOS updates.

BIOS installation procedures vary. Follow any instructions that are revealed on the screen after the download is complete. If no instructions are revealed, follow these steps:

1. From the Start screen, type `file`, and then select **File Explorer**.
2. Click your hard drive designation. The hard drive designation is typically Local Disk (C:).
3. Using the hard drive path you recorded earlier, open the folder on your hard drive that contains the update.
4. Double-click the file that has an `.exe` extension (for example, `filename.exe`).

The BIOS installation begins.
5. Complete the installation by following the on-screen instructions.



NOTE: After a message on the screen reports a successful installation, you can delete the downloaded file from your hard drive.

Using HP PC Hardware Diagnostics (UEFI)

HP PC Hardware Diagnostics is a Unified Extensible Firmware Interface (UEFI) that allows you to run diagnostic tests to determine whether the computer hardware is functioning properly. The tool runs outside the operating system so that it can isolate hardware failures from issues that are caused by the operating system or other software components.

To start HP PC Hardware Diagnostics UEFI:

1. Turn on or restart the computer, quickly press **esc**, and then press **f2**.

The BIOS searches three places for the diagnostic tools, in the following order:

- a. Connected USB drive



NOTE: To download the HP PC Hardware Diagnostics (UEFI) tool to a USB drive, see [Downloading HP PC Hardware Diagnostics \(UEFI\) to a USB device on page 66](#).

- b. Hard drive
- c. BIOS

2. When the diagnostic tool opens, use the keyboard arrow keys to select the type of diagnostic test you want to run, and then follow the on-screen instructions.



NOTE: If you need to stop a diagnostic test, press **esc**.

Downloading HP PC Hardware Diagnostics (UEFI) to a USB device



NOTE: Instructions for downloading HP PC Hardware Diagnostics (UEFI) are provided in English only.

1. Go to <http://www.hp.com>.
2. Point to **Support**, located at the top of the page, and then click the **Download Drivers**.
3. In the text box, enter the product name, and then click **Go**.

– or –

Click **Find Now** to let HP automatically detect your product.

4. Select your computer model, and then select your operating system.
5. In the **Diagnostic** section, click **HP UEFI Support Environment**.

– or –

Click **Download**, and then select **Run**.

7 Specifications

Computer specifications

| | Metric | U.S. |
|---|---------------------------|---------------------|
| Dimensions | | |
| Width | 308 mm | 12.13 in |
| Depth | 215.1 mm | 8.47 in |
| Height | 21.9 mm | 0.86 in |
| Weight | 1.4 kg | 3.08 lbs |
| Input power | | |
| Operating voltage and current | 19.5 V dc @ 3.33 A – 65 W | |
| Temperature | | |
| Operating | 5°C to 35°C | 41°F to 95°F |
| Nonoperating | -20°C to 60°C | -4°F to 140°F |
| Relative humidity (noncondensing) | | |
| Operating | 10% to 90% | |
| Nonoperating | 5% to 95% | |
| Maximum altitude (unpressurized) | | |
| Operating | -15 m to 3,048 m | -50 ft to 10,000 ft |
| Nonoperating | -15 m to 12,192 m | -50 ft to 40,000 ft |
| NOTE: Applicable product safety standards specify thermal limits for plastic surfaces. The device operates well within this range of temperatures. | | |

Hard drive specifications

| | 500-GB, 5400-rpm* | 320-GB, 5400-rpm* |
|--|-----------------------------|-----------------------------|
| Dimensions | | |
| Height | 7.0 mm | 7.0 mm |
| Length | 100.4 mm | 100.4 mm |
| Width | 69.9 mm | 69.9 mm |
| Weight | 110 g | 110 g |
| Interface type | SATA | SATA |
| Transfer rate (synchronous, maximum) | 1.1 GB/sec | 1.1 GB/sec |
| Security | ATA security | ATA security |
| Seek times (typical read, including setting) | | |
| Single track | 1.5 ms | 1.5 ms |
| Average (read/write) | 11/13 ms | 11/13 ms |
| Maximum | 22 ms | 22 ms |
| Logical blocks | 976,773,168 | 628,142,448 |
| Disk rotational speed | 5400 rpm | 5400 rpm |
| Operating temperature | 0°C to 60°C (32°F to 140°F) | 0°C to 60°C (32°F to 140°F) |
| *1 GB = 1 billion bytes when referring to hard drive storage capacity. Actual accessible capacity is less. | | |
| NOTE: Certain restrictions and exclusions apply. Contact technical support for details. | | |

8 Backing up, restoring, and recovering

This chapter provides information about the following processes:

- Creating recovery media and backups
- Restoring and recovering your system

Creating recovery media and backups

1. After you successfully set up the computer, create HP Recovery media. This step creates a backup of the HP Recovery partition on the computer. The backup can be used to reinstall the original operating system in cases where the hard drive is corrupted or has been replaced.

HP Recovery media you create will provide the following recovery options:

- **System Recovery**—Reinstalls the original operating system and the programs that were installed at the factory.
- **Minimized Image Recovery**—Reinstalls the operating system and all hardware-related drivers and software, but not other software applications.
- **Factory Reset**—Restores the computer to its original factory state by deleting all information from the hard drive and re-creating the partitions. Then it reinstalls the operating system and the software that was installed at the factory.

See [Creating HP Recovery media on page 69](#).

2. Use the Windows tools to create system restore points and create backups of personal information. For more information and steps, see Help and Support. From the Start screen, type `help`, and then select **Help and Support**.

Creating HP Recovery media

HP Recovery Manager is a software program that offers a way to create recovery media after you successfully set up the computer. HP Recovery media can be used to perform system recovery if the hard drive becomes corrupted. System recovery reinstalls the original operating system and the software programs installed at the factory, and then configures the settings for the programs. HP Recovery media can also be used to customize the system or restore the factory image if you replace the hard drive.

- Only one set of HP Recovery media can be created. Handle these recovery tools carefully, and keep them in a safe place.
- HP Recovery Manager examines the computer and determines the required storage capacity for the blank USB flash drive or the number of blank DVD discs that will be required.
- To create recovery discs, your computer must have an optical drive with DVD writer capability, and you must use only high-quality blank DVD-R, DVD+R, DVD-R DL, or DVD+R DL discs. Do not use rewritable discs such as CD±RW, DVD±RW, double-layer DVD±RW, or BD-RE (rewritable Blu-ray) discs; they are not compatible with HP Recovery Manager software. Or instead you can use a high-quality blank USB flash drive.
- If your computer does not include an integrated optical drive with DVD writer capability, but you would like to create DVD recovery media, you can use an external optical drive (purchased separately) to create recovery discs, or you can obtain recovery discs for your computer from support. See the

Worldwide Telephone Numbers booklet included with the computer. You can also find contact information from the HP website. Go to <http://www.hp.com/support>, select your country or region, and follow the on-screen instructions. If you use an external optical drive, it must be connected directly to a USB port on the computer; the drive cannot be connected to a USB port on an external device, such as a USB hub.

- Be sure that the computer is connected to AC power before you begin creating the recovery media.
- The creation process can take up to an hour or more. Do not interrupt the creation process.
- If necessary, you can exit the program before you have finished creating all of the recovery DVDs. HP Recovery Manager will finish burning the current DVD. The next time you start HP Recovery Manager, you will be prompted to continue, and the remaining discs will be burned.

To create HP Recovery media:

1. From the Start screen, type `recovery`, and then select **HP Recovery Manager**.
2. Select **Recovery Media Creation**, and then follow the on-screen instructions.

If you ever need to recover the system, see [Recovering using HP Recovery Manager on page 71](#).

Restore and recovery

There are several options for recovering your system. Choose the method that best matches your situation and level of expertise:

- Windows offers several options for restoring from backup, refreshing the computer, and resetting the computer to its original state. For more information and steps, see Help and Support. From the Start screen, type `help`, and then select **Help and Support**.
- If you need to correct a problem with a preinstalled application or driver, use the Drivers and Applications Reinstall option of HP Recovery Manager to reinstall the individual application or driver.

From the Start screen, type `recovery`, select **HP Recovery Manager**, select **Drivers and Applications Reinstall**, and then follow the on-screen instructions.

- If you want to reset your computer using a minimized image, you can choose the HP Minimized Image Recovery option from the HP Recovery partition (select models only) or HP Recovery media. Minimized Image Recovery installs only drivers and hardware-enabling applications. Other applications included in the image continue to be available for installation through the Drivers and Applications Reinstall option in HP Recovery Manager.

For more information, see [Recovering using HP Recovery Manager on page 71](#).

- If you want to recover the computer's original factory partitioning and content, you can choose the System Recovery option from the HP Recovery partition (select models only) or use the HP Recovery media that you have created. For more information, see [Recovering using HP Recovery Manager on page 71](#). If you have not already created recovery media, see [Creating HP Recovery media on page 69](#).
- If you have replaced the hard drive, you can use the Factory Reset option of HP Recovery media to restore the factory image to the replacement drive. For more information, see [Recovering using HP Recovery Manager on page 71](#).
- If you wish to remove the recovery partition to reclaim hard drive space, HP Recovery Manager offers the Remove Recovery Partition option.

For more information, see [Removing the HP Recovery partition on page 72](#).

Recovering using HP Recovery Manager

HP Recovery Manager software allows you to recover the computer to its original factory state by using the HP Recovery media that you created or by using the HP Recovery partition (select models only). If you have not already created recovery media, see [Creating HP Recovery media on page 69](#).

Using HP Recovery media, you can choose from one of the following recovery options:

- System Recovery—Reinstalls the original operating system, and then configures the settings for the programs that were installed at the factory.
- Minimized Image Recovery (select models only)—Reinstalls the operating system and all hardware-related drivers and software, but not other software applications.
- Factory Reset—Restores the computer to its original factory state by deleting all information from the hard drive and re-creating the partitions. Then it reinstalls the operating system and the software that was installed at the factory.

The HP Recovery partition (select models only) allows System Recovery and Minimized Image Recovery.

What you need to know

- HP Recovery Manager recovers only software that was installed at the factory. For software not provided with this computer, you must either download the software from the manufacturer's website or reinstall the software from the media provided by the manufacturer.
- Recovery through HP Recovery Manager should be used as a final attempt to correct computer issues.
- HP Recovery media must be used if the computer hard drive fails. If you have not already created recovery media, see [Creating HP Recovery media on page 69](#).
- To use the Factory Reset option, you must use HP Recovery media. If you have not already created recovery media, see [Creating HP Recovery media on page 69](#).
- If the HP Recovery media does not work, you can obtain recovery media for your system from support. See the *Worldwide Telephone Numbers* booklet included with the computer. You can also find contact information from the HP website. Go to <http://www.hp.com/support>, select your country or region, and follow the on-screen instructions.



IMPORTANT: HP Recovery Manager does not automatically provide backups of your personal data. Before beginning recovery, back up any personal data you wish to retain.

Using the HP Recovery partition (select models only)

The HP Recovery partition (select models only) allows you to perform a system recovery or minimized image recovery without the need for recovery discs or a recovery USB flash drive. This type of recovery can only be used if the hard drive is still working.

To start HP Recovery Manager from the HP Recovery partition:

1. Press **f11** while the computer boots.
– or –
Press and hold **f11** as you press the power button.
2. Select **Troubleshoot** from the boot options menu.
3. Select **Recovery Manager**, and then follow the on-screen instructions.

Using HP Recovery media to recover

You can use HP Recovery media to recover the original system. This method can be used if your system does not have an HP Recovery partition or if the hard drive is not working properly.

1. If possible, back up all personal files.
2. Insert the HP Recovery media that you created, and then restart the computer.



NOTE: If the computer does not automatically restart in HP Recovery Manager, change the computer boot order. See [Changing the computer boot order on page 72](#).

3. Follow the on-screen instructions.

Changing the computer boot order

If computer does not restart in HP Recovery Manager, you can change the computer boot order, which is the order of devices listed in BIOS where the computer looks for startup information. You can change the selection for an optical drive or a USB flash drive.

To change the boot order:

1. Insert the HP Recovery media you created.
2. Restart the computer, quickly press **esc**, and then press **f9** for boot options.
3. Select the optical drive or USB flash drive you want to boot from.
4. Follow the on-screen instructions.

Removing the HP Recovery partition

HP Recovery Manager software allows you to remove the HP Recovery partition to free up hard drive space.



IMPORTANT: After you remove the HP Recovery partition, you can no longer use the Windows Refresh option or the Windows option to remove everything and reinstall Windows. In addition, you will not be able to perform System Recovery or Minimized Image Recovery from the HP Recovery partition. So before you remove the Recovery partition, create HP Recovery media; see [Creating HP Recovery media on page 69](#).

Follow these steps to remove the HP Recovery partition:

1. From the Start screen, type `recovery`, and then select **HP Recovery Manager**.
2. Select **Remove Recovery Partition**, and then follow the on-screen instructions.

9 Power cord set requirements

The wide-range input feature of the computer permits it to operate from any line voltage from 100 to 120 volts AC, or from 220 to 240 volts AC.

The 3-conductor power cord set included with the computer meets the requirements for use in the country or region where the equipment is purchased.

Power cord sets for use in other countries and regions must meet the requirements of the country or region where the computer is used.

Requirements for all countries

The following requirements are applicable to all countries and regions:

- The length of the power cord set must be at least 1.0 m (3.3 ft) and no more than 2.0 m (6.5 ft).
- All power cord sets must be approved by an acceptable accredited agency responsible for evaluation in the country or region where the power cord set will be used.
- The power cord sets must have a minimum current capacity of 10 amps and a nominal voltage rating of 125 or 250 V AC, as required by the power system of each country or region.
- The appliance coupler must meet the mechanical configuration of an EN 60 320/IEC 320 Standard Sheet C13 connector for mating with the appliance inlet on the back of the computer. Requirements for all countries 113

Requirements for specific countries and regions

| Country/region | Accredited agency | Applicable note number |
|--------------------------------|-------------------|------------------------|
| Australia | EANSW | 1 |
| Austria | OVE | 1 |
| Belgium | CEBC | 1 |
| Canada | CSA | 2 |
| Denmark | DEMKO | 1 |
| Finland | FIMKO | 1 |
| France | UTE | 1 |
| Germany | VDE | 1 |
| Italy | IMQ | 1 |
| Japan | METI | 3 |
| The Netherlands | KEMA | 1 |
| Norway | NEMKO | 1 |
| The People's Republic of China | COC | 5 |

| Country/region | Accredited agency | Applicable note number |
|--------------------|-------------------|------------------------|
| South Korea | EK | 4 |
| Sweden | CEMKO | 1 |
| Switzerland | SEV | 1 |
| Taiwan | BSMI | 4 |
| The United Kingdom | BSI | 1 |
| The United States | UL | 2 |

1. The flexible cord must be Type H05VV-F, 3-conductor, 1.0-mm² conductor size. Power cord set fittings (appliance coupler and wall plug) must bear the certification mark of the agency responsible for evaluation in the country or region where it will be used.
2. The flexible cord must be Type SPT-3 or equivalent, No. 18 AWG, 3-conductor. The wall plug must be a two-pole grounding type with a NEMA 5-15P (15 A, 125 V) or NEMA 6-15P (15 A, 250 V) configuration.
3. The appliance coupler, flexible cord, and wall plug must bear a “T” mark and registration number in accordance with the Japanese Dentori Law. The flexible cord must be Type VCT or VCTF, 3-conductor, 1.00-mm² conductor size. The wall plug must be a two-pole grounding type with a Japanese Industrial Standard C8303 (7 A, 125 V) configuration.
4. The flexible cord must be Type RVV, 3-conductor, 0.75-mm² conductor size. Power cord set fittings (appliance coupler and wall plug) must bear the certification mark of the agency responsible for evaluation in the country or region where it will be used.
5. The flexible cord must be Type VCTF, 3-conductor, 0.75-mm² conductor size. Power cord set fittings (appliance coupler and wall plug) must bear the certification mark of the agency responsible for evaluation in the country or region where it will be used.

10 Recycling

When a non-rechargeable or rechargeable battery has reached the end of its useful life, do not dispose of the battery in general household waste. Follow the local laws and regulations in your area for battery disposal.

HP encourages customers to recycle used electronic hardware, HP original print cartridges, and rechargeable batteries. For more information about recycling programs, see the HP Web site at <http://www.hp.com/recycle>.

Index

- A**
 - AC adapter 4
 - AC adapter, spare part numbers 18, 19
 - action keys
 - identifying 11
 - audio, product description 1
 - audio-out (headphone)/audio-in (microphone) jack 6
- B**
 - backups 69
 - battery
 - removal 49
 - spare part number 16, 19, 49
 - BIOS
 - determining version 64
 - downloading an update 65
 - updating 64
 - boot order, changing 72
 - bottom cover
 - removal 28
 - spare part number 16, 28
 - buttons
 - left TouchPad 9
 - power 5
 - right TouchPad 9
- C**
 - cables, service considerations 23
 - caps lock light, identifying 10
 - chipset, product description 1
 - components
 - display 7
 - left side 5
 - right side 4
 - top 9
 - computer
 - major components 14
 - specifications 67
 - connector, power 4
 - connectors, service considerations 23
- D**
 - deleted files
 - restoring 70
 - display assembly
 - removing 53
 - spare part number 14, 20
 - spare part numbers 53
 - subcomponents 17
 - display assembly subcomponents
 - removing 53
 - display bezel
 - removing 55
 - display cable
 - removing 57
 - display cable, spare part number 17, 21
 - display enclosure, spare part number 17
 - display hinge
 - spare part number 17
 - display hinge cover, spare part number 21
 - display hinge covers
 - removing 57
 - display hinge covers, spare part number 17
 - display panel, product description 1
 - display rear cover, spare part number 21
 - drives, preventing damage 23
 - DVD±RW Double-Layer with SuperMulti Drive
 - precautions 23
 - spare part number 18, 19
- E**
 - electrostatic discharge 24
 - equipment guidelines 26
 - esc key, identifying 11
 - Ethernet, product description 2
 - external media cards, product description 2
- F**
 - fan
 - removal 45
 - spare part number 16, 20, 45
 - fn key, identifying 11
- G**
 - graphics, product description 1
 - grounding guidelines 24
 - guidelines
 - equipment 26
 - grounding 24
 - packaging 25
 - transporting 25
 - workstation 25
- H**
 - hard drive
 - precautions 23
 - product description 1
 - removal 36
 - spare part numbers 16, 18, 19, 36
 - specifications 68
 - hard drive bracket
 - illustrated 18
 - removal 37
 - hard drive connector cable
 - illustrated 18
 - removal 37
 - Hard Drive Hardware Kit
 - contents 18
 - spare part number 16, 18, 20
 - hard drive light 4
 - HDMI port
 - identifying 4
 - heat sink
 - removal 46
 - spare part number 16, 20, 46
 - hinge covers
 - removing 57
 - HP PC Hardware Diagnostics (UEFI)
 - downloading 66
 - using 66

- HP Recovery Manager
 - correcting boot problems 72
 - starting 71
- HP Recovery media
 - creating 69
 - recovery 72
- HP Recovery partition
 - recovery 71
 - removing 72

I

- internal display switch, identifying 7
- internal microphone, identifying 7

J

- jacks
 - audio-out (headphone)/audio-in (microphone) 6
 - network 4
 - RJ-45 (network) 4

K

- keyboard
 - removal 62
 - spare part number 62
 - spare part numbers 15, 20, 21
- keys
 - action 11
 - esc 11
 - fn 11
 - Windows 11

L

- lights
 - AC adapter 4
 - caps lock 10
 - hard drive 4
 - mute 10
 - power 5
 - RJ-45 (network) status 4

M

- mass storage device
 - illustrated 18
 - precautions 23
 - spare part numbers 18
- memory card
 - inserting 4
 - removing 4
- memory card reader, identifying 4

- memory module
 - product description 1
 - removal 41
 - spare part numbers 16, 19, 41
- microphone
 - product description 1
- minimized image recovery 71
- minimized image, creating 71
- model name 1
- mute light, identifying 10

N

- network jack, identifying 4

O

- operating system, product description 3
- optical drive
 - precautions 23
 - product description 1
 - spare part number 18, 19
- original system recovery 71

P

- packaging guidelines 25
- PCID label 13
- plastic parts, service considerations 22
- ports
 - HDMI 4
 - product description 2
 - USB 2.0 4, 5
 - USB 3.0 4
- power button board
 - removal 43
 - spare part number 16, 20, 43
- power button, identifying 5
- power connector cable
 - removal 59
 - spare part number 15, 20, 59
- power connector, identifying 4
- power cord
 - set requirements 73
 - spare part numbers 19
- power lights, identifying 5
- power requirements, product description 2
- processor, product description 1
- product description
 - audio 1
 - chipset 1

- display panel 1
- Ethernet 2
- external media cards 2
- graphics 1
- hard drive 1
- memory module 1
- microphone 1
- operating system 3
- optical drive 1
- ports 2
- power requirements 2
- processors 1
- product name 1
- security 3
- serviceability 3
- video 1
- wireless 2
- product name 1

R

- recovery
 - discs 69, 72
 - HP Recovery Manager 71
 - media 72
 - options 70
 - starting 71
 - supported discs 69
 - system 71
 - USB flash drive 72
 - using HP Recovery media 70
- recovery media
 - creating 69
 - creating using HP Recovery Manager 70
- recovery partition
 - removing 72
- removal/replacement
 - procedures 27
- restore
 - Windows File History 70
- RJ-45 (network) jack, identifying 4
- RJ-45 (network) status lights, identifying 4
- RTC battery
 - removal 39
 - spare part number 16, 20, 39
- Rubber Feet Kit, spare part number 18, 20

S

- Screw Kit, spare part number 18, 20
- security cable slot, identifying 5
- security, product description 3
- service considerations
 - cables 23
 - connectors 23
 - plastic parts 22
- service tag 12
- serviceability, product description 3
- SIM slot, identifying 4
- slots
 - memory card reader 4
 - security cable 5
 - SIM 4
- Speaker Kit, spare part number 16, 20, 50
- speakers
 - identifying 9
 - removal 50
 - spare part number 16, 20, 50
- specifications
 - computer 67
 - hard drive 68
- supported discs, recovery 69
- system board
 - removal 60
 - spare part numbers 15, 20, 60
- system recovery 71
- system restore point
 - creating 69

T

- tools required 22
- top cover
 - spare part number 21
- TouchPad
 - buttons 9
- TouchPad button board
 - removal 51
- TouchPad zone, identifying 9
- transporting guidelines 25

U

- USB 2.0 ports, identifying 4, 5
- USB 3.0 ports, identifying 4
- USB/audio board
 - removing 31
 - spare part number 16, 20, 31

V

- vents, identifying 5
- video, product description 1
- volume button 6

W

- webcam
 - identifying 7
 - spare part number 21, 53
- webcam light, identifying 7
- webcam, spare part number 17
- webcam/microphone module
 - removing 56
- Windows
 - File History 70
 - restoring files 70
 - system restore point 69
- Windows key, identifying 11
- wireless, product description 2
- WLAN antenna, identifying 7
- WLAN module
 - removal 32
 - spare part numbers 16, 19, 32
- workstation guidelines 25
- WWAN antennas, identifying 7
- WWAN module
 - removal 34
 - spare part numbers 34