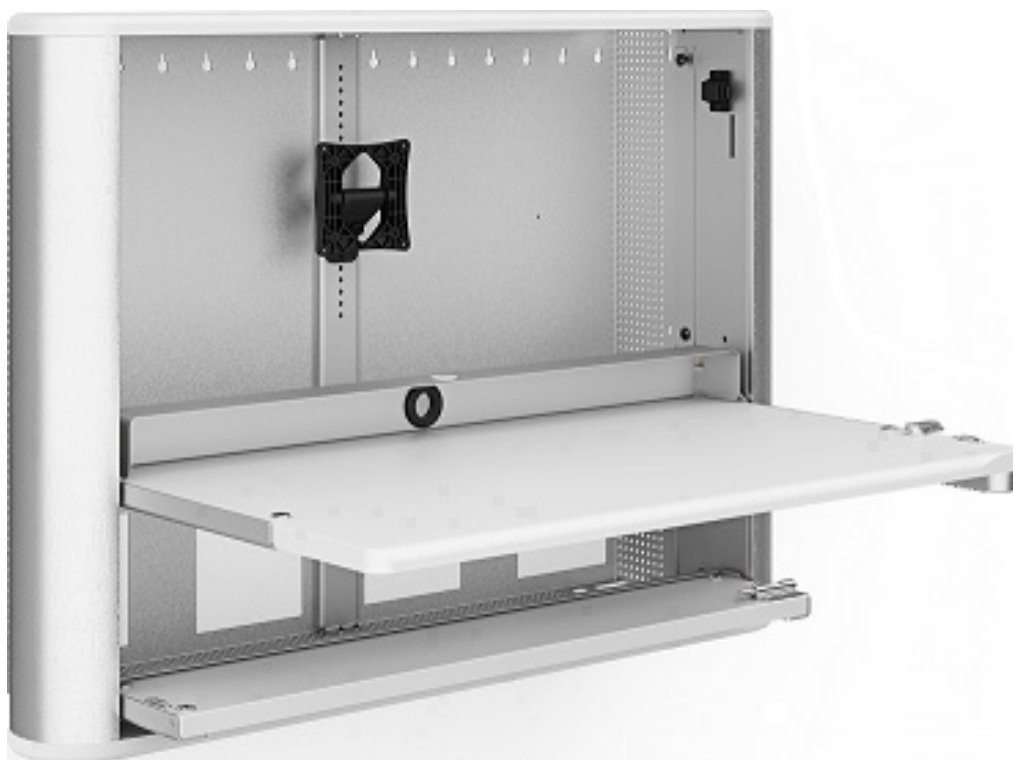


# eNook® Pro

**Product**

eNook Pro for Monitors, 36w

**Part#**


EPM3616zz/xx

For the latest User Installation Guide please visit: [www.ergotron.com](http://www.ergotron.com)



[www.ergotron.com](http://www.ergotron.com)

USA 1-800-325-3841

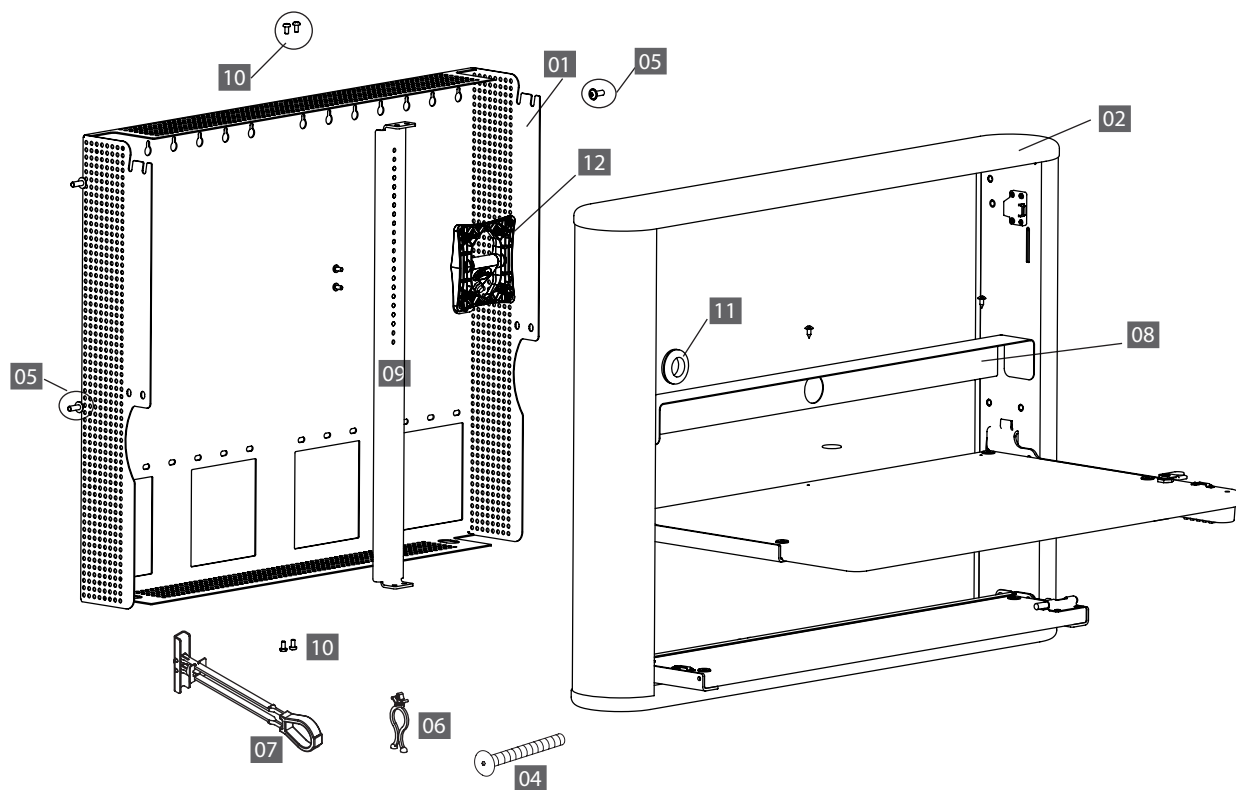

# PARTS LIST

These instructions are for Anthro's eNook® Pro. Before beginning assembly, please take a moment to review the parts list below to verify that your shipment is complete.

Product	Quantity	Part Number
01 Back Frame	1	225-2802-23
02 Main Unit	1	835-5258-00
03 1-5/8" Screw (Not Shown)	4	325-5086-00
04 1-1/2" Screw	4	325-5358-00
05 Workstation Screw	6	325-5092-00
06 Cable Clips	6	175-5217-00
07 Toggle Bolt Anchor	4	325-5394-00
08 Keyboard & Mouse Keeper	1	225-2823-00
09 Monitor Bracket	1	225-2808-00
10 3/8" Phillips Screw	4	325-5150-00
11 Rubber Grommet	1	175-5237-00
12 Monitor Mount Assembly	1	835-5696-00

---

## STEP 1

### Select the Mounting Location

- When choosing the right place to install your eNook, be sure to check the location of your power source so you can power equipment used inside.
- Your eNook can be mounted to drywall or to wood wall studs. If you're installing to wood wall studs, go to Step 2.
- If you're installing into drywall, go to Step 7.

---

## STEP 2

### Find Wall Studs


- Using a stud finder, locate the studs to which you'll attach your eNook.

---

## STEP 3

### Determine Mounting Point

- Determine the optimal desk height for your eNook. Typical sitting height is about 29" high; typical standing height is about 42" high.
- Measure up 14-3/4" from the shelf location and mark that point on one stud.

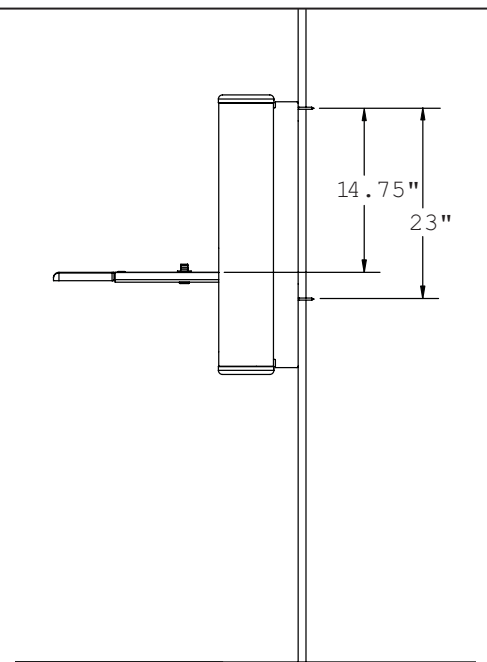


---

## STEP 4

### Attach Screws to Wall Studs

- Using a 1/8" drill bit, drill one hole into a stud about 1-1/2" deep. How do you make sure that hole is 1-1/2" deep? Measure that length on your drill bit and mark it with a piece of masking tape. Stop drilling when you reach the masking tape.
- Using a Phillips driver (or a power driver with a Phillips bit), attach the first 1-1/2" long screw at that mounting point, but don't tighten all the way to the wall. Stop tightening when the screw head is about 1/4" away from wall.


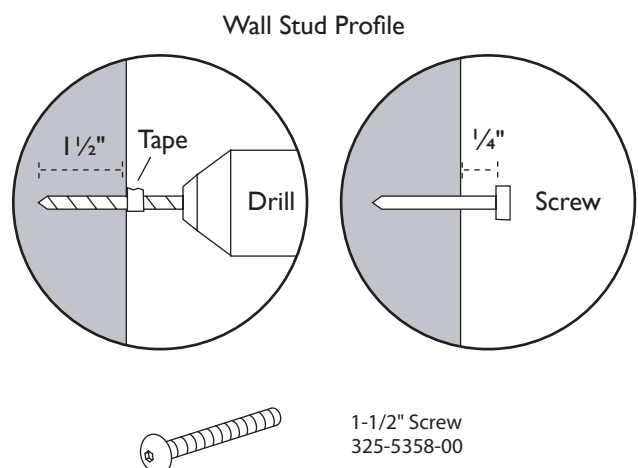


---

## STEP 5

### Lift eNook Frame onto screws

- Lift the eNook frame onto the first mounting screw. Keyhole slots on the frame are spaced every 2", so you can position the eNook where you want it.
- While one person holds the eNook frame level, the second person marks the installation point of the second 1-1/2" long screw. Make sure that the second screw goes into a stud, too!
- Remove the frame from the wall and drill the second hole with the 1/8" drill bit.
- Using a Phillips driver, attach the second 1-1/2" long screw. Stop tightening when the screw head is about 1/4" away from the wall.
- Lift the frame onto the two mounting screws.

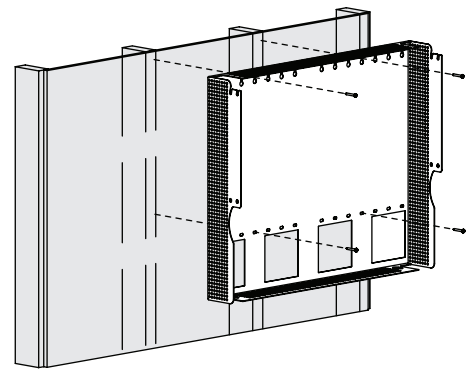

1-1/2" Screw  
325-5358-00

---

## STEP 6

### Attach Lower Screws to Studs


- Once the frame is on the wall, mark the mounting points for lower screws into the same studs.
- Using the 1/8" drill bit, drill one hole in each stud about 1-1/2" deep.
- Attach the 1-1/2" long screws and tighten all four screws fully so that the Frame is snug against the wall.

---

## STEP 7

### Determine the Mounting Point on Drywall






- Determine the optimal desk height for the eNook work surface, refer to image for typical shelf heights.
- Measure up 14-3/4" from the shelf location and mark that point.
- Once you determine the right height for your eNook, mark one mounting point hole location. When choosing the first mounting point, remember that the two upper mounting points should be at least 16" apart to keep the eNook stable. To help you visualize where eNook will be on your wall, use the eNook Frame as a template.

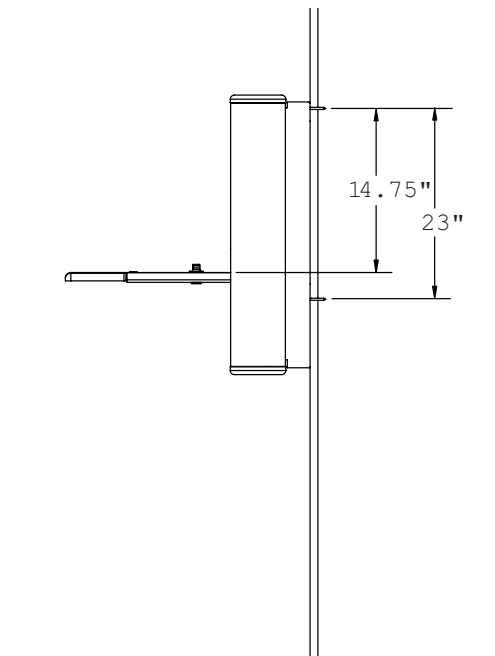

## STEP 8

### Install one TOGGLER™ for Drywall Installation

- Drill 1/2" diameter hole in your wall at the mounting point.
- Insert a TOGGLER into a hole, metal end first.
- Pull the plastic ring end so the metal channel rests flush behind the wall. With your other hand, slide the plastic cap along the straps until the flange of the cap is flush with the wall.
- Place your thumb between the plastic straps. Push side to side, snapping off the straps at the wall.
- Insert a 1-5/8" long screw into the TOGGLER, but don't tighten all the way. Leave the bolt head about 1/4" from the plastic cap.

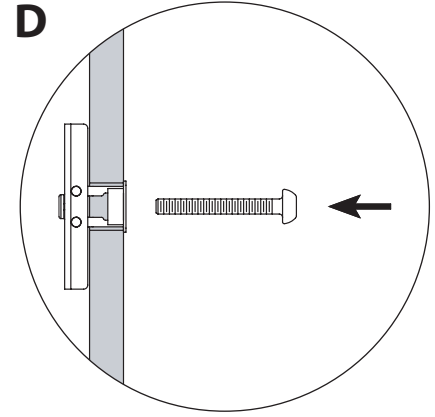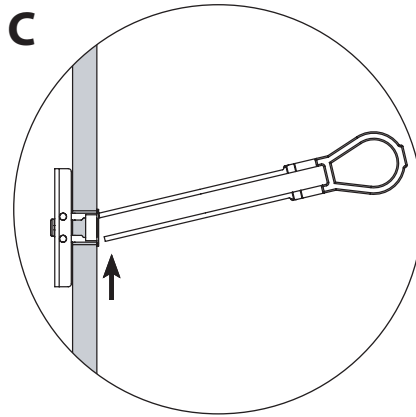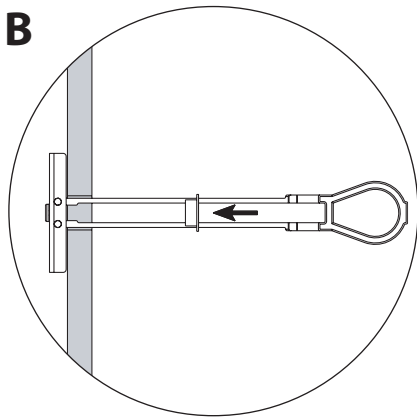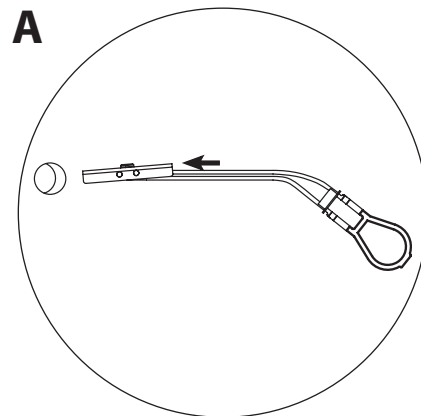


1-5/8" Screw  
325-5086-00

## STEP 9

### Install remaining TOGGLERs

***This is a two-person step!***

- Lift the eNook Frame onto the bolt. Using a level to make sure that the Frame is level, mark the second mounting point as shown. Be sure that you mark your spot in the center of the small keyhole!
- Mark the third and fourth mounting points along the bottom hole array. Set aside the Frame.
- Drill 1/2" diameter holes on the 2nd, 3rd, and 4th mounting points and install TOGGLERs as instructed above.

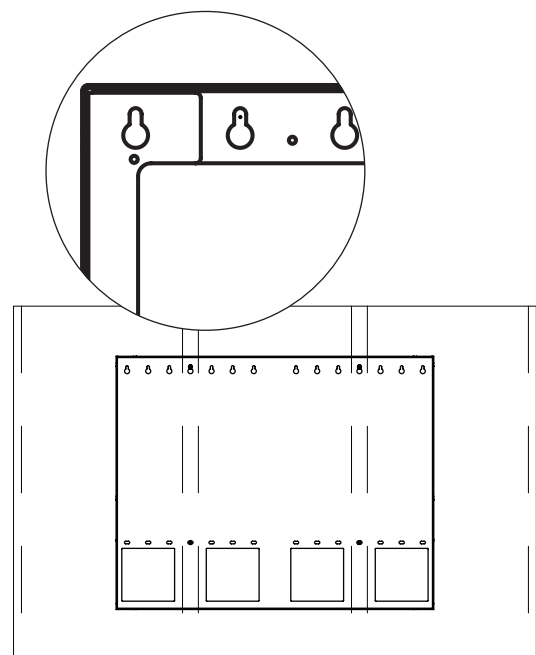

---

## STEP 10

### Insert Screw and Install Frame


- Insert one 1-5/8" long screw into the top two TOGGLEDs, but don't tighten all the way. Leave the screw head about 1/4" from the plastic cap.
- Lift the Frame onto the top two screws. Install the bottom two screws, then tighten down all four screws.

---

## STEP 11

### Attach the Monitor Assembly to the Monitor Rail

- Choose either the 75mm or 100mm Monitor Mount Assembly holes that match the hole pattern on the back of your monitor. For the 75mm holes, attach the 4 spacers with the screws provided.
- Place the Monitor Mount Assembly in position in back of the monitor. Using a Phillips screwdriver, attach the assembly to the monitor with the four short fasteners packaged with the Monitor Mount Assembly.
- Orient the Monitor Rail so that the vertical hole array is at the top. Align the two holes on the back of the Monitor Mount Assembly with two holes on the Monitor Rail so the monitor is at the desired height, allowing enough space for your monitor to fit inside the enclosure. Secure the Monitor Assembly to the Monitor Rail with the two 3/8" Phillips Screws.

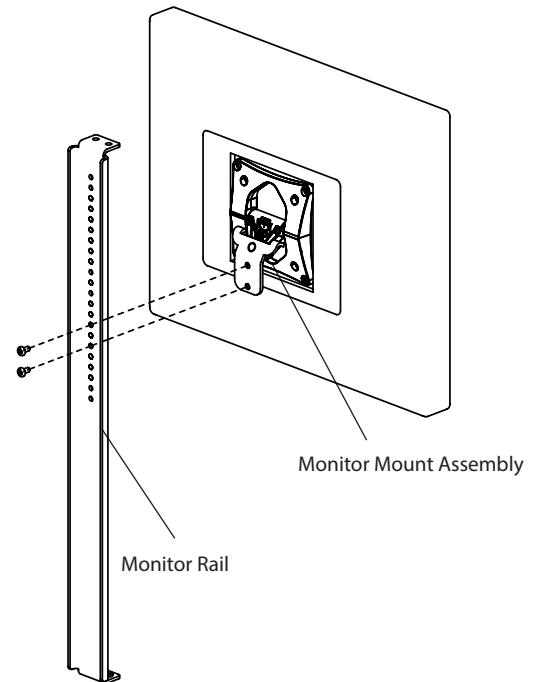


3/8" Phillips Hd Screw  
325-5150-00

---

## STEP 12

### Install the Monitor Rail onto the Back Frame

- Determine the installation point of your Monitor Rail.
- Align the top of the Monitor Rail with the hole array at the top of the Back Frame so that your monitor is where you want it. Attach the Monitor Rail to the third row of holes from the back of the frame, in any left-to-right position. Use the Phillips screwdriver and two 3/8" Phillips screws. Next align the bottom of the Monitor Rail with the hole array at the bottom of the Back Frame. Attach using two more 3/8" Phillips screws.

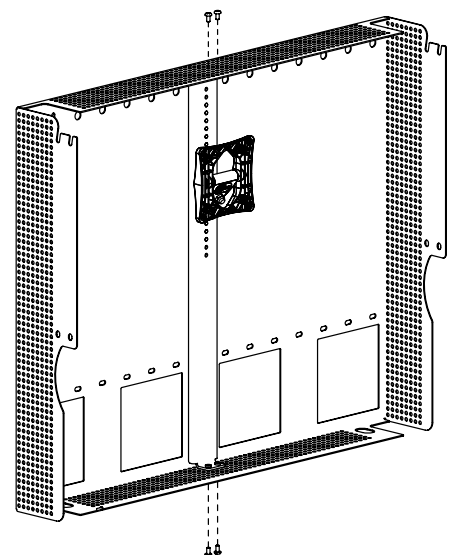


3/8" Phillips Hd Screw  
325-5150-00

## STEP 13 - THIS STEP REQUIRES TWO PEOPLE

### Attach Main Unit to Frame

**NOTE: eNook Pro can be installed at your choice of depth: 7.25" or 8.25" deep. Determine the desired depth before beginning this step.**


- Open the top door and find the angle slots on the Back Frame.  
The front set of angled slots is for 8.25" overall depth; the back set is for an overall depth of 7.25"
- Lift the Main Unit onto the Back Frame by aligning the two Workstation Screws on the frame with the angle slots. Make sure that both fasteners are captured.
- Install two more Workstation Screws into the sidewalls at the bottom of the enclosure, just above the shelf bracket. Tighten all four Workstation Screws.

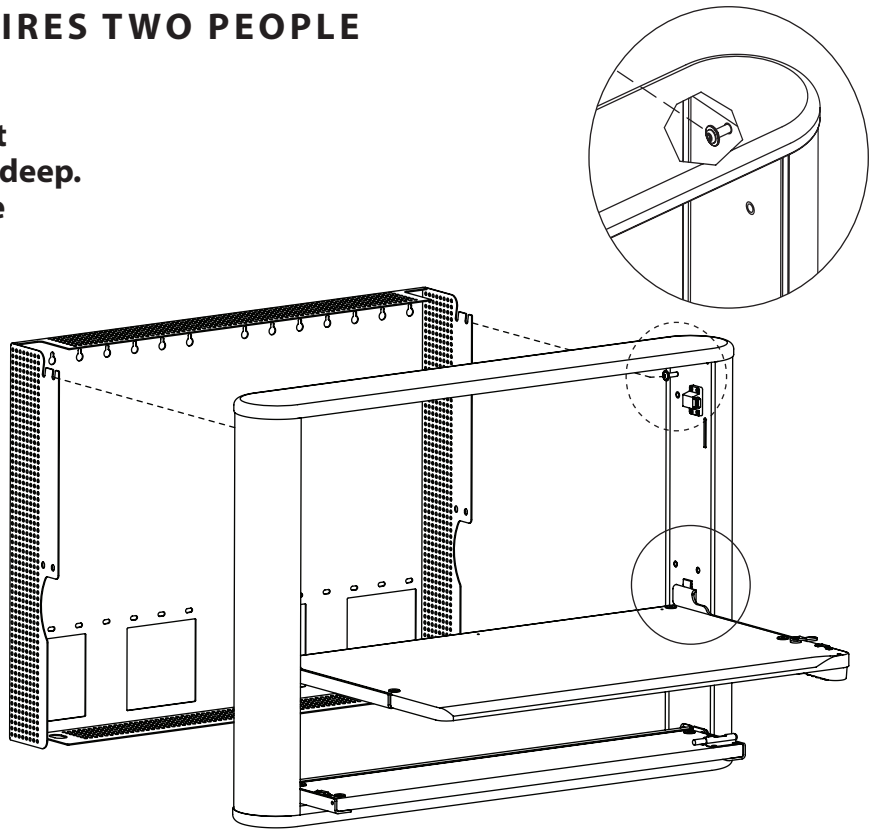

## STEP 14

### Insert Cable Clips

- Cable Clips are provided to help manage your cables. Clips can be poked into any of the ventilation holes on the top, back, or side of eNook.
- Twist the ends of the clips to keep the cables in place.

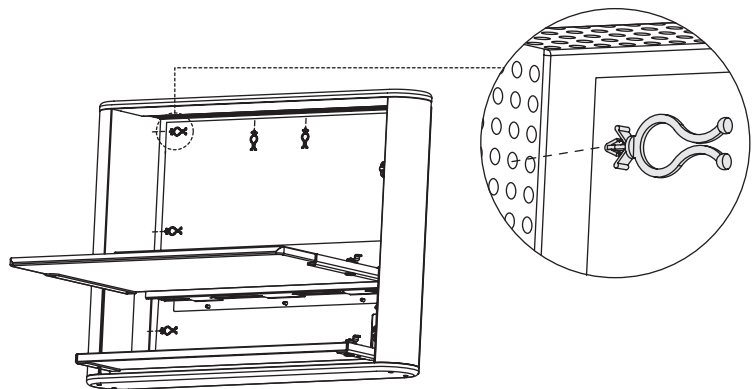

## CONGRATULATIONS! YOUR ENOOK PRO ASSEMBLY IS COMPLETE!

For Warranty visit: [www.ergotron.com/warranty](http://www.ergotron.com/warranty)

For Service visit: [www.ergotron.com](http://www.ergotron.com)

For local customer care phone numbers visit: <http://contact.ergotron.com>

### Americas Sales and Corporate Headquarters

1181 Trapp Rd.  
St. Paul, MN USA  
1-800-325-3841  
[www.ergotron.com](http://www.ergotron.com)  
[sales@ergotron.com](mailto:sales@ergotron.com)

**ERGOTRON®**



While Ergotron, Inc. makes every effort to provide accurate and complete information on the installation and use of its products, it will not be held liable for any editorial errors or omissions (including those made in the process of translation from English to another language), or for incidental, special or consequential damages of any nature resulting from furnishing this instruction and performance of equipment in connection with this instruction. Ergotron, Inc. reserves the right to make changes in the product design and/or product documentation without notification to its users. For the most current product information, or to know if this document is available in languages other than those herein, please contact Ergotron. No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or by any means, electronic, mechanical, photocopying, recording or otherwise without the prior written consent of Ergotron, Inc., 1181 Trapp Road, Eagan, Minnesota, 55121, USA. Patents Pending and Patented U.S. & Foreign. Ergotron is a registered trademark of Ergotron, Inc.

© 2016 Ergotron, Inc. All rights reserved.

All trademarks are the property of their respective companies. Anthro is a registered trademark and brand of Ergotron Inc. Anthro-DNA is a trademark of Ergotron Inc., Ergotron Inc. is a Nortek company.