


**TrueReach**  
**HDMI™ EXTENDER**  
Point to Point Extender



User Manual  
Y10G001-B1

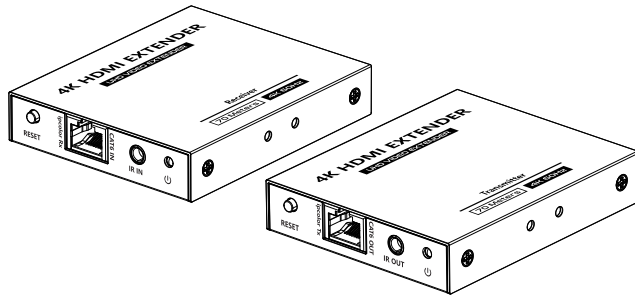

### Important Safety Instructions:

1. To prevent electric shock, please ensure that all apparatus is properly grounded.
2. Do not place this device near or over a radiator or heat register, or where it is exposed to direct sunlight.
3. Place the device in a well-ventilated area, do not block any ventilation openings.
4. Do not expose this device to rain or place it near water. Any liquid that goes into the device may cause a failure, fire, or electric shock.
5. Do not place the device on an uneven or unstable surface. The device may fall resulting in a malfunction.
6. Never insert anything metallic into the open parts of this Device. This may cause a danger of electric shock.
7. If a three-party power supply is used, please ensure that the power supply specifications meet the product requirements.


### Introduction

This is an HDMI point-to-point extender kit, it has zero-latency transmission. The 4K@60Hz HDMI signal can be extended by 230ft (70m) through CAT6/6A/7 network cable. It supports HDMI loop out, IR passthrough, 3.5mm audio output, etc. This kit is a reliable, ultra-high-definition video transmission solution, which is widely used in security monitoring, home theater, broadcasting, training and other fields.

### Features

1. Zero-latency transmission.
2. Extend 4K@60Hz HDMI signal up to 70m/230ft over Cat6/6A/7 cable.
3. The receiver supports 3.5mm stereo output.
4. Support HDR10.
5. Support EDID passthrough and auto downscaling.
6. The transmitter supports HDMI loop out.
7. Support IR passthrough.
8. Lightning protection, surge protection, ESD protection.


### Package Contents

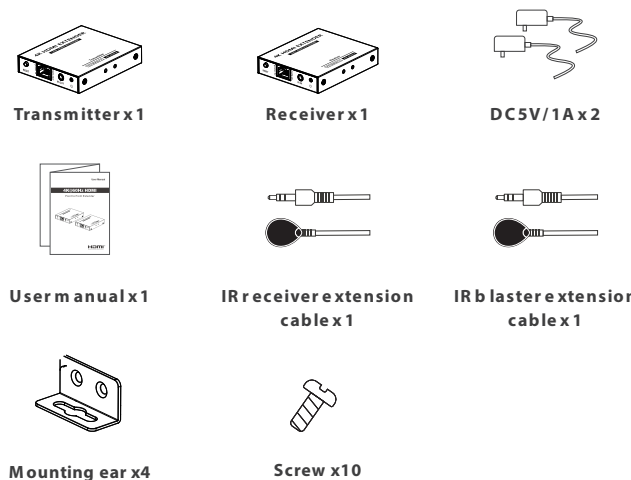

### Installation Requirements

| Item           | Description                                 | Requirement     |
|----------------|---|-----------------|
| Signal source  | Devices with HDMI port (PC, DVD, NVR, etc.) | HDMI cable ≤ 5m |
| Cable          | CAT6/6A/7, following standard IEEE-568B     | CAT6/6A/7 ≤ 70m |
| Display device | TVs, projectors, etc. with HDMI port        | HDMI cable ≤ 5m |


### Wall Mounting

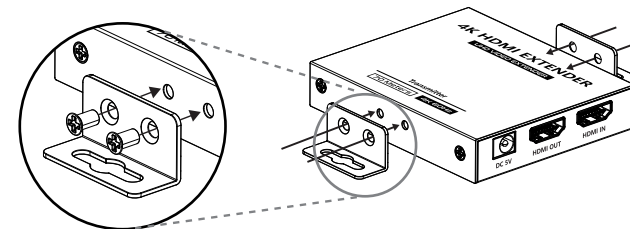

Install the mounting ears on the unit according to the diagram, and select the wall mounting position to fix it.

### Panel Description


#### Transmitter

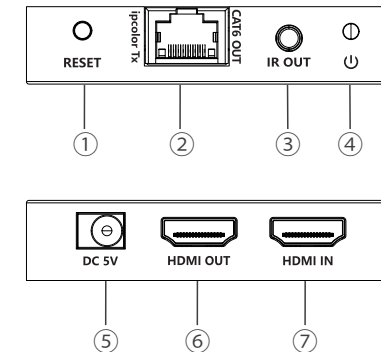

|                   |   |
|-------------------|---|
| ① Reset button    | Press to restart the device   |
| ② RJ45 output     | Connect with CAT6/6A/7 network cable  |
| ③ IR out          | Connect with IR blaster extension cable   |
| ④ Power indicator | When there is power and no HDMI signal, the indicator will flash, when there is HDMI signal, the indicator will light solid |
| ⑤ DC5V            | Connect with DC 5V/1A power adapter   |
| ⑥ HDMI output     | Connect with local HDMI display device with HDMI cable  |
| ⑦ HDMI input      | Connect with HDMI source device with HDMI cable   |

### Panel Description

#### Receiver

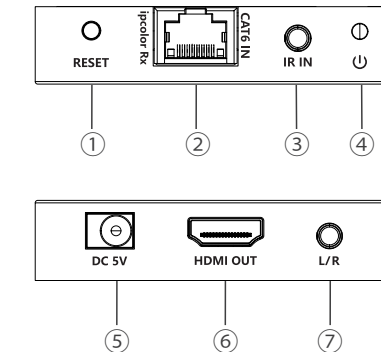

|                       |   |
|-----------------------|---|
| ① Reset button        | Press to restart the device   |
| ② RJ45 input          | Connect with CAT6/6A/7 network cable  |
| ③ IR in               | Connect with IR receiver extension cable  |
| ④ Power indicator     | When there is power and no HDMI signal, the indicator will flash, when there is HDMI signal, the indicator will light solid |
| ⑤ DC5V                | Connect with DC 5V/1A power adapter   |
| ⑥ HDMI output         | Connect with HDMI display device with HDMI cable  |
| ⑦ 3.5mm stereo output | Connect with earphone or speaker  |

## Contact Information

**Corporate Headquarters**  
12979 Arroyo Ave  
San Fernando, CA 91340 - USA

Office: +1 (818) 727-7000  
Fax: +1 (818) 875-0002  
Email: info@Rocstor.com

**Technical Support / RMA**  
Hours: 9:00 am - 5:00 pm PST  
Mon - Fri (excluding holidays)

**Sales Info**  
Hours: 8:00 am - 5:00 pm PST  
Mon - Fri (excluding holidays)

Tell: +1 (818) 727-7000 (DOM/INTL)  
Fax: +1 (818) 875-0002  
Email: support@Rocstor.com

Tell: +1 (818) 727-7000 (DOM/INTL)  
Fax: +1 (818) 875-0002  
Email: support@Rocstor.com

**Corporate, Government and Academic Customers**  
Our Corporate Sales Team's goal is to help our U.S.A. and Canadian customers find a storage solution that best serves their needs. We will help you determine your best purchasing options. For more information please contact the appropriate department below or call us at +1 (818) 727-7000.

General sales information: sales@Rocstor.com  
Corporate sales information: corporate\_sales@Rocstor.com  
Educational sales information: academic\_sales@Rocstor.com  
Federal, State & Local government sales information: government\_sales@Rocstor.com


**Resellers/Business Development/OEM Partners**  
All Channel National and International Resellers, VARs, Consultants ...  
contact Rocstor Channel Sales: call: +1 (818) 727-7000  
Email: reseller\_info@Rocstor.com

## Disclaimer

©2023 Rocstroge, Inc. Rocstor is registered trademark of Rocstorage, Inc. The terms HDMI, HDMI High-Definition Multimedia Interface, HDMI Trade dress and the HDMI Logos are trademarks or registered trademarks of HDMI Licensing Administrator, Inc. The product name and brand name may be registered trademark of related manufactures. ™ and ® may be omitted on the user manual. The pictures in this user manual are just for reference. We reserve the rights to make changes without further notice to a product or system described herein to improve reliability, function or design.

## Installation Procedures

### 1. Connection Diagrams

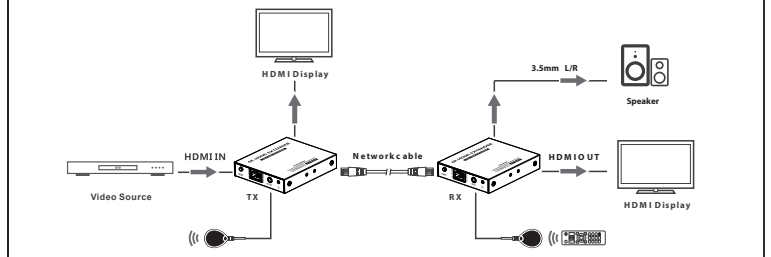


### 2. Connection Instructions

- 1) Connect the source device to the HDMI IN port of the transmitter with an HDMI cable, and connect the HDMI OUT port of the receiver to the display device with another HDMI cable.
- 2) Use a Cat6/6A/7 cable to connect the RJ45 port of the transmitter and receiver.
- 3) If using HDMI loop out, connect the display device to the HDMI OUT port of the transmitter.
- 4) If using IR passthrough, the IR blaster extension cable should plug into IR OUT port of the transmitter, the IR receiver extension cable should plug into IR IN port of the receiver.
- 5) If you need to output audio, connect the speaker to the L/R port with a 3.5mm stereo audio cable.
- 6) Plug the power supply into the devices to get started.

## Installation Procedures

### 3. IR User Guide

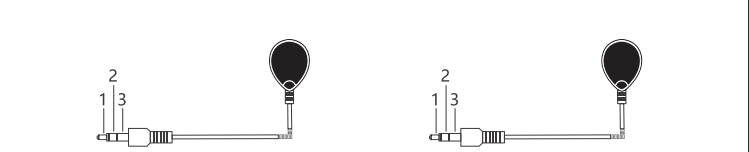

- IR blaster**
1. Power
  2. IR signal
  3. Null
- IR receiver**
1. Power
  2. IR signal
  3. Grounding

- 1) IR blaster extension cable should plug in the IR OUT port of the transmitter or receiver, IR receiver extension cable should plug in the IR IN port of the transmitter or receiver.
- 2) The emitter of the IR blaster extension cable should be as close as possible to the IR receiving window of the source device.
- 3) Point the remote control at the receiving head of the IR receiver extension cable to operate.

## FAQ

**Q: The devices are connected correctly, but why is there no image displayed?**  
A: 1) Please make sure the HDMI cable meets the transmission requirements. (e.g. 4K HDMI cable)  
2) Please check and make sure the network cable is connected well.  
3) Restart the transmitter or receiver by pressing the reset button.

**Q: Why does the display occasionally have a black screen??**  
A: 1) Check if the length of the cable is within the specified range.  
2) Reset the transmitter or receiver to re-built the connection.

**Q: Why is the display color abnormal or no sound?**  
A: 1) Reset the transmitter or receiver to re-built the connection.  
2) Check if the HDMI cables are connected well.  
3) Reconnect the network cable.

## Technical Parameters

| Items                                 | Transmitter   | Receiver                                   |
|---------------------------------------|---|--|
| <b>Video</b>                          |   |  |
| <b>Input interface</b>                | 1xHDMI Type A Female  | 1xRJ45 Female                              |
| <b>Output interface</b>               | 1xHDMI Type A Female<br>1xRJ45 Female   | 1xHDMI Type A Female                       |
| <b>HDMI Length</b>                    | ≤5 m  | ≤5 m                                       |
| <b>Maximum transfer rate</b>          | 18Gbps  |  |
| <b>Maximum transmission bandwidth</b> | 600MHz  |  |
| <b>EDID passthrough</b>               | Yes   |  |
| <b>Compatibility</b>                  | HDMI 2.0 (Deep color, 4K, HDR, YUV4:4:4)<br>HDCP 2.2  |  |
| <b>Resolutions</b>                    | 480i@60Hz, 480p@60Hz, 576i@50Hz, 576p@50Hz,<br>720p@50/60Hz, 1080i@50/60Hz, 1080p@50/60Hz,<br>3840x2160@24/25/30/50/60Hz, 4096x2160@24/25Hz,<br>1280x960, 1280x800, 1280x768, 1680x1050,<br>1360x768, 1366x768, 1600x900, 1024x768, 800x600 |  |
| <b>Transmission distance</b>          | CAT6/6A/7≤70m   |  |
| <b>Audio</b>                          |   |  |
| <b>Input interface</b>                | 1xHDMI Type A Female  | N/A  |
| <b>Output interface</b>               | 1xHDMI Type A Female  | 1xHDMI Type A Female<br>1x3.5mm L/R Female |
| <b>Audio formats</b>                  | LPCM/DTS-HD/DTS-Audio/Dolby Digital 5.1CH/Dolby Atmos   |  |
| <b>Command Signal</b>                 |   |  |
| <b>IR interface</b>                   | 1x3.5mm IROTF Female  | 1x3.5mm IIRINF Female                      |
| <b>Receiving range</b>                | ≤5 m  |  |
| <b>Infrared frequency</b>             | 20KHz~60KHz   |  |

## Technical Parameters

|                              |  |         |
|------------------------------|--|---------|
| <b>Power</b>                 |  |         |
| <b>Power Supply</b>          | DC5V/1A  | DC5V/1A |
| <b>Power Consumption</b>     | <3W  | <3W     |
| <b>Operating Environment</b> |  |         |
| <b>Working temperature</b>   | -20°~ 60°  |         |
| <b>Storage temperature</b>   | -30°~ 70°  |         |
| <b>Humidity</b>              | 0~90%RH (No condensation)  |         |
| <b>Physical Properties</b>   |  |         |
| <b>Housing</b>               | Metal  |         |
| <b>Weight</b>                | 140g   | 140g    |
| <b>Color</b>                 | Black  |         |
| <b>Dimensions</b>            | 85.0(L)*75.5(W)*16.5(H)mm  |         |
| <b>Protection</b>            | ESD protection<br>1a Contact discharge level 2(±4KV)<br>1b Air discharge level 3(±8KV)<br>Implementation of the standard: IEC61000-4-2<br>Lightning protection, Surge protection |         |
| <b>Certifications</b>        | FCC/CE/RoHS2.0   |         |