



Maintenance and Service Guide

732pk model

SUMMARY

This guide provides information about spare parts, removal and replacement of parts, diagnostic tests, problem troubleshooting, and more.

© Copyright 2023 HP Development Company, L.P.

AMD is a trademark of Advanced Micro Devices, Inc. Bluetooth is a trademark owned by its proprietor and used by HP Inc. under license. NVIDIA is a trademark and/or registered trademark of NVIDIA Corporation in the U.S. and other countries. USB Type-C and USB-C are registered trademarks of USB Implementers Forum. DisplayPort and the DisplayPort logo are trademarks owned by the Video Electronics Standards Association (VESA) in the United States and other countries.

The information contained herein is subject to change without notice. The only warranties for HP products and services are set forth in the express warranty statements accompanying such products and services. Nothing herein should be construed as constituting an additional warranty. HP shall not be liable for technical or editorial errors or omissions contained herein.

First Edition: December 2023

Document Part Number: N70018-732pk-MSG-V1

Assembly part number: N70018-001

Product notice

Only trained service personnel familiar with this product should service it. Before performing any maintenance or service, be sure to read "Important Safety Information".

Table of Contents

1	Getting started	2
	Important safety information	2
	Important service information and precautions	2
	RoHS (2002/95/EC) requirements	3
	General descriptions.....	3
	Firmware updates.....	3
	Before returning the repaired product to the customer	3
2	Monitor features.....	4
	Features	4
	Front components.....	6
	Rear components	7
	Locating the serial number and product number.....	9
3	Illustrated parts catalog	10
	How to order parts	11
4	Removal and replacement procedures	13
	Preparation for disassembly.....	13
	Rear Cover	13
	Power board	17
	Connector repair.....	18
	HDMI connector CN5001	20
	DP connector CN5101.....	21
	Type C connector CN1801	21
	DP connector CN5201.....	22
	USB connector CN1001	23
	RJ45 connector CN1201	23
	USB 3.0A 1/2/3 connector CN1002/CN1102/CN1104	23
	USB 3.0 A connector CN154.....	24
	USB type-c connector CN152	24
	Function test.....	25
	Support and troubleshooting	25
	Index.....	29

1 Getting started

Read this chapter to learn about safety information and where to find additional HP resources.

Important safety information

Carefully read the cautions and notes within this document to minimize the risk of personal injury to service personnel. The cautions and notes are not exhaustive. Proper service methods are important to the safe, reliable operation of equipment. Improper service methods can damage equipment.

The service procedures recommended and described in this service manual provide effective methods of performing service operations. Service engineers should have prior repair knowledge and experience as well as appropriate training for the product before performing service procedures.

- Be sure your working environment is dry and clean and meets all government safety requirements.
- Be sure that other persons are safe while you are servicing the product.
- Do not perform any action that can cause a hazard to the customer or make the product unsafe.
- Use proper safety devices to ensure your personal safety.
- Always use approved tools and test equipment for servicing.
- Never assume the product's power is disconnected from the main power supply. Check that it is disconnected before opening the product's cabinet.
- Modules containing electrical components are sensitive to electrostatic discharge (ESD). Follow ESD safety procedures while handling these parts.
- Some products contain more than one battery. Do not disassemble or expose a battery to high temperatures, such as throwing into fire, or the battery may explode.
- Refer to government requirements for battery recycling or disposal.

This information provides general service information for the monitor. Adherence to the procedures and precautions is essential for proper service.

IMPORTANT: Only trained service personnel who are familiar with this HP product should perform service or maintenance for it. Before performing any service or maintenance, personnel must read the important safety information.

IMPORTANT: You must disconnect the power cord from the power source before opening the monitor to prevent component damage.

Important service information and precautions

- Repair must be performed by professional service technicians in a repair center. End users should not perform these procedures.
- Please note during servicing that the primary side is the high voltage area.
- This monitor meets ROHS requirements. Be sure to use lead-free solder wire when soldering.
- If you must change a capacitor, be sure to match the polarity as printed on the PCB.
- If you must replace a capacitor, make sure the specification and part number match the BOM and location.
- If you must replace a capacitor, insert new parts carefully to avoid a short circuit caused by the

near pin.

- Do not get the board wet. Water and moisture can cause a short circuit that causes malfunctions.
- To avoid damage, be sure to use lead-free solder.
- When soldering, work quickly to avoid overheating the circuit board.
- Keep the soldering iron tip clean and well tinned when replacing parts.
- After repair, perform a close inspection of the circuit board to confirm it is in good condition.
- After repair, perform a function test to confirm the power supply is working properly.

ERP Lot5 requirement

1. A professional repairer must have the technical competence to repair electronic displays and comply with the applicable regulations for repairers of electrical equipment in the Member States where the repairer operates. Reference to an official registration system as professional repairer, where such a system exists in the Member States, shall be accepted as proof of compliance.
2. A professional repairer must have insurance that covers liabilities resulting from repairs, regardless of whether required by the Member State.

RoHS (2002/95/EC) requirements

Applied to all countries that require RoHS.

The RoHS (Restriction of Hazardous Substance in Electrical and Electronic Equipment Directive) is a legal requirement by the EU (European Union) for the global electronics industry sold in the EU and other countries. Any electrical and electronics products launched in the market after June 2006 should meet this RoHS requirement. Products launched in the market before June 2006 are not required to be compliant with RoHS parts. If the original parts are not RoHS compliant, the replacement parts can be non-ROHS compliant. If the original parts are RoHS compliant, the replacement parts **MUST** be RoHS compliant.

If product service or maintenance requires replacing parts, confirm the RoHS requirement before replacement.

General descriptions

This manual contains general information. There are two levels of service:

Level 1: Cosmetic/appearance/alignment service

Level 2: Circuit board or standard parts replacement

Firmware updates

Firmware updates for the monitor are available at support.hp.com. If no firmware is posted, the monitor does not need a firmware update.

Before returning the repaired product to the customer

Perform an AC leakage current check on exposed metallic parts to be sure the product is safe to operate without the potential of electrical shock. Do not use a line isolation transformer during this check.

Measurements that are not within specified limits present a possible shock hazard. You must check and repair the product before returning it to the customer.

2 Monitor features

This chapter provides an overview of the monitor's features.

Features

Depending on the model, your monitor might include the following features:

Display features

- 80 cm (31.5 in) diagonal viewable screen area with 3840 × 2160 resolution, plus full-screen support for lower resolutions; includes custom scaling for maximum image size while preserving original aspect ratio
- Liquid crystal display (LCD) with active matrix and in-plane switching (IPS) Black Technology
- Wide color gamut to provide coverage of sRGB color spaces (sRGB 100%, DCI P3 98%)
- Nonglare panel with an LED backlight
- Wide viewing angle to allow viewing from a sitting or standing position, or moving from side to side (horizontal/vertical viewing angles: 178°)
- Single power button on the monitor turns the monitor and HP notebook (if connected to Thunderbolt™ or USB Type-C® cable) on and off
- Tilt, swivel, and height adjustment capabilities
- Pivot capability to rotate the monitor head from landscape to portrait orientation
- Dual Picture in Picture (PiP) and Picture by Picture (PbP) functionality to enable the USB Type-C Thunderbolt, DisplayPort™, and HDMI inputs to be viewed in each half of the screen
- 5-in-1 joystick control and five on-screen display (OSD) buttons

Moving the joystick up, down, left, or right displays the OSD button labels, or hot keys. For select monitors, moving the joystick or joypad in a defined direction immediately performs a hot-key function without showing the OSD button menu first.

- On-screen display (OSD) adjustments in 11 languages for easy setup and screen optimization
- Energy saver feature to meet requirements for reduced power consumption
- Security cable slot on the rear of the monitor for an optional security cable
- Cable management feature for placement of cables and cords

Connectors

- DisplayPort video input and output
- High-Definition Multimedia Interface (HDMI) video input
- USB Type-C Thunderbolt ports (cable included in select regions)
- USB hub with one USB Type-B port that connects to the computer (upstream), four USB Type-A ports, and

one USB Type-C port that connects to USB devices (downstream)

- Plug and Play capability, if supported by your operating system
- RJ-45 (network) jack

Monitor stand

- Removable stand for flexible monitor head mounting solutions
- HP Quick Release 2 device to quickly attach the monitor head to the stand with a simple click, and then remove it with the convenient sliding tab release
- VESA® mounting bracket for attaching the monitor head to a wall-mount device or swing arm
- VESA mounting capability (100 × 100 mm) for attaching the monitor to a swing arm mount
- Support for a mounting bracket to attach the monitor to a Mini Workstation or Mini Desktop

NOTE: For safety and regulatory information, see the Product Notices provided in your documentation kit. To access the latest user guide, go to <http://www.hp.com/support>, and follow the instructions to find your product. Then select Setup & User Guides.

Front components

To identify the components on the front of the monitor, use this illustration and table.




Front components and their descriptions

Component	Description
(1) Power button	<p>Turns the monitor on or off.</p> <p>NOTE: Be sure that the master power switch on the monitor is in the On position to turn on the monitor.</p> <p>NOTE: When an HP notebook is connected to the Thunderbolt port, pressing the power button on the display turns off your notebook or puts it to sleep based on your power setting preferences.</p>
(2) Power light	<p>White: The monitor is on.</p> <p>Amber: The monitor is in a reduced power state because of inactivity.</p>

Rear components

To identify the components on the rear of the monitor, use this illustration and table.

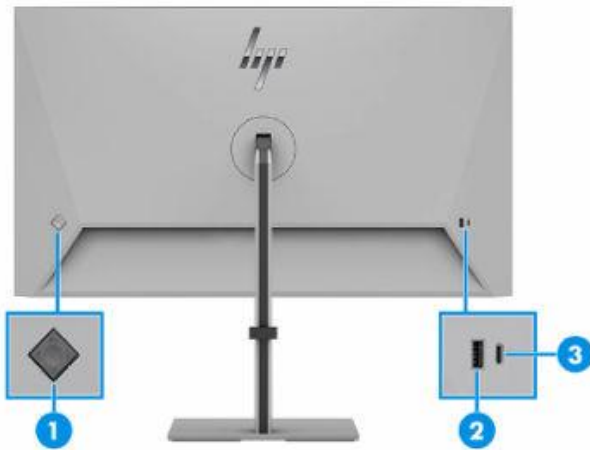


Rear components and their descriptions

Component	Description
(1) Joypad	Press to open the OSD settings.
(2) USB port (downstream)	Connects a USB cable to a peripheral device, such as a keyboard, mouse, or USB hard drive, and supports battery charging.
(3) USB Type-C port (downstream)	Connects a USB cable to a peripheral device, such as a keyboard, mouse, or USB hard drive, and supports 5V/3A battery charging.

Bottom components

To identify the components on the bottom of the monitor, use this illustration and table.

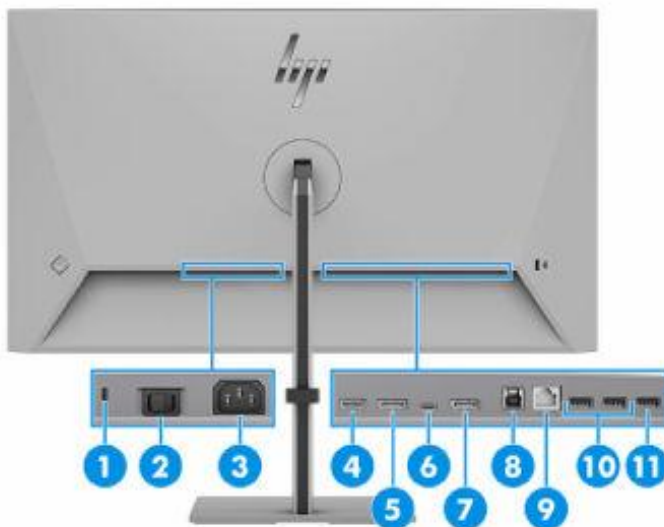


Bottom components and their descriptions

Component	Description
(1) Security cable slot	Connects an optional security cable.
(2) Master power switch	Turns on or off all power to the monitor.
(3) Power connector	Connects your monitor to a power outlet.
(4) HDMI port	Connects the HDMI cable to a source device such as a computer or game console.
(5) DisplayPort connector	Connects the DisplayPort cable to a source device such as a computer or game console.
(6) USB Type-C Thunderbolt port (upstream)	Connects a Thunderbolt or USB Type-C cable to a source device such as a computer or game console. This Thunderbolt port can function as a DisplayPort input or as a USB 3.0 connection. It can also be used to deliver up to 100 W of power to a device. Power outputs are 5 V/ 9 V/ 12 V/ 15 V/ 20 V to achieve a 100 W output. This port also enables the USB Type-A ports to perform their functions.
(7) DisplayPort OUT connector	Connects a DisplayPort cable to a secondary monitor for daisy-chaining.
(8) USB Type-B port (upstream)	Connects the USB Type-B cable to a source device such as a computer or game console. NOTE: A USB Type-B cable or a Thunderbolt cable must be connected from the source device to the monitor to enable USB Type-A ports on the monitor.
(9) RJ-45 (network) port	Connects a network cable. The network data rate via Thunderbolt maximum speed is 1000 Mbps. <ul style="list-style-type: none"> • Green (left): The network is connected. • Amber (right): Activity is occurring on the network. NOTE: The RJ-45 (network) port supports Wake On Lan (WOL) in-band, Mac Address Passthrough (MAPT) in-band, and PXE boot. Functionality may vary with PC settings. For more information, see USB Type-C mode on page 25 .
(10) USB ports (2) (downstream)	Connect a USB cable to a peripheral device, such as a keyboard, mouse, or USB hard drive.
(11) USB port (downstream)	Connects a USB cable to a peripheral device, such as a keyboard, mouse, or USB hard drive and supports battery charging.

Locating the serial number and product number

Depending on the product, the serial number and product number are located on a label on the rear of r or on a label under the front bezel of the monitor head. You might need these numbers when you contact HP for support.

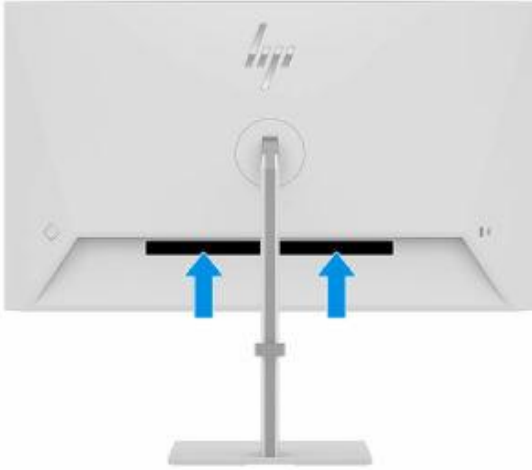


<p>HP 型号/型號: HP 732pk HP Series 7 Pro 31.5 inch 4K Thunderbolt 4 Monitor - 732pk 液晶显示器/液晶顯示器/모니터 80,0 cm (31.5") Monitor Regulatory Model No./規定型号/ 規定型號/모델명: HSD-0124-A Input Rating/輸入电压 电流/輸入電壓 電流/ 정격입력: 100-240V ~ 2.5A(2.5A) 50/60Hz</p>		<p>This device complies with part 15 of the FCC Rules. CAN ICES-003(B)/NMB-003(B) Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.</p>	<p>Made in China / 제조국: 중국 / 中国制造 / 中國製造 Consumo de energia: 31.14 Wh</p>	
<p>220561-11</p>				

<p>HDMI HIGH-DEFINITION MULTIMEDIA INTERFACE</p> <p>TCO edge CERTIFIED</p>	<p>Apparaten må tilkoples jordat stikkontakt. Apparaten skall anslutas till jordat uttag. Laite on liitettävä suojakoskettimilla varustettuun pistorasiaan. Apparätets stikprop skal tilsluttes en stikkontakt med jord, som giver forbindelse til stikproppens jord.</p>	<p>HP REG 23010, 08028 Barcelona, Spain hpreg@hp.com</p> <p>定格電圧 :100V~ 定格電流 :2.5A 定格周波数 :50/60Hz</p> <p>IS 13252 (Part 1) IEC 60950-1</p> <p>PS E</p> <p>Nihon HP 31.14W R-41069710 www.bis.gov.in</p>	<p>Assembly Part No. : N70018-001 Head Spares No. N70678-001/ASSY N70018-700</p> <p>Product No. : XXXXXXXX/XXXXXXXX/ XXXXXXXX/XXXXXXXX Serial No. : CN4XX00001 Rev. XXXXXX Manufactured / 製造日期 / 製造日期: December 2023</p>	
<p>HP Inc UK Ltd, Regulatory Enquiries, Earley West, 300 Thames Valley Park Drive, Reading, RG6 1PT</p> <p>모델명: HSD-0124-A TPV Electronics (Fujian) Co., Ltd. 서비스센터: 1588-3003 福州分公司</p>				

3 Illustrated parts catalog

To identify the monitor major components, use this illustration and table.

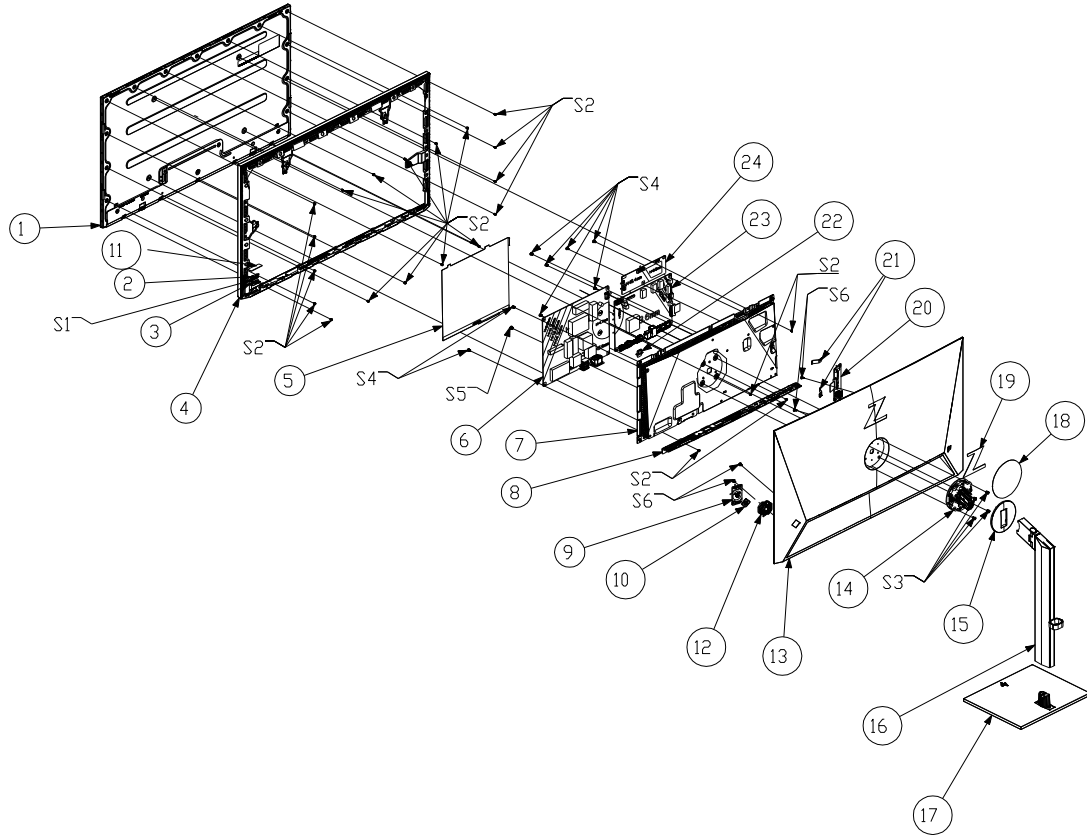

Item	Description	Qty
1	PANEL	1
2	KEY_POWER	1
3	Key Board	1
4	MIDDLE_FRAME	1
5	INSULATING SHEET 250*223.6*5	1
6	Power Board	1
7	MAINFRAME	1
8	Cover_IO	1
9	Connector Board	1
10	KEY_FRAME	1
11	SPONGE	1
12	KEY_FUNCTION	1
13	REAR_COVER	1

14	HINGE ASS'Y	1
15	HINGE_LEFT	1
16	stand ass'y	1
17	BASE_ASS'Y	1
18	FILM φ119*0.06	1
19	LOGO Z other	1
20	USB Board	1
21	Spring Finger	2
22	RUBBER PAD NA -- NA 60 94V-V0	1
23	Main Board	1
24	CONVERTER BOARD	1
S1	Q01G6019 1	1
S2	QM1G076Z0400470ARA	22
S3	0M1G 140 8225	4
S4	0D1G1030 6120	8
S5	QM1G38400601200ARA	1
S6	0Q1G2030 6120	4

How to order parts

The HP authorized repair center can purchase the power board from HP.

Power board

Description	HP spare part number	Manufacturer part number
PSU 732pk	N12319-001	ADPCL1922ACG+ LNPCLL322GAFF

Capacitors and connectors are available for purchase from the following EU distributors:

- Farnell: [Farnell UK - Electronic Components Distributor](#)
- RS Component: [Capacitors | RS Components \(rs-online.com\)](#)
- Tme Component: [Transfer Multisort Elektronik](#)
- Digi-Key: [Digikey Electronics](#)

Capacitors by distributor

Component description	Location	Component distributor	Distributor part number
EC 470uF 20% 25V 10x12 5000 hr 1.6A TL1	C9102	digikey	25WXA470MEFC10X9

Connectors by manufacturer

Component description	Location identifier	Component distributor	Distributor part number
HDMI	CN5001	RS	SD-47151-001 (Molex)
DP	CN5101	Farnell	DP1RD20JQ1 (JAE)
DP2	CN5201	Farnell	DP1RD20JQ1 (JAE)
USB3.0-A	CN1002/CN1102/CN1104	RS	10117835-002LF (Amphenol ICC)
USB 3.0-B	CN1001	RS	692221030100 (Wurth Elektronik)
USB type C	CN1801	RS	DX07S024JJ2R1300 (JAE)
RJ45	CN1201	tme	LMJ34788114NWGY (AMPHENOL)
USB3.0-A	CN154	RS	10117836-002LF (Amphenol ICC)
USB Type-C	CN152	RS	632722110112 (WE)

NOTE: Rear cover and chassis need to be modified to hold connector. Connector may need modifications to meet functional, safety and regulatory requirements accordingly if it doesn't match exactly.

You can purchase cables from the HP part store at <https://partsurfer.hp.com/Search.aspx>.

Internal and External Power Supplies are available for purchase from the following EU distributor: EET_ <https://www.eetgroup.com/en-eu/>

NOTE: HP continually improves and changes product parts. For complete and current information about supported parts for your product, go to <https://partsurfer.hp.com/Search.aspx>, select your country or region, and then follow the on-screen instructions.


4 Removal and replacement procedures

Adherence to these procedures and precautions is essential for proper service.

Preparation for disassembly

Use this information to properly prepare to disassemble and reassemble the monitor.

- 1) Read the “Important safety information” and “Important service information and precautions” sections in the “Getting started” chapter of this guide.
- 2) Clean the room for disassembly.
- 3) Identify the disassembly area.
- 4) Check the position that the monitors are to be placed along with the number of monitors. Prepare the area for material flow according to the disassembly layout.
- 5) Be sure to have the following equipment and materials:
 - Press fixture
 - Working table
 - Screwdriver
 - Knife
 - Gloves
 - Cleaning cloth
 - ESD protection
 - Scraper bar in the following dimensions:

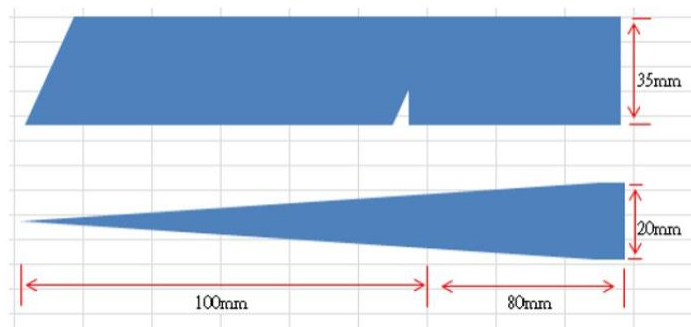


Rear Cover

Before removing the Rear Cover, follow these steps:


- ▲ Prepare the monitor for disassembly. See Preparation for disassembly on page 13.

Remove the Rear Cover:


- 1) Remove 4 screws from the hinge.

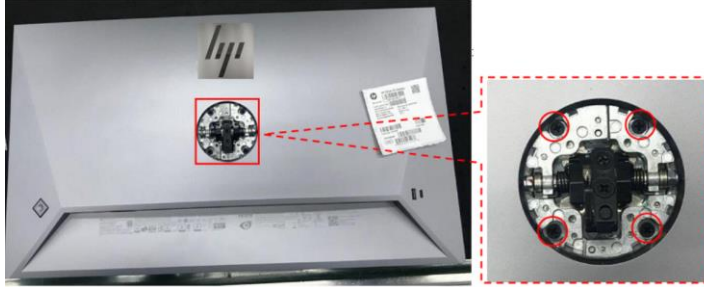

- 2) Use your fingers to split the left and right sides apart between the middle frame and rear case.

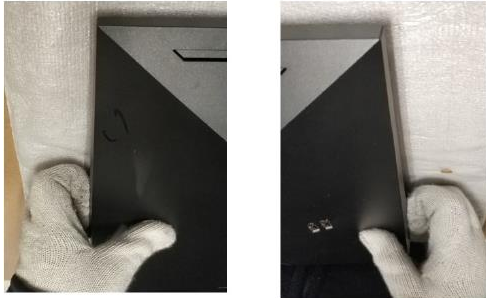

- 3) Insert the scraper bar tool into the gap between the middle frame and rear case, and then rotate. The hook opens. Repeat the steps.

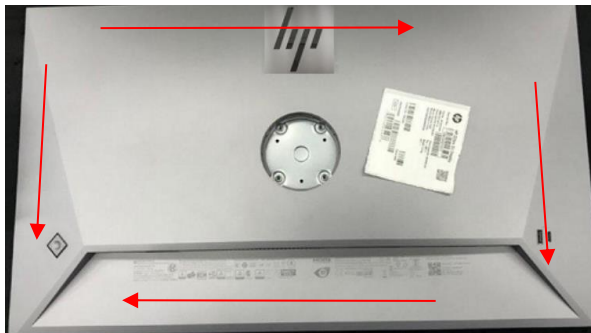


- 4) Disassemble Rear Cover.




- 5) Remove the USB board wire, FFC wire and key board wire from the Interface-board.




6) Disassemble the USB board and key board from the Rear Cover (if required).

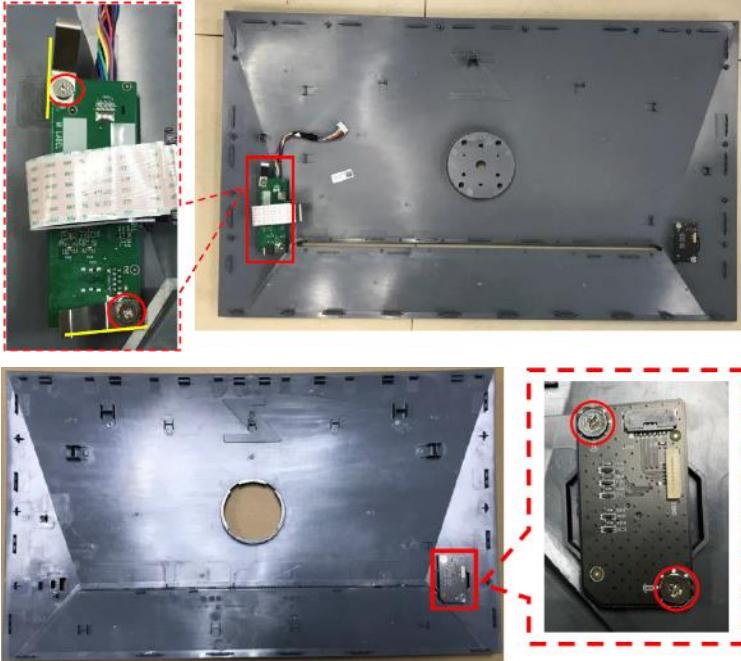

7) Remove 4 screws and disconnect the FFC cable to disassemble the main frame from panel


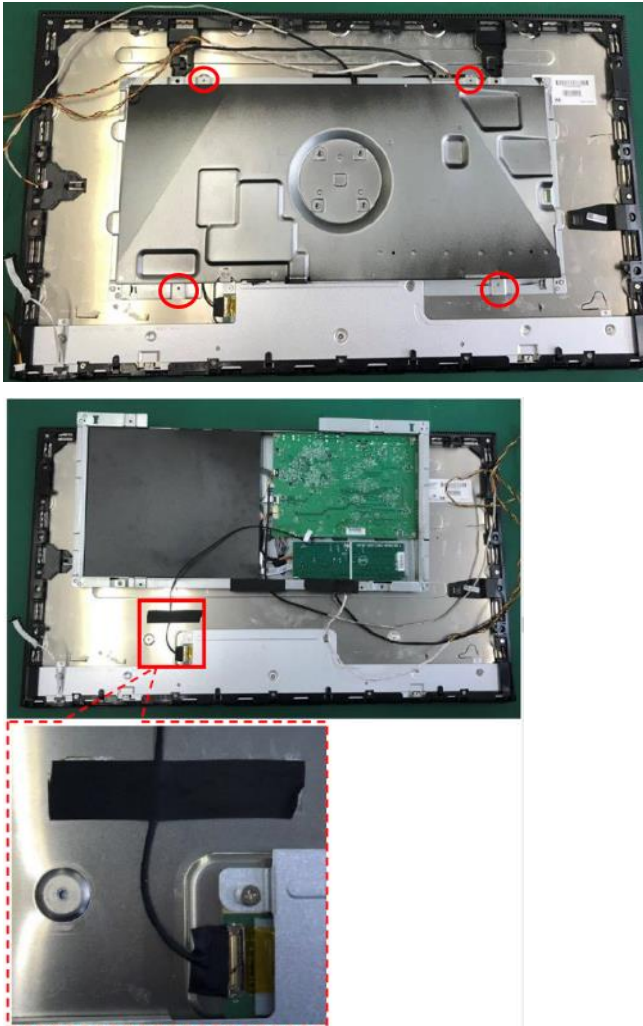


8) Tear off tapes and disassemble 9 screws from the board.

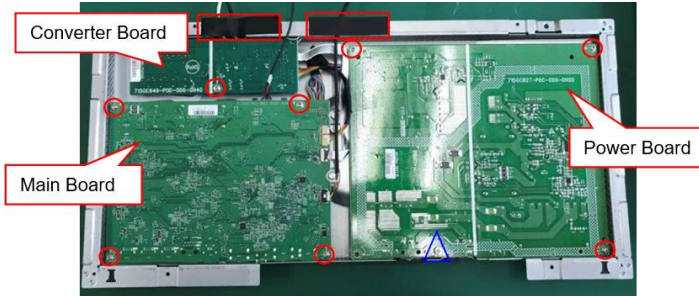


9) Disassemble all the boards from housing.

10) Disconnect all the wires from the board.

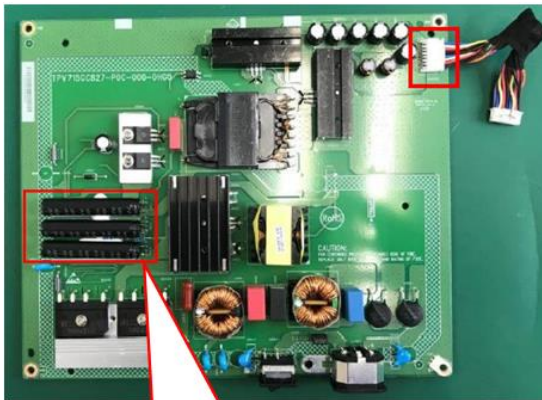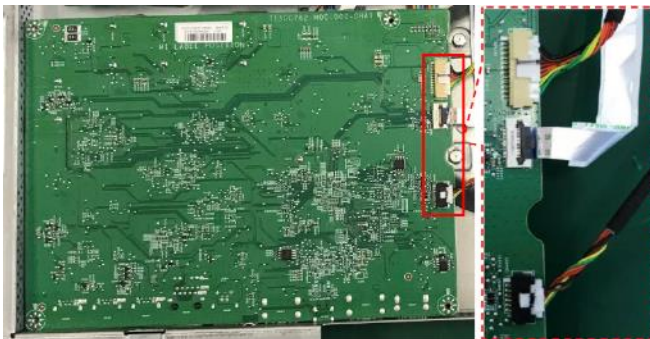


Capacitors greater than
2.5cm in diameter or height

11) Disassemble 18 screws to remove the middle frame and Panel.

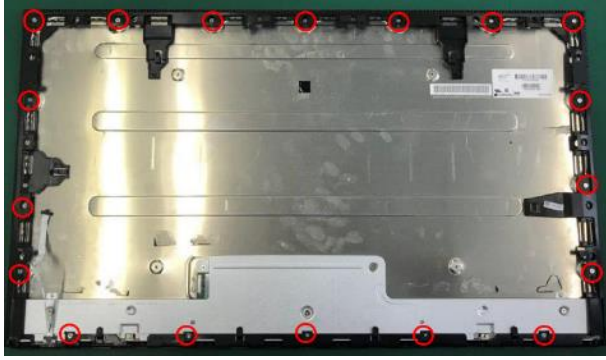

12) Remove the key board.(if required)

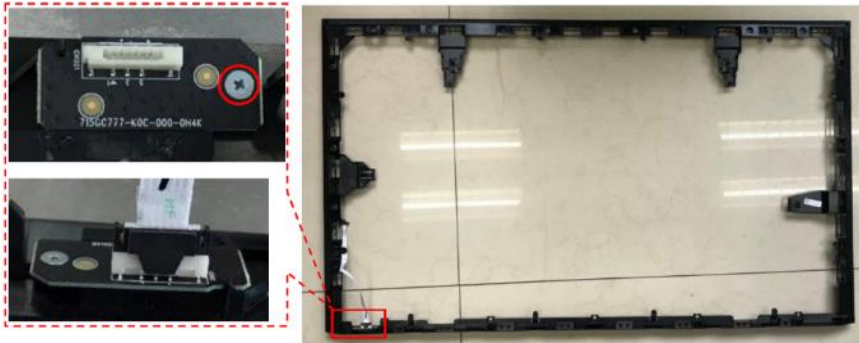

Power board


The power board part number is ADPCL1922ACG + LNPCLL322GA AF

Before removing the power board, follow these steps:

- ▲ Prepare the monitor for disassembly. See Preparation for disassembly on page 13.


Remove the power board:

- 1) The HP 732PK power board connector position is as follows:

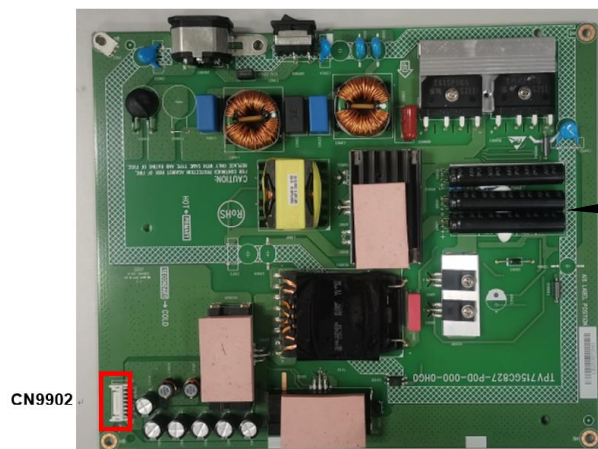

Warning: After unplugging the power supply, the capacitance is still charged, do not touch and discharge the capacitor.

2) Locate the part number location on the board

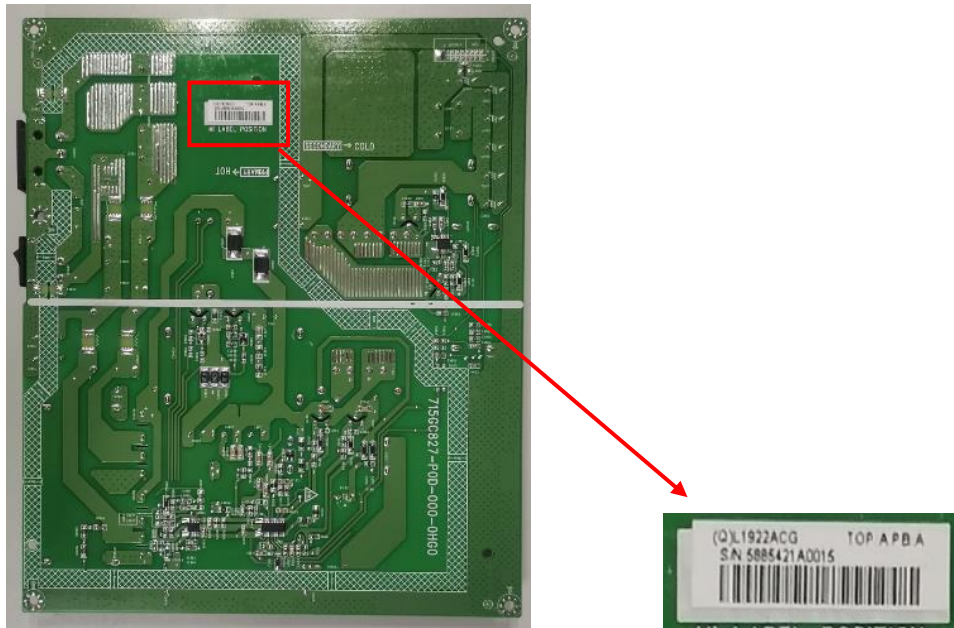


Connector repair

This procedure includes HDMI, DisplayPort, USB Type C, USB B type, RJ45, USB 3.0A connectors. The connectors are on the main board (board part number CBPC1R4HPQ2)

The connectors' identifiers are as follows:

Connector	Location	Connector	Location
HDMI	CN5001	USB B type	CN1001
DP	CN5101	RJ45	CN1201
Type-C	CN1801	USB 3.0A (1、 2、 3)	CN1002/CN1102/CN1104
DP2	CN5201		

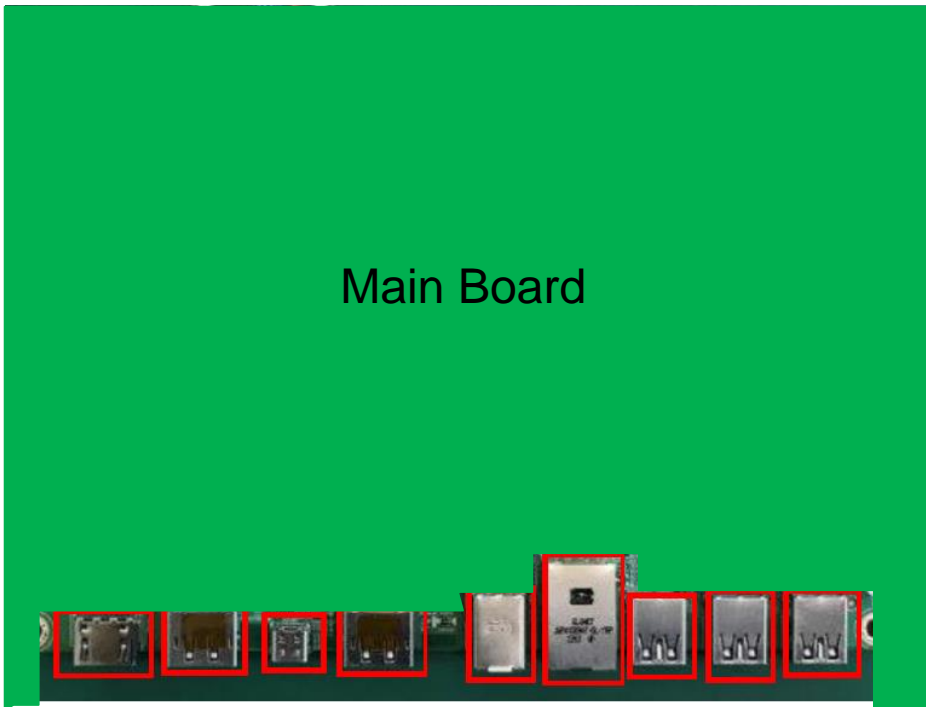

CN5001 CN5101 CN1801 CN5201 CN1001 CN1201 CN1002 CN1102 CN1104

This procedure includes USB3.0 A, USB Type-C connectors.

The connectors are on the USB board (board part number USB1QA6)

The connectors' identifiers are as follows:

Connector	Location
USB 3.0 A	CN154
USB Type-C	CN152



CN154 CN152

Before repairing connectors, follow these steps:

- ▲ Prepare the monitor for disassembly. See [Preparation for disassembly](#) on page 13.

IMPORTANT:

- **Repair Condition: Connector repair is only for out of warranty.**
- **Repairing must operate by professional repairers (Note) in repair center, not applicable for end user.**
- **Electrostatic protection is required when component replacement is required.**
- **The monitor meets ROHS, please use Lead-free solder wire for soldering.**
- **If Connector need to replace, must check specification and part number whether match the BOM and location.**

- If connector need to replace, please insert new parts carefully because the near pin may cause short circuit by inappropriate operate.
- DO NOT allow any liquid on the board. Water and moisture may cause short-circuit to the electronic components and lead to malfunctions.
- The fusion point of Lead-Free solder is requested. Repairing with conventional lead wire may cause damage.
- Work quickly to avoid overheating the circuit board as soon as you confirm the steady soldering condition.
- Keep the soldering iron tip clean and well tinned and when replacing parts.
- A close inspection of the circuit board revealed look in good condition.
- After repaired, must connect source to each port to check Main board function is ordinary.


Note: (The requirement of professional repairers' regulation by ERP lot5)

- 1) The professional repairer has the technical competence to repair electronic displays and complies with the applicable regulations for repairers of electrical equipment in the Member States where it operates. Reference to an official registration system as professional repairer, where such system exists in the Member States concerned, shall be accepted as proof of compliance with this point.
- 2) The professional repairer is covered by insurance covering liabilities resulting from its activity, regardless of whether this is required by the Member State.

HDMI connector CN5001

Repair the HDMI connector:

- 1) Use a soldering iron and a de-soldering pump to remove as much solder as possible from the pin.

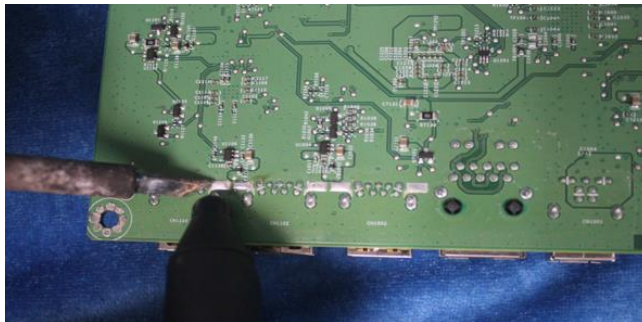

- 2) Use a hot air gun to melt the solder on the pins.




- 3) Lift the CN5001 connector from the circuit board.
- 4) Place the new component on the circuit board. Be sure that it matches the footprint.
- 5) Solder the new component.

DP connector CN5101

Repair the DP connector:

- 1) Use a soldering iron and a de-soldering pump to remove as much solder as possible from the pin.

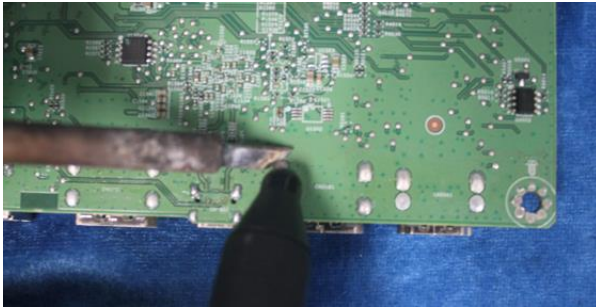

- 2) Use a hot air gun to melt the solder on the pins.




- 3) Lift the CN5101 connector from the circuit board
- 4) Place the new component on the circuit board. Be sure that it matches the footprint.
- 5) Solder the new component.

Type C connector CN1801

Repair the Type-c connector:

- 1) Use a soldering iron and a de-soldering pump to remove as much solder as possible from the pin.

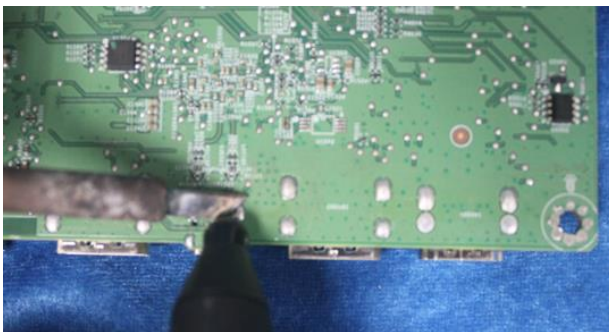

- 2) Use a hot air gun to melt the solder on the pins.




- 3) Lift the CN1801 connector from the circuit board.
- 4) Place the new component on the circuit board. Be sure that it matches the footprint.
- 5) Solder the new component.

DP connector CN5201

Repair the DP connector:

- 1) Use a soldering iron and a de-soldering pump to remove as much solder as possible from the pin.

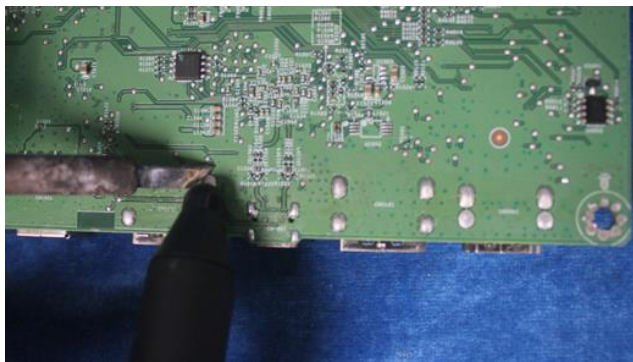

- 2) Use a hot air gun to melt the solder on the pins.




- 3) Lift the CN5201 connector from the circuit board
- 4) Place the new component on the circuit board. Be sure that it matches the footprint.
- 5) Solder the new component.

USB connector CN1001

Repair the USB connector:

- 1) Use a soldering iron and a de-soldering pump to remove as much solder as possible from the pin.

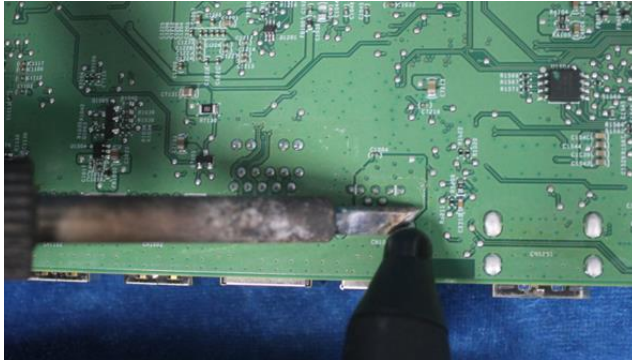

- 2) Lift the CN1001 connector from the circuit board.
- 3) Place the new component on the circuit board. Be sure that it matches the footprint.
- 4) Solder the new component.

RJ45 connector CN1201

Repair the RJ45 connector:

- 1) Use a soldering iron and a de-soldering pump to remove as much solder as possible from the pin.






- 2) Lift the CN1201 connector from the circuit board.
- 3) Place the new component on the circuit board. Be sure that it matches the footprint.
- 4) Solder the new component.

USB 3.0A 1/2/3 connector CN1002/CN1102/CN1104

Repair the USB 3.0A 1/2/3 connector:

- 1) Use a soldering iron and a de-soldering pump to remove as much solder as possible from the pin.

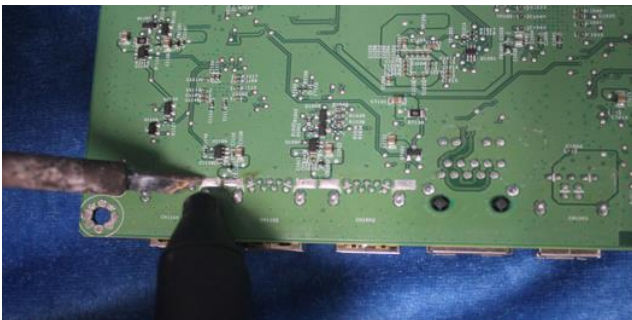

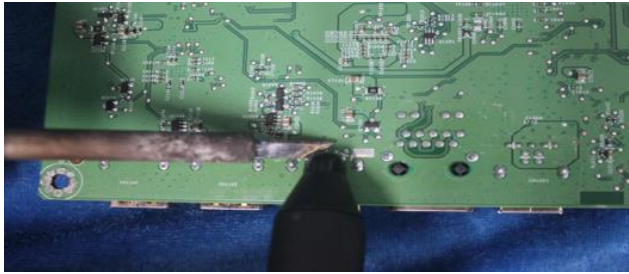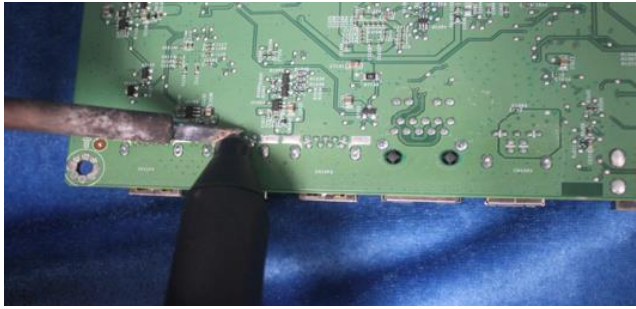


- 2) Lift the CN1002/CN1102/CN1104 connector from the circuit board.
- 3) Place the new component on the circuit board. Be sure that it matches the footprint.
- 4) Solder the new component.

USB 3.0 A connector CN154

Repair the USB 3.0A connector:

- 1) Use a soldering iron and a de-soldering pump to remove as much solder as possible from the pin.

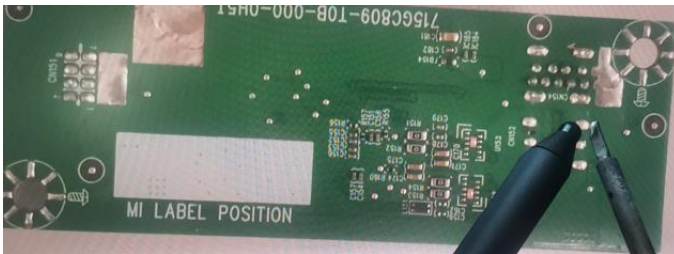

- 2) Lift the CN154 connector from the PCB.
- 3) Place the new component on the circuit board. Be sure that it matches the footprint.
- 4) Solder the new component.


USB type-c connector CN152

Repair the USB type-c connector:

- 1) Use a soldering iron and a de-soldering pump to remove as much solder as possible from the pin.



2) Use a hot air gun to melt the solder on the pins.

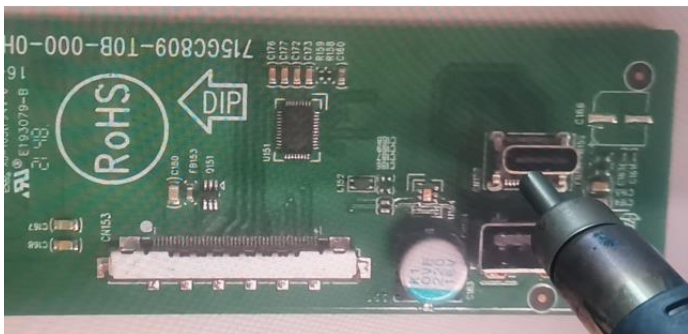

3) Lift the CN152 connector from the PCB.

4) Place the new component on the circuit board. Be sure that it matches the footprint.

5) Solder the new component

Function test

After repair, be sure to confirm that all functions are working.

Table 4-1: Function test

Test item	Operating description	Tool used
HDMI test	Confirm whether image displays and sound plays correctly on the monitor.	Computer or DVD player
DP test	Confirm whether image displays and sound plays correctly on the monitor.	Computer or DVD player
USB-C test	Confirm whether image displays and sound plays correctly on the monitor	Computer or USB-C player

Support and troubleshooting

The following table lists possible problems, the possible cause or each problem, and the recommended solutions.

Problem	Possible cause	Solution
Screen is blank or video is flashing.	Power cord is disconnected.	Connect the power cord.
	The monitor is turned off.	Press the front bezel power button. NOTE: If pressing the Power button has no effect, press and hold the power button for 10

		seconds to disable the Power button lockout feature.
	Video cable is improperly connected.	Connect the video cable properly.
	System is in Sleep Mode.	Press any key on the keyboard or move the mouse to exit sleep mode
	Video card is incompatible.	Open the OSD menu and select the Input menu. Set Auto- Switch Input to Off and manually select the input.
Image appears blurred, indistinct, or too dark.	Brightness is too low.	Open the OSD menu and select Brightness to adjust the brightness scale as needed.
“Input Signal Not Found” is displayed on the screen.	The monitor video cable is disconnected.	Connect the appropriate video signal cable between the computer and monitor. Be sure that the computer power is off while you connect the video cable.
Input Signal Out of Range” is displayed on screen.	Video resolution and/or refresh rate are set higher than what the monitor supports.	Change the settings to a supported setting.
The monitor is off but it did not seem to enter into sleep mode.	Auto-Sleep Mode is not turned on.	Open the OSD menu and select Power. Then select Auto- Sleep Mode and set auto-sleep to On.
“OSD Lockout” is displayed	The monitor’s OSD lockout function is enabled.	Press and hold the Menu button on the front bezel for 10 seconds to disable the OSD Lockout function.
“Power Button Lockout” is displayed.	The monitor's Power Button Lockout function is enabled.	Press and hold the power button for 10 seconds to disable the Power Button Lockout function.
The USB ports do not work, but the monitor is turned on.	There is no upstream USB connection.	Be sure that the host computer is connected to the monitor with a USB Type-C to USB Type-C cable or a USB Type-C to USB Type-A cable.
No power from the USB Type- C or USB Type-A ports when the monitor is in sleep mode.	The monitor is in Power Saver mode.	Open the OSD menu, select Power, and then change the power mode to Performance.
The desktop computer does not turn on.	The monitor is turned off.	Be sure that the monitor power cord is plugged into an AC outlet and press the monitor power button.
	The monitor is in sleep mode.	Press any key on the keyboard or move the mouse to exit sleep mode.

	The monitor is in Power Saver mode.	Open the OSD menu, select Power, and then change the power mode to Performance.
	The desktop computer is not connected to the USB Type-C#1 port on the monitor.	Be sure that the computer is connected to the USB Type-C#1 port on the monitor. NOTE: Desktop host computers must be connected to the USB Type-
		C#1 port for power delivery.
	The Windows display orientation is not set properly.	Right-click the Windows desktop and select Display settings. Click on Identify and be sure that the host computer displays are oriented left to right as they are physically arranged.
The computer turns off when the monitor enters sleep mode.	The monitor is in Power Saver mode.	Open the OSD menu, select Power, and then change the power mode to Performance.

Index

components

- front, 6
- connector repair, 18
- features, 4
- firmware updates, 3
- front components, 6
- function test, 25
- how to order parts, 11
- illustrated parts catalog, 10
- parts, 10
- parts, ordering, 11
- power board removal, 17
- precautions, 2
- preparation for disassembly, 13

RC removal, 13

removal

- power board, 17

- RC, 13

removal and replacement procedures, 13

returning to customer, 3

RoHS (2002/95/EC) requirements, 3

safety information, 2

serial number location, 9

service information, 2

spare parts, 10

support and troubleshooting, 25

troubleshooting, 25