



S1102-02

MS-S336

Server System
User Guide

Contents

- Regulatory Notices..... 4
- Safety Information 6
- System Specifications 7
- System Overview 8
- Motherboard Block Diagram..... 11
- System LED Indicators..... 12
- Motherboard Overview..... 13
- Motherboard Connectors 14
 - Storage Connectors..... 14
 - Expansion Slots 16
 - Power Connectors 17
 - Cooling Connectors 19
 - Other Connectors 20
- Motherboard Jumpers..... 26
- Motherboard LEDs 27
- Getting Started..... 28
 - Necessary Tools 28
 - Safety Precautions..... 28
- System Setup 29
- Drive Bay 29
 - Installing 3.5"/2.5" Storage Drive..... 29
- System Cover 30
 - Removing System Cover..... 30
- CPU and Liquid Cooling Module..... 31
 - Removing Liquid Cooling Module..... 32
 - Installing CPU and Liquid Cooling Module 33

Revision
V1.1, 2024/02

Memory	34
Recommended Memory Population.....	34
Installing Memory Modules.....	35
M.2 M Key.....	36
Installing M.2 M Key	36
Slide Rail	37
Disassembling Slide Rail.....	37
Installing Inner Rail to System.....	38
Retracting Outer Rail Bracket.....	39
Attaching Outer Rail Bracket to Rack Frame	39
Installing System into Rack.....	40
Detaching Outer Rail Bracket from Rack Frame.....	41
Detaching Inner Rail from System.....	41

Regulatory Notices

WEEE Statement

Under the European Union ("EU") Directive on Waste Electrical and Electronic Equipment, Directive 2012/19/EU, products of "electrical and electronic equipment" cannot be discarded as municipal waste anymore and manufacturers of covered electronic equipment will be obligated to take back such products at the end of their useful life.



Chemical Substances Information

In compliance with chemical substances regulations, such as the EU REACH Regulation (Regulation EC No. 1907/2006 of the European Parliament and the Council), MSI provides the information of chemical substances in products at:

<https://csr.msi.com/global/index>

CE Conformity

Hereby, Micro-Star International CO., LTD declares that this device is in compliance with the essential safety requirements and other relevant provisions set out in the European Directive.



FCC-A Radio Frequency Interference Statement

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference, in which case the user will be required to correct the interference at his own expense.



Notice 1

The changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Notice 2

Shielded interface cables and AC power cord, if any, must be used in order to comply with the emission limits.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- This device may not cause harmful interference, and
- This device must accept any interference received, including interference that may cause undesired operation.

Battery Information

Please take special precautions if this product comes with a battery.

- Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type recommended by the manufacturer.
- Avoid disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, which can result in an explosion.
- Avoid leaving a battery in an extremely high temperature or extremely low air pressure environment that can result in an explosion or the leakage of flammable liquid or gas.
- Do not ingest battery. If the coin/button cell battery is swallowed, it can cause severe internal burns and can lead to death. Keep new and used batteries away from children.

European Union:



Batteries, battery packs, and accumulators should not be disposed of as unsorted household waste. Please use the public collection system to return, recycle, or treat them in compliance with the local regulations.

BSMI:



廢電池請回收

For better environmental protection, waste batteries should be collected separately for recycling or special disposal.

California, USA:



The button cell battery may contain perchlorate material and requires special handling when recycled or disposed of in California.

For further information please visit:

<http://www.dtsc.ca.gov/hazardouswaste/perchlorate/>

Copyright and Trademarks Notice

msi

MSI

微星

微星科技
MICRO-STAR INTERNATIONAL



Copyright © Micro-Star Int'l Co., Ltd. All rights reserved. The MSI logo used is a registered trademark of Micro-Star Int'l Co., Ltd. All other marks and names mentioned may be trademarks of their respective owners. No warranty as to accuracy or completeness is expressed or implied. MSI reserves the right to make changes to this document without prior notice.

Technical Support

If a problem arises with your product and no solution can be obtained from the user's manual, please contact your place of purchase or local distributor. Alternatively, please visit <https://eps.msi.com/support> for further guidance.




Safety Information

- Always read the safety instructions carefully.
- Keep this User's Manual for future reference.
- Keep this equipment away from humidity.
- Lay this equipment on a reliable flat surface before setting it up.
- The openings on the enclosure are for air convection hence protects the equipment from overheating. **Do not cover the openings.**
- Make sure the voltage of the power source and adjust properly before connecting the equipment to the power inlet.
- Place the power cord such a way that people can not step on it. Do not place anything over the power cord.
- Always unplug the power cord before inserting any add-on card or module.
- All cautions and warnings on the equipment should be noted.
- Never pour any liquid into the opening that could damage or cause electrical shock.
- If any of the following situations arises, get the equipment checked by service personnel:
 - The power cord or plug is damaged.
 - Liquid has penetrated into the equipment.
 - The equipment has been exposed to moisture.
 - The equipment does not work well or you can not get it work according to User's Manual.
 - The equipment has dropped and damaged.
 - The equipment has obvious sign of breakage.
- **Do not leave this equipment in an environment unconditioned, storage temperature above 60°C (140°F), it may damage the equipment.**

System Specifications

Model	S1102-02
Form Factor	1U
Dimensions	1.71"H (43.5mm) x 17.26"W (438.5mm) x 25.89"D (660.0mm)
Processor	1 x AMD® Ryzen™ 7000 series Processors, TDP 170W - Processor socket AM5
Chipset	AMD B-class Chipset
Memory	4 x DIMM slots - Supports DDR5, up to 5200MT/s (2DPC) - Supports ECC/ non-ECC UDIMM, up to 128GB
Network	2 x 10GbE RJ45 ports - Intel® Ethernet controller X710-AT2 - JLAN1 support shared NIC
Drive Bays	4 x 2.5"/ 3.5" SATA hot-swap drive bays (front side) 2 x 2.5" SATA drive bays (internal)
Internal Storage	4 x SATA 3.0 ports (SATA1~4, w/ 1 x VCC) 2 x SATA 2.0 ports (SATA3_1) 2 x M.2 M-Key (PCIe 4.0 x4, 22110/ 2280) - M2_1*: Choose either M2_1 or PCIe_2 for the desired function. - M2_2: Supports PCIe 4.0 x4 * The PCIe_2 and M2_1 slots cannot operate simultaneously. You can use the <u>JSEL_M1 jumper</u> to select which one to enable.
Expansion Slots	1x PCIe slot - PCIe_1*: PCIe 4.0 x16 signal with riser kit, FHHL (111.28mm x 167.65mm) * The PCIe_1 expansion slot supports PCIe 5.0 x16 signal without a riser kit.
Security	- TPM 2.0 - Case intrusion switch
Server Management	- Aspeed AST2600 IPMI 2.0 with iKVM 1 x GbE RJ45 (1x Mgmt.) - Chipset: Realtek® RTL8211FD-CG PHY
Cooling	1 x CPU liquid cooling module 7 x 40mm x 28mm PWM Hot-swap fans
Environmental	- Operating Temperature: 0°C ~ 40°C - Non-operating Temperature: -20°C ~ 70°C - Operating Humidity: 0% ~ 85% (non-condensing)
Accessory	1 x Slide Rail Kit (optional)
Power Supply	ATX 600W hot-plug Redundant PSU
Certifications	CE, FCC (Class A)

System Overview

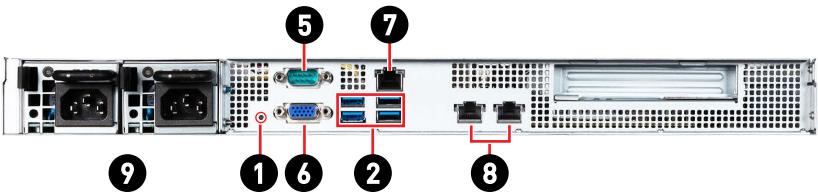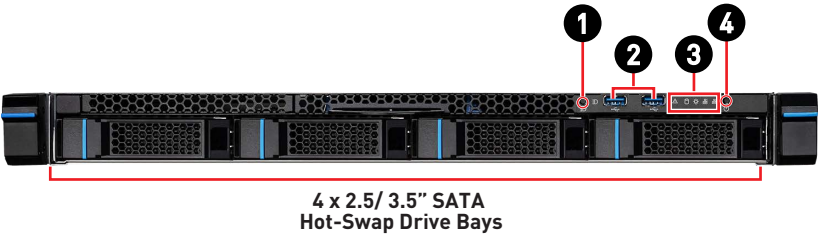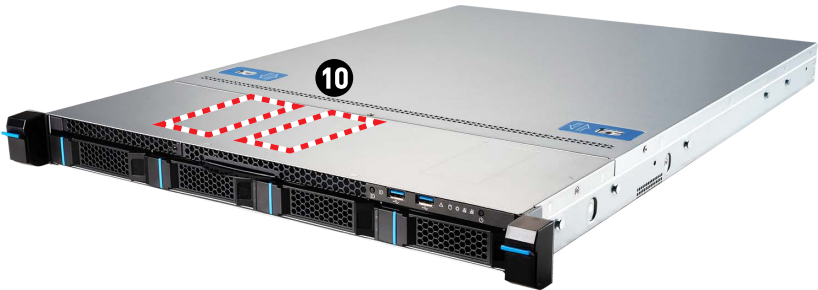

1	UID Button The UID (Unit Identification) button help users identify and locate a system, especially in high-density rack environments.																	
2	USB 3.2 Gen 1 Port This connector is provided for USB peripheral devices. (Speed up to 5 Gbps)																	
3	 System Status LED  HDD Activity LED  Power LED  LAN Activity LED																	
4	 System Power Button																	
5	COM Port A COM port, also called a serial port or DB9 connector, is a communication interface for transferring data between a computer and external devices such as barcode scanners, printers, and credit card machines. It's commonly used for initial system configuration and diagnostics on server boards and for connecting legacy devices that lack modern interfaces. Users can connect a specially configured serial cable to establish a serial connection.																	
6	VGA Port The DB15-pin female connector is provided for monitors.																	
7	GbE RJ45 Port (for Mgmt.) The standard RJ45 LAN jack is provided for connection to the Local Area Network (LAN). You can connect a network cable to it. <table><tr><th>LED</th><th>Status</th><th>Description</th></tr><tr><td rowspan="3">Link/ Activity LED</td><td> Off</td><td>No link</td></tr><tr><td> Green</td><td>Linked</td></tr><tr><td> Blinking</td><td>Data activity</td></tr><tr><td rowspan="3">Speed LED</td><td> Off</td><td>10 Mbps</td></tr><tr><td> Orange</td><td>100 Mbps</td></tr><tr><td> Green</td><td>1 Gbps</td></tr></table>	LED	Status	Description	Link/ Activity LED	 Off	No link	 Green	Linked	 Blinking	Data activity	Speed LED	 Off	10 Mbps	 Orange	100 Mbps	 Green	1 Gbps
LED	Status	Description																
Link/ Activity LED	 Off	No link																
	 Green	Linked																
	 Blinking	Data activity																
Speed LED	 Off	10 Mbps																
	 Orange	100 Mbps																
	 Green	1 Gbps																

Continued on next column

8

10 GbE RJ45 Port

The standard RJ45 LAN jack is provided for connection to the Local Area Network (LAN). You can connect a network cable to it.

LINK/ACT LED

SPEED LED

JLAN1 (Left)

JLAN2 (Right)

LED	Status	Description
Link/ Activity LED	Off	No link
	Green	Linked
	Blinking	Data activity
Speed LED	Off	10 Mbps
	Orange	1 Gbps
	Green	10 Gbps

9

Power Supply Unit


10

2.5" SATA Internal Drive Bay

The diagram illustrates the ASPEED AST2600 SoC and its connections to various system components. The SoC is divided into several functional blocks:


- CPU (Socket AM5):** Features the AMD Ryzen™ Raphael processor. It connects to DDR5 Channel A and B via DIMM slots, and to PCIe 0-15 and 16-19 via PCIe slots. It also connects to a MUX for PCIe 0-4 and 5-15, and to a MUX for PCIe 16-19 and 20-23.
- PCIe 20-23:** Connects to the PROM21 Chipset via PCIe (x4) GPP.
- PROM21 Chipset:** Contains the PROM21 Chipset and connects to various peripherals:
 - P4-7:** SATA 3.0 (x4) to 4 x SATA Ports (rear, W/ 1 x VCC).
 - P3:** PCIe (x1) to SATA Controller ASM1061, which connects to 2 x SATA Ports (rear) and 2 x USB Connectors (Type-A, rear).
 - USB 3.0/2.0:** Connects to 2 x USB Connectors (Type-A, rear) and 1 x USB Box Header (internal).
 - USB 3.0/2.0:** Connects to 1 x USB Connector (Type-A, internal).
 - P8-11:** PCIe 4.0 (x4) to LAN Controller Intel X710-AT2 (2 x 10Gb RJ45 LAN).
 - P0:** PCIe 4.0 (x1) to LAN Controller Intel 1210-AT (1 x 0Gb RJ45 LAN).
 - P1:** PCIe 4.0 (x1) to LAN Controller Intel 1210-AT (1 x 0Gb RJ45 LAN).
- BIOS:** Connects to the SoC via SPI.
- POST Code LED:** Connects to the SoC via I2C.
- BMC (ASPEED AST2600):** Connects to the SoC via I2C and to various peripherals:
 - 1G PHY Mgmt. RJ45 (RTL8211FD-CG):** Connects to RGMII/ RGMII 2.
 - 1 x VGA Port (rear):** Connects to RGB.
 - 1 x COM Port Header:** Connects to Serial Bus.
 - 1 x RJ45 COM Port (rear):** Connects to Serial Bus.
 - 1 x GPIO Header (8-bit):** Connects to GPIO.
- DDR4:** Connects to the SoC via DDR4.
- 8 x Fan Headers:** Connects to the SoC via FAN1-8.

System LED Indicators

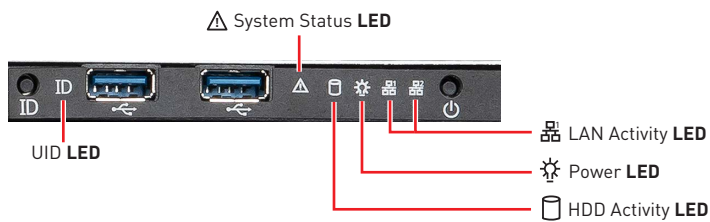

LED	LED State	Description
 Power LED	 Blue	System power is on System power is on ACPI S0 state
	 Blinking	System is sleeping
	 Off	System power is off System power is on ACPI S4, S5 state
UID LED	 Blue	Identify active via command or button
	 Off	No identification
 System Status LED	 Red	System has failed
	 Off	System power is not present
 LAN Activity LED	 Green	LAN link is established
	 Blinking	LAN Activity is occurring
	 Off	LAN link is not established
 HDD Activity LED	 Yellow	HDD present, no activity
	 Blinking	HDD accessing
	 Off	No HDD activity

Motherboard Overview

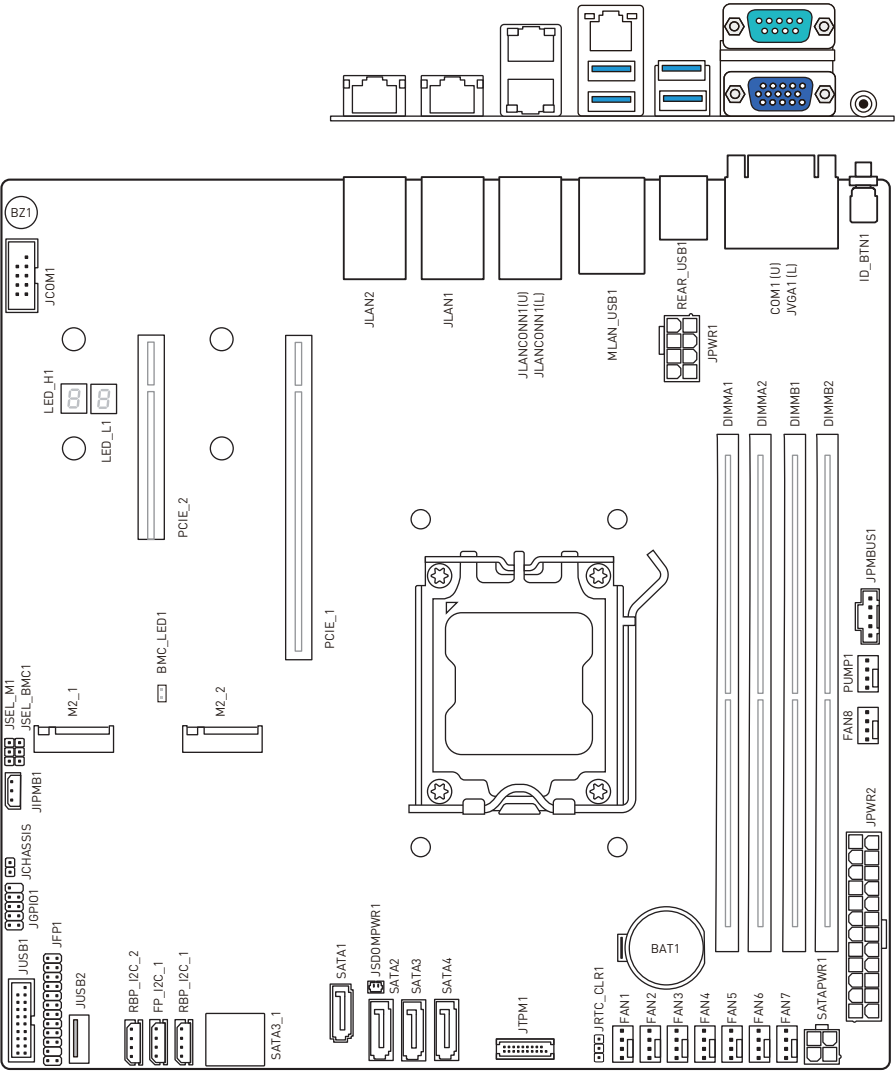

Motherboard Connectors



Storage Connectors

SATA1~4: SATA 3.0 6Gb/s Ports

These connectors are SATA 6Gb/s interface ports, it can connect to SATA devices.

SATA3_1: SATA 2.0 3Gb/s Ports

These connectors are SATA 3Gb/s interface ports, it can connect to SATA devices.

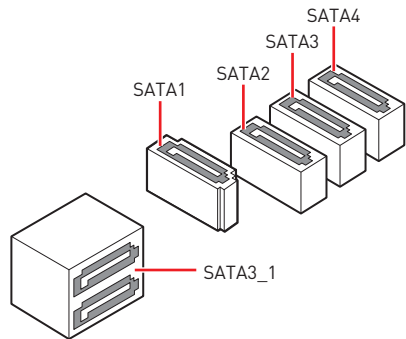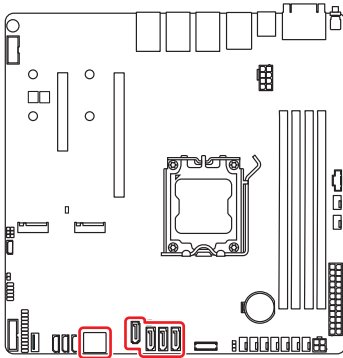


Important


- Please do not fold the SATA cable at a 90-degree angle. Data loss may result during transmission otherwise.
- SATA cables have identical plugs on either sides of the cable. However, it is recommended that the flat connector be connected to the motherboard for space saving purposes.

M2_1~2: M.2 Slots (M Key, PCIe 4.0, 22110/ 2280)

The M.2 slot supports solid-state drive (SSD). For Installation procedure, please refer to “**System Setup > M.2 M Key**”.

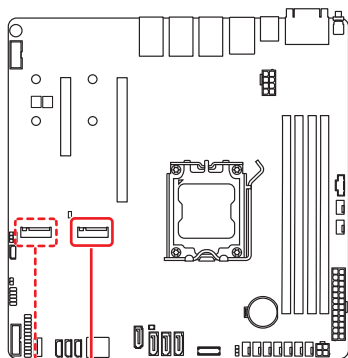


M2_1* M2_2

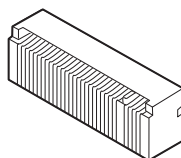

*M2_1: The M2_1 and PCIE_2 slots cannot operate simultaneously. You can use the JSEL_M1 jumper to select which one to enable.

Expansion Slots

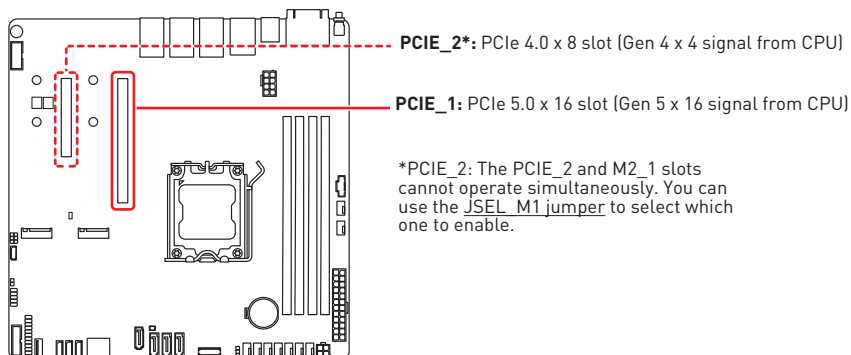

PCIE_1~2: PCIe Expansion Slots


The PCI Express(Peripheral Component Interconnect Express) slots support PCIe interface expansion cards.



Important

When adding or removing expansion cards, make sure that you unplug the power supply first. Meanwhile, read the documentation for the expansion card to configure any necessary hardware or software settings for the expansion card, such as jumpers, switches or BIOS configuration.

Power Connectors

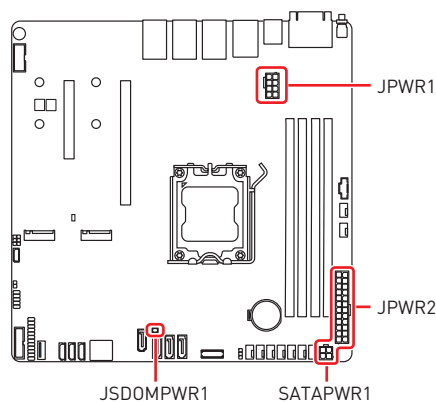

SATAPWR1: SATA Power Connector

This connector is used to provide power to SATA devices.

SATAPWR1		1	GND	2	GND
		3	P12V	4	P5V


JPWR1: 12V Power Connector

This connector allows you to connect an ATX power supply.

JPWR1		1	GND	2	GND
		3	GND	4	GND
		5	P12V	6	P12V
		7	P12V	8	P12V

JPWR2: Main Power Connector

This connector allows you to connect an ATX power supply.

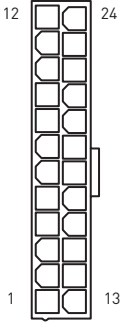JPWR2 	1	+3.3V	2	+3.3V
	3	GND	4	+5V
	5	GND	6	+5V
	7	GND	8	PWR OK
	9	5VSB	10	+12V
	11	+12V	12	+3.3V
	13	+3.3V	14	-12V
	15	GND	16	PS-ON#
	17	GND	18	GND
	19	GND	20	Res
	21	+5V	22	+5V
	23	+5V	24	GND

JSDOMPWR1: SATA DOM Power Connector

This connector is used to provide power to SATA DOM devices.

JSDOMPWR1	2		1	1	GND	2	P5V
-----------	---	---	---	---	-----	---	-----

 Important

Make sure that all power connectors are securely connected to the power supply to ensure stable operation of the motherboard.


Cooling Connectors

FAN1~8, PUMP1: Fan Power Connectors

The fan power connector supports system cooling fans with +12V. When connecting the wire to the connectors, always note that the red wire is the positive and should be connected to the +12V; the black wire is Ground and should be connected to GND.

FAN1~8		1	GND	3	FAN_TACH
		2	P12V	4	BMC_PWM

PUMP1		1	GND	3	N/A
		2	P12V	4	BMC_PWM

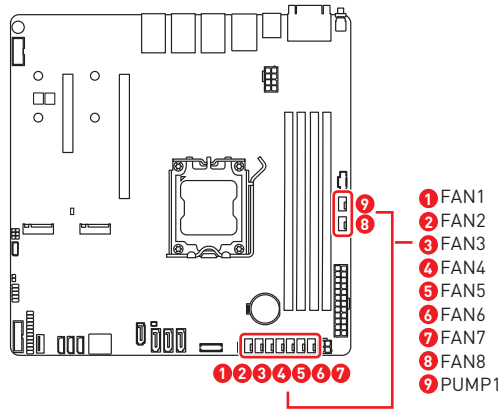


Other Connectors

JFP1: Front Panel Connector

The front panel connector is provided for electrical connection to the front panel switches and LEDs.


JFP1 24 23 2 1	1	PWR_LED+	2	FP_PWR
	3	N/A	4	SYS_ID_LED+
	5	PWR_LED-	6	SYS_ID_LED-
	7	HDD_ACT_LED+	8	SYS_FAULT_LED1-
	9	HDD_ACT_LED-	10	SYS_FAULT_LED2-
	11	PWR_BTN	12	NIC#1_ACT_LED+
	13	PWR_BTN_GND	14	NIC#1_ACT_LED-
	15	RST_BTN	16	SMB_SDA
	17	RST_BTN_GND	18	SMB_SCL
	19	SYS_ID_BTN	20	CHASSIS_INTRUSION
	21	WIRE_TEMP_SENSOR	22	NIC#2_ACT_LED+
	23	NMI_BTN	24	NIC#2_ACT_LED-

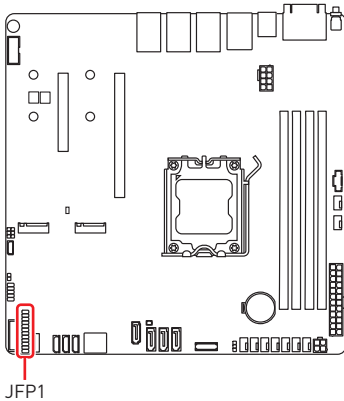

JTPM1: SPI TPM Module Box Header


This connector connects to a TPM (Trusted Platform Module) (optional). Please refer to the TPM security platform manual for more details.

JTPM1 19 20 3 2	1	N/A	2	SPI_LOC_ROM_CS_N
	3	CPU_RSMEST_L	4	N/A
	5	GND	6	PVDD_P1V8_AUX
	7	SPI_LOC_ROM_CLK	8	SPI_CPU0_WP_L
	9	SPI_CPU0_HOLD_L	10	SPI_LOC_ROM_MISO
	11	N/A	12	SPI_LOC_ROM_MOSI
	13	CPU_SPI_TPM_CS_N	14	GND
	15	PVDD_P1V8_AUX	16	GND
	17	CPU_TPM_SPI_IRQ_N	18	PVDD_P1V8_AUX
	19	TPM_RESET_N	20	PVDD_P1V8_AUX

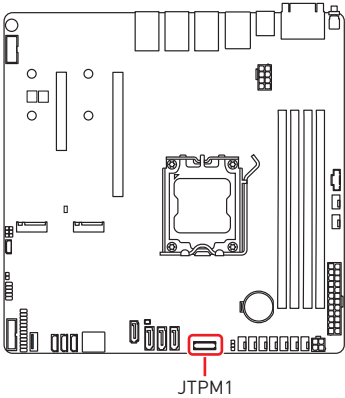

JGPIO1: GPIO Header


This connector is provided for the General-Purpose Input/Output (GPIO) peripheral module.

JGPIO1 	1	USER_GPIO0	2	USER_GPIO1
	3	USER_GPIO2	4	USER_GPIO3
	5	USER_GPIO4	6	USER_GPIO5
	7	USER_GPIO6	8	USER_GPIO7
	9	GND	10	No pin

JPMBUS1: PMBUS Box Header


Power Management Bus (PMBus) is a variant of the System Management Bus (SMBus) which is targeted at digital management of power supplies.

JPMBUS1 	1	JPMBUS1_LVC3_SCL	2	JPMBUS1_LVC3_SDA
	3	SMB_PMBUS_ALERT_N	4	GND
	5	P3V3_AUX		

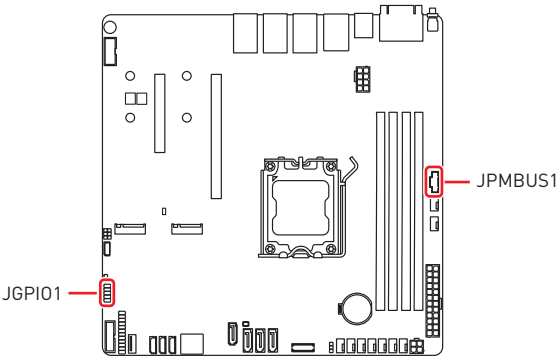

JCHASSIS: Chassis Intrusion Header


This connector connects to the chassis intrusion switch cable. If the chassis is opened, the chassis intrusion mechanism will be activated. The system will record this status and show a warning message on the screen. To clear the warning, you must enter the BIOS utility and clear the record.

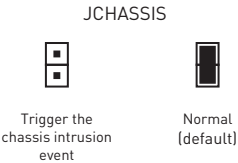

JIPMB1: IPMB Box Header


Intelligent Platform Management Bus (IPMB) box header is used to connect various management components, such as Baseboard Management Controller (BMC).

 JIPMB1	1	SMB_IPMB_DAT	2	GND
	3	SMB_IPMB_CLK		

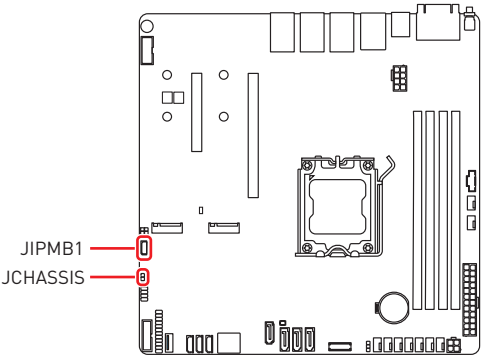


JUSB1: USB 3.2 Port Box Header

This port is backward-compatible with USB 2.0 devices and supports data transfer rate up to **5 Gbps**.

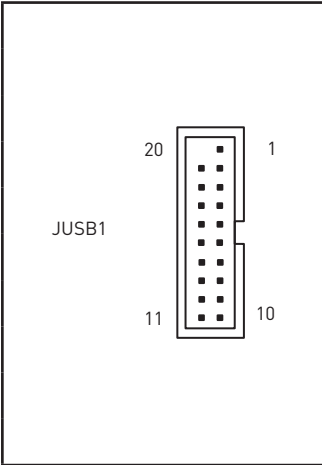	1	USB_VCC1	2	USB3_ESD_RX4N
	3	USB3_ESD_RX4P	4	GND
	5	USB3_ESD_TX4N	6	USB3_ESD_RX4P
	7	GND	8	USB3_ESD_DN8
	9	USB3_ESD_DP8	10	NC
	11	USB2_ESD_DP9	12	USB2_ESD_DN9
	13	GND	14	USB3_ESD_TX5P
	15	USB3_ESD_TX5N	16	GND
	17	USB3_ESD_RX5P	18	USB3_ESD_RX5N
	19	USB_VCC2	20	No Pin

JUSB2: USB 2.0 Type-A Connector

The USB (Universal Serial Bus) port is for attaching USB devices such as keyboard, mouse, or other USB-compatible devices. It supports up to **480 Mbps** data transfer rate.

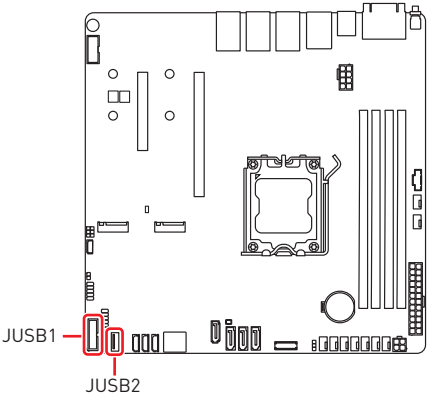


FP_I2C_1, RBP_I2C_1~2: I2C Box Headers


I2C connectors are used to connect to the System Management Bus (SMBus). FBP_I2C_1 is for front HDD backplane, and RBP_I2C_1~2 are for rear HDD backplanes.

FP_I2C_1 RBP_I2C_1 RBP_I2C_2		1	NC	2	I2C_CLK
		2	I2C_DAT	4	GND

JCOM1: COM Port Box Header

This connector is a 16550A high speed communications port that sends/receives 16 bytes FIFOs. You can attach a serial device to it.


JCOM1		1	NDCD#_B	2	NSIN_B
		3	NSOUT_B	4	NDTR_B
		5	GND	6	NDSR#_B
		7	NRTS_B	8	NCTS#_B
		9	NRTS#_B	10	No pin

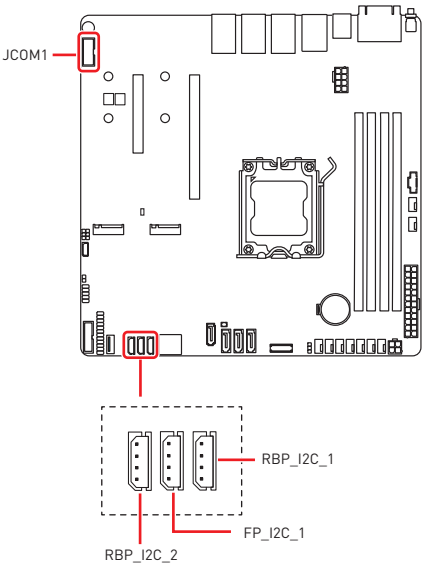

Motherboard Jumpers



Avoid adjusting jumpers when the system is on; it will damage the motherboard.

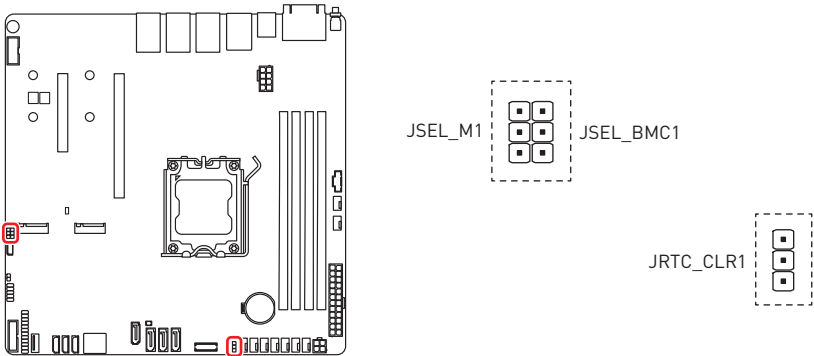


Jumper Name	Default Setting	Description
JSEL_M1	 1	1-2: M.2_1 enabled, PCIe_2 disabled (Default) 2-3: PCIe_2 enabled, M.2_1 disabled
JSEL_BMC1	 1	1-2: Using CPU (Default) 2-3: Using BMC
JRTC_CLR1	 1	1-2: Normal (Default) 2-3: Clear CMOS

Motherboard LEDs

BMC_LED1: BMC Heartbeat LED


This LED indicates the BMC (Baseboard Management Controller) status.

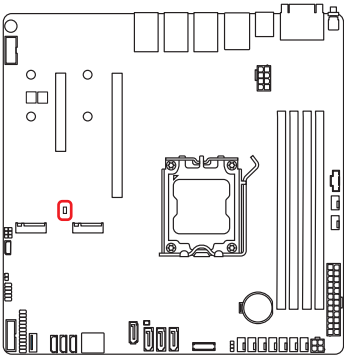

Status	Description
Off	BMC is not activated
Blinking	BMC is functioning normally

LED_H1, LED_L1: Port 80 Debug LEDs

The Port 80 Debug LEDs display progress and error codes during and after POST (Power-On Self Test).

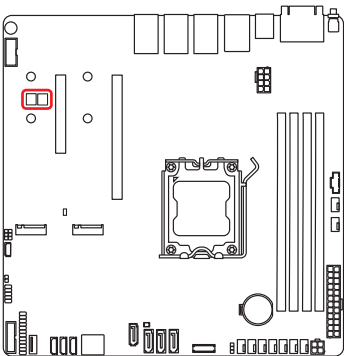

Hexadecimal Character Table

Hexadecimal	0	1	2	3	4	5	6	7
LED display	0	1	2	3	4	5	6	7
Hexadecimal	8	9	A	B	C	D	E	F
LED display	8	9	A	b	C	d	E	F

Getting Started



Important

- All information is subject to change without prior notice.
- The system photos are provided for **demonstration purposes only**. The appearance and internal view of your system may vary depending on the model you purchased.

Necessary Tools



Screwdriver



Pliers



Tweezers



Anti-Static Gloves

Safety Precautions

The following precautions should be observed while handling the system:

- Place the system on a flat and stable surface.
- Do not place the system in environments subject to mist, smoke, vibration, excessive dust, salty or greasy air, or other corrosive gases and fumes.
- Do not drop or jolt the system.
- Do not use a power adapter other than the one enclosed with the system.
- Disconnect the power cord before performing any installation procedures on the system.
- Do not perform any maintenance with wet hands.
- Prevent foreign substances, such as water, other liquids or chemicals, from entering the system while performing installation procedures.
- Use a grounded wrist strap before handling system components such as CPU, Memory, HDD, expansion cards, etc.
- Place system components on a grounded anti-static pad or on the bed that came with the components whenever the components are separated from the system.

System Setup




Important

Before removing or installing any components, make sure the system is not turned on or connected to the power.

Drive Bay

Installing 3.5"/2.5" Storage Drive

1. Engage two embossed pins on the carrier into the side dimples on the 3.5" drive.
 - For 2.5" drive, align the drive with the screw holes on the tray and secure it with screws*.
2. Carefully push down on the other side of the 3.5" drive until another two embossed pins lock into place.
3. With the lever open, insert the drive carrier horizontally into the drive bay until the locking lever engages.
4. Push the lever in to lock the carrier in place.

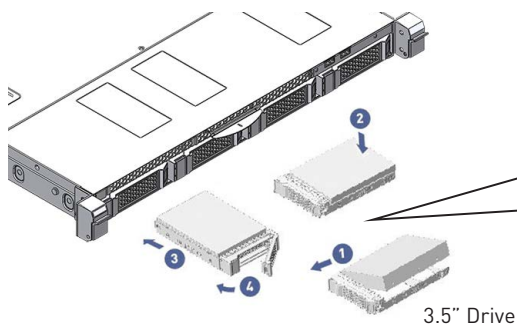


Screws for 2.5" Drive*

Screw Type: M3 Screw

Hat Diameter: 4.5mm*0.65mm

Length: 3.5mm

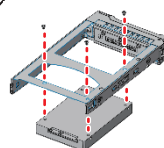


*Screws for 2.5" drive are not included in the package.

System Cover


Removing System Cover

1. Loosen and remove the **screws** securing the system on both sides and the top.
2. Press down on the **release latches** on both sides of the rear top cover, then slide it towards the back of the system to remove it.
3. Slide the front top cover towards the back of the system to remove it.

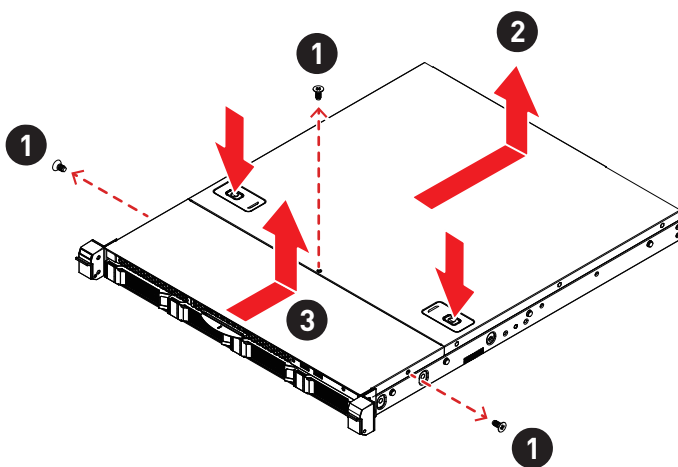

CPU and Liquid Cooling Module

Use appropriate ground straps, gloves and ESD mats to protect yourself from electrostatic discharge (ESD) while installing the processor.

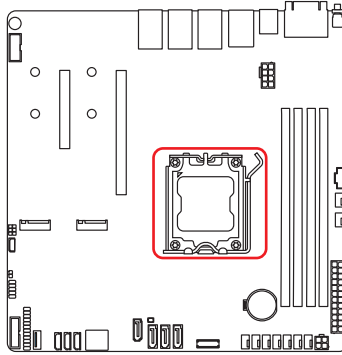

Important

- **Overheating** will seriously damage the CPU and system. Always make sure the cooling fan can work properly to protect the CPU from overheating. Make sure that you apply an even layer of thermal paste (or thermal tape) between the CPU and the cooler to enhance heat dissipation.
- While **replacing the CPU**, always turn off the power supply or unplug the power supply's power cord from the grounded outlet first to ensure the safety of CPU.
- Confirm if your liquid cooling module is firmly installed before turning on your system.
- Do not touch the CPU socket pins to avoid damage.
- Whenever CPU is not installed, always protect your CPU socket pins with the plastic cap covered.
- Please refer to the documentation in the liquid cooling module package for more details about the liquid cooling module installation.
- Read the CPU status in BIOS.

Removing Liquid Cooling Module

Remove all screws in **diagonal sequence** with a torque screwdriver.


Torque:

5.5-6.1 kgf-cm*


*5.5-6.1 kgf-cm

= 0.54~0.6 N·m



= 4.77~5.29 lbf-in

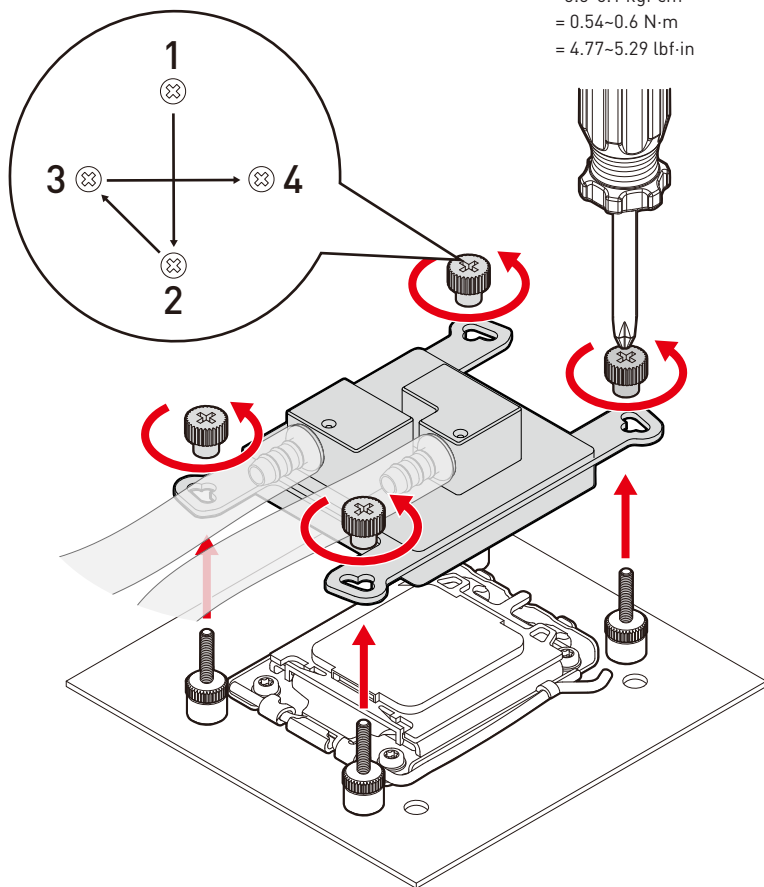

Installing CPU and Liquid Cooling Module

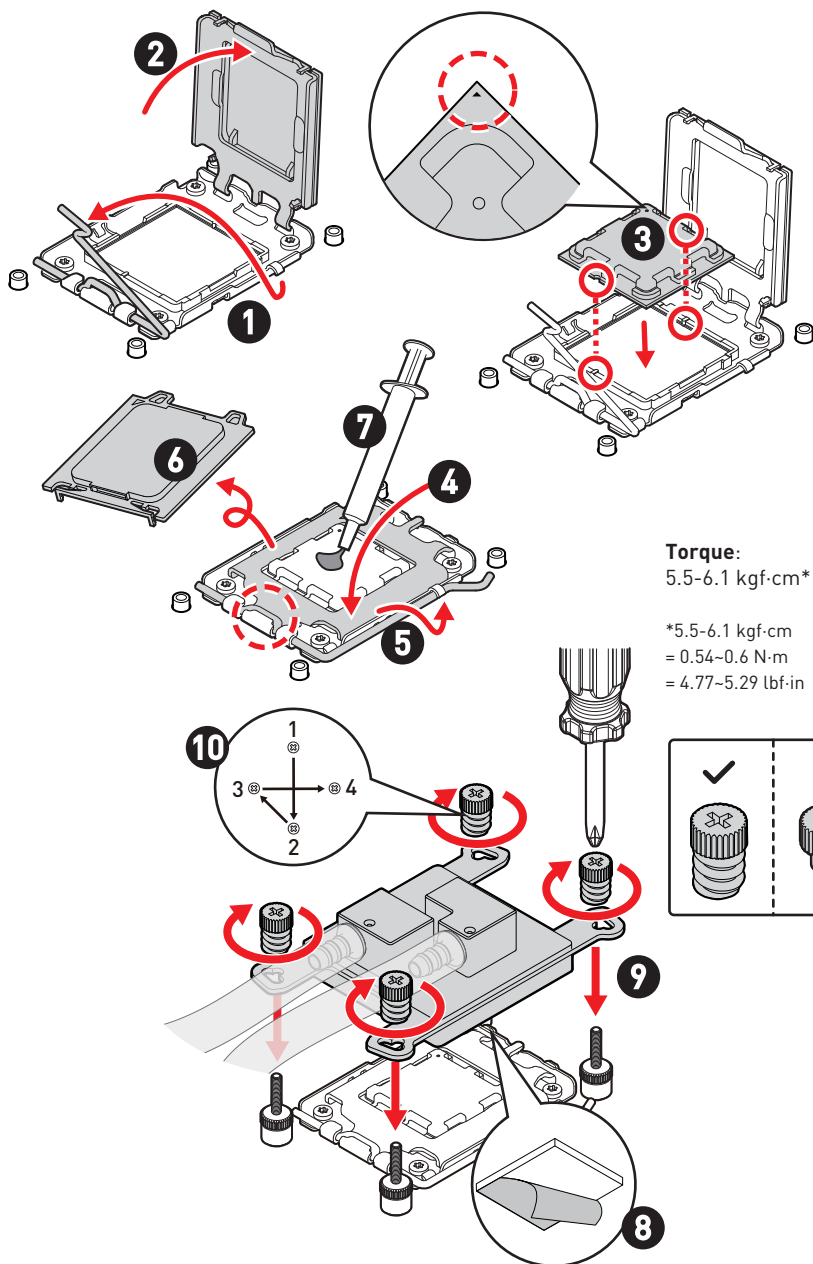

Memory

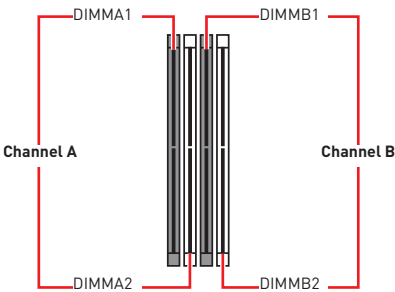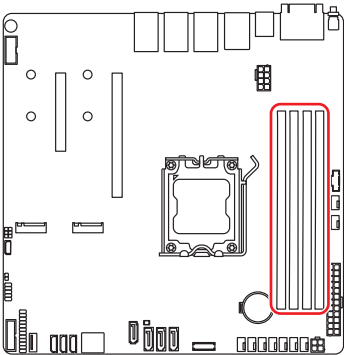

Recommended Memory Population

Quantity of DIMMs		1	2		3	4	
Channel A	DIMMA1				V		V
	DIMMA2	V	V		V	V	V
Channel B	DIMMB1			V		V	V
	DIMMB2		V	V		V	V


**“V” indicates a populated DIMM slot. **

 Important

- Only support **UDIMM**.
- There should be at least 1 DDR5 DIMM populated.
- Paired memory installation for Max performance.
- If only **1 DIMM** is populated in a channel, then populate it in the **DIMMA2** slot.
- Populate the same DIMM type in each channel, specifically: 1. Use the same DIMM size; 2. Use the same number of ranks per DIMM.
- We don’t suggest other memory installation.

Installing Memory Modules

1. Open the side clips to unlock the DIMM slot.
2. Insert the DIMM vertically into the slot, ensuring that the off-center notch at the bottom aligns with the slot.
3. Push the DIMM firmly into the slot until it clicks and the side clips automatically close.
4. Verify that the side clips have securely locked the DIMM in place.

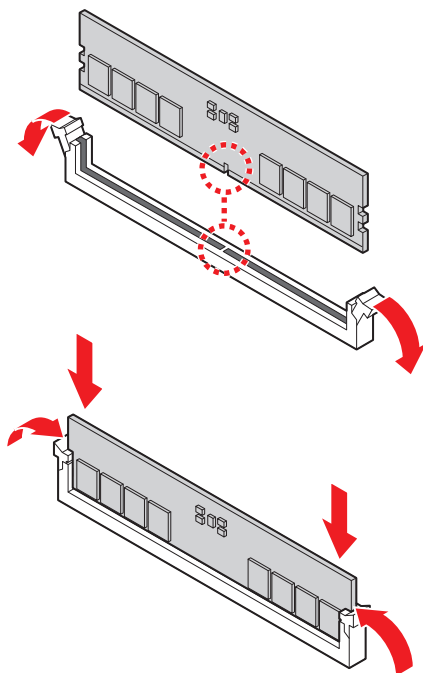

Important

You can barely see the golden finger if the memory module is properly inserted in the DIMM slot.

M.2 M Key

Installing M.2 M Key




Video Demonstration

Watch the video to learn how to Install M.2 SSD.



1. Loosen the M.2 riser screw from the motherboard.
2. Move and fasten the M.2 riser screw to the appropriate location according your M.2 SSD size.
3. Insert your M.2 SSD into the M.2 slot at a 30-degree angle.
4. Secure the M.2 SSD in place with the supplied M.2 screw.

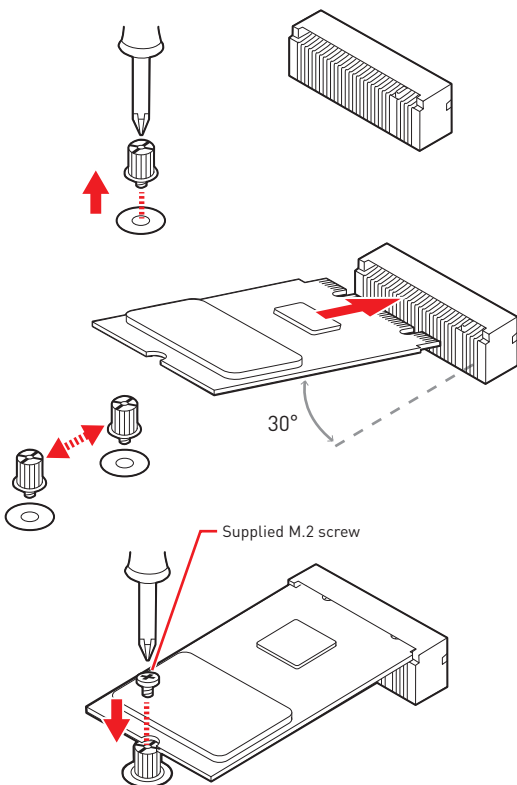


Slide Rail




Important

The pre-installed screws on the outer rail bracket are intended only for square rack holes. For round holes, please switch to the “7.1 round hole screw”.

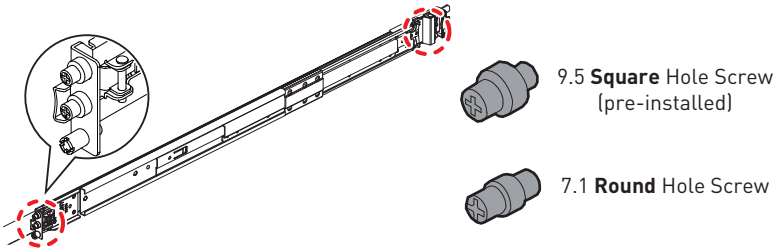


Disassembling Slide Rail

Slide the **release tab** forward to separate the inner rail from the bracket.

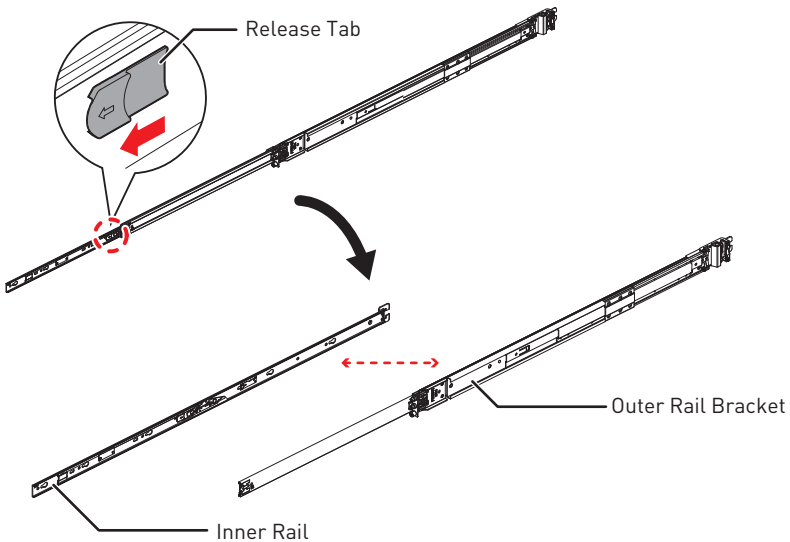


Installing Inner Rail to System

1. Align the standoffs on the side of the system with the hole on the inner rail, then **pull the inner rail backwards** till it locks into place.
2. Tighten the screw to secure the inner rail.
3. Repeat the same procedure to install the inner rail on the other side of the system.

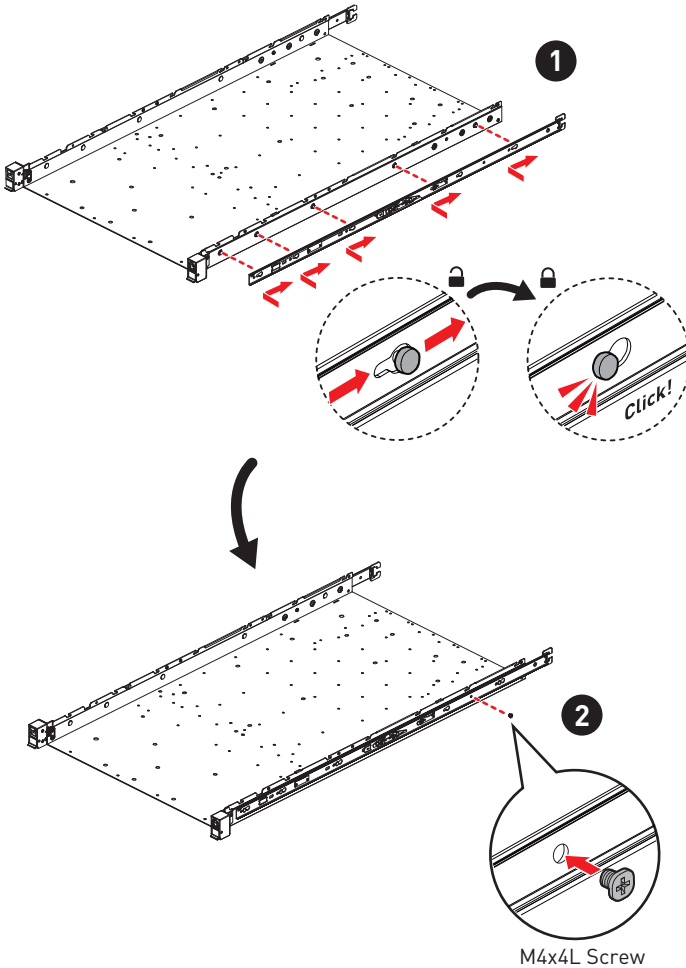


Retracting Outer Rail Bracket

Pull the latch downward to slide the middle rail back to the outer rail bracket.

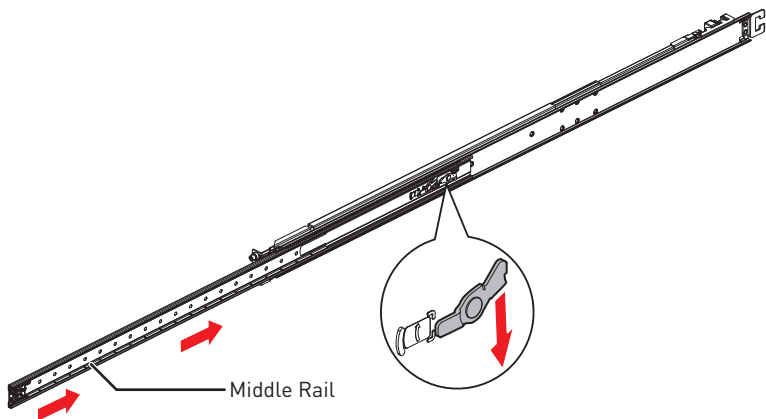

Attaching Outer Rail Bracket to Rack Frame

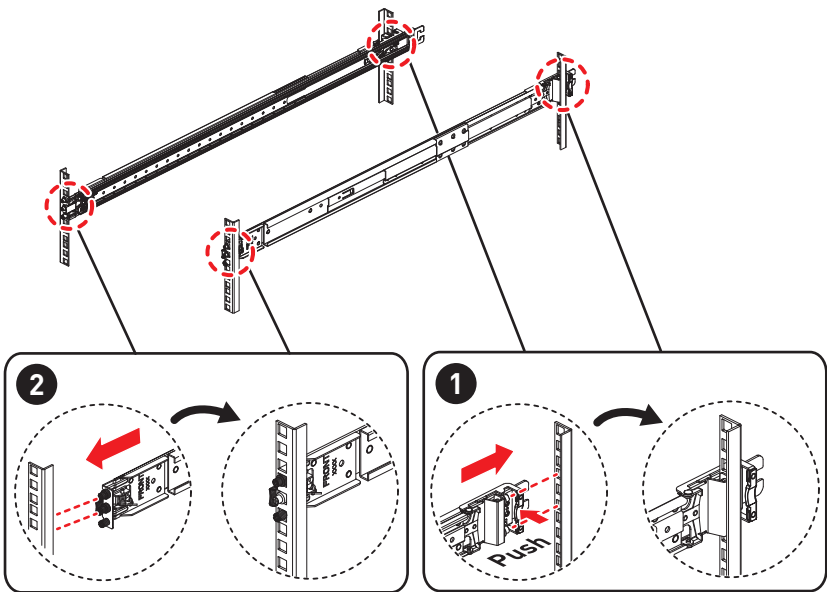


Installing System into Rack

1. Pull out the middle rails till it fully extended.
2. Engage the inner rails of the system to the middle rails, then push the system forward until it stops.
3. Push the system into the rack by sliding the **two-way release tabs** forward or backward.
4. Tighten the screws to secure the system.




Important


Ensure the ball bearing retainers are locked forward on each middle rail.

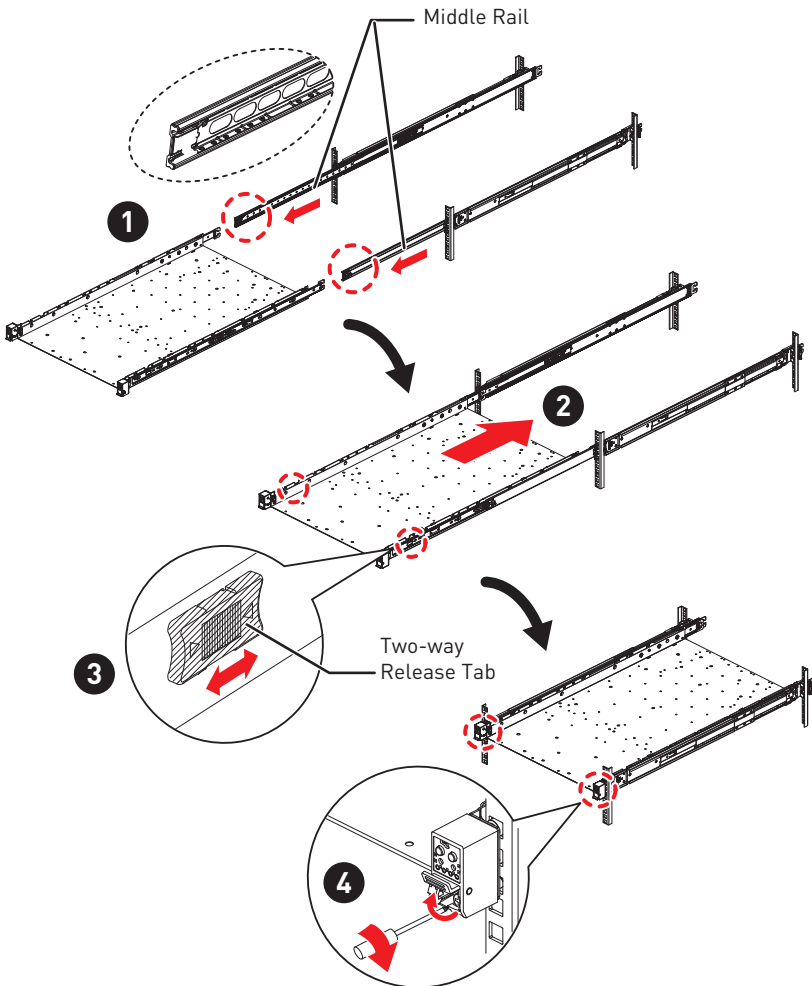

Detaching Outer Rail Bracket from Rack Frame

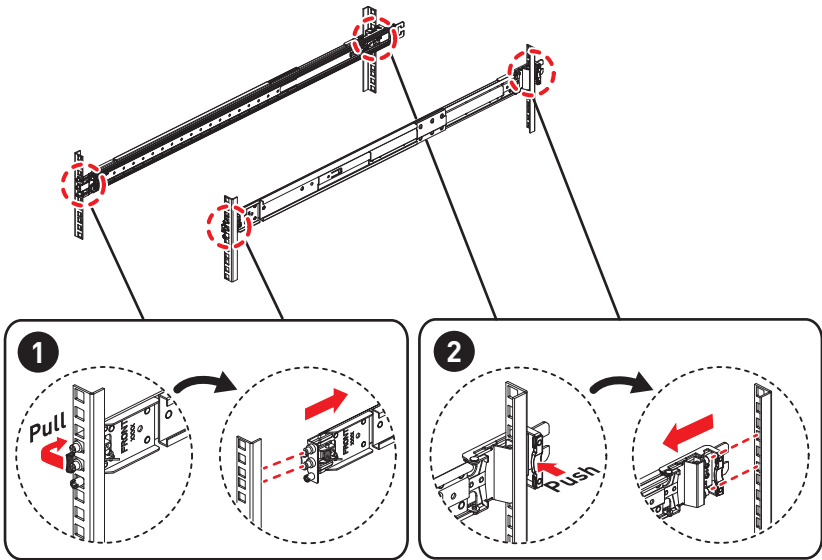

Detaching Inner Rail from System

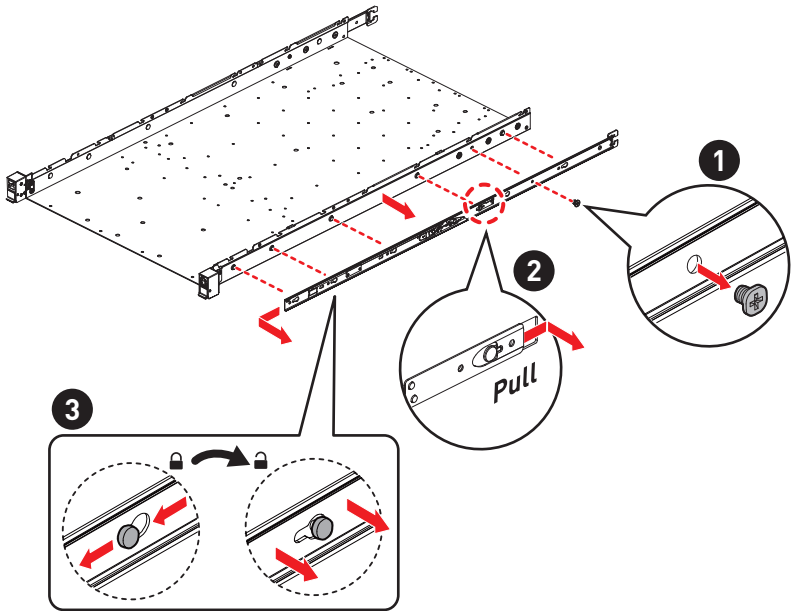



MSI.COM



EPS.MSI.COM