



D3052

MS-S3661

Server Motherboard
User Guide

Contents

Regulatory Notices..... 4

Safety Information 6

Specifications..... 7

Overview of Components 9

Rear I/O Panel..... 10

 UID LED Button..... 10


 COM Port..... 10

 VGA Port..... 10

 USB 3.2 Gen 1 Type-A Port..... 10

 GbE RJ45 Port (for mgmt.) 11

 25G SFP28 LAN Port..... 11

 HDMI™ Connector  11

Block Diagram 12

CPU Socket 14

 Introduction to the AM5 CPU..... 14

 CPU & Heatsink Installation..... 15

Memory Slots..... 16

 DIMMA1~2, DIMMB1~2: DDR5 DIMM Slots..... 16

 Recommended Memory Population..... 16

 Installing Memory Modules..... 17

Storage Connectors 18

 SATA1~4: SATA 3.0 6Gb/s Ports 18

 SATA3_1: SATA 2.0 3Gb/s Ports 18

 M2_1: M.2 Slot (M Key, PCIe 4.0, 22110/ 2280) 19

 Installing M.2 SSD 19

Expansion Slots 20

 PCIE_16, PCIE_4: PCIe Expansion Slots 20

Revision

V1.1, 2024/03

Power Connectors.....	21
JPWR2: 24-Pin Main Power Connector.....	21
JPWR1: 8-Pin 12V Power Connector.....	22
SATAPWR1: 4-Pin Power Connector.....	22
JSDOMPWR1: 2-Pin SATA DOM Power Connector.....	22
Cooling Connectors.....	23
FAN1~6: Fan Connectors	23
USB Connectors	24
JUSB1: USB 3.2 Gen 1 Header	24
JUSB2: USB 3.2 Gen 1 Type-A Port.....	24
Other Connectors and Components	25
JFP1: Front Panel Header.....	25
JTPM1: SPI TPM Header	26
JCOM1: COM Port Header	26
JGPIO1: GPIO Header	27
JPMBUS1: PMBus Header	27
FP_I2C_1, RBP_I2C_1~2: I2C Headers	28
JIPMB1: IPMB Header.....	28
JCHASSIS: Chassis Intrusion Header	29
BAT1: CMOS Battery.....	30
Replacing CMOS battery.....	30
Jumpers	31
Onboard LEDs.....	32
BMC_LED1: BMC Heartbeat LED.....	32
LED_H1, LED_L1: Port 80 Debug LEDs	32

Regulatory Notices

WEEE Statement

Under the European Union ("EU") Directive on Waste Electrical and Electronic Equipment, Directive 2012/19/EU, products of "electrical and electronic equipment" cannot be discarded as municipal waste anymore and manufacturers of covered electronic equipment will be obligated to take back such products at the end of their useful life.



Chemical Substances Information

In compliance with chemical substances regulations, such as the EU REACH Regulation (Regulation EC No. 1907/2006 of the European Parliament and the Council), MSI provides the information of chemical substances in products at:

<https://csr.msi.com/global/index>

CE Conformity

Hereby, Micro-Star International CO., LTD declares that this device is in compliance with the essential safety requirements and other relevant provisions set out in the European Directive.



FCC-A Radio Frequency Interference Statement

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference, in which case the user will be required to correct the interference at his own expense.



Notice 1

The changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Notice 2

Shielded interface cables and AC power cord, if any, must be used in order to comply with the emission limits.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- This device may not cause harmful interference, and
- This device must accept any interference received, including interference that may cause undesired operation.

Battery Information

Please take special precautions if this product comes with a battery.

- Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type recommended by the manufacturer.
- Avoid disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, which can result in an explosion.
- Avoid leaving a battery in an extremely high temperature or extremely low air pressure environment that can result in an explosion or the leakage of flammable liquid or gas.
- Do not ingest battery. If the coin/button cell battery is swallowed, it can cause severe internal burns and can lead to death. Keep new and used batteries away from children.

European Union:



Batteries, battery packs, and accumulators should not be disposed of as unsorted household waste. Please use the public collection system to return, recycle, or treat them in compliance with the local regulations.

BSMI:



廢電池請回收

For better environmental protection, waste batteries should be collected separately for recycling or special disposal.

California, USA:



The button cell battery may contain perchlorate material and requires special handling when recycled or disposed of in California.

For further information please visit:

<http://www.dtsc.ca.gov/hazardouswaste/perchlorate/>

Copyright and Trademarks Notice

msi

MSI

微星

微星科技
MICRO-STAR INTERNATIONAL



Copyright © Micro-Star Int'l Co., Ltd. All rights reserved. The MSI logo used is a registered trademark of Micro-Star Int'l Co., Ltd. All other marks and names mentioned may be trademarks of their respective owners. No warranty as to accuracy or completeness is expressed or implied. MSI reserves the right to make changes to this document without prior notice.

Technical Support

If a problem arises with your product and no solution can be obtained from the user's manual, please contact your place of purchase or local distributor. Alternatively, please visit <https://eps.msi.com/support> for further guidance.



The terms HDMI™, HDMI™ High-Definition Multimedia Interface, HDMI™ Trade dress and the HDMI™ Logos are trademarks or registered trademarks of HDMI™ Licensing Administrator, Inc.

Safety Information

- Always read the safety instructions carefully.
- Keep this User's Manual for future reference.
- Keep this equipment away from humidity.
- Lay this equipment on a reliable flat surface before setting it up.
- The openings on the enclosure are for air convection hence protects the equipment from overheating. **Do not cover the openings.**
- Make sure the voltage of the power source and adjust properly before connecting the equipment to the power inlet.
- Place the power cord such a way that people can not step on it. Do not place anything over the power cord.
- Always unplug the power cord before inserting any add-on card or module.
- All cautions and warnings on the equipment should be noted.
- Never pour any liquid into the opening that could damage or cause electrical shock.
- If any of the following situations arises, get the equipment checked by service personnel:
 - The power cord or plug is damaged.
 - Liquid has penetrated into the equipment.
 - The equipment has been exposed to moisture.
 - The equipment does not work well or you can not get it work according to User's Manual.
 - The equipment has dropped and damaged.
 - The equipment has obvious sign of breakage.
- **Do not leave this equipment in an environment unconditioned, storage temperature above 60°C (140°F), it may damage the equipment.**


Specifications

Model	D3052GB2N-25G
Form factor	Micro-ATX
Dimensions	243.84 mm [9.6"] x 243.84 mm [9.6"]
Processor	Single AMD Ryzen™ 7000 Series Processor, TDP up to 170W
Socket	1 x AMD Socket AM5
Chipset	AMD B650 Chipset
Networking	<ul style="list-style-type: none">• 2 x 25G SFP28 LAN ports- Intel® Ethernet Controller E810-XXVAM2, w/ NCSI
Server Management	<ul style="list-style-type: none">• Aspeed AST2600 IPMI 2.0 with iKVM support• 1 x GbE RJ45 port for Mgmt. (Realtek® RTL8211FD-CG-HF)
Graphics	<ul style="list-style-type: none">• 1 x HDMI™ 1.4b (from CPU)• 1 x VGA (from AST2600 BMC)
Memory	<ul style="list-style-type: none">• 4 x DDR5 DIMM slots, 2DPC, ECC/non-ECC UDIMM- Max Frequency: 5200 MT/s (1DPC) and 3600 MT/s (2DPC)- Max Capacity per DIMM: 48GB
Storage	<ul style="list-style-type: none">• 4 x SATA 3.0 ports (SATA1~4, w/ 1 x VCC)• 2 x SATA 2.0 ports (SATA3_1)• 1 x M.2 M-Key slot (PCIe 4.0 x4, 22110/ 2280)
Expansion Slots	<ul style="list-style-type: none">• 1 x PCIe 5.0 x 16 slot (Gen 5 x 16 signal from CPU) (PCIE_16)• 1 x PCIe 5.0 x 8 slot (Gen 5 x 4 signal from CPU) (PCIE_4)
Rear I/O	<ul style="list-style-type: none">• 4 x USB 3.2 Gen 1 Type-A ports• 2 x 25G SFP28 LAN ports• 1 x HDMI™ connector• 1 x GbE RJ45 ports (Mgmt.)• 1 x COM port• 1 x VGA port• 1 x UID LED button• 4 x Link/Speed LEDs (SFP28 ports)
Internal USB Connectors	<ul style="list-style-type: none">• 1 x USB 3.2 Gen 1 header• 1 x USB 3.2 Gen 1 Type-A port


Continued on next column

Model	D3052GB2N-25G
System Connectors	<ul style="list-style-type: none"> • 1 x Front panel header • 1 x SPI TPM header • 1 x GPIO header • 3 x I2C headers • 1x PMbus header • 1 x COM port header • 1 x Chassis intrusion header • 1x IPMB header
Cooling Connectors	6 x 4-pin system PWM fan connectors
Power Connectors	<ul style="list-style-type: none"> • 1 x 24-pin ATX power connector • 1x 8-pin 12V power connector • 1 x 4-pin power connector • 1 x 2-pin SATA DOM power connector
Jumpers	<ul style="list-style-type: none"> • 1 x CMOS clear jumper • 1 x BMC select jumper
LED Features	<ul style="list-style-type: none"> • 2 x BMC heartbeat LEDs • 2 x Port 80 debug LEDs
Security	1 x TPM header
Environment	<ul style="list-style-type: none"> • Operating Temperature: 0°C ~ 40°C • Non-operating Temperature: -20°C ~ 70°C • Non-operating Relative Humidity: 5% ~ 85% (non-condensing)
Certifications	CE, FCC (Class A)

Overview of Components

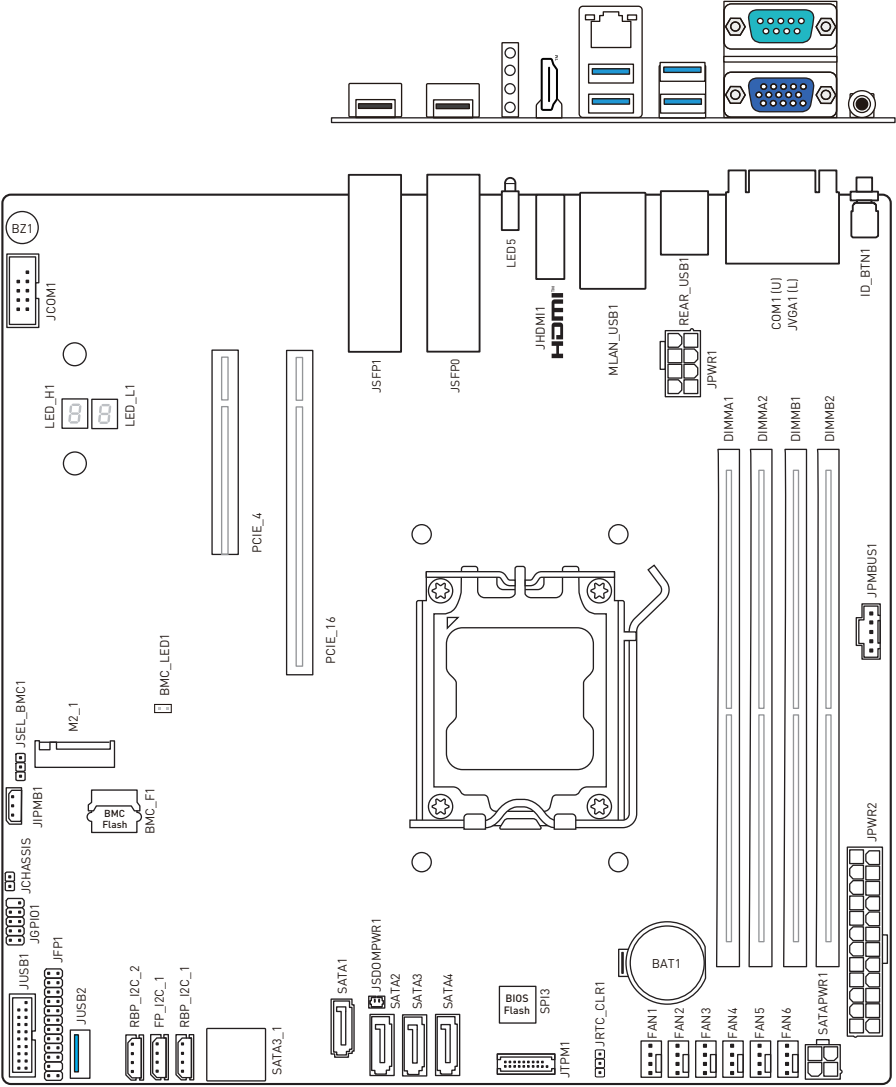

Rear I/O Panel

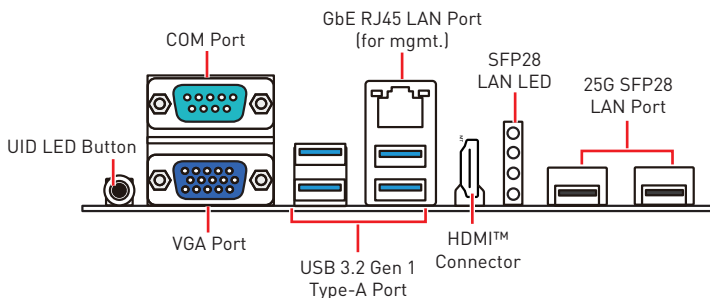

UID LED Button

The UID (Unit Identification) button help users identify and locate a system, especially in high-density rack environments.

COM Port

A COM port, also called a serial port or DB9 connector, is a communication interface for transferring data between a computer and external devices such as barcode scanners, printers, and credit card machines. It's commonly used for **initial system configuration and diagnostics** on server boards and for connecting legacy devices that lack modern interfaces. Users can connect a specially configured serial cable to establish a serial connection.

VGA Port








The DB15-pin female connector is provided for monitors.

USB 3.2 Gen 1 Type-A Port

The USB (Universal Serial Bus) port is used for connecting USB devices such as keyboards, mice, or other compatible peripherals. It supports data transfer rates up to **5 Gbps** and is backward-compatible with USB 2.0 devices.

GbE RJ45 Port (for mgmt.)







Connect a specially configured RJ45 console cable to this jack for network routers/switches to communicate with the system through a serial connection.

Link/ Activity LED			Speed LED	
Status	Description		Status	Description
 Off	No link		 Off	10 Mbps
 Green	Linked		 Orange	100 Mbps
 Blinking	Data activity		 Green	1 Gbps

25G SFP28 LAN Port

Utilize fiber optic cables to connect with compatible SFP28 transceivers, or opt for DAC/AOC cables to meet your connectivity needs.




Link/ Activity LED		Speed LED	
Status	Description	Status	Description
 Off	No link	 Off	100 Mbps
 Green	Linked	 Yellow	10 Gbps
 Blinking	Data activity	 Green	25 Gbps

HDMI™ Connector

HDMI™ is a digital interface for uncompressed audio/video streams, accommodating all TV formats and multi-channel audio on a single cable.



Block Diagram

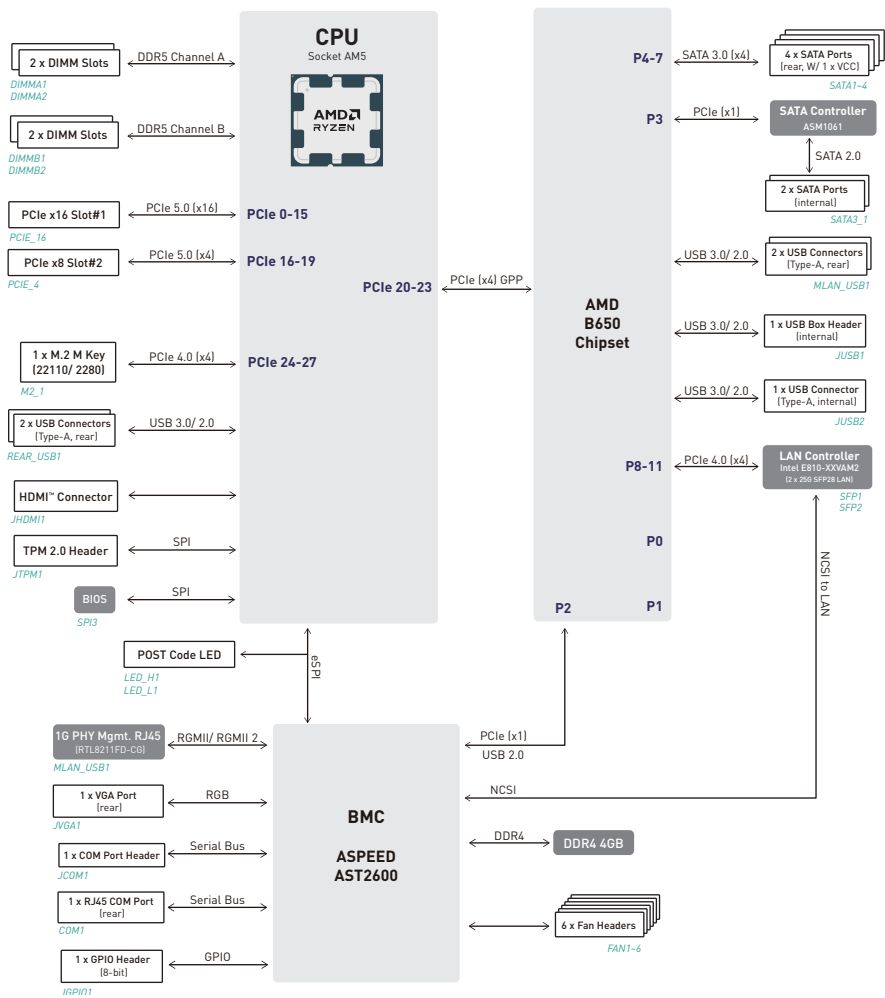

Component Contents

Component	Page
CPU Socket	14
Memory Slots	16
DIMMA1~2, DIMMB1~2: DDR5 DIMM Slots	16
Storage Connectors	18
SATA1~4: SATA 3.0 6Gb/s Ports	18
SATA3_1: SATA 2.0 3Gb/s Ports	18
M2_1: M.2 Slot (M Key, PCIe 4.0, 22110/ 2280)	19
Expansion Slots	20
PCIE_16, PCIE_4: PCIe Expansion Slots	20
Power Connectors	21
JPWR2: 24-Pin Main Power Connector	21
JPWR1: 8-Pin 12V Power Connector	22
SATAPWR1: 4-Pin Power Connector	22
JSDOMPWR1: 2-Pin SATA DOM Power Connector	22
Cooling Connectors	23
FAN1~6: Fan Connectors	23
USB Connectors	24
JUSB1: USB 3.2 Gen 1 Header	24
JUSB2: USB 3.2 Gen 1 Type-A Port	24
Other Connectors and Components	25
JFP1: Front Panel Header	25
JTPM1: SPI TPM Header	26
JCOM1: COM Port Header	26
JGPIO1: GPIO Header	27
JPMBUS1: PMBus Header	27
FP_I2C_1, RBP_I2C_1~2: I2C Headers	28
JIPMB1: IPMB Header	28
JCHASSIS: Chassis Intrusion Header	29
BAT1: CMOS Battery	30
Jumpers	31
Onboard LEDs	32
BMC_LED1: BMC Heartbeat LED	32
LED_H1, LED_L1: Port 80 Debug LEDs	32

CPU Socket

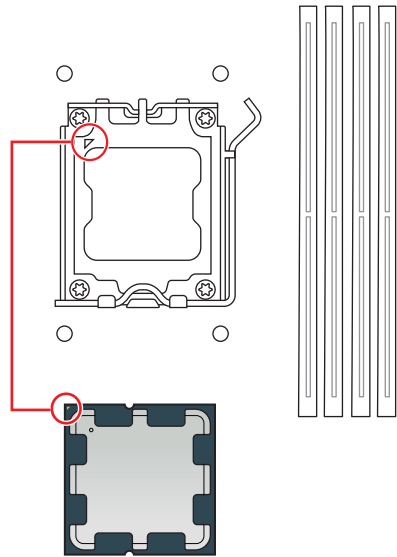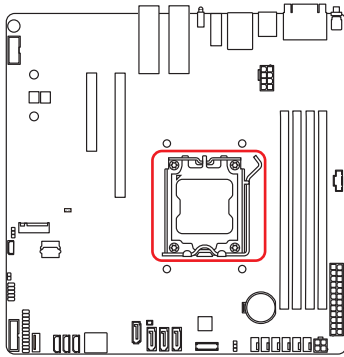

Introduction to the AM5 CPU

The surface of the AM5 CPU has two **notches** and a **golden triangle** to assist in correctly lining up the CPU for motherboard placement. The golden triangle is the Pin 1 indicator.



Important


- **Overheating** will seriously damage the CPU and system. Always make sure the cooling fan can work properly to protect the CPU from overheating. Make sure that you apply an even layer of thermal paste (or thermal tape) between the CPU and the heatsink to enhance heat dissipation.
- While **replacing the CPU**, always turn off the power supply or unplug the power supply's power cord from the grounded outlet first to ensure the safety of CPU.
- Confirm if your CPU cooler is firmly installed before turning on your system.
- Do not touch the CPU socket pins to avoid damage.
- Whenever CPU is not installed, always protect your CPU socket pins with the plastic cap covered.
- Please refer to the documentation in the CPU cooler package for more details about the CPU cooler installation.
- Read the CPU status in BIOS.

CPU & Heatsink Installation

Use appropriate ground straps, gloves and ESD mats to protect yourself from electrostatic discharge (ESD) while installing the processor.





Images are for demonstration purposes only; actual parts may vary.

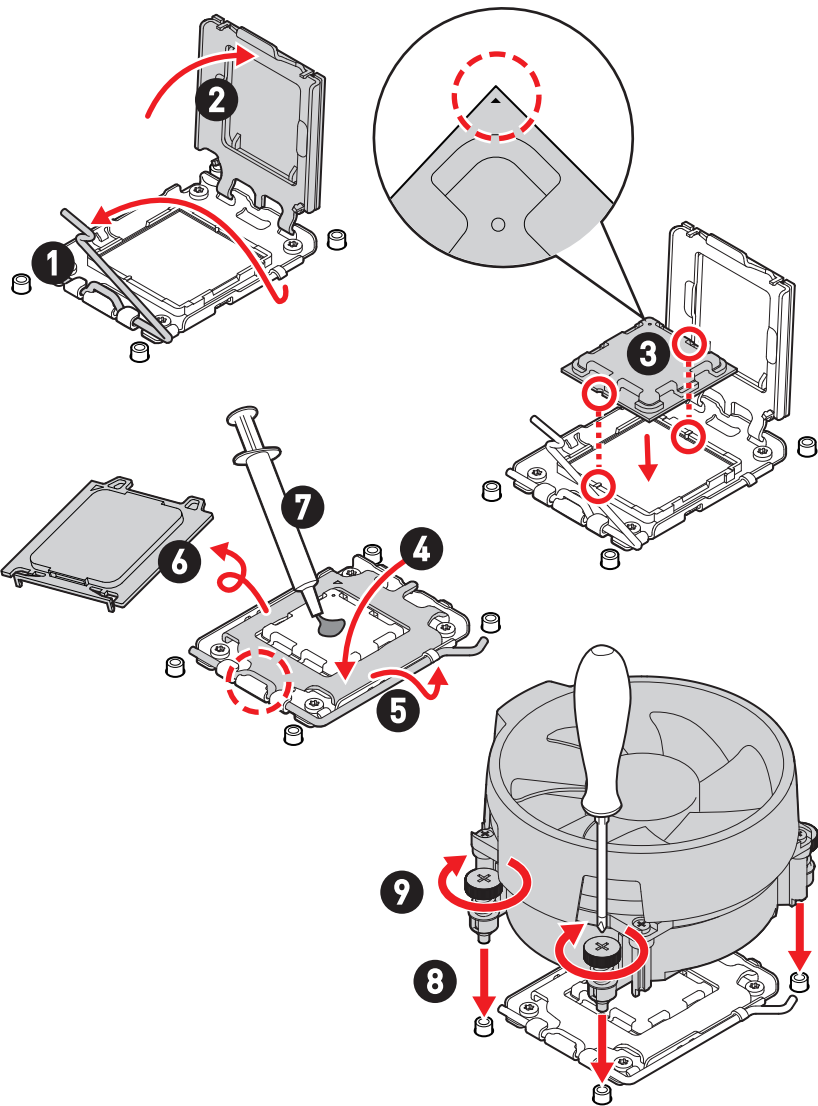

Memory Slots

DIMMA1~2, DIMMB1~2: DDR5 DIMM Slots

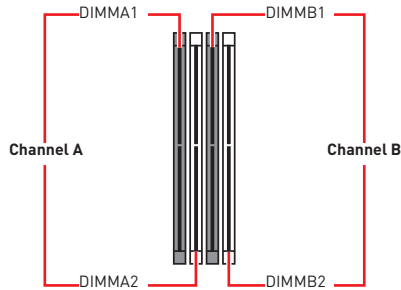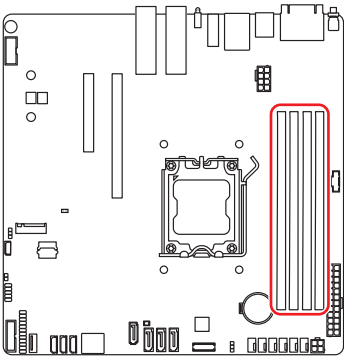

Recommended Memory Population


Quantity of DIMMs		1	2		3		4	
Channel A	DIMMA1				V		V	V
	DIMMA2	V	V		V	V	V	V
Channel B	DIMMB1			V		V		V
	DIMMB2		V	V		V	V	V
"V" indicates a populated DIMM slot.								

Important

- Only support **UDIMM**.
- There should be at least 1 DDR5 DIMM populated.
- Paired memory installation for Max performance.
- If only **1 DIMM** is populated in a channel, then populate it in the **DIMMA2** slot.
- Populate the same DIMM type in each channel, specifically: 1. Use the same DIMM size; 2. Use the same number of ranks per DIMM.
- We don't suggest other memory installation.

Installing Memory Modules

1. Open the side clips to unlock the DIMM slot.
2. Insert the DIMM vertically into the slot, ensuring that the off-center notch at the bottom aligns with the slot.
3. Push the DIMM firmly into the slot until it clicks and the side clips automatically close.
4. Verify that the side clips have securely locked the DIMM in place.

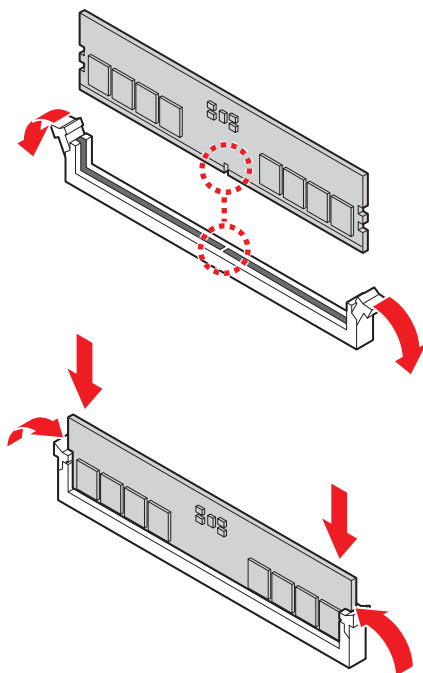

Important

You can barely see the golden finger if the memory module is properly inserted in the DIMM slot.



Storage Connectors

SATA1~4: SATA 3.0 6Gb/s Ports

These connectors are SATA 6Gb/s interface ports, it can connect to SATA devices.

SATA3_1: SATA 2.0 3Gb/s Ports

These connectors are SATA 3Gb/s interface ports, it can connect to SATA devices.

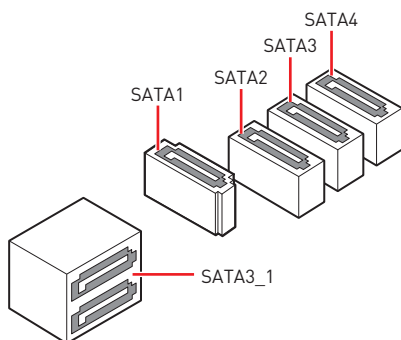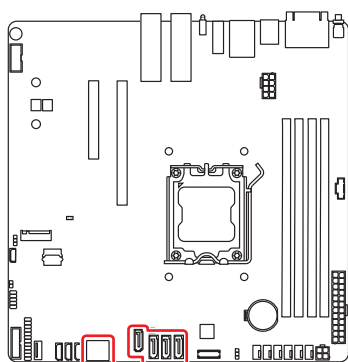


Important

- Please do not fold the SATA cable at a 90-degree angle. Data loss may result during transmission otherwise.
- SATA cables have identical plugs on either sides of the cable. However, it is recommended that the flat connector be connected to the motherboard for space saving purposes.

M2_1: M.2 Slot (M Key, PCIe 4.0, 22110/ 2280)

Please install the M.2 solid-state drive (SSD) into the M.2 slot as shown below.

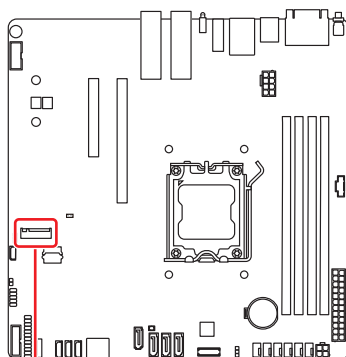

M2_1




Video Demonstration

Watch the video to learn how to install M.2 SSD.




Installing M.2 SSD

1. Loosen the M.2 riser screw from the motherboard.
2. Set the M.2 riser screw at the appropriate location based on the length of your M.2 SSD.
3. Insert your M.2 SSD into the M.2 slot at a 30-degree angle.
4. Secure the M.2 SSD in place with the supplied M.2 screw.

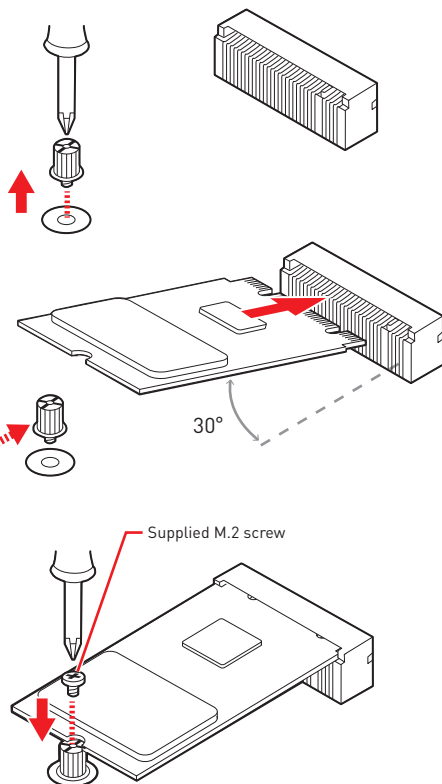

Expansion Slots

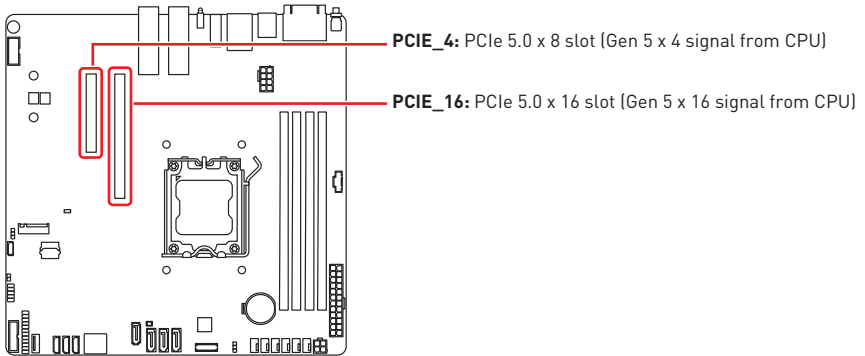

PCIe_16, PCIe_4: PCIe Expansion Slots


The PCI Express(Peripheral Component Interconnect Express) slots support PCIe interface expansion cards.



Important

When adding or removing expansion cards, make sure that you unplug the power supply first. Meanwhile, read the documentation for the expansion card to configure any necessary hardware or software settings for the expansion card, such as jumpers, switches or BIOS configuration.

Power Connectors

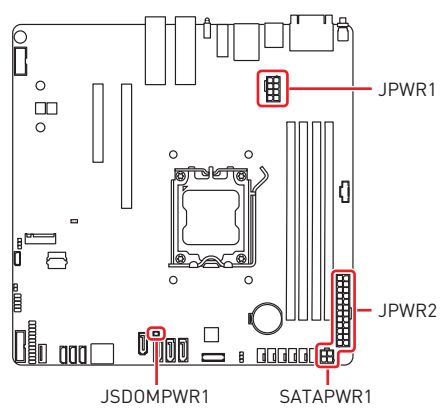


JPWR2: 24-Pin Main Power Connector

This connector allows you to connect an ATX power supply.

<div>JPWR2</div>	1	+3.3V	13	+3.3V
	2	+3.3V	14	-12V
	3	GND	15	GND
	4	+5V	16	PS-ON#
	5	GND	17	GND
	6	+5V	18	GND
	7	GND	19	GND
	8	PWR OK	20	Res
	9	5VSB	21	+5V
	10	+12V	22	+5V
	11	+12V	23	+5V
	12	+3.3V	24	GND


JPWR1: 8-Pin 12V Power Connector

This connector allows you to connect an ATX power supply.

JPWR1		1	GND	5	P12V
		2	GND	6	P12V
		3	GND	7	P12V
		4	GND	8	P12V


SATAPWR1: 4-Pin Power Connector

This connector is used to provide power to SATA devices.

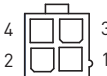SATAPWR1		1	GND	2	GND
		3	P12V	4	P5V

JSDOMPWR1: 2-Pin SATA DOM Power Connector

This connector is used to provide power to SATA DOM devices.

JSDOMPWR1		1	GND
		2	P5V

 **Important**


Make sure that all power connectors are securely connected to the power supply to ensure stable operation of the motherboard.

Cooling Connectors

FAN1~6: Fan Connectors

The fan power connector supports system cooling fans with +12V. When connecting the wire to the connectors, always note that the red wire is the positive and should be connected to the +12V; the black wire is Ground and should be connected to GND.


<div>FAN1~6</div> <div><div><div>4</div><div><div><div></div><div></div><div></div><div></div></div></div><div>1</div></div></div>	1	GND
	2	P12V
	3	FAN_TACH
	4	BMC_PWM

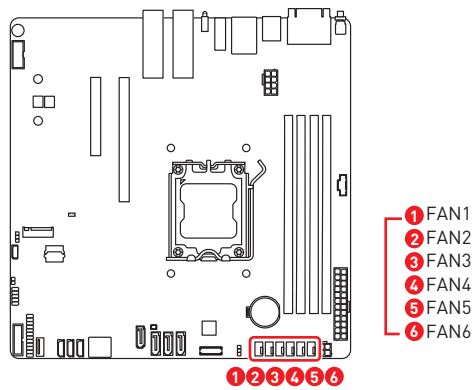

USB Connectors

JUSB1: USB 3.2 Gen 1 Header


This port is backward-compatible with USB 2.0 devices and supports data transfer rate up to **5 Gbps**.

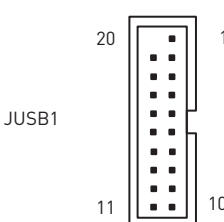	1	USB_VCC1	11	USB2_ESD_DP9
	2	USB3_ESD_RX4N	12	USB2_ESD_DN9
	3	USB3_ESD_RX4P	13	GND
	4	GND	14	USB3_ESD_TX5P
	5	USB3_ESD_TX4N	15	USB3_ESD_TX5N
	6	USB3_ESD_TX4P	16	GND
	7	GND	17	USB3_ESD_RX5P
	8	USB2_ESD_DN8	18	USB3_ESD_RX5N
	9	USB2_ESD_DP8	19	USB_VCC2
	10	NC	20	No pin

JUSB2: USB 3.2 Gen 1 Type-A Port

The USB (Universal Serial Bus) port is used for connecting USB devices such as keyboards, mice, or other compatible peripherals. It supports data transfer rates up to **5 Gbps** and is backward-compatible with USB 2.0 devices.


JUSB2

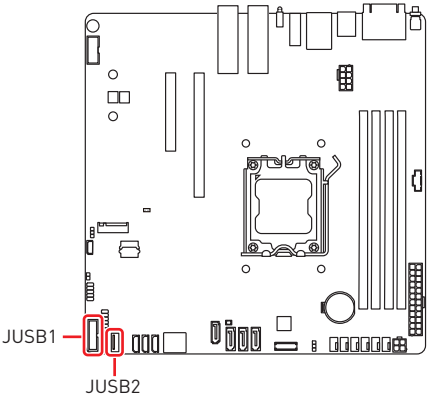


Other Connectors and Components

JFP1: Front Panel Header


The front panel header is provided for electrical connection to the front panel switches and LEDs.

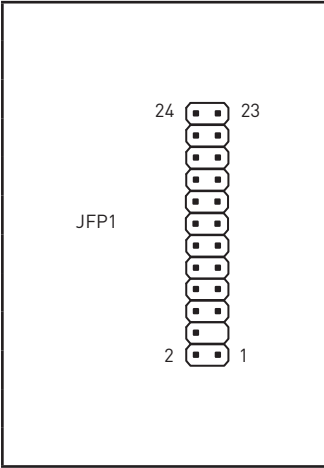	1	PWR_LED+	2	FP_PWR
	3	N/A	4	SYS_ID_LED+
	5	PWR_LED-	6	SYS_ID_LED-
	7	HDD_ACT_LED+	8	SYS_FAULT_LED1-
	9	HDD_ACT_LED-	10	SYS_FAULT_LED2-
	11	PWR_BTN	12	NIC#1_ACT_LED+
	13	PWR_BTN_GND	14	NIC#1_ACT_LED-
	15	RST_BTN	16	SMB_SDA
	17	RST_BTN_GND	18	SMB_SCL
	19	SYS_ID_BTN	20	CHASSIS_INTRUSION
	21	WIRE_TEMP_SENSOR	22	NIC#2_ACT_LED+
	23	NMI_BTN	24	NIC#2_ACT_LED-

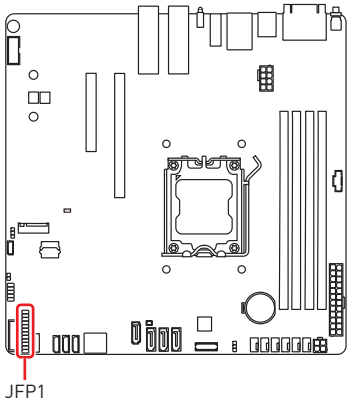


JTPM1: SPI TPM Header


This header connects to a TPM (Trusted Platform Module) (optional). Please refer to the TPM security platform manual for more details.
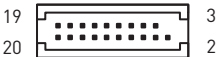
<div>JTPM1</div> 	1	No Pin	2	SPI_LOC_ROM_CS_N
	3	CPU_RSMEST_L	4	N/A
	5	GND	6	P1V8_AUX
	7	SPI_CPU0_CLK	8	TPM_SPI_WP_N
	9	SPI_CPU0_HOLD_L	10	SPI_CPU0_MISO
	11	N/A	12	SPI_CPU0_MOSI
	13	SPI_TPM_CS_N	14	GND
	15	PVDD_P1V8_AUX	16	GND
	17	IRQ_TPM_SPI_N	18	P1V8_AUX
	19	TPM_RESET_N	20	P1V8_AUX

JCOM1: COM Port Header


This header is a 16550A high speed communications port that sends/receives 16 bytes FIFOs. You can attach a serial device to it.
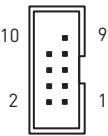
<div>JCOM1</div> 	1	NCDD#_B	2	NSIN_B
	3	NSOUT_B	4	NDTR_B
	5	GND	6	NDSR#_B
	7	NRTS_B	8	NCTS#_B
	9	NRTS#_B	10	No pin

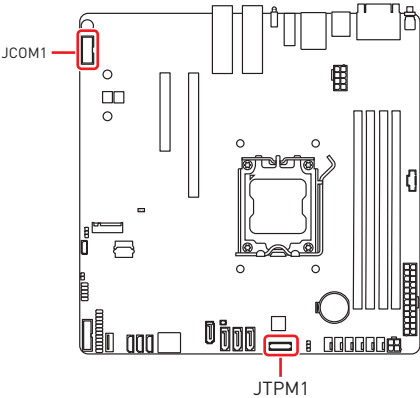


JGPIO1: GPIO Header


This header is provided for the General-Purpose Input/Output (GPIO) peripheral module.
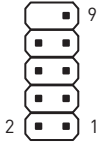
<div>JGPIO1</div> 	1	USER_GPIO0	2	USER_GPIO1
	3	USER_GPIO2	4	USER_GPIO3
	5	USER_GPIO4	6	USER_GPIO5
	7	USER_GPIO6	8	USER_GPIO7
	9	GND	10	No pin

JPMBUS1: PMBus Header


Power Management Bus (PMBus) is a variant of the System Management Bus (SMBus) which is targeted at digital management of power supplies.

<div>JPMBUS1</div> 	1	JPMBUS1_LVC3_SCL
	2	JPMBUS1_LVC3_SDA
	3	SMB_PMBUS_ALERT_N
	4	GND
	5	P3V3_AUX

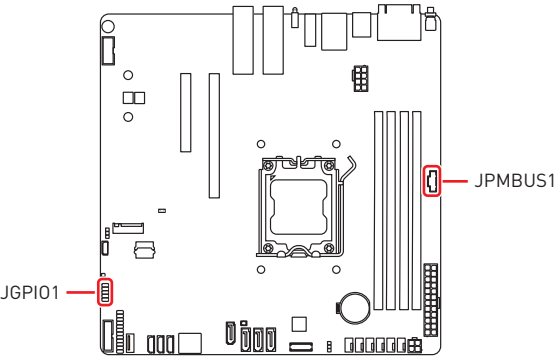


FP_I2C_1, RBP_I2C_1~2: I2C Headers


I2C headers are used to connect to the System Management Bus (SMBus). FBP_I2C_1 is for front HDD backplane, and RBP_I2C_1, RBP_I2C_2 are for rear HDD backplanes.

FP_I2C_1 RBP_I2C_1 RBP_I2C_2		1	NC
		2	I2C_CLK
		3	I2C_DATA
		4	GND

JIPMB1: IPMB Header


Intelligent Platform Management Bus (IPMB) header is used to connect various management components, such as Baseboard Management Controller (BMC).

JIPMB1		1	SMB_IPMB_DAT
		2	GND
		3	SMB_IPMB_CLK

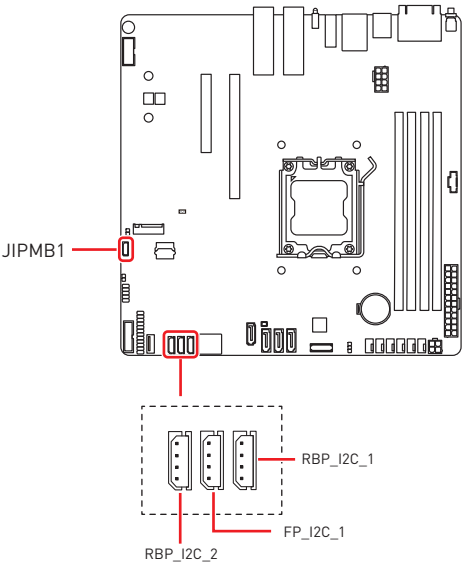


JCHASSIS: Chassis Intrusion Header

This header connects to the chassis intrusion switch cable. If the chassis is opened, the chassis intrusion mechanism will be activated. The system will record this status and show a warning message on the screen. To clear the warning, you must enter the BIOS utility and clear the record.

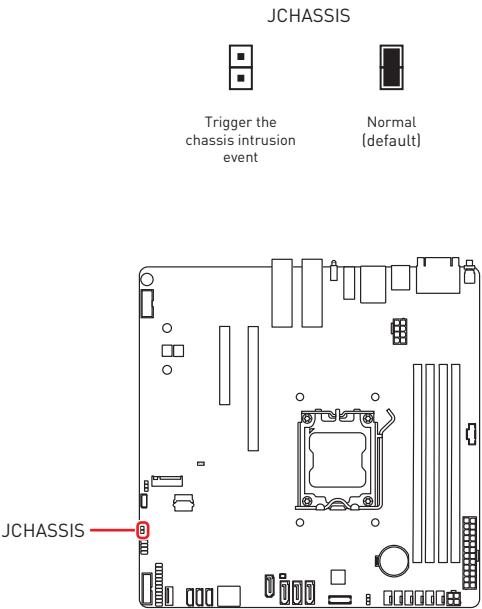


BAT1: CMOS Battery

If the CMOS battery is out of charge, the time in the BIOS will be reset and the data of system configuration will be lost. In this case, you need to replace the CMOS battery.

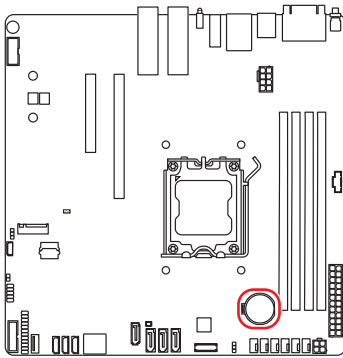

Replacing CMOS battery

1. Push the retainer clip to free the battery.
2. Remove the battery from the socket.
3. Install the new CR2032 coin-cell battery with the + sign facing up. Ensure that the retainer holds the battery securely.

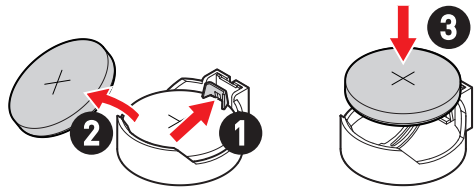

WARNING


KEEP OUT OF REACH OF CHILDREN



- Swallowing can lead to chemical burns, perforation of soft tissue, can death.
- Severe burns can occur within 2 hours of ingestion.
- If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

Jumpers

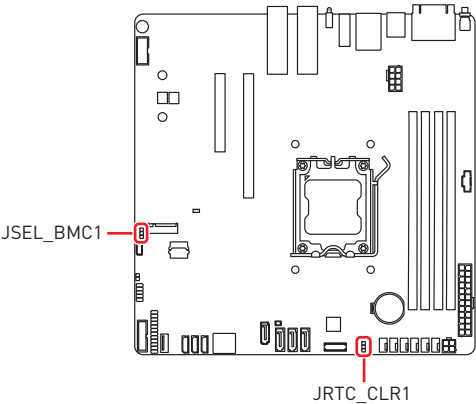

Avoid adjusting jumpers when the system is on; it will damage the motherboard.






Jumper Name	Default Setting	Description
JSEL_BMC1	 1	1-2: Using CPU (Default) 2-3: Using BMC
JRTC_CLR1	 1	1-2: Normal (Default) 2-3: Clear CMOS

Onboard LEDs

BMC_LED1: BMC Heartbeat LED

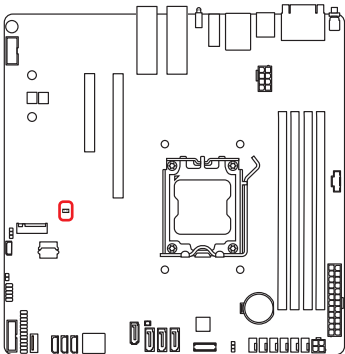
This LED indicates the BMC (Baseboard Management Controller) status.



Status	Description
 Off	BMC is not activated
 Blinking	BMC is functioning normally

LED_H1, LED_L1: Port 80 Debug LEDs

The Port 80 Debug LEDs display progress and error codes during and after POST (Power-On Self Test).

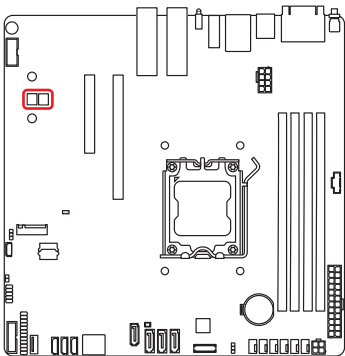

Hexadecimal Character Table

Hexadecimal	0	1	2	3	4	5	6	7
LED display	0	1	2	3	4	5	6	7
Hexadecimal	8	9	A	B	C	D	E	F
LED display	8	9	A	b	C	d	E	F



MSI.COM



EPS.MSI.COM