




NAVIGON

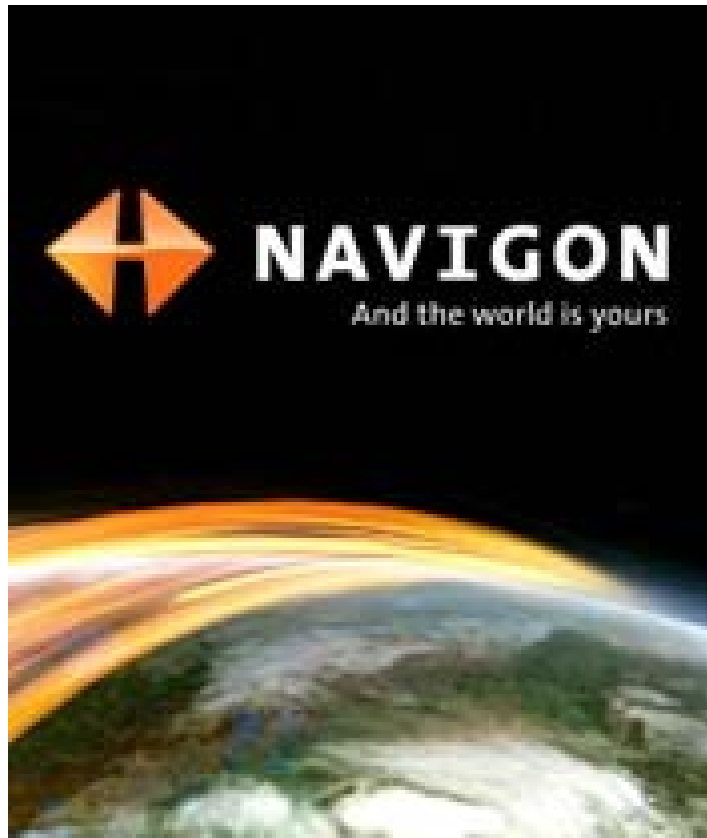

NAVIGON 7100

User's Guide

English (US)
September 2007

Revision 1.1

Imprint
NAVIGON, INC
200 W Madison Street
Suite 650
Chicago, IL 60606

The information contained herein may be changed at any time without prior notification. This manual nor any parts thereof may not be reproduced for any purpose whatsoever without the express written consent of NAVIGON, INC, nor transmitted in any form either electronically or mechanically, including photocopying and recording. All technical specifications, drawings, etc. are subject to copyright law.

© 2007, NAVIGON, INC

All rights reserved.

End User License Agreement

End User License Agreement (“Agreement”) – This is a legal agreement between you, the end user, and NAVIGON, Inc. (“NAVIGON”). By using all or any portion of the Software you are agreeing to be bound by the terms of this agreement. This Agreement applies to the use of software, pre-installed software on any of our hardware devices and accompanying items, including on CD-ROM, floppy disc, memory card, download package or any other data carriers, and all contents and contents programs (“Software”).

Please read this Contract carefully. By using this software you agree that this Agreement is enforceable like any written negotiated Agreement signed by you. This Agreement is enforceable against you and any legal entity that obtained the software.

If you do not agree to the terms of this Agreement, promptly return the unused software, unopened disk package and the accompanying items to the place where you obtained them for a full refund.

1. **OWNERSHIP:** It is hereby understood and agreed by you that NAVIGON is the owner of all title, ownership rights, intellectual property rights and copyrights in and to the Software. The Software shall remain the sole and exclusive property of NAVIGON and its licensors and NAVIGON and its licensors will retain all patents, copyrights and other intellectual property rights in the Software, as applicable. You also hereby understand and agree that NAVIGON and/or its third party licensors own all right, title and interest in and to all content included in the Software, including, but not limited to, all intellectual property rights therein (the “Content”).

2. **GRANT OF LICENSE:** NAVIGON grants you the right to use one copy of the Software, provided it is used on only one computer or hardware device at any time. The Software is in “use” on a computer or hardware device when it is loaded into temporary memory (e.g., hard disk, CD-ROM, or other storage device) of that computer. This license does not grant any right to obtain future upgrades, updates or supplements (“upgrades”) of the Software. Any updates are similarly governed by this Agreement and any accompanying amendments. Updates may be subject to additional costs and provisions.

3. **OTHER RESTRICTIONS:** Except for the initial loading of the Software onto a Hardware Device or for archival/backup purposes as provided for above, you may not rent or lease, broadcast, present, transfer, or distribute the Software and accompanying written materials. You may not reverse engineer, decompile, reverse engineer or disassemble the Software. If Software is an upgrade, any transfer must include the upgrade and all prior versions. All rights not specifically granted in this Agreement are reserved by NAVIGON.

4. **TRANSFER:** You may transfer the Software and this Agreement to another party to whom you may transfer the hardware devices and accompanying items if the other party agrees to accept the terms and conditions of this Agreement. If you transfer the Software, you must simultaneously either transfer all copies whether in printed or machine-readable form to the same party or destroy any copies not transferred, including all modifications and portions of the program contained or merged into other programs.

You shall not sub-license, lease, assign, or transfer the Agreement or the Software except as expressly provided in this Agreement. Any attempt otherwise to sublicense, lease, assign, or transfer any of the rights, duties, or obligations hereunder renders this License VOID.

5. **LIMITATION OF WARRANTIES AND LIABILITIES:** EXCEPT FOR THE LIMITED WARRANTY DOCUMENT INCLUDED WITH THE HARDWARE DEVICE, IF ANY, AND TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, ALL SOFTWARE, OTHER COMPONENTS THEREOF AND SERVICES ARE PROVIDED ON AN “AS IS” BASIS. YOU EXPRESSLY ACKNOWLEDGE AND AGREE THAT YOUR USE OF THE SOFTWARE IS AT YOUR SOLE

RISK AND THAT THE ENTIRE RISK AS TO SATISFACTORY QUALITY, PERFORMANCE, ACCURACY AND EFFORT IS WITH YOU. EXCEPT AS OTHERWISE EXPRESSLY STATED IN THIS AGREEMENT, NAVIGON DOES NOT MAKE, AND HEREBY EXPRESSLY DISCLAIMS, ANY AND ALL EXPRESS AND/OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, NON-INFRINGEMENT AND TITLE, AND ANY WARRANTIES ARISING FROM A COURSE OF DEALING, USAGE OR TRADE PRACTICE. YOU UNDERSTAND AND AGREE THAT THE USE OF THE SOFTWARE IS DONE AT YOUR OWN DISCRETION AND RISK AND THAT YOU WILL BE SOLELY RESPONSIBLE FOR ANY DAMAGES.

TO THE MAXIMUM EXTENT PERMITTED BY LAW AND EXCEPT AS OTHERWISE EXPRESSLY STATED IN THIS AGREEMENT, NAVIGON WILL NOT BE LIABLE OR RESPONSIBLE TO YOU OR ANY OTHER PERSON OR ENTITY FOR ANY TYPE OF DIRECT, INCIDENTAL, SPECIAL, PUNITIVE, INDIRECT OR CONSEQUENTIAL DAMAGES, INCLUDING, BUT NOT LIMITED TO, LOST REVENUE, LOST PROFITS, REPLACEMENT GOODS, LOSS OF PROPRIETARY MATERIAL, RIGHTS OR SERVICES, BUSINESS INTERRUPTION, LOSS OR CORRUPTION OF ELECTRONIC COMMUNICATIONS, OR INTERRUPTION OR LOSS OF USE OF SERVICES OR EQUIPMENT, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGES, OTHER PECUNIARY LOSS, AND WHETHER ARISING UNDER THEORY OF CONTRACT, TORT (INCLUDING NEGLIGENCE), STRICT LIABILITY OR OTHERWISE, EVEN IF NAVIGON HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES, OR THEY ARE FORESEEABLE. IN NO EVENT SHALL NAVIGON'S TOTAL LIABILITY (WHETHER ARISING UNDER A THEORY OF CONTRACT, TORT, INCLUDING NEGLIGENCE, STRICT LIABILITY OR OTHERWISE) UNDER OR IN CONNECTION WITH THIS AGREEMENT OR BASED ON ANY CLAIM FOR INDEMNITY OR CONTRIBUTION EXCEED THE AMOUNT OF PURCHASE PRICE OF THE AGREEMENT. SOME JURISDICTIONS DO NOT ALLOW THE LIMITATION OF LIABILITY FOR PERSONAL INJURY, OR OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THIS LIMITATION MAY NOT APPLY TO YOU.

6. CONFIDENTIALITY: You acknowledge that the Software contains proprietary trade secrets and you hereby agree to maintain the confidentiality of Software and not to disclose or provide access thereto to any person.

7. THIRD PARTY SOFTWARE LICENSES: NAVIGON may make use of third party software. Notwithstanding the terms and conditions of this License, use of some third party materials included in the Software may be subject to other terms and conditions.

8. TERMINATION: This Agreement automatically terminates if you fail to comply with the terms hereof or if you attempt to assign the Agreement or transfer the Software to a third party except as expressly permitted in this Agreement. If such should occur, you must destroy all copies of the Software and all of its component parts. All provisions of this Agreement, except for the license grant above, survive the termination of this Agreement.

9. ENTIRE AGREEMENT: The terms and conditions of this Agreement, including any addendum or agreement to it which may be included with the accompanying package of the Software (and/or Hardware), plus the Limited Warranty, if applicable, reflect the entire agreement between You and NAVIGON with respect to the subject matter hereof and will supersede and replace all prior understandings and agreements, in whatever form, regarding the subject matter. This Agreement shall not be modified or amended except in writing signed by NAVIGON. This Agreement shall take precedence over any other documents that may be in conflict therewith.

10. TRANSLATIONS: The original English version of this Agreement may have been translated into other languages. The English version of this Agreement is the controlling version.

11. JURISDICTION AND DISPUTES

This Agreement is governed by the laws of the State of Illinois without regard to its conflict of laws rules.

All disputes hereunder shall be resolved in the applicable state or federal courts of the State of Illinois located within Cook County, Illinois. To the extent permitted by law the parties consent to the jurisdiction of such courts, agree to accept service of process by mail, and waive any jurisdictional or venue defenses otherwise available.

12. SEVERABILITY

If at any time any one or more of the provisions of this Agreement become invalid, illegal or unenforceable in any respect for any reason, the validity, legality and enforceability of any such provision in every other respect and of the remaining provisions of this Agreement shall not be in any way impaired.

13. ADDITIONAL TERMS AND CONDITIONS OF USE RELATING TO THE TOTAL TRAFFIC NETWORK DATA PROVIDED WITH YOUR NAVIGON ENABLED PRODUCT:

A. Total Traffic Network, a division of Clear Channel Broadcasting, Inc., holds the rights to the traffic incident data and RDS-TMC network through which it is delivered. You may not modify, copy, scan or use any other method to reproduce, duplicate, republish, transmit or distribute in any way any portion of traffic incident data. You agree to indemnify, defend and hold harmless Clear Channel Broadcasting, Inc. (and its affiliates) against any and all claims, damages, costs or other expenses that arise directly or indirectly out of (1) your unauthorized use of the traffic incident data or the RDS-TMC network, (2) your violation of this directive and/or (3) any unauthorized or unlawful activities by you in connection herewith.

B. Total Traffic Network traffic data is informational only. User assumes all risk of use. Total Traffic makes no representations about content, traffic and road conditions, route usability, or speed.

C. TOTAL TRAFFIC NETWORK TRAFFIC DATA IS PROVIDED "AS IS," AND "WHERE IS". TOTAL TRAFFIC NETWORK EXPRESSLY DISCLAIMS ALL WARRANTIES WITH RESPECT TO THE TRAFFIC DATA (INCLUDING, WITHOUT LIMITATION, THAT THE TRAFFIC DATA WILL BE ERROR-FREE OR WILL OPERATE WITHOUT INTERRUPTION), EXPRESS, IMPLIED OR STATUTORY, INCLUDING, WITHOUT LIMITATION, THE IMPLIED WARRANTIES OF MERCHANTABILITY, NON-INFRINGEMENT, FITNESS FOR A PARTICULAR PURPOSE, OR THOSE ARISING FROM A COURSE OF DEALING OR USAGE OF TRADE.

D. TOTAL TRAFFIC NETWORK WILL NOT BE LIABLE TO YOU FOR ANY INDIRECT, SPECIAL, CONSEQUENTIAL, EXEMPLARY, OR INCIDENTAL DAMAGES (INCLUDING, WITHOUT LIMITATION, LOST REVENUES, ANTICIPATED REVENUES, OR PROFITS RELATING TO THE SAME) ARISING FROM ANY CLAIM RELATING DIRECTLY OR INDIRECTLY TO USE OF THE TRAFFIC DATA, WHETHER A CLAIM FOR SUCH DAMAGES IS BASED ON WARRANTY, CONTRACT, TORT (INCLUDING, WITHOUT LIMITATION, NEGLIGENCE OR STRICT LIABILITY).

This page intentionally left blank.

Table of Contents

End User License Agreement	iii
----------------------------------	-----

Introduction

About This Manual.....	1
Conventions	1
Symbols	1
Legal Notice.....	1
Liability	1
Trademarks.....	1
Customer Service	2
Telephone Support.....	2
E-mail.....	2

Welcome

Introducing Your NAVIGON 7100.....	3
About GPS Navigation	4

Getting Started

What's Included	5
Important Safety Information	6
Navigation safety information.....	6
Safety information for the navigation device	7
Safety guidelines when installing in your car	7
Preparing Your NAVIGON 7100 for Use	8
Charging the battery.....	8
Inserting a memory card	9
Removing a memory card	9
Securing the cradle	9
Securing the navigation device to the cradle	9
Supplying power to the navigation device.....	10
Connecting an optional TMC antenna.....	10

Basic Operations

Starting the NAVIGON 7100.....	11
The Main Window	11
Returning to the Main Window	12
Initializing the GPS receiver	13

Setting the volume	13
Viewing Device Statuses	14
GPS.....	14
Power	14
Directional Heading.....	15
TMC (Traffic Information)	15
Bluetooth	15
Using Software Keyboards	16
Alphabetic keyboard.....	16
Numeric keyboard	16
Special character/symbol keyboard	16
Special keys	16
Using Menus.....	17

Security

The Password Lock Window	19
Setting a password.....	19
Changing a password	19
Canceling password protection	20
Forgotten password?.....	20

Selecting Destinations

Using auto-complete to select a destination	21
Selecting a search area	22
Selecting Destinations	23
Enter an Address.....	23
Search for POI.....	23
By Tapping on the Map	23
Entering an address.....	24
Specifying a city first	24
Specifying a street first.....	25
Selecting a Point of Interest (POI) Destination	26
POIs nearby	26
National POIs.....	27
POIs in a specified city.....	28
POI Direct Access	29
Select direct access POI categories.....	30
Information about the POI	31
Zagat POI Information.....	32

Selecting a Destination by Tapping the Map	33
--	----

My Destinations

Saving a Destination.....	35
Saving the current location using GPS	35
Saving your home address as a destination	36
Saving a destination with a voice command	36
Selecting a Saved Destination.....	37
Selecting a destination from the Last Destinations list.....	37
Selecting a destination from the Favorites list.....	38
Selecting a destination using a voice command	38
Navigating Homewards.....	39
Starting Navigation	40
No GPS reception	40

Working With Routes

Accessing the Route Planning Window	41
Entering the starting point	41
Changing the starting point	42
Entering route points	42
Changing the order of route points.....	42
Managing Routes.....	43
Saving routes	43
Loading routes	43
Navigation.....	44
Calculating and displaying routes	44
Viewing the Route Profile	44
Simulating Routes.....	45
Starting a route simulation	45
Ending a simulation.....	45
Viewing a Turn-By-Turn List	46
Blocking route sections	46
Removing blocks and using original routes.....	46
Arriving at Your Destination.....	47

Working With Maps

Map in Preview Mode	50
Map in Navigation Mode	51

Map functions in Navigation mode	52
Map in Destination Search Mode.....	53
Operating in Destination search mode	54
Reality View (Junction View)	55
Switching to Navigation Mode.....	55

TMC (Traffic Information)

Accessing the TMC (Traffic Information) Window	57
The (TMC) Traffic Message Window	58
Types of Messages	58
Severity Indicators	59
Event or Incident Icons	59
TMC Detail Window	60
Displaying traffic messages	60
Requesting a route recalculation.....	61
TMC Settings window	62
Select another station	62
Select Tuning Mode Settings	62
Select Reroute Settings	63
Specify the type of traffic messages to display	63

Bluetooth (Hands-Free Operation)

Starting Hands-Free Operation	66
Ending Hands-Free Operation	66
Connecting to a Telephone.....	67
Pairing with a mobile phone	67
Connecting to a mobile phone	67
Answering a Call.....	68
Making a Call	68
Dialing a telephone number	68
Calling most recently dialed, received or missed numbers	68
Dialing on the mobile phone.....	69
During a Call	69
Adjusting the volume.....	69
Muting the microphone.....	69
Transferring a call to a mobile phone.....	69
Transferring a call from a mobile telephone.....	70
Entering numbers.....	70

Bringing the navigation software to the foreground.....	70
Ending a Call	71
Troubleshooting Bluetooth Operations	71

Logbook

Starting a recording	73
Stopping the recording.....	73

Customizing Your NAVIGON 7100

Accessing the Settings Window	75
The Settings Window	75
Basic settings	75
POI Settings	77
Current Map Settings.....	77
Route Profile Settings	77
Selecting Options.....	79
Moving between pages	79
Viewing a list of options for a setting	79
Toggling between options	79
Viewing information about a setting	80
Saving changes.....	80
Discarding changes.....	80

Legal Notices

NOTICE TO DRIVERS IN CALIFORNIA AND MINNESOTA	81
GPS.....	81

Technical Data

Specifications.....	83
Compliance Notice	84

Index

This page intentionally left blank.

Introduction

About This Manual

Conventions

For better legibility and clarification, the following styles are used in this manual:

Bold and italics: ***Registered names, company and product descriptions.***

Small capitals: WINDOW AND MESSAGE TITLES.

Bold: **Important parts in the text.**

Underlined: Buttons, input fields and other elements on the user interface.

Symbols

The following symbols refer to specific passages of text:



Warnings



Instructions and tips for operating the software



More detailed information and explanations

Legal Notice

Liability

The software and the manual are subject to change without notice. NAVIGON, INC is not liable for the accuracy of the information contained in this manual or for damages resulting from the use of this manual.

Trademarks

All brands and trademarks mentioned in this document are possibly registered by third parties and are subject to the current legislation and to the rights of their respective owners without reservation. All mentioned names of products, societies, or brands may be registered trademarks of their respective owners. Every right that is not explicitly accorded is reserved.

The absence of the explicit labelling of registered trademarks used in this manual does not imply that the brand is not subject to the rights of a third party.

Microsoft, Windows, and Excel are trademarks of the Microsoft Corporation.

NAVIGON is a registered trademark of NAVIGON, INC.

NAVTEQ is a registered trademark of NAVTEQ.

Zagat is a registered trademark of Zagat Survey, LLC.

Bluetooth is a registered trademark of the Bluetooth SIG.

Total Traffic Network and Clear Channel are trademarks of Clear Channel Communications, Inc.

ZENRIN is a registered trademark of ZENRIN EUROPE GmbH.

Customer Service

Our service team is available via telephone or E-mail.

Telephone Support

Telephone: (888) 848-0701 (Toll Free)

Service Hours: Monday through Friday, 9 a.m. to 8 p.m. CT
(except official holidays)

E-mail

To ensure as timely a response via e-mail, visit <http://www.navigon.com> and select:


US and Canada > Support > Email






Customers will receive a response within 2 business days.

Welcome

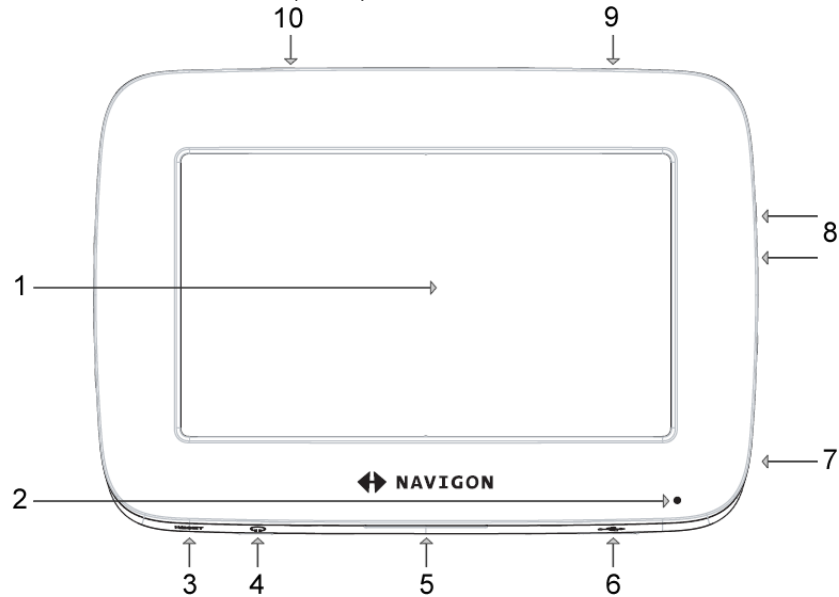Introducing Your **NAVIGON 7100**

Welcome to the exciting world of handheld navigation. The **NAVIGON 7100** offers Global Positioning System (GPS)–based navigation, real-time traffic information, and millions of Points Of Interest (POIs).



1		Touch Screen
2		Microphone
3	RESET	Reset
4	 /TM	External Antenna/ Headset Socket
5		LED
6		Power Connector Port
7		Stylus
8		On/Off/Standby
9		SD Memory Card Slot
10		External GPS Antenna Socket

About GPS Navigation

GPS is based on a total of 24 satellites that circle the earth and are constantly transmitting their position. The GPS receiver uses this data and calculates its own geographical position on the basis of the information transmitted by the various satellites.

For a sufficiently precise positioning it is necessary to obtain the data from at least three satellites. With the data from 4 or more satellites the altitude above sea level can also be ascertained. The determination has an accuracy of about 3 yards.

Once the navigation device has determined your position, it can be used as a starting point for route calculation.

The map data on your navigation device includes the geographical coordinates of all digitally recorded Points Of Interest (POIs), streets and places. This enables the device to calculate a route between a starting point and a destination.

The calculation of the current position and its representation on the map takes place once every second so your current position is always shown on the map.

If GPS reception is impaired, navigation is interrupted. The navigation software remains active.

As soon as GPS reception is restored, the navigation system calculates any change of position which has occurred in the meantime. Navigation continues.



Caution! The United States government operates the Global Positioning System (GPS) and is solely responsible for its accuracy and maintenance. Changes by the United States government may affect the accuracy and performance of all GPS equipment, including your personal navigation device.

Caution! Ordinances or laws may restrict use of certain abilities of your navigation device on public or private land.

Getting Started

What's Included

Your **NAVIGON 7100** comes with the following accessories. If any of the following items are missing, please notify us **within 14 days of purchase**. The purchased product includes the following:

- **NAVIGON 7100** navigation device
- Car cradle
- Car charger cable (12 volt adapter)
- AC adapter cable
- USB cable
- SD card containing software and navigation maps
- Documentation CD (PDFs in English, French and Spanish)

Important Safety Information

Please read the following notices and safety information carefully before starting to use your navigation system.

Navigation safety information

Use this navigation system at your own risk.



Caution! To prevent accidents, do not operate the navigation system while driving.

Caution! Do not look at the display unless it is absolutely safe to do so!

Caution! Traffic regulations have priority over any instructions from the navigation system.

Caution! Follow the instructions of the navigation system only when road conditions and traffic regulations allow you to safely do so! The navigation system will guide you to your destination even if you deviate from the calculated route.

Caution! Check that the cradle is secured and adjusted properly before each use of the navigation device.



Note: If you have not understood the spoken instructions, or you're not sure about what to do next, you can refer briefly to the map or arrow view of your navigation system.

Safety information for the navigation device



Caution! Protect the device from moisture. The device is not waterproof and is not protected against water damage.

Caution! Do not run cables directly next to safety-relevant devices and supply lines.

Caution! After installation, check all safety-related equipment in the car.

Caution! Unplug the navigation device's power supply when you park the vehicle. The navigation device requires power in standby mode, and can drain the vehicle's battery.

Caution! Do not open the navigation device's casing under any circumstances.

Caution! Do not expose the navigation device to extreme heat or cold. This may damage the device or impair its function.

Caution! Use only the provided chargers or one that has been approved by the manufacturer.

Caution! Connect the charger to a suitable power supply. Voltage requirements are provided on the device case and/or the packaging.

Caution! Turn off your device in any location where posted notices instruct you to do so. These locations include hospitals or health care facilities that may be using equipment that is sensitive to external RF energy. Keep the device at least four inches from a pacemaker to avoid radio waves. A Bluetooth device can impair the operation of medical devices.

In an aircraft, turn off your mobile device whenever instructed to do so by airline staff.



Note: Ensure that there are no kinks in the cable and that it will not be damaged by any sharp objects.

Note: Clean the navigation device using a moist cloth only.

Note: Do not unplug by pulling on the cable. Doing so could damage the cable!

Note: Create a backup of the data contained on the memory card provided.

Note: The memory card must remain inserted in the device during operation of the navigation system.

Note: Use SD- or MMC-memory cards only! Ensure that memory card contacts are clean and undamaged.

Safety guidelines when installing in your car



Caution! Secure the cradle and the TMC antenna in such a way that the driver's visibility is not impaired.

Caution! Do not attach the cradle in a location that would interfere with airbag deployment.

Caution! When installing the cradle, ensure that it does not represent a risk in the event of an accident.

Caution! Do not run cables directly next to safety-relevant devices and power supplies.

Caution! After installation, check all safety-related equipment in the car.

Caution! Connect the car charger cable to cigarette lighters with an operating voltage of 12V only.

Preparing Your NAVIGON 7100 for Use

Use the navigation system at your own risk.



Caution! Please be sure to read, understand, and follow the safety information in "Important Safety Information" on page 6.

Charging the battery

When purchased, the rechargeable battery might not be fully charged. We recommend that you fully charge the battery before using the device for the first time.

To charge the battery, do one of the following:

- Connect the AC power adapter to the navigation device and to a wall outlet.
- Connect the USB cable to the device and your computer.
- Connect the 12 volt car charger cable to the device and your cigarette lighter socket.

The LED light on the **NAVIGON 7100** indicates the current battery charge. The LED lights:

- No light, the battery is flat.
- Orange during charging.
- Green when the battery is fully charged.




Note: It takes approximately 6 hours to charge the device when the battery is flat. A fully charged battery provides up to 4-5 hours of use.


Inserting a memory card

The SD memory card contains maps and navigation software. It also stores saved destinations, routes, and logbook entries.

- Insert the memory card provided into the slot on the top of the device (see image). Press the card into the device until it locks into place.

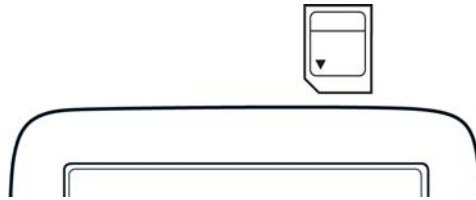


Removing a memory card

1. Switch the navigation device off by pressing the  (On/Off/Standby) switch for at least 6 seconds.
2. Press the memory card gently into the device until the lock disengages.

Securing the cradle

Clean and dry the windshield as well as the suction cup on the base of the cradle. These areas must be dry and free of dirt and grease.

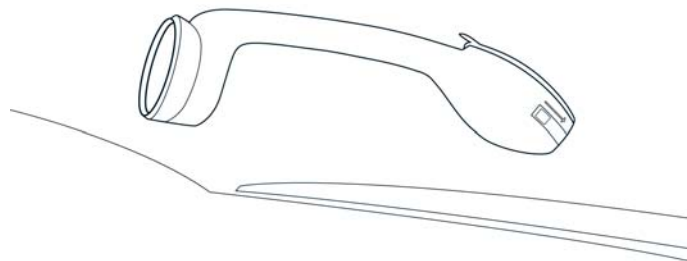

1. Use the suction cup to affix the cradle to the windshield. The cradle should be as level as possible.
2. Press the lever on the suction cup down to secure the cradle.


Securing the navigation device to the cradle

The navigation device is secured to the cradle by means of a bayonet fitting. This connection functions in a similar way to attaching a lens to a camera.

1. Place the navigation device on the bayonet in such a way that the bulges on the bayonet ring correspond exactly with the recesses on the cradle. This is achieved by rotating it approx. 30° to the left.
2. Turn the navigation device clockwise until the bayonet fitting locks into place.
3. Adjust the navigation device so that it can be seen easily.

Supplying power to the navigation device

Included in delivery of the **NAVIGON 7100** is a car charger cable that can be used to power the navigation device using the vehicle's cigarette lighter.


The car charger cable is connected to the **NAVIGON 7100** using the power connector port  on the bottom of the device.



Caution! The car charger cable is to be connected to only cigarette lighters with an operating voltage of 12V.


Connecting an optional TMC antenna

The **NAVIGON 7100** has an integrated TMC receiver. For optimal reception, you should use the TMC antenna provided.

1. Connect the TMC antenna to the external antenna/headset socket  /TMC on the bottom of the **NAVIGON 7100**.
2. Secure the antenna to the windshield using the suction cups.

Basic Operations

Starting the *NAVIGON 7100*

1. Press and hold the  (On/Off/Standby) switch for at least 6 seconds.
2. If password protection has been activated, the ENTER PASSWORD WINDOW opens.
3. Enter the password and tap Continue.

Each time the navigation device is turned on, the following message appears when the software is started again:

"Please do not operate the device while driving.
Road conditions and traffic conditions enforced by
law enforcement shall always supercede guidance
given by your navigation device.

User agrees that he/she has read and accepts the
End User License Agreement (EULA) contained in
the User Manual."


4. After you have read and fully understand the text, tap OK.
Note: If you do not accept these instructions, tap Cancel to quit the navigation software.

The MAIN WINDOW displays.

The Main Window

The MAIN WINDOW opens when the navigation software starts.

You can reach all of the navigation software functions from this window.

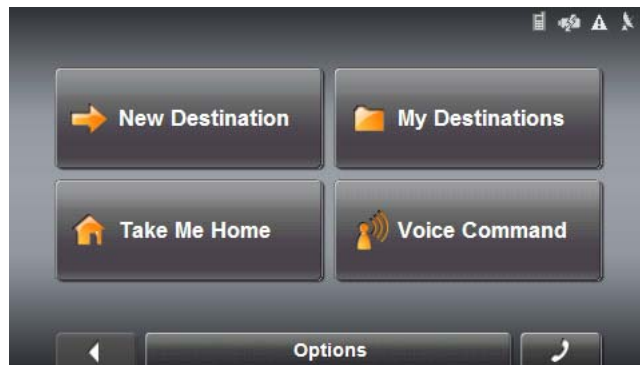

New Destination

Tap this button to:

- Select an address by city or street. (See page 24.)
- Select a POI as a destination. (See page 26.)
- Select a POI by tapping on the map. (See page 33.)

Take Me Home

Tap this button to:

- Specify your home address as a destination. (See page 36.)
- Quickly create a route back to your home address from your present location. (See page 39.)

My Destinations

Tap this button to select a destination from:

- A list of destinations you have saved. (See page 37.)
- A list of most recently entered destinations. (See page 38.)
- Create a destination voice command. (See page 36.)

Voice Commands

Tap this button to:

- Speak a previously recorded voice destination. (See page 38.)


The Options Button

Tap this button to:

- Access ROUTE PLANNING WINDOW to:
 - Create a route. (See page 41.)
 - Load a saved route. (See page 43.)
- Access the SETTINGS WINDOW to set:
 - Basic Settings. (See page 75.)
 - POI settings. (See page 77.)
 - Show information on the current map or change maps. (See page 77.)
 - View or change route profile information. (See page 77.)
- Show your location on the current map.
- Save the current location as a destination. (See page 35.)
- View the TMC TRAFFIC WINDOW information. (See page 57.)
- Go to the LOGBOOK WINDOW. (See page 73.)

Returning to the Main Window

To return to MAIN WINDOW from any other window:

- Tap  (Back) repeatedly until the MAIN WINDOW redisplay.

Initializing the GPS receiver




Note: It can take up to 20 minutes to initialize the integrated GPS receiver for the first time.

Each time you turn on the device, GPS reception starts within one minute.

If the navigation device has been switched off for more than a week, the next initialization can take up to 10 minutes.

As soon as the navigation device has been switched on, initialization of the GPS receiver begins.

In the upper right-hand corner of the display, the GPS symbol appears. As soon as data from at least 3 satellites is received, the symbol changes to  **GPS Ready**.



Note: If the GPS symbol displays **GPS Ready** after considerably less than 20 minutes, it is advisable to leave the receiver switched on for at least 15 minutes to ensure reliable operation.




Caution! If you have connected the navigation device to the power supply via the vehicle's cigarette lighter, remove the connector before you leave the vehicle for a long period of time.

As the GPS receiver requires a constant supply of power, it could drain the vehicle's battery.




Setting the volume


The volume of the spoken driving instructions can be adjusted during navigation.

With a map displayed:

1. Tap  (Volume) to open the volume bar.


The volume bar opens. It contains three buttons for adjusting the volume:

 (Louder),  (Quieter),  (Volume on/off).

2. Tap  (Volume) to close the Volume bar.

Viewing Device Statuses

Symbols located at the top right of the screen are used to display device status information.

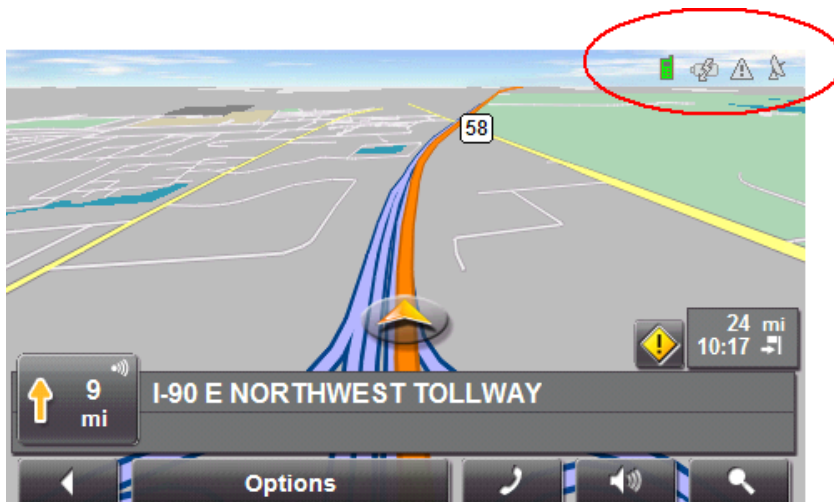

GPS

The GPS symbol can show the following GPS reception status:

No Symbol The built-in GPS receiver is not operational. Contact customer service if the problem persists.



No Signal Data is being received from less than three satellites. Position cannot be calculated.



GPS Ready Data is being received from at least three satellites. Position can be calculated.



For more detailed information regarding GPS status, see "About GPS Navigation" on page 4.

Power

The Power symbol can display the following conditions of the built-in battery:



The device is powered by an external power source. The battery is charging.



The device is powered by its internal battery. Battery is fully charged.



The device is powered by its internal battery. Battery charge is sufficient.



The device is powered by its internal battery. Battery charge is low.

Directional Heading

The Direction symbol indicates direction you are currently headed. It can show the following points of the compass: N, NE, E, SE, S, SW, W and NW.

TMC (Traffic Information)

The **NAVIGON 7100** has an integrated TMC receiver which provides the navigation system with up to date traffic information. If necessary, it can alter the route dynamically in order to avoid a traffic jam.



Note: This function is only available if TMC traffic messages are being transmitted in the country in which you are travelling. This is not the case in all countries.

The TMC symbol can display the following TMC reception status:

No Symbol There is no TMC receiver connected, or the connected or built-in TMC receiver is not operational.



Tuning

The TMC receiver is operational, but cannot find a station that is transmitting TMC signals.



TMC Ready

Traffic messages can be received.



For details on TMC functionality, see “Displaying traffic messages” on page 60.

Bluetooth

The **NAVIGON 7100** has an integrated Bluetooth hands-free operation. This enables you to use the device as a hands-free kit for a mobile phone with Bluetooth capability.

The Bluetooth symbol can display the following states for the hands-free operation:



No Bluetooth

Bluetooth is deactivated.



Connected

The **NAVIGON 7100** is connected to another device.



Not connected

The **NAVIGON 7100** is not connected to another device. Bluetooth is activated.

Using Software Keyboards

Software keyboards appear on the screen when text entries are necessary.

All entries can be made on the software keyboard using the stylus or your fingertips. When entering town or street names you need not enter any special characters. The navigation system fills in these characters for you automatically. Three keyboards are available for entering destination information.

Alphabetic keyboard



Tap **ABC** to display the alphabetic keyboard. Only capital letters can be entered.

Numeric keyboard



Tap **123** to display the numeric keyboard.

Special character/symbol keyboard



Tap **SYM** to display the special character keyboard. As soon as you have entered a special character, the letter keyboard reappears automatically.

Special keys



On the Alphabetic and Numeric keyboards, enters a space character.




On the Alphabetic and Numeric keyboards, deletes the previous character and moves the cursor back one space.



On the Alphabetic and Special Character keyboards, opens the Numeric keyboard.



On the Numeric and Special Character keyboards, opens the Alphabetic keyboard.



On the Alphabetic Numeric keyboards, opens the Special Character keyboard.

Using Menus

Some buttons have menus which open when activated.

To select a function:

- Tap on a menu button to execute its function.

To close a menu without selecting a function:


- Tap on the button you used to open the menu.

This page intentionally left blank.


Security

By creating a password, you can protect your navigation system from unauthorized use.



Note: A password takes effect after the navigation device has been switched off completely. To do this, press the  (On/Off/Standby) switch for at least 6 seconds.

The Password Lock Window

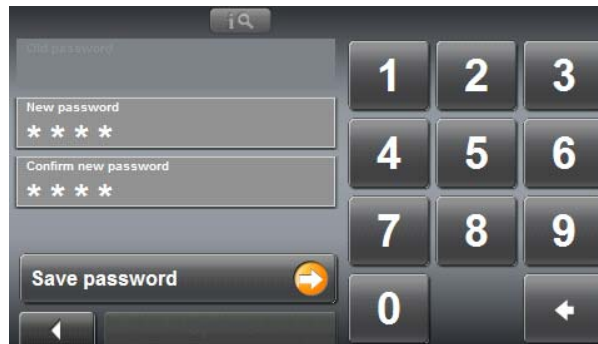

Setting a password



Note: The password must contain exactly 4 digits.

In the MAIN WINDOW:

1. Tap Options > Settings.
To open the SETTINGS WINDOW:
2. Tap Options > Password Lock.
To open the PASSWORD LOCK WINDOW.
3. In the New password field, type the password.
4. Re-type the new password in the Confirm new password field.
5. Tap Save password.

Changing a password

In the MAIN WINDOW:

1. Tap Options > Settings.
To open the SETTINGS WINDOW:
2. Tap Options > Password Lock.
To open the PASSWORD LOCK WINDOW.
3. Type the current password in the Old password field.
4. Type the new password in the New password field.

5. Re-type the new password in the Confirm new password field.
6. Tap Password Lock.


Canceling password protection

On the PASSWORD LOCK WINDOW:

1. Tap Options > Settings >
To open the SETTINGS WINDOW:
2. Tap Options > Password Lock.
To open the PASSWORD LOCK WINDOW.
3. Type the current password in the Enter password field.
4. Tap Deactivate password lock.

Forgotten password?

If you have forgotten your password, do the following:

1. Tap  (Info).
2. Call the number displayed in the window.
3. Follow the instructions given by the service personnel.

Selecting Destinations



Caution! Use the navigation system at your own risk.

Caution! Please be sure to refer to the safety information in “Important Safety Information” on page 6.

New destinations for the **NAVIGON 7100** are all destinations that you have not yet navigated, or you have not yet stored.



You can enter an address here, select a POI, or select a destination from the quick search function.

Using auto-complete to select a destination

Lists often appear from which you can select an entry. This is the case, for example, when you enter a location. After you type the first letter, the largest city in the selected map area appears. Once you type a second letter, the list shows all map areas that begin with the typed letters.



As you enter additional letters, the list reflects your entries by only containing entries that begin with your typed text. The more letters you enter, the shorter the list becomes.

You can move through a list using  (Up) and  (Down).

To accept an entry from the list:


- Tap on the entry.
The list closes once an entry is accepted.

Selecting a search area

The Search Area button, used to select a map area, is located at the top of a location entry window. Once an area is selected, a code on the button reflects the selection. For example, if the United States is selected, "USA" appears on the button. If the Canadian province of Alberta is selected, the code "AB" is shown.



When you enter a destination for the first time, the SEARCH AREA list opens. To select an area that is different from the one currently shown, do the following:

1. Tap  (Search Area).
The SEARCH AREAS list opens.
2. Tap on the area (country, state, or province) in which your destination lies.
The code for the selected map area appears on the Search Area button.



Note: Only areas that are represented on the currently loaded map may be selected.

Selecting Destinations

Enter an Address

To find a location by address, you can specify a:

City first If you do not know the exact street number.

Street first If you do not know the actual city.

Search for POI

Points of Interest, (POIs) are useful addresses that are organized according to particular criteria. POIs include airports, restaurants, hotels, gas stations, government offices, banks, hospitals, shopping centers, etc. Icons representing the POIs can be displayed on the map.

Nearby POIs nearby are special destinations that are located within a given radius of your current location. This means you can always find the nearest gas station, for example, no matter where you are.






Nationwide POIs of nationwide significance are airports, places of interest, national monuments, etc. This enables you to find places of interest, for example, without having to know the actual place where it is located.

In a City POIs in a given location can be useful when navigating in an unfamiliar town.

Direct Access POI direct access system contains three categories of special destinations. POIs in your vicinity that correspond to these categories can be listed quickly, without the need for additional entry.

Zagat POIs

The **NAVIGON 7100** also offers Zagat survey information for the following POI categories:

-  Attractions
-  Golf Courses
-  Hotels
-  Nightlife
-  Restaurants

When selecting destinations, the Zagat POI icon appears in front of a Zagat POI category.

By Tapping on the Map

You may indicate a destination directly on the map. In addition to towns and streets, you may also select POIs.

Entering an address

Specifying a city first

In the MAIN WINDOW:

1. Tap **New Destination** > **Enter an Address**.
2. Select (**City First**).



The ADDRESS WINDOW opens.

3. Enter the name of the city or the postal code of the destination location.



4. Enter the name of the destination street.
5. Enter the house number. If you don't know the number of the house, leave this field blank to display the **Intersection** field.
If you don't know the house number, but know the name of a nearby side street, tap on the **Intersection** field and enter the name of this street. The navigation system calculates a route to the intersection of the streets you have entered.



Note: You do not have to enter all the address details. If you only specify the:

- Town - a route is calculated to the town center.
 - Town and street - a route is calculated to the center of the street.
-

6. Tap the **Start Navigation** button.
The map opens in **Preview** mode.



Note: For detailed information, see "Starting Navigation" on page 40.

Specifying a street first

In the MAIN WINDOW:

1. Tap New Destination > Enter an Address.
2. Select (Street First).



The ADDRESS WINDOW opens.

3. Enter the name of the destination street.



4. Enter the house number. If you don't know the number of the house, leave this field blank to display the Intersection field.
If you don't know the house number, but know the name of a nearby side street, tap on the Intersection field and enter the name of this street. The navigation system calculates a route to the intersection of the streets you have entered
5. Tap the Start Navigation button.



Note: You do not have to enter all the address details. If you only specify the:

- Town - a route is calculated to the town center.
 - Town and street - a route is calculated to the center of the street.
-

The map opens in **Preview** mode.




Note: For more information, see “Starting Navigation” on page 7-40.

Selecting a Point of Interest (POI) Destination

POIs nearby



Note: GPS reception must be sufficient for determining position. You can see if GPS reception is sufficient by looking at the  (**GPS Ready**) symbol. For more detailed information, see “GPS” on page 14.

In the MAIN WINDOW:

1. Tap New Destination > Search for POI.
2. Select POI Nearby.



3. Specify a category from which you would like to select a POI.



4. If sub-categories exist, specify a sub-category.
The Name of the Destination list opens. It contains the nearest POIs in the category, sorted by distance.
5. Tap on the name of the destination.



6. Tap Start Navigation.

The map opens in **Preview** mode.




For more information, see “Starting Navigation” on page 40.

National POIs

In the MAIN WINDOW:

1. Tap New Destination > Search for POI.
2. Select Nationwide.

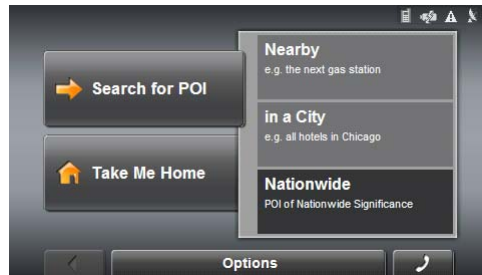

The POI OF NATIONAL SIGNIFICANCE WINDOW opens.

3. Specify a category from which you would like to select a POI..



The Name of the Destination list opens. It contains the nearest POIs in the category, sorted by distance.

4. Tap on the name of the destination..



5. Tap Start Navigation.

The map opens in **Preview** mode.



For more information, see "Starting Navigation" on page 40.

POIs in a specified city

In the MAIN WINDOW:

1. Tap New Destination > Search for POI.
2. Select in a City.



3. Enter the name or the postal code of the destination location.




4. Specify a category and, if present, a sub-category.
The Name of the Destination list opens. It contains POIs from the specified category, sorted alphabetically.
5. Type the beginning characters of the POI name.
A list of POIs containing the entered characters displays.



The more characters in the POI name that you type, the shorter the returned list will be. For more information see "Using auto-complete to select a destination" on page 21.)

6. Tap on the name of the destination.

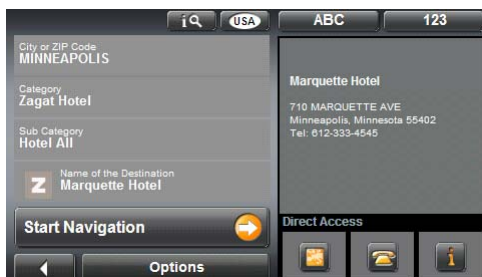

7. Tap Start Navigation.


The map opens in **Preview** mode.



For more information, see "Starting Navigation" on page 40.

POI Direct Access



Note: GPS reception must be sufficient for determining position. You can see if GPS reception is sufficient by looking at the  (**GPS Ready**) symbol. For more detailed information, see “GPS” on page 14.


In the MAIN WINDOW:

1. Tap New Destination.




The symbols of the categories which have been selected for direct access can be seen in the menu at the bottom.

2. Tap on a category from which you would like to select a POI.

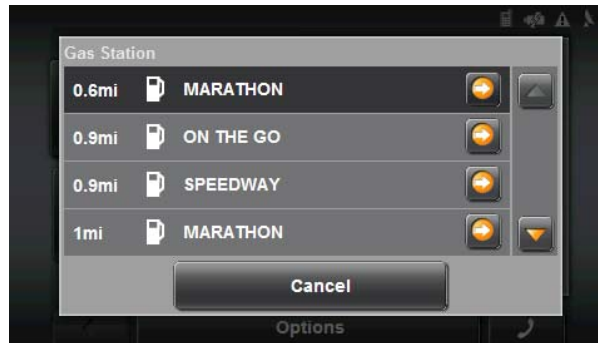

The Name of the Destination list opens. It contains the nearest POIs in the specified category, sorted by distance.

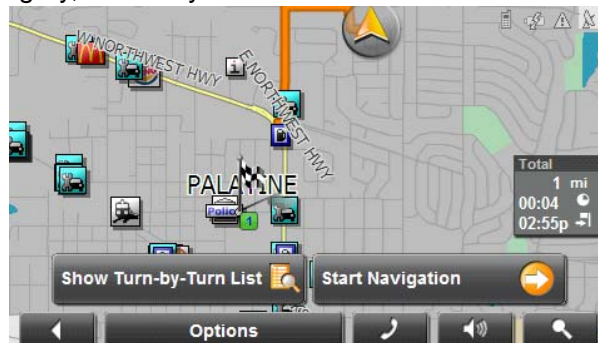

3. Tap on the name of the destination.

The map opens in **Preview** mode.




For more information, see “Starting Navigation” on page 40.

Select direct access POI categories

In the MAIN WINDOW:

1. Tap Options > Settings
2. Tap POI.



3. In the Direct Access 1 field, tap  (List) and select a POI category.
4. Repeat the above step in the Direct Access 2 and Direct Access 3 fields.
5. When finished, tap Done to save the changes.





Information about the POI

For many destinations that you specify, there may be further information available.

For example, for many restaurants there is a telephone number available. You can then call the restaurant in order to reserve a table.



On the DESTINATION SELECTION WINDOW, the following buttons are available:

	<u>Destination Info</u>	Opens the DESTINATION INFO WINDOW. It contains basic information about the POI including address and phone number.
	<u>Show on Map</u>	Show the POI on a map relative to your current location.
	<u>Call the POI</u>	Phone the POI.
	<u>Zagat Information</u>	Displays Zagat survey information about the POI. (This button is only available for Zagat POIs.)



Note: The Call function is only available when the **NAVIGON 7100** is connected via Bluetooth to a mobile phone. For detailed information about connecting to a mobile phone, see “Connecting to a mobile phone” on page 67.

Zagat POI Information

On a POI DESTINATION SELECTION WINDOW:


1. Tap on a Zagat POI category.
2. If sub-categories exist for the category, tap the subcategory.
3. Tap on the name of a POI.


The DESTINATION INFO WINDOW opens and displays basic POI information.




4. Tap  (Zagat Information) to view Zagat survey information about the POI.

The ZAGAT DETAIL WINDOW opens and displays detail information for the POI including hours of operation, costs, offered services, etc.

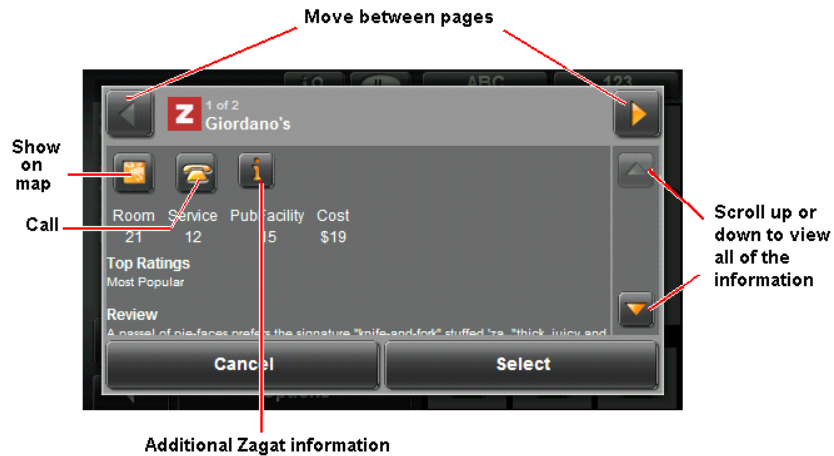


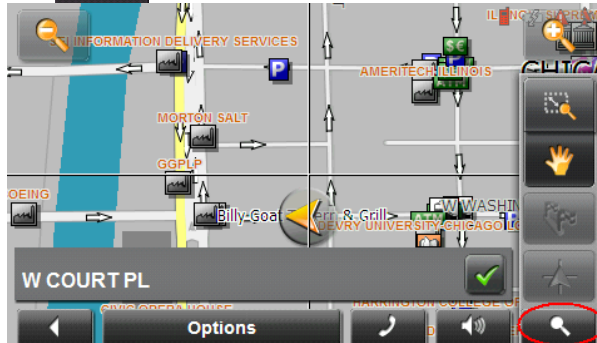
5. Tap  (Additional Zagat Information) to view an explanation of Zagat Survey results.

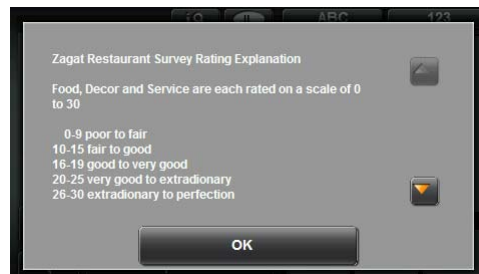

Selecting a Destination by Tapping the Map

In the MAIN WINDOW:

1. Tap **Options** > **Show Map**.
2. Tap  (**Destination search**).



Destination search button


The map opens in **Destination search** mode.

3. Tap on the point to which you wish to navigate.
The destination that you have selected appears under the cross hairs.



4. Tap  (**OK**).

The **DESTINATION ON MAP WINDOW** opens. Detailed address information for the selected destination is displayed in the upper left-hand corner.

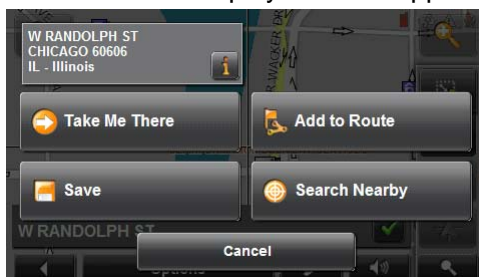

5. Tap **Take Me There**.

The map opens in **Preview** mode.



For detailed information on how to start navigation, see “Starting Navigation” on page 40.

This page intentionally left blank.

My Destinations

Every destination that you enter, and the destinations from the LAST DESTINATIONS list may be saved to the FAVORITES list. This makes sense if you frequently navigate to a particular destination.

Saving a Destination

1. Enter a destination. (See “Selecting Destinations” on page 21.)

Note: Do not tap the Start Navigation button!

2. Tap Options > Save Destination.

- OR -


1. Select a destination from the LAST DESTINATIONS list. (See page 37.)

Note: Do not tap the Start Navigation button!

2. Tap Options > Save as Favorite.



The SAVE DESTINATION AS ... WINDOW displays.

3. Enter a name for the destination.
4. If you want to define the destination as your home address, tap on the  (Toggle) button so that the value Yes is highlighted in black.
5. Tap Save.

Saving the current location using GPS

In the GPS STATUS WINDOW, you can view information on the current state of received GPS signals.

GPS status is available via the options of several windows.

1. Tap Options > GPS status.



The current location can be stored in the FAVORITES list.

2. Tap the Save Position button.

The SAVE DESTINATION AS... WINDOW opens.

3. In the Name field, provide a name for the location.
4. Specify whether your current position should be stored as the home address.
5. Tap Save.

Saving your home address as a destination

Only one destination from the FAVORITES list can be defined as your home address. You can navigate to this destination very quickly by tapping the Take Me Home button in the MAIN WINDOW.

1. Select the destination which you want to define as your home address. (See “Selecting a destination from the Favorites list” on page 38.)
2. Tap Options > Home Address.

The selected destination has now been saved as your home address. Your home address now appears in the FAVORITES list marked by a house symbol.

Saving a destination with a voice command

You can designate voice commands to destinations in the FAVORITES list so that you can start navigation to these destinations ‘on command’. The route profile used for the previous navigation applies.




You can add a voice command when you save the destination or at a later time. For more information, see “Selecting a destination using a voice command” on page 38.

1. Select the destination from the FAVORITES list for which you would like to set up a voice command. (See “Selecting a destination from the Last Destinations list” on page 37.)
2. Tap Options > Store a Voice Command.
3. After the beep, speak the name of the destination.
You are prompted to repeat the voice command into the **NAVIGON 7100** for the selected destination.
4. Repeat the command for the selected destination into the **NAVIGON 7100**.

The window closes.

The destination now appears in the FAVORITES list marked by a symbol indicating that it has a voice command.

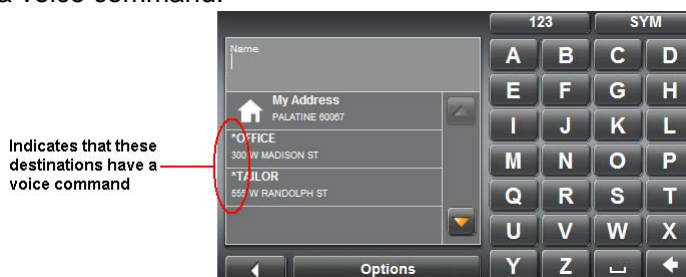

Selecting a Saved Destination

The following lists are available for selection in **NAVIGON 7100** under My Destinations.


- **LAST DESTINATIONS:** The last 30 destinations that you have previously navigated to.
- **FAVORITES:** Up to 300 destinations that you have stored in your **NAVIGON 7100**.

Selecting a destination from the Last Destinations list

NAVIGON 7100 saves the last 30 destinations to which you have navigated in the **LAST DESTINATIONS** list.

In the **MAIN WINDOW**:

1. Tap My Destinations > Last Destinations

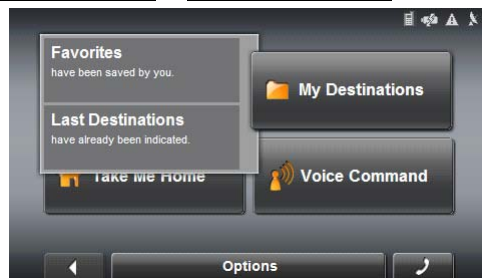

2. Tap the destination to which you would like to navigate..



3. Tap the Start Navigation button.

The map opens in **Preview** mode.



For more information, see “Starting Navigation” on page 40.

Selecting a destination from the Favorites list

Destinations to which you often travel can be saved in the FAVORITES list.


In the FAVORITES list, up to 300 destinations can be saved.



Information on how to store a destination can be found in “Selecting Destinations” on page 21.

In the MAIN WINDOW:

1. Tap My Destinations > Favorites.

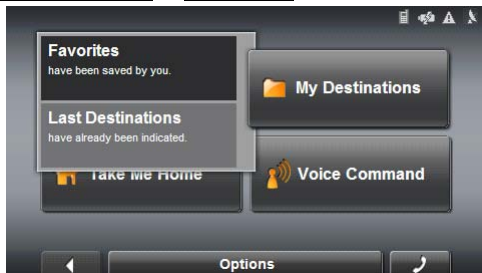

2. Tap the destination to which you would like to navigate.



3. Tap the Start Navigation button.

The map opens in **Preview** mode.



For more information, see “Starting Navigation” on page 40.

Selecting a destination using a voice command

In the MAIN WINDOW:

1. Tap the Voice Command button.
2. When prompted, repeat the voice command that you have stored for the desired destination into the **NAVIGON 7100**.
A window displays the name of the destination.
3. Tap the Start Navigation button.

The map opens in **Preview** mode.

Navigating Homewards

In **NAVIGON 7100** you can save your address as home address. You can navigate to your home address at anytime by activating a single button.

The first time you tap the Take Me Home button, you are prompted to enter your address.



For more information, see “Saving your home address as a destination” on page 36.

In the MAIN WINDOW:

- Tap the Take Me Home button.

Navigation, using the current route profile information to calculate the route, begins.



For more information, see “Starting Navigation” on page 40.

Starting Navigation

The map is open in **Preview** mode.

The navigation destination is depicted by a small flag. The route and the estimated trip time are displayed.


- Tap the Start Navigation button or start driving.

No GPS reception

If the received GPS signal is insufficient, the following message appears:

"GPS reception is currently not sufficient.
Navigation starts automatically as soon as
GPS-reception is OK again."

You have the following options:

- Wait until GPS reception is sufficient for determining position, the route is recalculated and you can begin navigation.
- Tap the Cancel button. The MAIN WINDOW opens. Your destination is saved in the LAST DESTINATIONS list.
- Tap the Demo button. The route is calculated using the center of the specified location as starting point. Subsequently, navigation of the route is simulated.
- Tap  (Back) to end the demonstration.


Working With Routes

With the **NAVIGON 7100**, you can preplan routes. Planned routes can be saved for later use, allowing you to create as many routes as you like.

Accessing the Route Planning Window

In the MAIN WINDOW:

1. Tap the Options button.
The options list opens.
2. Tap the Route Planning option.
The ROUTE PLANNING WINDOW displays.

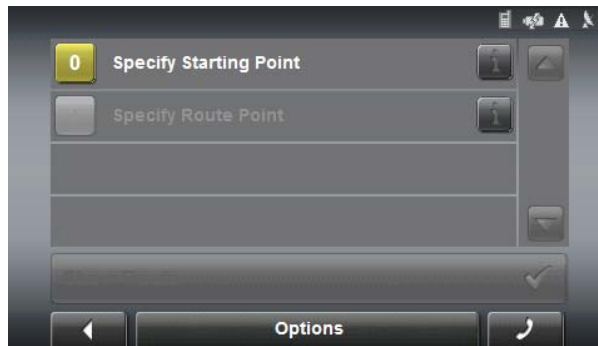

Entering the starting point

The starting point of a route, is the point at which you want to begin your trip. This does not need to be the current location. If you are at home planning a route for your vacation, you could, for example, enter your hotel as the starting point.

The starting point is only important if you want to see a planned route on the map, but currently have no GPS reception, or you are not currently at the planned starting point. The starting point that you enter therefore has the flow number "0".

As soon as you begin navigation, your current location is used as the starting point for the route calculation.

The first stage is the trip to the route point with the flow number "1".

On the ROUTE PLANNING WINDOW:

1. Tap the Specify Starting Point button.
The STARTING POINT menu opens.
2. Select:
 - Enter an Address to search for a location address.
 - Search for a POI to search for a POI.
 - My Destinations to select a location from the FAVORITES or LAST DESTINATIONS lists.
 - My Address to select your home address. (Only available if you have already specified a home address.)
 - Current Position to specify your current position as the starting point.

3. Enter the starting point. (See the corresponding section of “Selecting Destinations” on page 21.)
4. Tap the Set Starting Point button.

The selected starting point displays next to the 0 (Starting Point) button.

Changing the starting point

On the ROUTE PLANNING WINDOW:

- Tap the Specify Starting Point field.

The STARTING POINT menu opens. To enter a different starting point, repeat the above steps.

Entering route points

Route points are destinations on the route that you want to navigate to.

The flow number for each route point can be found on a button in front of it.

On the ROUTE PLANNING WINDOW:

1. Tap the Add Route Point field.
The ROUTE POINT menu opens.
2. Tap on the button for the desired destination entry type.
3. Enter the route point. (See the corresponding section of “Selecting Destinations” on page 21.)
4. Tap the Add button.
The selected route point is shown next to its flow number.
5. Repeat these steps for each additional destination that you want to add to your route.

Changing the order of route points

Route points can be deleted from a route. The order of the route points can be varied as you wish.



Note: The start point (flow number "0") cannot be moved or deleted.

On the ROUTE PLANNING WINDOW:

- Tap on the route point that you want to edit.
The context menu contains the following buttons:



Route Point Up - Moves the selected route stage forwards. (Example: route point 2 becomes route point 1).



Route Point Down - Moves the selected route point backwards. (Example: route point 2 becomes route point 3).



Delete - Deletes the selected route point. You are prompted to confirm the deletion.

Managing Routes

You can save each planned route under a particular name.



Note: Only the start point and route points are saved, not the calculated route. If you load a route that has been saved, it must be recalculated before navigation can begin.

You can load, rename or delete stored routes.

Saving routes

On the ROUTE PLANNING WINDOW:

1. Enter a starting point and at least one route point.
2. Tap Options > Save Route.
3. Enter a name for the route.
4. Tap Save.

The route is now saved to the SAVED ROUTES list.

Loading routes

On the ROUTE PLANNING WINDOW:

1. Tap Options > Saved Routes.
2. Tap the route that you want to load.
3. Tap Load Route.

The ROUTE PLANNING WINDOW opens. The starting point and the route points of the loaded route have been entered.

Navigation

The route must be calculated first. You can begin navigation or view a simulation of the route.

Calculating and displaying routes

You can calculate and display a several versions of a planned route to determine which route you wish to take. To calculate and display a route, the starting point and at least one route point must be entered.

On the ROUTE PLANNING WINDOW:

1. Load a saved route.
- OR -
1. Create a starting point and at least one route point.
2. Tap the Show Route button.
The map opens in **Preview** mode.

The starting point and the route points are marked by flags. For each stage, the distance and the estimated trip time is given. This information is also displayed for the entire route.

3. Tap the Start Navigation button or start driving.



If GPS reception is impaired, navigation is interrupted. The navigation software remains active.

As soon as GPS reception is restored, the navigation system calculates any change of position which has occurred in the meantime. Navigation can continue.

Viewing the Route Profile

The calculation of a route is based on route options.


1. Create a new or load a saved route.
2. Tap Options > Route Profile.
The map opens in **Preview** mode.

The starting point and the route points are marked by flags. For each stage, the distance and the estimated trip time is given. This information is also displayed for the entire route.

3. When finished, press Done to return to the map in **Preview** mode.



Note: If you change the route options, these remain valid for subsequent navigation.

You can get information regarding changing individual route profiles by tapping the corresponding  Help button.

Simulating Routes

It is also possible to simulate navigation.



Note: The reception of GPS signals is not necessary for simulation. Simulation is restricted to routes of a maximum of 60 miles.

Starting a route simulation

You have calculated and displayed a route.

- Tap Options > Simulation.

The route is recalculated for simulation purposes. Simulation starts when calculation has finished.

Ending a simulation

You may end simulation at any time.

- Tap  (Back).

You are prompted to confirm the navigation cancellation.

The MAIN WINDOW opens.


Viewing a Turn-By-Turn List

You can display detailed directions of the calculated route before starting navigation or at any time during navigation. This list displays all of the driving instructions in table form.

With the map displayed in **Preview, Navigation, Reality View** mode.

- Tap the Show Turn-by-Turn List button.

The TURN-BY-TURN LIST WINDOW opens.

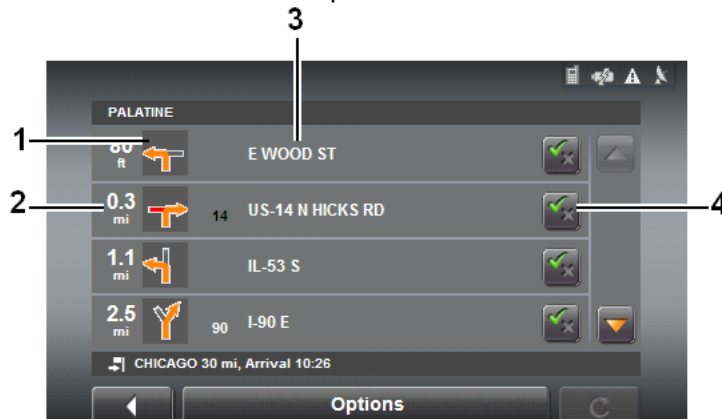

1. Schematic depiction of the next junction where you must turn.
2. Distance to this junction.
3. Name of the street onto which you must turn.
4. Indicates whether you want to travel on the route section or not.






Allow - The relevant section may be included on the route.



Forbid - The relevant section may not be included on the route.

Blocking route sections

1. Tap on the route sections that you do not want to travel on, so that the  (Forbid) symbol appears next to them.
2. Tap  (Modify Route).
The navigation system calculates an alternative route avoiding the route sections selected. The new driving instructions are displayed in the TURN-BY-TURN LIST WINDOW.
3. Tap  (Back) to close the TURN-BY-TURN LIST WINDOW.

Removing blocks and using original routes

Section blocks can be removed at anytime.

In the TURN-BY-TURN LIST WINDOW:

- Tap Options > Calculate original route.

Arriving at Your Destination

A message displays when you have reached your destination.

Your current position, indicated by an orange triangle, is shown on the map.

This page intentionally left blank.

Working With Maps


Even if you have stored several navigation maps on the navigation system's memory card, **NAVIGON 7100** can only operate with one map at a time.

- Tap Options > Settings > Current Map to see which map is currently being used. You can also select another map here.

Map in Preview Mode

- You have entered a destination and tapped the [Start Navigation](#) button.
- OR -
- You have planned or loaded a route and tapped the [Show Route](#) button.


The map opens in **Preview** mode. The entire route is visible.

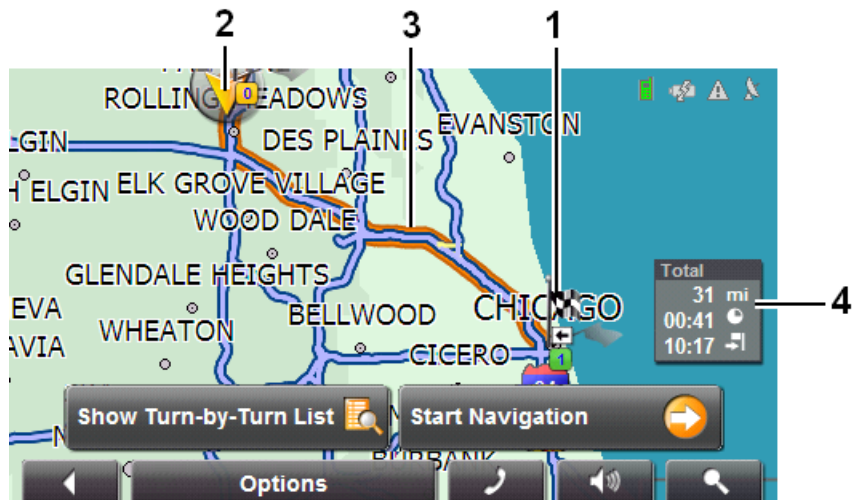

1. The destination is marked with a small flag.
When you have planned or loaded a route and displayed it, the starting point and each route point are marked with a small flag.
2. A triangle in orange indicates your current position.
If you display a planned or loaded a saved route and the specified starting point is not the same as your current location, the current position may or may not be shown on the preview.
3. The route is highlighted in orange.
4. The total distance for the route is shown in a small informational box, together with the estimated trip time and the estimated time of arrival.
This information can be displayed or hidden by tapping on [Options](#) > [Settings](#) > [Basic Settings](#).

If you display a route with several stages, this information is shown for each stage.


Tap:

- The [Show Turn-by-Turn List](#) button to view detailed directions for the route.
(See “Viewing a Turn-By-Turn List” on page 46.)
- The [Start Navigation](#) button to begin the journey.
When you display a planned or loaded route, the route may be recalculated. Starting point for the calculation is your current location. You are guided to the first route point entered.
- [Options](#) > [Route Profile](#) to view or change the settings on which the route calculation is based
-  ([Destination search](#)) to view the map in **Destination search** mode.
See “Map in Destination Search Mode” on page 53.

Map in Navigation Mode

After the route has been viewed in **Preview** mode, navigation begins.

The map opens in **Navigation** mode.

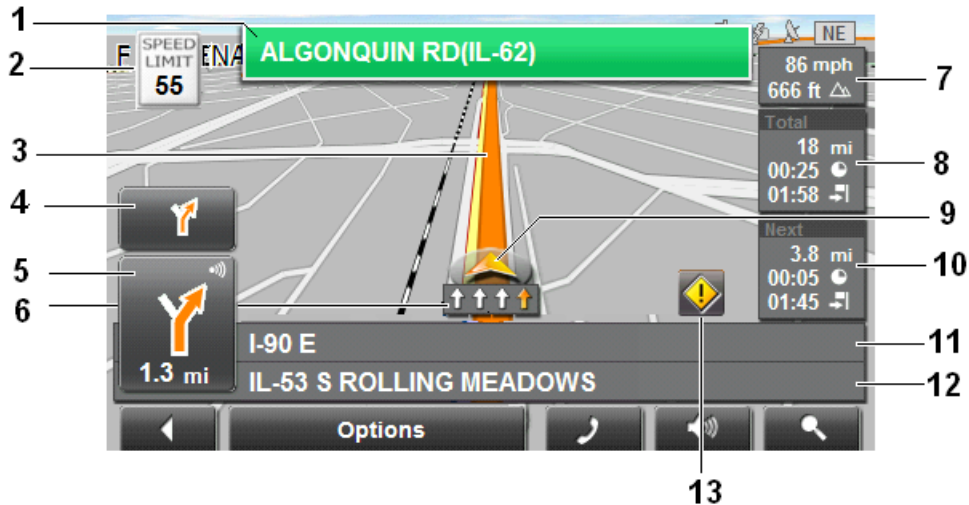

1. Sign posts to be followed is displayed here.
2. Posted speed limits are displayed here (where available).
3. The route is marked in orange.
4. When two maneuvers need to be executed in quick succession, the small arrow field indicates the second maneuver to be executed.
5. The large arrow field shows a simplified illustration of the next maneuver. The remaining distance to the junction is displayed below the arrow.
As you get closer to the junction, a spot diagram appears.



The nearer you get to the junction, the more yellow spots are displayed.

If you don't have to change direction for a longer period, only a forward facing arrow is shown. The distance for which you are to follow the road you are on is displayed beneath the arrow.



- Tap the large arrow field to hear current route instructions.
6. The traffic lanes to be followed to your destination are shown in orange
 7. The current speed and the height above sea level are displayed here.
 8. The remaining distance to the destination, the estimated duration of the trip, and the estimated time of arrival are shown here.
 9. A triangle in orange indicates your current position on the map. The map area displayed continually changes so that your current position is always centered on the map.

10. If you are navigating a route with several stages, the remaining distance, estimated duration of the trip, and the estimated time of arrival for the next interim destination is shown in the **Next** field.
11. The name of the next stretch of road that you must travel on is displayed in the upper street field.
12. The name of the street you are currently travelling on is displayed in the lower street field.
13. **TMC shortcut** button. The TMC shortcut button only displays when traffic messages have been received and are currently available. Tap the button to display the TRAFFIC INFORMATION WINDOW.




Note: The displays for many of the above mentioned fields can be configured via [Options](#) > [Settings](#) > [Basic Settings](#). Some displays only function if the corresponding information is available on the map.

Note: If you tap on the large arrow field, the current route instruction is repeated.

- Tap [Options](#) > [Show Turn-by-Turn List](#) to view detailed directions for the route. (See “Viewing a Turn-By-Turn List” on page 46.)
- Tap  ([Destination search](#)) to view the map in **Destination search** mode. (See “Map in Destination Search Mode” on page 53.)
- Tap  ([Back](#)) to quit navigation.

Map functions in Navigation mode

When the map is open in **Navigation** mode, tap any point on the map. Buttons with various functions are displayed.

2D/3D	Changes between 2D and 3D mode. The symbol for the mode that is currently set is marked orange.
Day/Night	Changes between "day" and "night" display modes. The symbol for the mode that is currently set is marked orange.
Interim Destination	Opens a menu for entering an interim destination. The navigation system first guides you to this interim destination. Afterwards, you can continue navigation to your original destination.
Skip Route Point	Tap this button to omit the next route point. This button is inactive when less than 2 route points are pending.
Block	Tap this button in order to block a section of the route that lies in front of you, i.e. to recalculate the route in order to avoid this section of the route, e.g. if you have heard of a traffic jam relating to this section on the radio. Tap this button again to remove the block.
POI on Your Route	Tap this button to display POIs on your route. This enables you to find out, for example, how far it is to the nearest services. A destination shown here can be added as an interim destination by tapping the  (Interim Destination) button to the right of its entry in the list.

Map in Destination Search Mode

The map is always in **Destination search** mode when a pair of cross hairs can be seen.

When you are driving, the map's orientation does not change. It is always oriented with north at the top.



Zoom Out: The map section shown becomes larger, but you see fewer details.



Zoom In: The map section becomes smaller, but you see more details.



Zoom Mode: When this button is active, you can plot a map section with the stylus or with your finger.

Plot the map section from upper left to bottom right and it zooms to fit the size of the screen.

Plot the map section from bottom right to top left, and the map zooms out.



Pan Mode: When this button is active, you can move the map section with the stylus or with your finger. Tap the map in the desired direction.



Entire Route: Zooms the map so that the entire route is visible.



Current Position: Selects the map section shown so that the current location is centered.

Operating in Destination search mode

1. Tap on the point to which you wish to navigate.
The destination that you have selected appears under the cross hairs.

2. Tap  (OK).

Buttons with various functions appear.

Take Me There Begins navigation to the selected point. If you are currently navigating, navigation stops.

Interim Destination Sets the selected point as an interim destination. The navigation system first guides you to this interim destination. Afterwards, you can continue navigation to your original destination.

This function is only active during navigation.



Set as Destination Adds the selected point as the last point in the route plan. If no route plan was open, the selected point becomes the first point in a new route plan.

Save Opens the SAVE DESTINATION AS... WINDOW. You can enter a name under which the selected point is stored in the FAVORITES list.



For more detailed information, see "Saving a Destination" on page 35.

Search Nearby Opens the POI NEARBY WINDOW. Here you can search for destinations near the specified point. (See "POIs nearby" on page 26.)

- Tap  (Destination search) to quit the **Destination search** mode. You return to the window from which you started this mode.
- Tap  (Back) to return to the MAIN WINDOW. If you are currently navigating, you are prompted to confirm navigation cancellation.

Reality View (Junction View)



Note: Reality View mode is not available for every highway junction. Availability is dependent on the map data in use.

When, during navigation, you approach an highway junction, the map changes to **Reality View** mode.



The **Reality View** mode shows the sign posts and lanes you must follow. This map mode displays until you have passed the highway junction. Once past the junction, the map changes back to **Navigation** mode.

Switching to Navigation Mode

If you want to change to **Navigation** mode before you have passed the junction:

- Tap any point on the map.

This page intentionally left blank.

TMC (Traffic Information)

If your device has an integrated TMC receiver, or if you have connected an external TMC receiver, the navigation system can receive the latest traffic information available. If necessary, it can change your route dynamically in order to avoid a traffic jam, for example.


Accessing the TMC (Traffic Information) Window

Traffic information can be accessed from the MAIN WINDOW as well as several other windows.

From the MAIN WINDOW:

- Tap Options > Traffic.
The TRAFFIC INFORMATION WINDOW opens.

The (TMC) Traffic Message Window

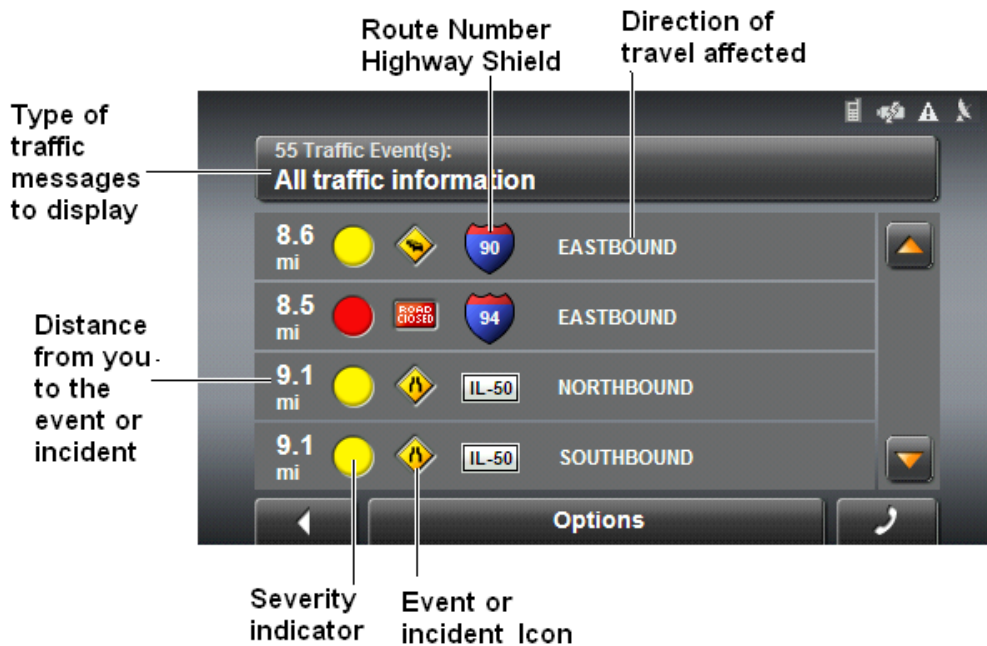




Types of Messages

<u>All traffic information</u>	Information on all traffic events (severe and moderate traffic jams and obstructions) and weather warnings received in the area, based on TMC antenna reception.
<u>On route</u>	Information on all traffic events (severe and moderate traffic jams and obstructions) and weather warnings occurring along the route.
<u>Not on route: all</u>	Information on all traffic events (severe and moderate traffic jams and obstructions) and weather warnings not occurring on the route, based on TMC antenna reception.
<u>Not on route: traffic jams</u>	Information on severe traffic events (traffic jams) not occurring on the route, based on TMC antenna reception.
<u>Not on route: obstructions</u>	Information on moderate traffic events (obstructions) not occurring on the route, based on TMC antenna reception.
<u>Not on route: weather warnings</u>	Information on weather warnings not occurring on the route, based on TMC antenna reception.












Severity Indicators

The color of the severity indicator reflects the impact of the traffic occurrence on traffic flow:


	Red	Heavy traffic, expect delays.
	Yellow	Slow moving traffic.
	Green	Normal traffic flow.

Event or Incident Icons

On the Traffic Information window, the following icons are used to represent traffic events or incidents:

	Slow traffic.		Construction.
	Accident.		Slippery road due to weather (snow, ice, rain, etc.).
	General problem affecting traffic flow.		Wind.
	Lane closures.		Flooding.
	Road closed or blocked.		Informational only. No negative affect on traffic flow.
			Ramp problems. On- or off-ramp closures, etc.

TMC Detail Window

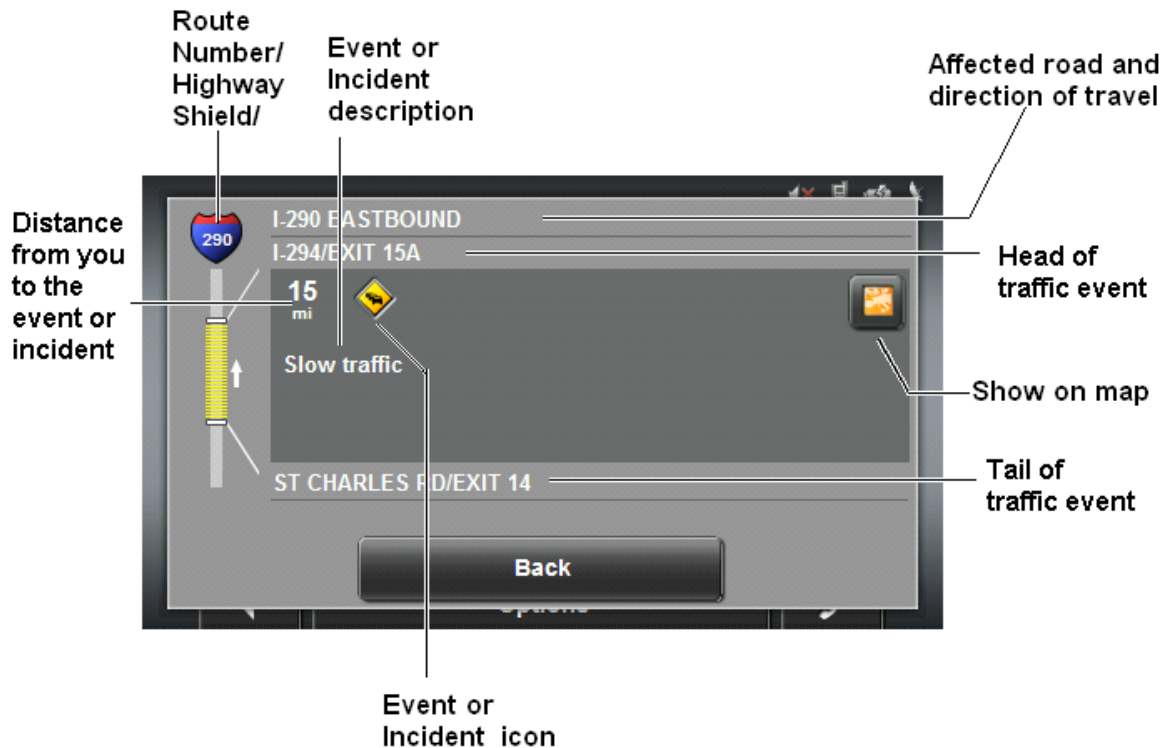

Displaying traffic messages

The traffic reports that are currently valid are available via the options of several windows.

1. Tap **Options** > **Traffic**.


The TRAFFIC INFORMATION WINDOW opens.

Above the list, the **Traffic information** button indicates the type of traffic information listed (on-route, off-route, etc.) and how many messages of this type are listed.

For each traffic message in the list, information about the location and type of traffic obstruction is displayed.

2. Tap a message to view more information on the traffic event.

The TMC DETAIL WINDOW displays.


3. When finished, tap  (**Back**) to return to the TRAFFIC INFORMATION WINDOW.

Requesting a route recalculation






Note: This procedure is only available when the TMC Setting Recalculate Route is set to On Request. For more information, see “Select Reroute Settings” on page 63

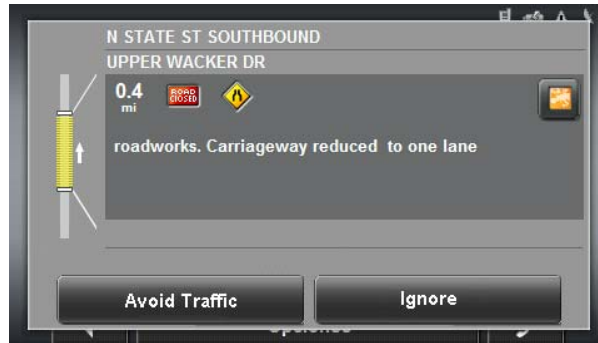
During navigation, a message displays when a traffic message indicates a traffic event exists on your current route. Details of the event are shown on the TMC DETAIL WINDOW.



On the TMC DETAIL WINDOW:

1. Select how you want the traffic block to be handled. Options are:
 - Avoid Traffic The navigation software recalculates a route to avoid the traffic obstruction. A  (Avoid) appears next to the traffic segment on the TMC (TRAFFIC MESSAGE) WINDOW.
 - Ignore The navigation software ignores the traffic message and remains on the current route. A  (Ignore) appears next to the traffic segment on the TMC (TRAFFIC MESSAGE) WINDOW.
2. Tap the button to select the alternative setting.

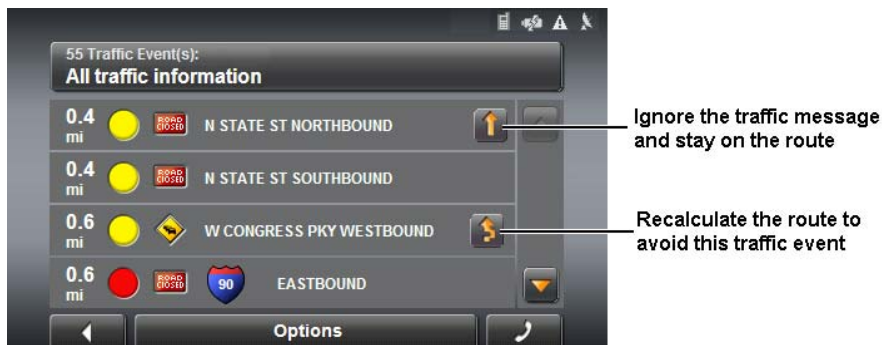

3. Tap  (Back) to close the TRAFFIC INFORMATION WINDOW.


TMC Settings window

In the TMC SETTINGS WINDOW, you can set and configure the TMC receiver, these settings determine how received traffic messages will affect subsequent routing.

On the MAIN WINDOW:



1. Tap Options > Traffic.
2. Tap Options > TMC Settings.

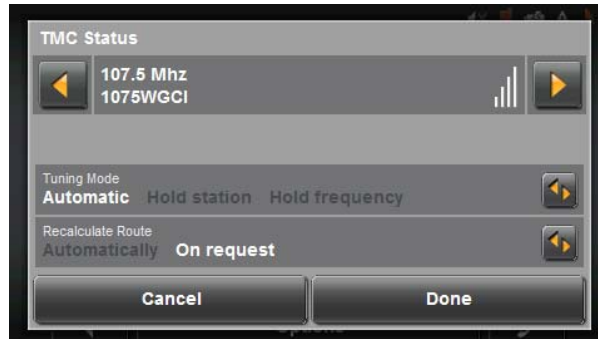The TMC SETTINGS WINDOW displays.



Select another station


On the TMC SETTINGS WINDOW:

- Tap  or  to tune into another station.

Select Tuning Mode Settings

On the TMC SETTINGS WINDOW:


1. In the Tuning Mode field and select a TMC receiver option.

<u>Automatically</u>	The system searches for another station if reception becomes poor.
<u>Hold station</u>	The system searches for the same station on a different frequency if the signal becomes poor.
<u>Hold frequency</u>	The system does not search for another station if reception becomes poor.
2. Tap  (Toggle) to switch between options.
The selected value is in bold.
3. Tap the Done button to save your changes.

Select Reroute Settings

You can select whether the navigation software recalculates a route automatically when a TMC message indicates that a problem exists on your current route.

On the TMC SETTINGS WINDOW:


1. In the Recalculate Route, select how you want to set route recalculation:
 - Automatically The navigation system determines when to recalculate a route and when to ignore a traffic event, based on the severity of the impact on traffic flow. When a traffic message is received that severely impacts your current route, the navigation software displays a message indicating that it has recalculated a route avoiding the event.
 - On request Each received traffic message displays on screen. You can specify whether to calculate an alternative route.
2. Tap  (Toggle) to switch between options.
The selected value is in bold.
3. Tap the Done button to save your changes.

Specify the type of traffic messages to display

On the MAIN WINDOW:

1. Tap Options > Traffic.
The TRAFFIC INFORMATION WINDOW opens.



On the Navigation map, the  (TMC shortcut) button can also be used to display the TRAFFIC INFORMATION WINDOW. The TMC shortcut button displays when traffic messages have been received and are currently available. See “Map in Navigation Mode” on page 51.

The Traffic information button shows the type of traffic messages listed and how many messages of this type are listed.



2. Tap the Traffic information button to view a list of available traffic message types.
Options are:
 - All traffic information Information on all traffic events (severe and mod-

- | | |
|---------------------------------------|--|
| | erate traffic jams and obstructions) and weather warnings received in the area, based on TMC antenna reception. |
| <u>On route</u> | Information on all traffic events (severe and moderate traffic jams and obstructions) and weather warnings occurring along the route. |
| <u>Not on route: all</u> | Information on all traffic events (severe and moderate traffic jams and obstructions) and weather warnings not occurring on the route, based on TMC antenna reception. |
| <u>Not on route: traffic jams</u> | Information on severe traffic events (traffic jams) not occurring on the route, based on TMC antenna reception. |
| <u>Not on route: obstructions</u> | Information on moderate traffic events (obstructions) not occurring on the route, based on TMC antenna reception. |
| <u>Not on route: weather warnings</u> | Information on weather warnings not occurring on the route, based on TMC antenna reception. |
3. Tap on the types of traffic messages to display.
 4. Tap the OK button to save your changes.

Bluetooth (Hands-Free Operation)

With **NAVIGON 7100**, you can use Bluetooth to operate your mobile phone hands-free.



On the BLUETOOTH HF PHONE WINDOW, you can:



(Keypad)

Use this keypad to enter a telephone number. See “Dialing a telephone number” on page 68.



(Connect)

Tap to establish a connection between the two devices. See “Connecting to a Telephone” on page 67.



(Call History)

Tap this button to view a list of previous calls. See “Calling most recently dialed, received or missed numbers” on page 68.



(Use hands-free)

Tap this button to pair to a phone. See “Transferring a call from a mobile telephone” on page 70.



(Bluetooth Manager)

Tap this button to view or change Bluetooth settings.



(Return to Previous)

Tap this button to return to the previous window.

Starting Hands-Free Operation


In the navigation software:

1. Tap  (Hands-Free Operation).

The KEYPAD WINDOW opens.




If your mobile phone is connected to **NAVIGON 7100**, you are now able to dial a number.

2. Tap on  (Bluetooth HF Phone) to open the BLUETOOTH HF PHONE WINDOW. Here you can connect **NAVIGON 7100** to a mobile phone or open the CALL HISTORY list.

Ending Hands-Free Operation

In the BLUETOOTH HF PHONE WINDOW:

- Tap  (Return to Previous).

Connecting to a Telephone

NAVIGON 7100 must be connected to a mobile phone in order to use the telephone functions.


Pairing with a mobile phone

Pairing describes the procedure involved when connecting two Bluetooth devices for the first time. It is necessary to enter a password into both devices in the process. This password is stored on both devices, so that further entry is not necessary by subsequent connections.

Pairing must be initiated from the mobile phone.



See your mobile phone user's manual if you are uncertain about how to carry out the following steps on the mobile phone.

1. Ensure that Bluetooth is activated on the mobile phone.
2. Using the mobile phone, search for other Bluetooth devices.
The navigation device is detected as **NAVIGON 7100**.
3. Initiate a connection to the detected **NAVIGON 7100** device.
You are prompted to enter the mobile phone password.
4. Enter a four digit password (user defined).
On **NAVIGON 7100**, the **PASSKEY REQUESTED WINDOW** opens.
5. In the Passkey field, enter the same password that was entered in the mobile phone.
6. Tap  > OK.
The **BLUETOOTH HF PHONE WINDOW** opens.

A connection is established between the two devices. At the bottom edge of the screen, the name of the connected mobile phone is displayed.

Connecting to a mobile phone

The word connect describes any subsequent connections between paired Bluetooth devices. No further password entry is necessary when connecting.

Connections must be initiated using **NAVIGON 7100**. Ensure that Bluetooth is activated on the mobile phone.




In the **BLUETOOTH HF PHONE WINDOW**:

- Tap  (Connect).

A connection is established between the two devices. At the bottom edge of the **BLUETOOTH HF PHONE WINDOW**, the name of the connected mobile phone is displayed.

Answering a Call




When you receive a call, the INCOMING CALL WINDOW opens. If available, the caller's phone number is shown.

- Tap  (Pick up) if you want to accept the call.
The CALL IN PROGRESS WINDOW opens.
- Tap  (Hang up) if you do not want to take the call.
- Tap  (Ring Tone Off) if you want to turn off the ring tone.

Making a Call









With **NAVIGON 7100** you can make a call in various ways:

Dialing a telephone number

1. In the navigation software, tap  (Hands-Free Operation).
- OR -
In the BLUETOOTH HF PHONE WINDOW, tap  (Keypad).
2. Enter the desired telephone number.
3. Tap  (Make a call).

Calling most recently dialed, received or missed numbers

On the MAIN WINDOW:

1. Tap  (Hands-Free Operation) then  (Call History).
- OR -
In the BLUETOOTH HF PHONE WINDOW, tap  (Call History).
2. Select one of the following lists:
 -  (Incoming calls)
 -  (Outgoing calls)
 -  (Missed calls)
3. Tap on the desired number.
4. Tap repeatedly on  (Make a call) until a '+' is displayed on the button ().

The number is dialed as soon as you release the button.



Note: Incoming and missed calls only appear in the CALL HISTORY list when the caller's telephone number was transmitted.

Dialing on the mobile phone

When **NAVIGON 7100** is connected to a mobile phone, it functions as a hands-free kit even when the number was dialed from the mobile phone. You can also make use of the mobile phone's telephone book.



Note: Calls made from the mobile phone do not appear in the CALL HISTORY list.

During a Call

You are calling using the hands-free operation. The CALL IN PROGRESS WINDOW is open.



The dialed telephone number, the duration of the call and the volume are displayed.



Note: The telephone number is not displayed if the caller is using a mobile phone.

Adjusting the volume

In the CALL IN PROGRESS WINDOW:

- Tap  (**Louder**) or  (**Quieter**) to adjust the volume of the conversation.


The volume level displays in the CALL IN PROGRESS WINDOW.

This setting does not affect the volume of the navigation instructions.


Muting the microphone

During the call, you can mute the microphone so that you can talk to someone else.

In the CALL IN PROGRESS WINDOW:


- Tap on  (**Mute**) to switch off the microphone.

The modified icon on the button indicates that the microphone has been muted.

- Tap on  (**Mute**) to switch the microphone on again.

Transferring a call to a mobile phone


In the CALL IN PROGRESS WINDOW:

1. Tap  (Use mobile phone).
 2. Pick up the mobile telephone and continue the conversation.
- The CALL IN PROGRESS WINDOW remains open.

Transferring a call from a mobile telephone

With **NAVIGON 7100**, you can transfer a call from your mobile phone if a Bluetooth connection exists between the two devices.

In the CALL IN PROGRESS WINDOW:

1. Tap  (Use hands-free).
2. Continue the call on the hands-free kit.

You are prompted to confirm the call transfer.





Note: If Bluetooth is activated on the mobile phone, the connection can also be established during a call. (See “Connecting to a mobile phone” on page 67.)

Entering numbers

You can enter numbers during a call. This may be the case, for example, if a further connection via a telephone system is necessary.

In the CALL IN PROGRESS WINDOW:

1. Tap  (Keypad).
The appearance of the button changes. The keyboard opens.
2. Enter the desired numbers.
3. Tap  (Keypad) again to close the keyboard.

Bringing the navigation software to the foreground




You can bring the navigation software to the foreground at any time. In this way, you can bring the map to the foreground during a call when you are navigating with **NAVIGON 7100**.


- Tap  > Navigation.

The navigation software is now in the foreground. The **CALL IN PROGRESS** bar at the top of the display indicates that a telephone connection exists at present. If known, telephone number also displays.




You have the following options:

- Tap  or  (Mute) to switch the microphone on or off again.
- Tap  (Hang up) to end the call.

- In the navigation software, tap on  (Hands-Free Operation) to bring the hands-free operation to the foreground.

Ending a Call

In the CALL IN PROGRESS WINDOW:

- Tap  (Hang up) to end the call.

The BLUETOOTH HF PHONE WINDOW opens.

Troubleshooting Bluetooth Operations

Practically all of the problems that may arise with the hands-free operation can be solved in the following way:

1. Open the BLUETOOTH HF PHONE WINDOW.
2. Deactivate Bluetooth on the mobile phone.
After a few seconds, the following message appears:

“No paired phone found.”

3. Activate Bluetooth on your mobile phone again.

In the BLUETOOTH HF PHONE WINDOW:

4. Tap  (Connect).

A connection is established between the two devices. At the bottom edge of the BLUETOOTH HF PHONE WINDOW, the name of the connected mobile phone is displayed.



Consult the mobile phone's manual if you are uncertain about how to activate or deactivate Bluetooth on your mobile phone.

If no connection can be established between the two devices, they must be paired again. For more information, see “Pairing with a mobile phone” on page 67.

This page intentionally left blank.

Logbook

You can use the **NAVIGON 7100** to record of your vehicle mileage for tax purposes or for expense reports. The logbook is recorded in the Logbook.xls file. You can open the file with the Microsoft Excel spreadsheet program. Each recorded trip is added at the bottom of the spreadsheet as a new entry.

When first used, the Logbook.xls file is created in the MN6\Logbook directory on the navigation device's memory card. If you delete or move this file, a new file is created when you next record a trip.

The device supports various types of trips for which one could record mileage. You can record mileage for Business, Personal, Commutes to work, etc.



Note: Once started, every movement of the vehicle is recorded, even when you are not navigating.



Starting a recording

From the MAIN WINDOW:

1. Tap Options > Logbook.
2. Enter the required details.
3. Tap Start.

Stopping the recording

From the MAIN WINDOW:

1. Tap Options > Logbook.
2. Tap Stop.



Note: A window opens when you have reached your destination. Specify whether you would like to end logbook recording.

This page intentionally left blank.

Customizing Your *NAVIGON 7100*

Accessing the Settings Window


The settings can be reached from the MAIN WINDOW as well as several other windows.

From the MAIN WINDOW:

- Tap Options > Settings.

The Settings Window

The SETTINGS WINDOW is where you can customize your *NAVIGON 7100* to suit your personal needs and preferences.

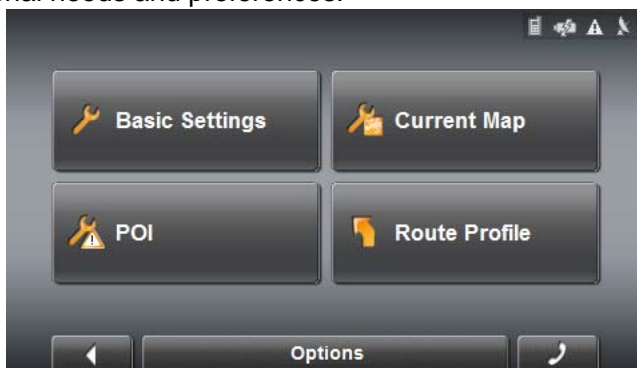

The SETTINGS WINDOW has several buttons.

- Tap a button to open the corresponding settings window.

Basic settings

These settings include:

Language

Select the language to display on the screen. Options are English, French, or Spanish.

Speak Street Names

Indicate whether street names are spoken during navigation.

Reality View

Indicate whether Reality View displays a visual representation of an approaching junction. Highway signs and the lane to be used are indicated. (This feature is dependent on the selected map and may not be available in all areas.)

2D Zoom Factor

Indicate how auto-zoom behaves by default when a 2D view mode is selected. The zoom changes, based on speed. When driving slower, the map scale gets smaller. When driving faster, the map scale gets larger. Options are no automatic zoom, smaller or larger map sections, or standard.

3D Map: Show Street Names

Indicate whether to show street names on maps displayed in 3D view mode.

<u>2D Map:Show Street Names</u>	Indicate whether to show street names on maps displayed in 2D view mode.
<u>2D Map Orientation</u>	Indicate the orientation of maps shown in 2D map view mode. Options are direction of travel, or whether to show 2D map view orientation in the direction of travel (the direction you are driving is always at the top of the map), or Always North (magnetic North is always at the top of the map).
<u>Show Altitude and Speed</u>	Show or hide the altitude and current speed on a displayed map.
<u>Display Compass</u>	Show or hide a small compass on screen during navigation.
<u>Show Remaining Distance</u>	Show or hide the distance remaining to the destination or an interim destination, if applicable.
<u>Show Duration of Journey</u>	Show or hide the travel time remaining to the destination or an interim destination, if applicable.
<u>Show Time of Arrival</u>	Show or hide the time of arrival at the destination or an interim destination, if applicable.
<u>Info When Crossing Borders</u>	Show or hide local speed restrictions when crossing a country border.
<u>Show Speed Limits</u>	Select whether to show highway speed limits. Options are always, only when exceeding the speed limit, or never.
<u>Warnings Within Urban Areas</u>	Indicate whether a warning displays when exceeding the speed limit in densely populated areas. Options are to never warn, or to display a warning when 5, 10, 15 or 20 mph over the stated speed limit.
<u>Warnings Outside of Urban Areas</u>	Indicate whether a warning displays when exceeding the speed limit in less densely populated or rural areas. Options are to never warn, or to display a warning when 5, 10, 15 or 20 mph over the posted speed limit.
<u>Warn Against Certain Speed Limits</u>	Show or hide speed limit restrictions in force during special situations, such as rain, snow, time of day restrictions, etc.
<u>Menu Animation</u>	Indicate whether the opening of menus is animated.
<u>Distance Unit</u>	Indicate the distance unit to be used, either Miles or Kilometers.
<u>Time Format</u>	Indicate how times are displayed, either a 12 hour format (with am and pm), or a 24 hour format.
<u>Coordinates Display</u>	Show or hide coordinates.
<u>Coordinate Format</u>	If coordinates are shown, indicate whether they display in decimal format or in minutes and sec-

<u>Brightness Day</u>	onds format. Indicate the display brightness for use during the daytime. Options are from 1 (less bright) to 8 (most bright).
<u>Brightness Night</u>	Indicate the display brightness for use at night. Options are from 1 (less bright) to 8 (most bright).
<u>Speed-Dependent Volume</u>	Indicate whether you want the volume level to increase when your speed increases. Options are never, yes with a low amplification, or yes with a high amplification.
<u>In-Store Demo</u>	Enable or disable the in-store demo. (When enabled, the demo starts after 5 minutes.)

POI Settings

These settings include:

<u>Categories Shown</u>	Specify the number of POI categories that are shown on the displayed map.
<u>Direct Access 1</u>	Select the first POI category to display for use with the POI direct access and POI nearby functions.
<u>Direct Access 2</u>	Select a second POI category to display for use with the POI direct access and POI nearby functions.
<u>Direct Access 3</u>	Select a third POI category to display for use with the POI direct access and POI nearby functions.

Current Map Settings

These settings include:

<u>Current Map</u>	Displays information on the currently displayed map. If additional maps are available, you can select a different map. Options are: Alaska, Hawaii, Puerto Rico, or USA and Canada.
--------------------	---


Route Profile Settings

These settings include:

<u>Speed Profile</u>	Select the type of transport, such as, fast or slow car, truck, motorcycle, bicycle, or pedestrian. This is used for calculating routes and arrival times.
<u>Type of Route</u>	Select the type of route to be calculated: Fast, Optimum, Short, or Scenic.
<u>Consider Traffic Information</u>	Select whether TMC (traffic information) is used when calculating a route. (This requires a TMC receiver and may not be available in all areas.)
<u>Highways</u>	Select whether highways are included in a calculated route.

<u>Toll Roads</u>	Select whether toll roads are included in a calculated route.
<u>Ferries</u>	Select whether ferries are included in a calculated route.
<u>Calculate the Next Stage</u>	For routes with multiple stages. After reaching a route point, select whether the next stage is calculated automatically.

Selecting Options

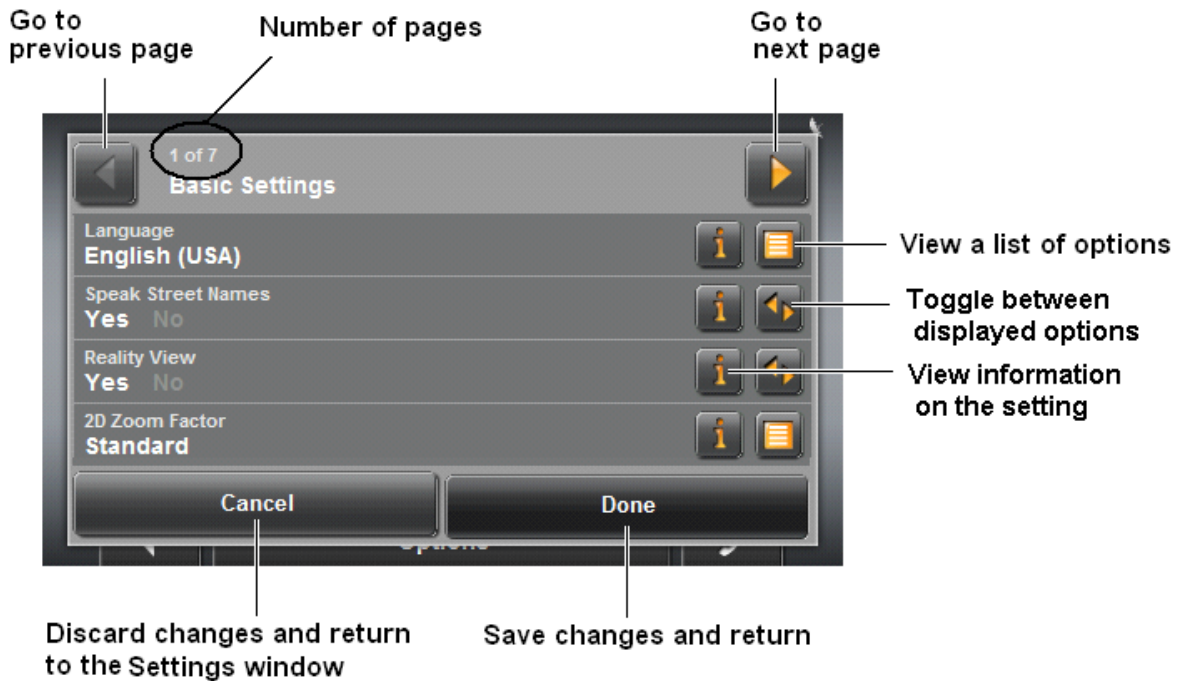


Moving between pages

The settings of the individual windows are distributed on several windows.

- Move between windows by tapping  (To the Left) and  (To the Right).


Viewing a list of options for a setting

Some settings have several valid options. These settings can be selected from a list. The value that is currently valid is shown.

1. Tap  (List).
A list with all potential values opens. The value that is currently valid is marked.
2. Tap the value to be used.
3. Tap the OK button.
The list closes. The new value displays.


Toggling between options

Some settings can only accept two or three different values. All values are displayed with the currently selected value shown in black.

- Tap  (Toggle) to alternate between values.

Viewing information about a setting

Information is available for many settings.

- To find more information, tap  (Help).

Saving changes

- Tap Done.

Discarding changes

- Tap Cancel.

Legal Notices

NOTICE TO DRIVERS IN CALIFORNIA AND MINNESOTA

State law prohibits drivers in California and Minnesota from using mounts on their windshields while operating motor vehicles. NAVIGON does not take any responsibility for any fines, penalties, or damages that may be incurred as a result of disregarding this notice. (See California Vehicle Code Section 26708(a); Minnesota Statutes 2005, Section 169.71)

GPS

Underwriters Laboratories Inc. ("UL") has not tested the performance or reliability of the Global Positioning System ("GPS") hardware, operating software or other aspects of this product. UL has only tested for fire, shock or casualty hazards as outlined in UL's Standard(s) for Safety (UL 60950-1, cUL 991). UL Certification does not cover the performance or reliability of the GPS hardware and GPS operating software. UL MAKES NO REPRESENTATIONS, WARRANTIES OR CERTIFICATIONS WHATSOEVER REGARDING THE PERFORMANCE OR RELIABILITY OF ANY GPS RELATED FUNCTIONS OF THIS PRODUCT.

This page intentionally left blank.

Technical Data

Specifications

Dimensions		5.1" x 3.5" x .9"
Weight		ca. 195 g
Operating conditions	Operating temperature	-10°C to 60°C
	Storage temperature	-20°C to 70°C
	Humidity	0% to 90%, non-precipitating
CPU		Samsung 2440-400Mhz
Operating System		Microsoft Windows® CE Net 5.0
Display		4.3"-LCD-Color display with resistive Touch-Panel 480 x 272 Pixels (WQVGA) Landscape format, permeable
Memory	ROM	256 MB
	RAM	64 MB
GPS		Built-in (SiRF GPS III, 20 channels) Built-in antenna Socket for external antenna
TMC		Built-in (GNS FM4_V7)
I/O	Stylus	Plastic-stylus
	Keyboard	Software keyboard
	Loudspeaker	Built-in
	Microphone	Built-in
	Headset	3.5 mm phone jack
	Memory card	SD, MMC
	USB	USB 1.1
	Bluetooth	CSR Bluescore 4
Rechargeable battery	Type	Li-Ion, 1200 mAh
	Period of operation	Up to 4-5 hours of use ¹

Charging	Electronic	Built-in
	Duration	Approx. 6 hours
Power adapter	Input	100-240V ~ (Alternating current, AC)
	Output	5V =, 1A (Direct current, DC)
Car charger cable	Input	12V = (Direct current, DC)
	Output	5V =, 1A (Direct current, DC)

1. Some **NAVIGON 7100** features can reduce battery operation time. These include TMC (Traffic Information) service, GPS antenna reception, Daytime backlight feature, etc. When on full power mode, battery time is approx. 2-3 hours.

Compliance Notice

The **NAVIGON 7100** complies with Part 15 of the FCC interference limits for Class B digital devices for home or office use.

“Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.”

(Carrier frequency: 1575.42MHz, receiver only)

Index

B

block route section	52
block route sections	46, 47
bluetooth	
connect	67
hands-free	65
pairing	67
symbols	15
telephone	67

C

configuration	75
current position	
save	35

D

data entry	21
destination	
search for POI	23
destination	
enter a location	
by city	24
by street	25
home address	36, 39
new destination	22
save	35
search for national POIs	23
search for POIs nearby	23
start navigation	40
Take Me Home	36, 39
tap on the map	23
voice command	36
destination search	
POI direct access	23
POI in a city	23
destination search map mode	53
destination search mode	
functions	54
destinations	
Favorites	38
Last Destinations	37
My Destinations	37
voice command	38
direction	15

E

entering data	21
---------------------	----

F

Favorites	38
-----------------	----

G

GPS	
faulty reception	4, 44
initialize	13
signals	4
symbols	14

H

hands-free operation	65
call in progress	
hang up	71
keypad	70
mute	69
navigation	70
troubleshooting	71
use hands free	70
use mobile phone	69
volume	69
close	66
connect	67
hang up	71
incoming call	68
keypad	70
make a call	
call history	68
dial a number	68, 69
mute	69
navigation	70
open	66
pairing	67
telephone	67
troubleshooting	71
use hands-free	70
use mobile phone	69
volume	69
home address	36, 39
hotline	2

I

interim destination	52
---------------------------	----

J

junction view map mode	55
------------------------------	----

L

Last Destinations 37

M

main window 11
make a call
 call history 68
 dial a number 68, 69
manual
 symbols 1
map modes
 destination search 53
 functions 54
 junction view 55
 switch to navigation mode 55
 map preview 50
 navigation 51
 functions 52
 quitting navigation 52
 Reality View 55
 switch to navigation mode 55
map preview mode 50
menus 17
message types to display 63
My Destinations 37

N

navigation 46, 47
 block route section 52
 interim destination 52
 no GPS reception 40
 POIs on your route 52
 route profile 44
 skip route point 52
 start 45
 turn-by-turn list 46
navigation map mode 51
 functions 52
 quit navigation 52
navigation start 40
NAVIGON 7100
 installation 9
 power 10
 start 11
 storage card 9
 TMC 10
 what's included 5
new destination
 country/state/province 22

P

password 19

canceling a 20
changing a 19
forgotten 20
setting a 19

POI

 direct access 23
 in a city 23
POIs national 23
POIs nearby 23
POIs on your route 52
power 10
 symbols 14

R

Reality View map mode 55
 switch to navigation mode 55
recalculate route 63
remove block route sections 46
route planning 41
route points
 change the order of 42
 create 41
 delete 42
 order of 42
route profile 44
routes
 calculate 44
 display 44
 load 43
 loading 43
 manage 43
 planning 41
 route points 41
 route profile 44
 save 43
 simulation 45
 end 45
 start 45
 start navigation 45
 starting point 41
 current location 41
 turn-by-turn list 46

S

safety information 6
search
 national POIs 23
 POIs nearby 23
Search for POI
 direct access 23
 in a city 23
service 2
settings
 configuration 75
 TMC 62

volume	13
simulation	45
end	45
start	45
skip route point	52
storage card	9
support	2
switch to navigation mode	55
symbols used in the manual	1

T

Take Me Home	36, 39
telephone	65
connect	67
pairing	67
telephone	67
TMC	
recalculate route	63
show	60
symbols	15
traffic message types to display	63
tuning	62
TMC settings	
recalculate route	63
trademarks	1
traffic information	63
recalculate route	63
settings	62
show	60
symbols	15
tuning	62
tuning	
TMC	62
turn-by-turn list	
block route sections	46, 47
remove block route sections	46
show	46

V

voice command	36, 38
volume	13

W

warranty	1
what's included	5
windows	
main	11

This page intentionally left blank.