

FUJITSU LIFEBOOK P727



Congratulations on your purchase of an innovative product from Fujitsu.

The latest information about our products, tips, updates etc. can be found on the Internet at: ["http://www.fujitsu.com/fts/"](http://www.fujitsu.com/fts/)

You can find driver updates at: ["http://support.ts.fujitsu.com/download"](http://support.ts.fujitsu.com/download)

Should you have any technical questions, please contact:

- our Hotline/Service Desk (["http://support.ts.fujitsu.com/contact/servicedesk"](http://support.ts.fujitsu.com/contact/servicedesk))
- Your sales partner
- Your sales office

We hope you enjoy working with your new Fujitsu system!



Published by / Contact address in the EU

Fujitsu Technology Solutions GmbH

Mies-van-der-Rohe-Straße 8

80807 Munich, Germany

["http://www.fujitsu.com/fts/"](http://www.fujitsu.com/fts/)

Copyright

© Fujitsu Technology Solutions 2017. All rights reserved.

Publication Date

2/2017

Order No.: A26391-K453-Z320-1-7619, edition 1

FUJITSU LIFEBOOK P727

Operating manual

Innovative technology	7
Ports and controls	9
Important notes	12
First-time setup of your device	16
Working with the notebook	20
Security functions	60
Connecting external devices	82
Removing and installing components during servicing	88
Settings in BIOS Setup Utility	98
Troubleshooting and tips	101
Technical data	110
Manufacturer's notes	115
Index	118

Remarks

Information on the product description meets the design specifications of Fujitsu and is provided for comparison purposes. Several factors may cause the actual results to differ. Technical data is subject to change without prior notification. Fujitsu rejects any responsibility with regard to technical or editorial mistakes or omissions.

Trademarks

Fujitsu, the Fujitsu logo and LIFEBOOK are registered trademarks of Fujitsu Limited or its subsidiaries in the USA and other countries.

Microsoft and Windows are trademarks or registered trademarks of Microsoft Corporation in the USA and/or other countries.



HDMI and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing, LLC.s.

Bluetooth® and the Bluetooth logo are registered trademarks of Bluetooth SIG, Inc.

Adobe Reader is a trademark of Adobe Systems Incorporated.

All other trademarks specified here are the property of their respective owners.

Copyright

No part of this publication may be copied, reproduced or translated without the prior written consent of Fujitsu.

No part of this publication may be saved or transferred by any electronic means without the written approval of Fujitsu.

Contents

Innovative technology	7
Further information	7
Notational conventions	8
Ports and controls	9
Important notes	12
Safety notes	12
Additional safety notes for devices with radio components	12
Energy saving	13
Energy saving under Windows	13
Travelling with your notebook	14
Before you travel	14
Notebook: transporting	14
Cleaning the notebook	15
First-time setup of your device	16
Unpacking and checking the device	16
Selecting a location	17
Mains adapter connecting	17
Switching on the device for the first time	18
Working with the notebook	20
Status indicators	20
Opening the notebook	23
Switching on the notebook	24
Programming the ON/OFF button	24
Different ways to use your notebook	25
From notebook to Tablet PC	25
Select display orientation (portrait or landscape orientation)	26
From Tablet PC to notebook	27
Switching off the notebook	28
Closing the notebook	29
Handwriting recognition	29
LCD screen	30
Using the device as a Tablet PC	30
Using fingers	31
Using the stylus pen	33
Using the device as a notebook	37
Touchpad and touchpad buttons	37
Keyboard	39
Virtual numeric keypad	41
Country and keyboard settings	41
Key combinations	42
Camera (dependent on configuration)	44
Rechargeable battery	45
Charging, caring for and maintaining the battery	45
Removing and installing the battery	46
Using the power-management features	49
Memory cards	50
Supported formats	50
Inserting the memory card	50

Removing the memory card	50
Loudspeakers and microphones	51
SIM card	52
Inserting the SIM card	52
Removing the SIM card	53
Wireless LAN / Bluetooth / LTE radio components (configuration dependent)	54
Switching the wireless components on and off	54
Setting up WLAN access	54
Access via LTE (configuration dependent)	55
Ethernet and LAN	55
Your USB Type-C™ Port Replicator (optional)	56
Ports on the Port Replicator	56
Setting up the port replicator	57
Connecting the mains adapter to the Port Replicator	57
Connect the notebook to the port replicator	58
Switching on the notebook via the port replicator	59
Switching off the notebook via the Port Replicator	59
Disconnecting the notebook from the Port Replicator	59
Security functions	60
Brief overview of security functions	61
Setting up the fingerprint sensor (configuration dependent)	62
Configuring the palm sensor (configuration dependent)	63
Using the Security Lock	63
Configuring password protection in BIOS Setup Utility	64
Protecting BIOS Setup Utility (supervisor and user password)	64
Password protection for booting of the operating system	65
Password protection for the hard disk	66
SmartCard reader (configuration dependent)	66
Inserting the SmartCard	66
SmartCard SystemLock (dependent on configuration)	67
Access rights of SmartCards	68
SmartCard user groups	69
Installing SystemLock	70
Setting up the first system in a user group or a stand-alone system for use with SystemLock	70
Adding a system to a user group	74
Carrying out administrator functions	76
Remote Access Enabling – F4	78
Switch on the device using SystemLock	79
Start BIOS Setup F2	79
Changing PIN	79
Uninstall SystemLock	79
Error messages	80
Trusted Platform Module - TPM	80
Enabling TPM	80
Disabling TPM	81
Enable password entry using the on-screen keyboard (on-screen keyboard for BitLocker password)	81
Connecting external devices	82
HDMI port	82
Connecting an external monitor	83
Connecting USB devices	84

USB connection with charging function (USB Type-C™)	85
USB port with charging function (Anytime USB charge)	86
How to remove USB devices correctly	86
Headphones/microphone/Line-In/Line-Out/headset-combi port	87
Removing and installing components during servicing	88
Notes on installing and removing boards and components	88
Preparing to remove components	89
Removing a cover	90
Installing and removing memory expansion	91
Removing memory modules	92
Installing a memory module	93
Installing and removing an M.2 module	94
Removing an M.2 module	94
Installing an M.2 module	95
Attaching the cover	97
Finishing component removal	97
Settings in BIOS Setup Utility	98
Starting the BIOS Setup Utility	98
Operating BIOS Setup Utility	99
Exiting BIOS Setup Utility	100
Exit Saving Changes - save changes and exit BIOS Setup Utility	100
Exit Discarding Changes – Discard changes and exit BIOS Setup Utility	100
Load Setup Defaults – Copy Standard Entries	100
Discard Changes – Discard changes without exiting the BIOS Setup Utility	100
Save Changes - save changes without exiting the BIOS Setup Utility	100
Save Changes and Power Off	100
Troubleshooting and tips	101
Help if problems occur	101
The notebook's date or time is incorrect	102
Battery indicator does not illuminate	102
When certain characters are entered on the keyboard, only numerals are written	102
The notebook's LCD screen remains blank	102
The LCD screen is difficult to read	102
The external monitor remains blank	103
The external monitor is blank or the image is unstable	103
The cursor does not correctly follow the pen movements	104
Pen input not working	104
The notebook cannot be started	104
The notebook stops working	105
The printer does not print	105
The wireless connection to a network does not work	105
The battery discharges too quickly	106
SmartCard reader is not recognised.	106
SmartCard PIN forgotten	106
SmartCard lost	106
User and/or supervisor SmartCard lost	107
Acoustic warnings	107
Error messages on the screen	108
Restoring the contents of the hard disk under Windows	109
Restoring the system under Windows 10	109

Technical data **110**

Notebook 110

USB Type-C™ Port Replicator (optional) 111

Screen resolutions for integrated screen and external screens 112

 Notebook only 112

 Notebook with Port Replicator 112

Rechargeable battery 114

Mains adapter for use with the notebook and port replicator 114

Manufacturer's notes **115**

Disposal and recycling 115

Declarations of Conformity 115

Electrical safety including ergonomic requirements (GS, depending on the device) 115

CE marking 116

 Radio frequencies used 116

Other certification markings 117

Index **118**

Innovative technology

... and ergonomic design make your device a reliable and convenient companion.

The device boots very quickly, is ready for immediate use and offers a particularly long operating time because of its high capacity battery.

With the user-friendly "BIOS Setup Utility" you can control your notebook's hardware and better protect your system against unauthorised access by using the powerful password properties.



Information on the connections and user components of your notebook can be found in ["Ports and controls", Page 9.](#)

Further information









The Windows drivers for your device can be found on our Internet site. The factory installation of your device does not support any other operating system. Fujitsu Technology Solutions accepts no liability whatsoever if any other operating system is used.

Software oriented components of these instructions refer to Microsoft products, if they come within the scope of the delivery.

If you install other software products, pay attention to the operating instructions of the manufacturer.


Notational conventions

	Pay particular attention to text marked with this symbol. Failure to observe these warnings could pose a risk to health, damage the device or lead to loss of data. The warranty will be invalidated if the device becomes defective through failure to observe these warnings.
	Indicates important information for the proper use of the device.
	Indicates an activity that must be performed
	Indicates a result
This font	indicates data entered using the keyboard in a program dialogue or at the command line, e.g. your password (Name123) or a command used to start a program (start.exe)
This font	indicates information that is displayed on the screen by a program, e.g.: Installation is complete.
<i>This font</i>	indicates <ul style="list-style-type: none"> terms and texts used in a software interface, e.g.: Click on <i>Save</i> names of programs or files, e.g. <i>Windows</i> or <i>setup.exe</i>.
"This font"	indicates <ul style="list-style-type: none"> cross-references to another section, e.g. "Safety information" cross-references to an external source, e.g. a web address: For more information, go to "http://www.fujitsu.com/fts/" Names of CDs, DVDs and titles or designations for other materials, e.g.: "CD/DVD Drivers & Utilities" or "Safety/Regulations" manual
	indicates a key on the keyboard, e.g. 
This font	indicates terms and texts that are emphasised or highlighted, e.g.: Do not switch off the device

Ports and controls

This chapter presents the individual hardware components of your device. It gives you an overview of the device's indicators and connections. Please familiarise yourself with these components before you start to work with the device.


Notebook open

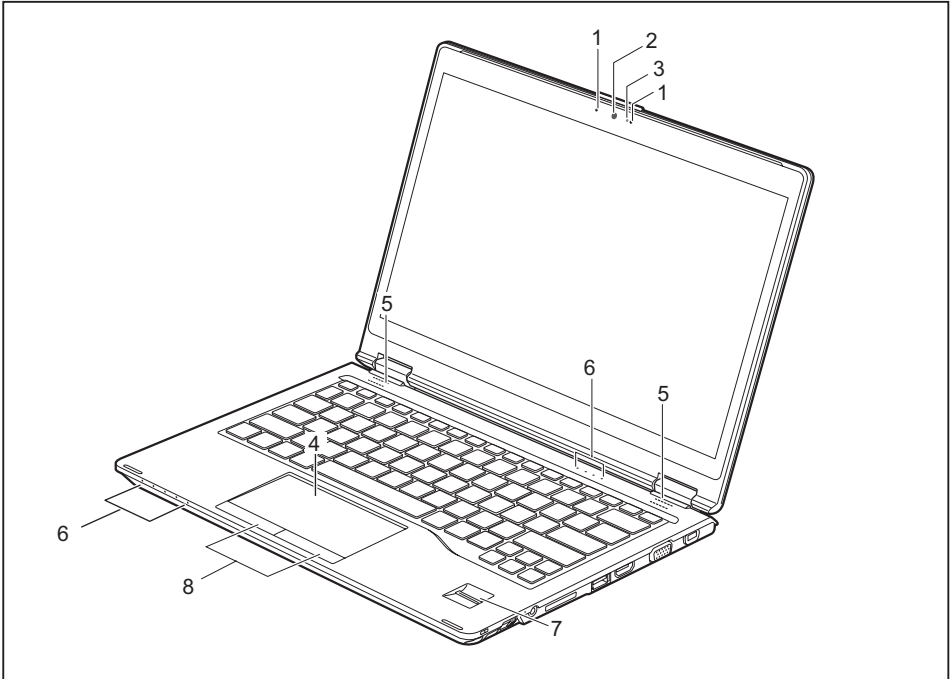

- 1 = Microphone
- 2 = Camera
- 3 = Camera LED
- 4 = Touchpad
- 5 = Loudspeakers


- 6 = Status indicators
- 7 = Fingerprint sensor or palm sensor
(configuration dependent)
- 8 = Touchpad buttons

Left side

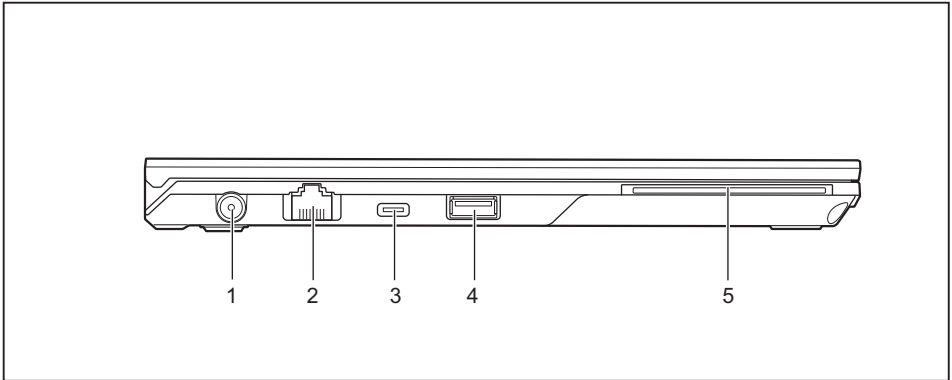


- | | |
|--|---|
| 1 = DC input connector (DC IN) | 4 = USB port 3.0 with charging function
(Anytime USB charge) |
| 2 = LAN port | 5 = SmartCard reader |
| 3 = USB 3.0 port with charging function
(USB Type-C™) | |

Right side

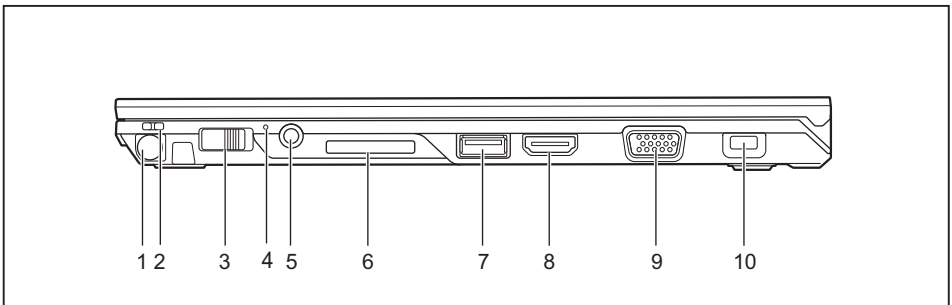

- | | |
|---|---------------------------|
| 1 = Pen slot | 6 = Memory card slot |
| 2 = Eyelet for the optional pen tether | 7 = USB port 3.0 |
| 3 = ON/OFF button | 8 = HDMI port |
| 4 = Power-on indicator | 9 = VGA monitor port |
| 5 = Combined headphones/microphone port | 10 = Security Lock device |

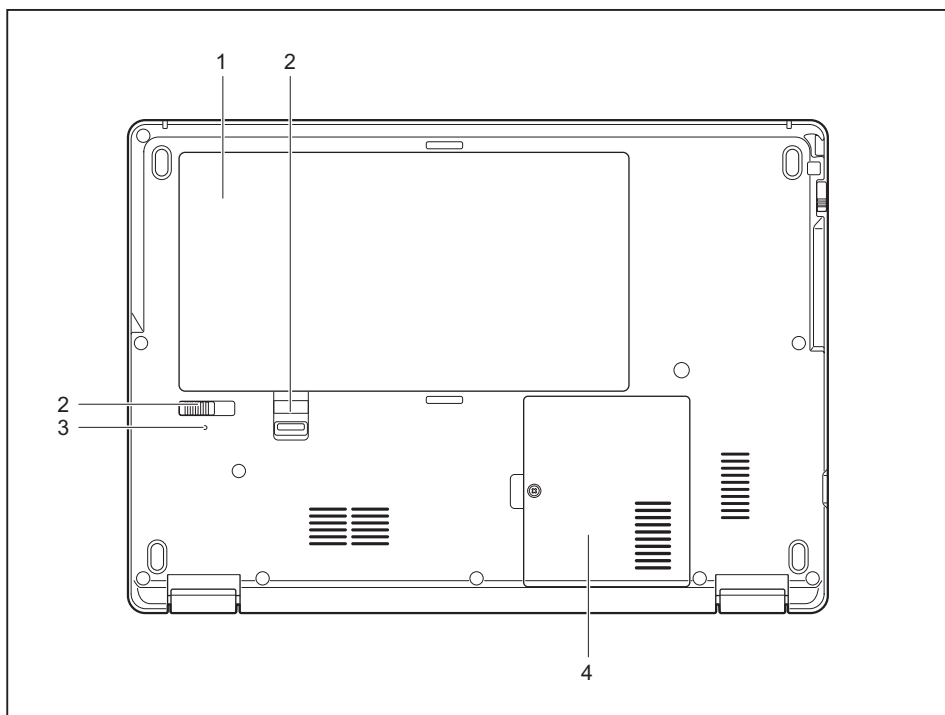Bottom

1 = Battery compartment with SIM card slot under the battery

2 = Battery release

3 = Battery replacement status indicator

4 = Memory service compartment and M.2 module

Important notes



This chapter contains essential safety information which must be followed when working with your notebook. Other notes also provide useful information which will help you with your notebook.

Safety notes



Please follow the safety notes provided in the "Safety/Regulations" manual as well as the safety notes given below.

Please pay special attention to the sections in the manual marked with the symbol on the left.

When connecting and disconnecting cables, observe the relevant notes in this operating manual.

Read the information on the ambient conditions in the ["Technical data", Page 110](#) and ["First-time setup of your device", Page 16](#) before preparing your notebook for use and switching it on for the first time.

When cleaning the device, please observe the relevant notes in the section ["Cleaning the notebook", Page 15](#).

Pay attention to the additional safety notes for devices with wireless components provided in the "Safety/Regulations" manual.

Please refer to the notes in the chapter ["Removing and installing components during servicing", Page 88](#).

This notebook complies with the relevant safety regulations for data processing equipment. If you have questions about using your notebook in a particular area, please contact your sales outlet or our Hotline/Service Desk.

Additional safety notes for devices with radio components

If a radio component (Wireless LAN, Bluetooth, LTE) is integrated in your notebook, you must be sure to observe the following safety notes when using your notebook:

- Switch off the radio components when you are in an aircraft or driving in a car.
- Switch off the radio components when you are in a hospital, an operating room or near a medical electronics system. The transmitted radio waves can impair the operation of medical devices.
- Switch off the radio components when you let the device get near flammable gases or into hazardous environments (e.g. petrol station, paintshops), as the transmitted radio waves can cause an explosion or a fire.



For information on how to switch radio components on and off, see chapter ["Switching the wireless components on and off", Page 54](#).

Energy saving

Switch the notebook off when it is not in use. Switch off external, connected devices if you are not using them. If you use the energy saving functions, the notebook uses less energy. You will then be able to work for longer before having to recharge the battery.



Energy efficiency is increased and the environmental impact is reduced.
You save money while protecting the environment.

Energy saving under Windows

- Make use of the power management features (see [""Using the power-management features", Page 49"](#)).

Travelling with your notebook

Please observe the points listed below when travelling with your notebook.

Before you travel

- ▶ Back up important data stored on your hard disk.
- ▶ Switch off the wireless component for data security reasons. With data traffic via a wireless connection, it is also possible for unauthorised third parties to receive data.



Information on activating data encryption is provided in the documentation for your wireless component.

- ▶ If you wish to use your notebook during a flight, first check with the flight attendants if it is OK to do so.

When travelling in other countries

- ▶ If you are travelling abroad, check that the mains adapter can be operated with the local mains voltage. If this is not the case, obtain the appropriate mains adapter for your notebook. Do not use any other voltage converter!
- ▶ Check whether the local mains voltage and the power cable are compatible. If this is not the case, buy a power cable that matches the local conditions.
- ▶ Enquire with the corresponding government office of the country you will be travelling in as to whether you may operate the wireless component integrated in your notebook there (see also ["CE marking", Page 116](#)).

Notebook: transporting



Protect the notebook from severe shocks and extreme temperatures (e.g. direct sunlight in a car).

- ▶ If your device has an optical drive, remove all data media (e.g. CD, DVD) from the drives.
- ▶ Switch the notebook off.
- ▶ Unplug the mains adapter and all external devices from the power socket.
- ▶ Disconnect the mains adapter cable and the data cables for all external devices.
- ▶ Close the LCD screen.
- ▶ To protect against damaging jolts and bumps, use a notebook carrying case to transport your notebook.

Cleaning the notebook



Do not clean any interior parts yourself; leave this job to a service technician.

Only use cleaning products designed for computers. Normal household cleaners and polishes can damage the markings on the keyboard and the device, the paintwork or the notebook itself.

Ensure that no liquid enters the notebook.

The LCD screen very sensitive to scratches. Only clean the display surface with a very soft, slightly damp cloth.

- ▶ Switch the notebook off.
- ▶ In order to prevent accidentally switching the device on, remove the power cable from the mains adaptor and remove the battery (see ["Removing and installing the battery", Page 46](#)).
- ↳ The surface can be cleaned with a dry cloth. If particularly dirty, use a cloth which has been moistened in mild domestic detergent and then carefully wrung out.

You can use disinfectant wipes to clean the keyboard and the touchpad.

Ensure that no liquid enters the device.

First-time setup of your device



Please read the chapter ["Important notes", Page 12.](#)

If your device is equipped with a Windows operating system, the necessary hardware drivers and supplied software are already pre-installed.

Before you switch on the device for the first time, connect it to the mains voltage using the mains adapter, see ["Mains adapter connecting", Page 17.](#) The mains adapter must be connected during the entire installation process.

A system test is performed when your device is first switched on. Various messages can appear. The display may remain dark for a short time or may flicker.

Please follow the instructions on the screen.

NEVER switch off your device during the first-time setup process.

When the device is delivered, the battery is located in the battery compartment. The battery must be charged if you want to operate your device using the battery.

When used on the move, the built-in battery provides the device with the necessary power. You can increase the operating time by using the available energy-saving functions.

For instructions on how to connect external devices (e.g. mouse, printer) to your device, please refer to the operating manual for your device.

Unpacking and checking the device



Should you discover any damage that occurred during transportation, notify your local sales outlet immediately!

- ▶ Unpack all the individual parts.
- ▶ Check your device for any visible damage which may have occurred during transportation.



You may need the packaging in the future, if you need to transport your device.

Selecting a location



Select a suitable location for the device before setting it up. Follow the instructions below when doing so:


- Never place the device or the mains adapter on a heat-sensitive surface. The surface could be damaged as a result.
- Never place the device on a soft surface (e.g. carpeting, upholstered furniture, bed). This can block the air vents and cause overheating and damage.
- The underside of the device heats up during normal operation. Prolonged contact with the skin may become unpleasant or even result in burns.
- Place the device on a stable, flat, non-slippery surface. Please note that the rubber feet of the device may mark certain types of delicate surfaces.
- Keep other objects at least 100 mm / 3.97" away from the device and its mains adapter to ensure adequate ventilation.
- Never cover the ventilation slots of the device.
- Do not expose the device to extreme environmental conditions. Protect the device from dust, humidity, and heat.

Mains adapter connecting



Observe the safety notes in the enclosed "Safety/Regulations" manual.

The supplied power cable conforms to the requirements of the country in which you purchased your device. Make sure that the power cable is approved for use in the country in which you intend to use it.

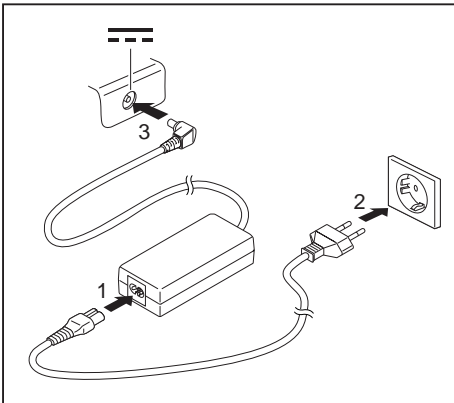

- Connect the power cable (1) to the mains adapter.
- Plug the mains cable (2) into a mains outlet.
- Connect the mains adapter cable (3) to the DC jack (DC IN) of the device.


Switching on the device for the first time



When you switch on the device for the first time, the supplied software is installed and configured. Because this procedure must not be interrupted, you should set aside enough time for it to be fully completed and connect the device to the mains using the mains adapter.

During the installation process, **DO NOT** restart the device unless you are requested to do so!

To make it easier to use your device for the first time, the operating system is pre-installed on the hard disk.

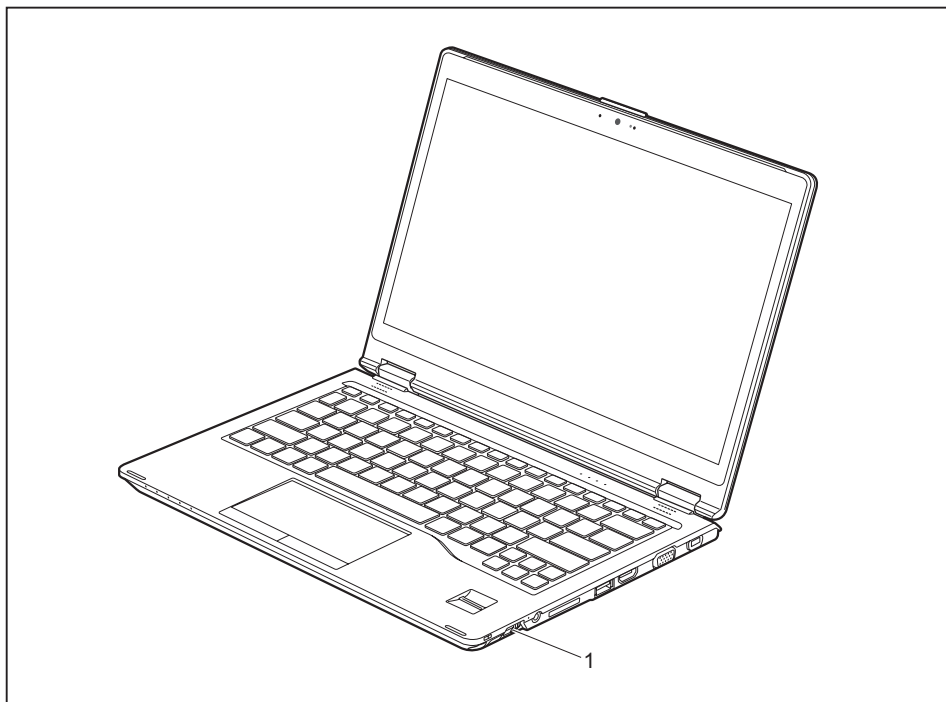

- ▶ Slide the ON/OFF switch (1) to the right to switch on the notebook.
- ↳ The ON/OFF button returns automatically to its original position.
- ▶ During installation, follow the instructions on screen.



If a Windows operating system is installed on your device, you will find more information on the system and drivers, help programmes, updates, manuals etc. on the device or on the Internet under "<http://www.fujitsu.com/fts/support/>".

You can find information and help on the Windows operating system functions on the Internet at "<http://windows.microsoft.com>".

Working with the notebook


This chapter describes the basics for operating your notebook. Please read the chapter entitled ["Connecting external devices", Page 82](#) for instructions on how to connect devices such as a mouse and a printer to the notebook.















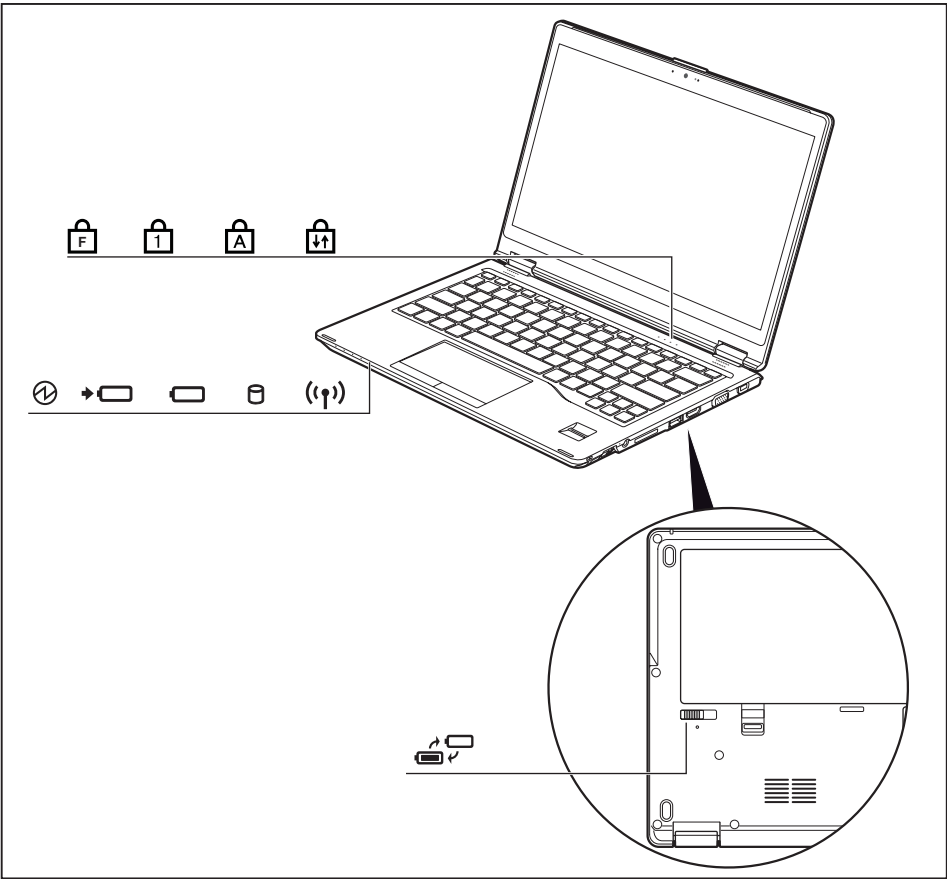


Please refer to the notes in ["Important notes", Page 12](#).

Status indicators


The status indicators provide information about the status of the power supply, the hard disk and the keyboard functions.



Indicator	Description
	Power-on indicator/Standby <ul style="list-style-type: none"> Indicator is illuminated: The notebook is switched on. The indicator flashes: The notebook is in sleep mode (Save-to-RAM). The indicator is not lit: The notebook is switched off or the notebook is in Save-to-Disk mode.
	Battery charging indicator/power connector The state of charge of the battery is shown by the battery indicator. With mains adapter connected: <ul style="list-style-type: none"> The indicator lights up white: The battery is charged or no battery is inserted. The indicator lights up orange: the mains adapter is connected and the battery is being charged. Indicator flashes orange: the mains adapter is connected but the battery cannot be charged as the battery is too hot or cold for charging. The charging process is continued as soon as the battery reaches a permissible temperature again. Indicator flashes red: An error has occurred. The indicator is not lit: The battery is not being charged (the battery is already more than 90% charged or the mains adapter is not connected).
	Battery indicator <ul style="list-style-type: none"> The indicator lights up white: The battery charge is between 51% and 100 % of its maximum. The indicator lights up orange: The battery charge is between 13 % and 50 % of its maximum. The indicator lights up red: The battery charge is between 0 % and 12 % of its maximum. The indicator flashes orange: The battery state of charge is being checked (for four seconds after battery installation). Indicator flashes red: An error has occurred. The indicator is not lit: There is no battery installed.
	Drive indicator The indicator is illuminated: The hard disk drive is being accessed.
	Radio components indicator <ul style="list-style-type: none"> Indicator is illuminated: The wireless components are switched on. Indicator is off: The wireless components are switched off.
	F Lock indicator <div style="text-align: right;"></div> The indicator is illuminated: The key combination  +  has been pressed. The special functions of the Fn keys (see chapter "Key combinations", Page 42) can be executed by pressing the keys directly without also having to press the  key.
	Num Lock indicator Indicator is illuminated: The  key has been pressed. The virtual numerical keypad is activated. You can output the characters indicated on the upper right of the keys.


Indicator	Description
	<p>Caps Lock indicator</p> <p>Indicator is illuminated: The Caps Lock key has been pressed. All the characters you type will appear in upper case. In the case of overlay keys, the character printed on the upper left of the key will appear when that key is pressed.</p>
	<p>Scroll Lock indicator</p> <p>Indicator is illuminated: the key combination [Fn] + [Scr] has been pressed. The effect that this key has varies between applications.</p>
	<p>Battery replacement indicator</p> <p>If the battery is unlocked for battery replacement, the battery replacement indicator shows whether the device is ready for battery replacement (see "Removing the battery", Page 46). You can replace the rechargeable battery in the device without switching the device off first. The device has an integrated buffer battery for this purpose. If the battery is unlocked while the device is in operating mode, Sleep Mode will automatically be activated.</p> <ul style="list-style-type: none"> • The indicator lights up green: The device is ready for battery replacement. Replace the battery. • The indicator flashes orange: The device is ready for battery replacement but the battery charging level of the buffer battery is low. Replace the battery quickly. Caution: If battery replacement takes too long, the device may switch itself off. Any data not saved may be lost. • The indicator lights up orange: The device is not yet ready for battery replacement as Sleep Mode has not yet been activated. Wait until the indicator lights up green. Caution: If the battery is replaced now, the device may switch itself off. Any data not saved may be lost. • The indicator lights up red: The device is not ready for battery replacement. Lock the battery again. Connect the device to the mains adapter to charge the buffer battery. After a short charging time, try the battery replacement again. Warning: If the battery is replaced now, the device may switch itself off. Any data not saved may be lost. • The indicator flashes red: Error in the buffer battery. Shut down the device. Connect the device to the mains adapter. If the status indicator flashes red again, contact the Service Desk.

Opening the notebook

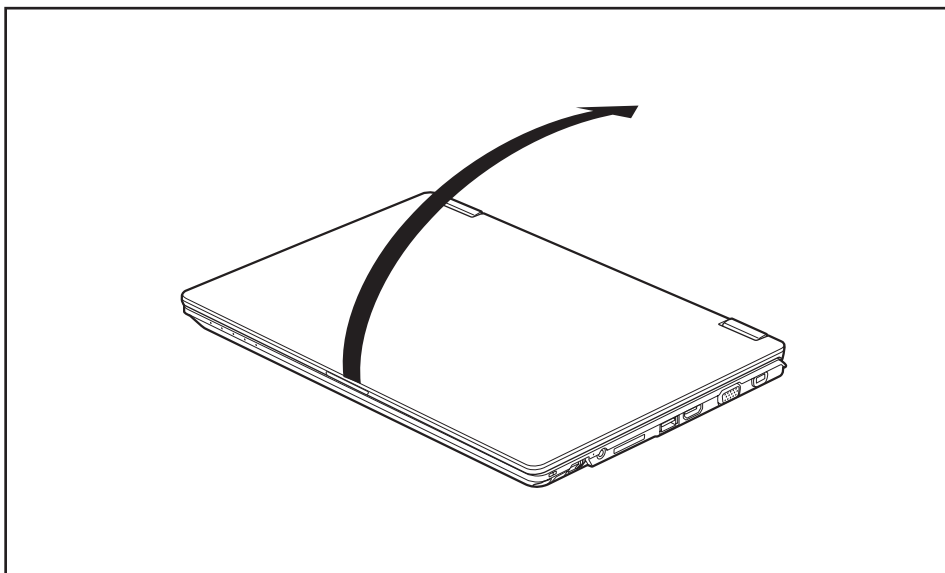

- Open the LCD screen.

Switching on the notebook

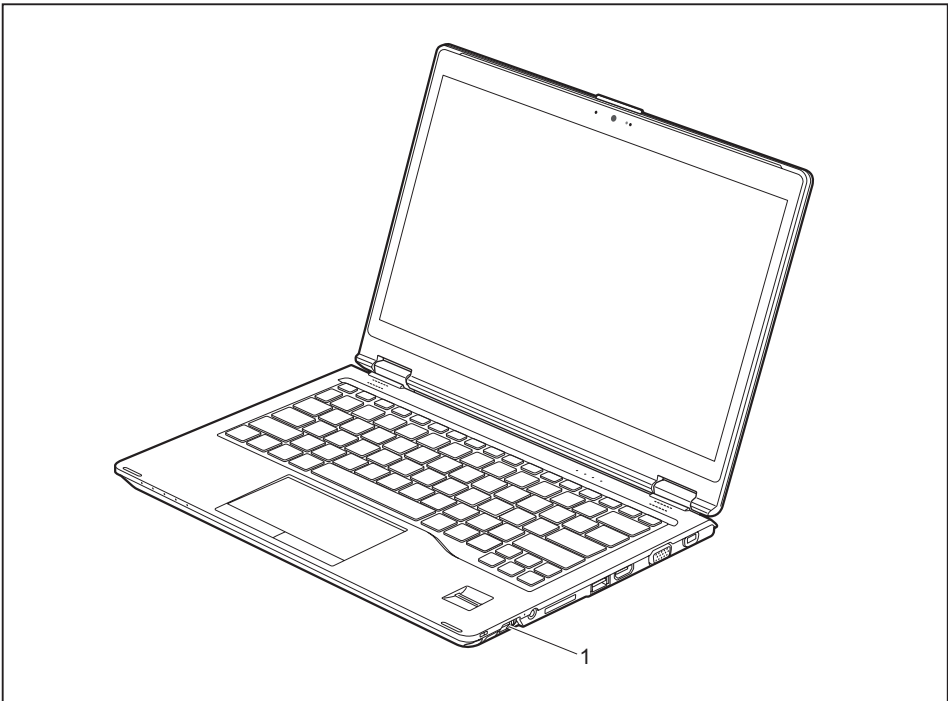

- ▶ Slide the ON/OFF button (1) to the right to switch on the notebook.
- ↳ The ON/OFF switch (1) returns automatically to its original position.
The power-on indicator next to the ON/OFF switch is lit while the system is switched on.

Programming the ON/OFF button

You can program the ON/OFF button:

Operating system	Menu
Windows 10	<i>Control Panel - Hardware and Sound - Power Options</i>




If you have assigned a password, you must enter this when requested to do so, in order to start the operating system. Detailed information can be found in the chapter ["Security functions", Page 60](#).

Different ways to use your notebook

During your daily work, you can use your notebook as a Tablet PC or as a notebook, just as you wish.

From notebook to Tablet PC

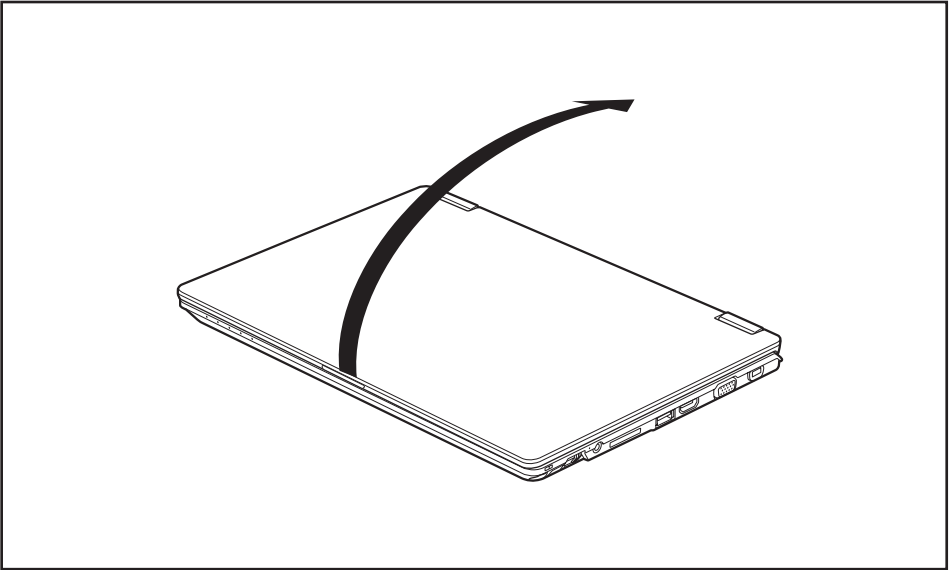


- Raise the LCD display into a vertical position.



You can fold the LCD screen down infinitely variably in an angle between 0 and 360 degrees.

- Fold the monitor down completely until the rear side of the monitor is resting on the bottom of the device.

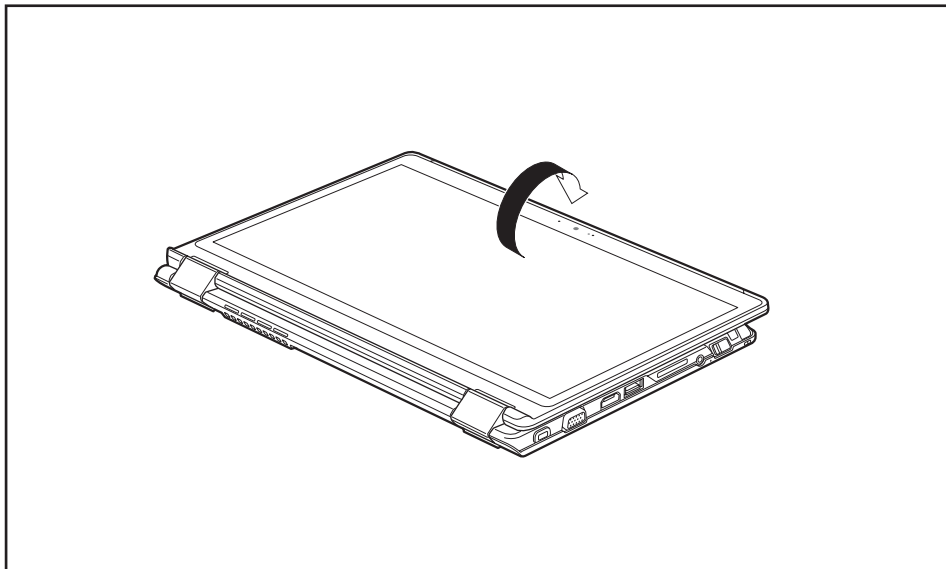

The monitor is now secured in the tablet position. The keyboard, touchpad and touchpad buttons are switched off in this position.

Select display orientation (portrait or landscape orientation)

You can choose to use either portrait or landscape orientation for the display, or whether the display orientation should automatically adapt to the orientation of the Tablet PC.




You can change these settings under *Control Panel - Hardware and Sound*
- *Windows Mobility Center / Rotate screen*.




In the settings there are profiles saved for operation with different screen orientations. These profiles have preset standard configurations that can be modified as desired.

These settings do not just affect the monitor settings on the tablet PC, but also on any external monitors that may be connected.

From Tablet PC to notebook

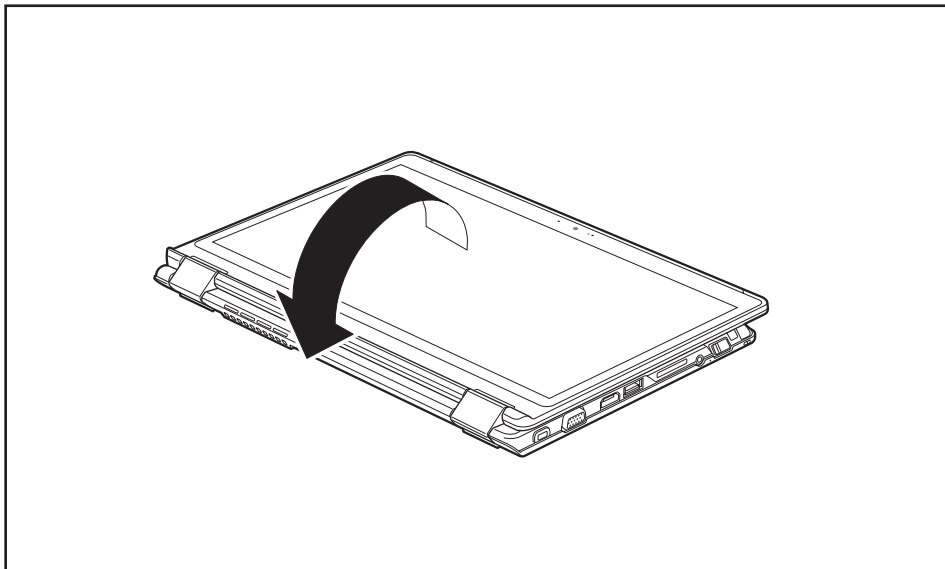


- ▶ Raise the LCD screen into a vertical position.
- ▶ Fold down the monitor until you reach the desired position.

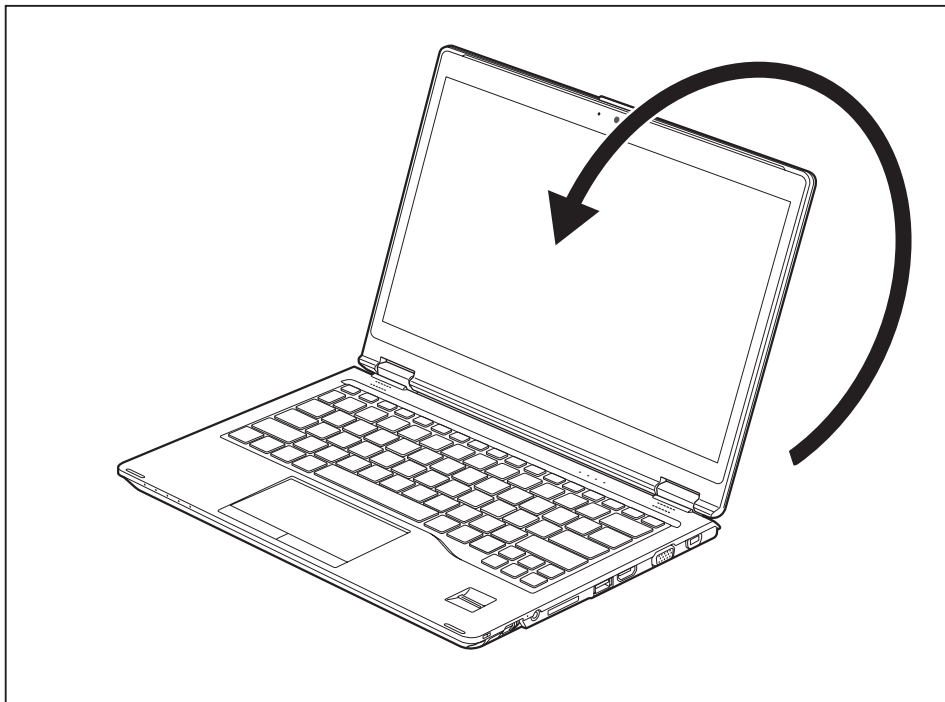

Switching off the notebook

- Close all applications and then shut down the operating system (please see the "Operating System Manual").

Closing the notebook

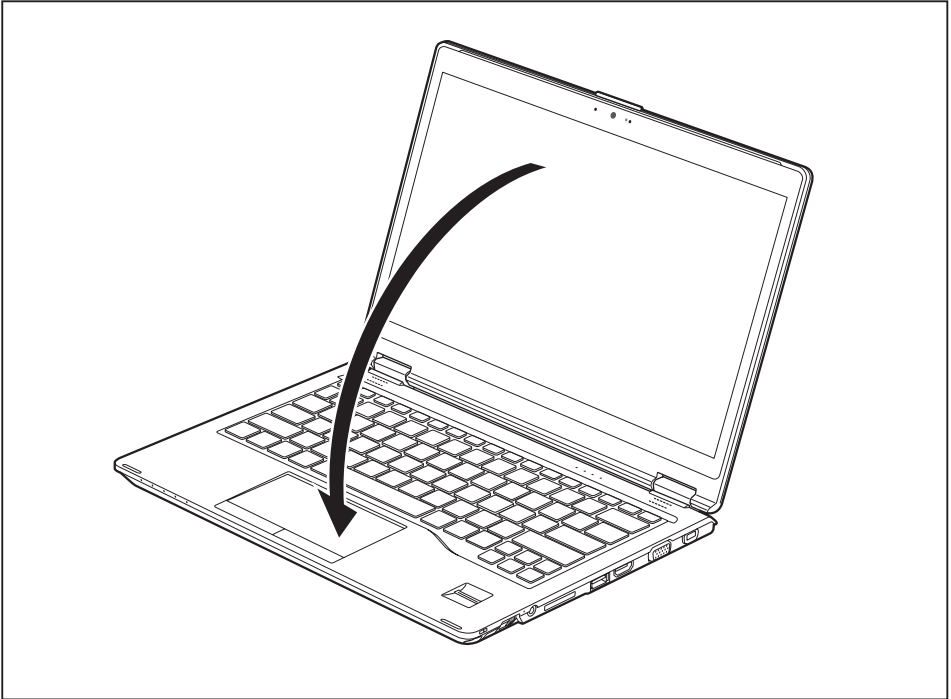

- Fold the LCD screen onto the lower section of the notebook.

Handwriting recognition

For detailed information on handwriting recognition, see the documentation on your operating system.

At present, handwriting recognition under Windows supports the following languages:

English, German, French, Italian, Japanese, Korean, Chinese (traditional and simplified), Dutch, Portuguese, Spanish, Brazilian, Norwegian (Bokmål and Nynorsk), Swedish, Finnish, Danish, Polish, Rumanian, Serbian (Cyrillic and Latin script), Catalan, Russian, Czech and Croatian.

Under Windows you can set the required language under *Control Panel – Time, Language and Region – Language*.

LCD screen



Information on screen resolution can be found in the section ["Screen resolutions for integrated screen and external screens"](#), [Page 112](#).

High-quality LCD screens (TFT) are installed in Fujitsu notebooks. For technical reasons, these screens are manufactured for a particular resolution. An optimum and sharp image can only be ensured with the resolution intended for the particular screen. A screen resolution which differs from the specification can result in an unclear image.

The resolution of your notebook's screen is set to the optimum at the factory.

With the present standards of production technology, absolutely flawless screen images cannot be guaranteed. There may be a few constantly light or dark pixels (picture elements) on the screen. The maximum permitted number of such faulty pixels is specified in the international standard ISO 9241-307 (Class II).

Example:

A monitor with HD resolution 1366 x 768 has 1366 x 768 = 1049088 pixels. Each pixel consists of three subpixels (red, green and blue), making a total of about 3 million subpixels. According to ISO 9241-307 (class II), a maximum of 2 light and 2 dark pixels and in addition 5 light or 10 dark subpixels or an equivalent mix (1 light subpixel counts as 2 dark subpixels) are allowed to be defective.

Pixel	A pixel consists of 3 subpixels, normally red, green and blue. A pixel is the smallest element that can be generated by complete functionality of the display.
Subpixel	A subpixel is a separately addressable internal structure within a pixel that enhances the pixel function.
Cluster	A cluster contains two or more defective pixels or subpixels in a 5 x 5 pixel block.

Background lighting

LCD screens are operated with background lighting. The luminosity of the background lighting can decrease during the period of use of the notebook. However, you can set the brightness of your screen individually.

Synchronising the display on the LCD screen and an external monitor

For more information, please refer to the chapter ["Key combinations"](#), [Page 42](#) under "Display output, switch between".

Using the device as a Tablet PC

You can execute commands as follows:

- using the stylus pen (supplied with your device).
- using your fingers

Using fingers

You can execute certain commands by using your finger tip on the touchscreen of your device.



Everything which you can select or activate using your finger tip can also be selected or activated using the pen.


Calibrate the Dual Digitizer for finger-based operation of the device




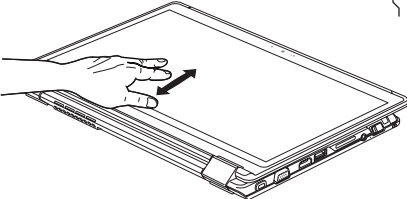



For instructions on how to calibrate your device to use Dual Digitizer Technology, please refer to chapter ["Calibrating the pen", Page 35](#).


Please note: There are separate calibration programs available for calibrating the stylus pen and for calibrating finger-based operation. Do not use the calibration tool for the stylus pen to calibrate finger-based operation.

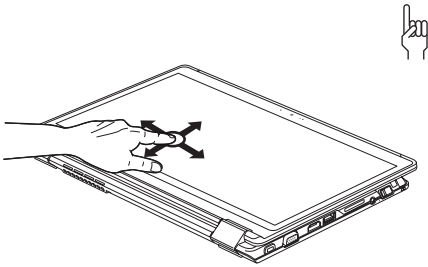Actions with one finger


Action	Description
Selecting objects (click with the left mouse button)	► With your finger, tap once briefly on the object.
Starting programs (double-click with the left mouse button)	► With your finger, tap twice briefly in quick succession on the program icon.
Moving objects/windows (drag with left mouse button pressed, Drag & Drop)	 <p>► Place a finger directly on the object/window, hold the finger pressed against the touchscreen and move the desired object/window.</p>
Opening a context menu (click with the right mouse button)	<p>► Touch the desired item once with your finger tip. Keep the finger tip pressed against the touchscreen.</p> <p>The context menu appears.</p>
Moving the cursor	► Position one finger on the touchscreen and move the finger in the desired direction.

Actions with two fingers

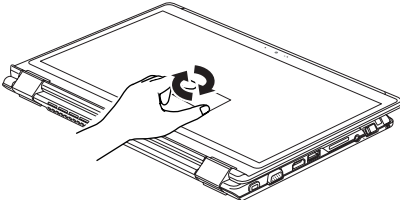Action	Description
Scrolling	<div></div> <div><ul style="list-style-type: none">► Position two fingers on the touchscreen.► Move your fingers upwards to scroll up.or<ul style="list-style-type: none">► Move your fingers downwards to scroll down.</div>
Rotating	<div></div> <div><ul style="list-style-type: none">► Position the thumb on the touchscreen, then turn the picture clockwise or counter-clockwise using your index finger.</div>

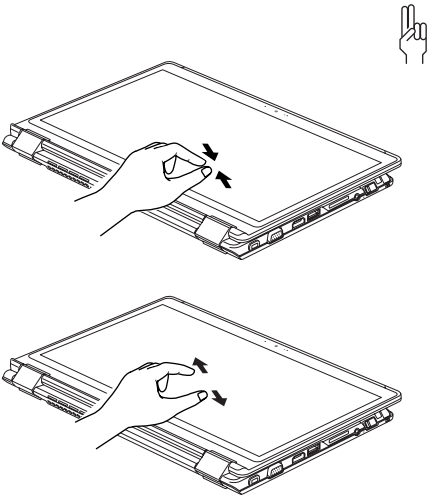Action	Description
Increasing or decreasing the view	 <p>► Position two fingers on the touchscreen and move them apart to increase the view.</p> <p>or</p> <p>► Position two fingers on the touchscreen and move them together to decrease the view.</p>
Blocking context-sensitive menus	<p>► With two fingers, tap twice briefly in quick succession on the touchscreen.</p>

Using the stylus pen

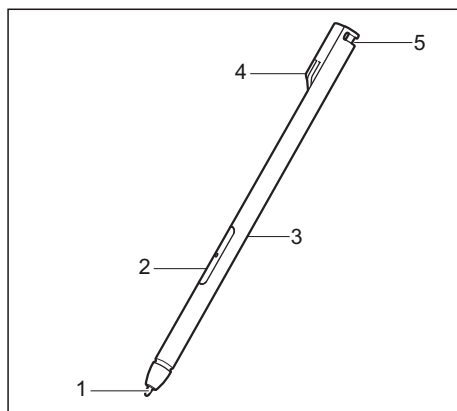

- 1 = pen tip
- 2 = pen button (= delete function)
- 3 = pen button (= right mouse button)
- 4 = charging contacts
- 5 = eyelet for optional pen strap

You can use the pen on your Tablet PC as an electronic writing implement to select items, and to navigate through programs on it. Programs that support handwriting recognition also allow you to write characters directly on the screen with the pen. You can also use the pen as a drawing tool.

A pen tether is available as an optional extra and you can use this to tie the eyelet on the pen to the eyelet on the Tablet PC.



Use only the pen provided with your Tablet PC. Do not use substitutes that were not designed for your Tablet PC. Replace the stylus tip if it is worn. The warranty does not cover a scratched screen.

While writing, you should take care not to scratch the surface of the display (e.g. with a wristwatch or bracelet).



To prevent the pen becoming jammed in its slot, make sure that you always insert the pen into its slot the correct way round (the charging contacts on the pen point towards the rear side of the Tablet PC).



The Tablet PC's pen is an electronic instrument that can be damaged if used improperly. Handle the pen with care.

The following list contains guidelines for proper pen handling:

- Do not gesture with the pen.
- Do not use the pen as a pointer.
- Do not use the pen on surfaces other than the screen of the Tablet PC.
- Do not try to turn the thumb grip on the pen. The grip is used to place the pen in its slot or to remove it from the slot.
- Never store the pen with the tip bearing the weight of the pen (e.g. with the tip down in a pen holder). If the pen is stored with the tip pointing down, this may have an adverse effect on the pen mechanism (particularly at high temperatures). In this case the pen tip may react as though it is constantly being pressed down. To avoid damage, the pen should be stored in the slot when not in use.

The pen can be influenced by electromagnetic fields (cursor quivers or jumps). There may be a few areas on the screen where the cursor quivers slightly in spite of pressing the pen down firmly.

The screen responds to entries made with the tip of the finger or the pen when the tip of the finger or the pen is in direct contact with the screen.

You can use the pen to run all functions for which you would otherwise use a mouse.

Handling	Mouse	Pen
Selecting menu items	Click with the left-hand mouse button.	Touch the menu entry with the pen tip.
Starting programs	Double click with the left-hand mouse button.	Briefly touch the program icon twice with the pen tip.
Moving an object/window	Drag with the left-hand mouse button held pressed.	Place the pen tip directly on the object/window. Hold the pen tip pressed against the screen. Move the desired object/window.

Opening a context menu	Click with the right-hand mouse button.	Place the pen directly on the required element and hold the pen pressed against the screen.
Moving the cursor	-	Place the pen tip directly on the screen.


Energy saving functions of the pen

To save energy, the pen automatically switches off after 10 minutes of inactivity and is then in power saving mode.

The pen automatically returns to normal operating mode after the next contact with the pen tip.

Charging the pen battery

The pen contains an integrated battery, which is automatically charged when the pen is fully inserted into its slot. The pen is also charged when the notebook is in power saving mode or is switched off. A charging time of approximately 15 seconds is sufficient to enable the pen to be used for 90 minutes again.

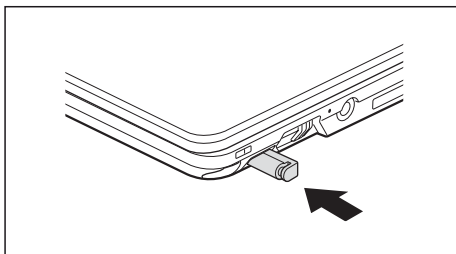

- Insert the pen fully in the slot.
- ↳ After a charging period of approximately 5 minutes, the pen battery is fully charged.

Setting the pen

Operating system	Menu
Windows 10	You can make various settings for the pen under <i>System Control - Hardware and Sound - Pen and Touch</i> .

Calibrating the pen


Via the operating system, you must calibrate your tablet PC before first use with the pen, so that it recognises the pen as accurately as possible.

You should also always repeat the calibration if the co-ordination between the pen and cursor movement deteriorates.

Operating system	Menu
Windows 10	To calibrate, call up the <i>Hardware and Sound / Tablet PC Settings</i> function in the Control Panel. You need to calibrate both portrait and landscape formats.

Attach the pen tether (optional)

You can attach the pen with a pen tether (available as an option) to prevent it being dropped or becoming lost.

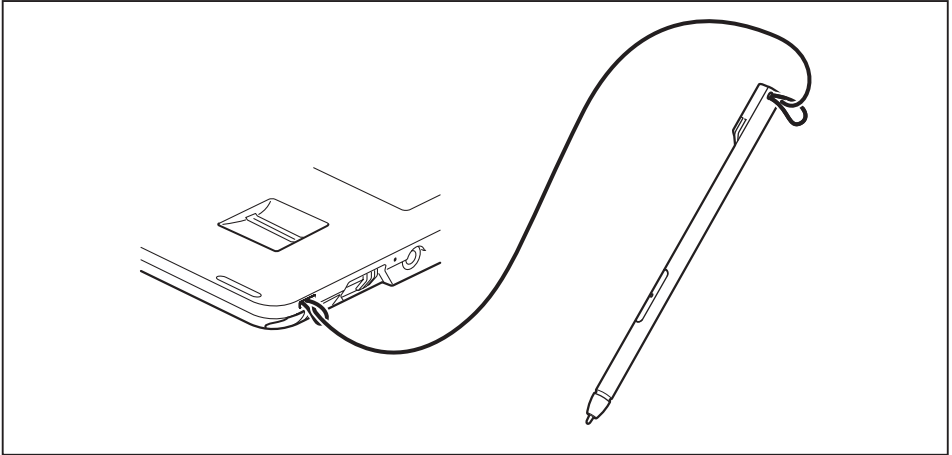

- Secure one end of the pen tether to the pen and the other end of the pen tether to the notebook.

Using the device as a notebook


Touchpad and touchpad buttons



Keep the touchpad clean. Protect it from dirt, liquids and grease.

Never use the touchpad if your fingers are dirty.

Do not rest heavy objects (e.g. books) on the touchpad or the touchpad buttons.

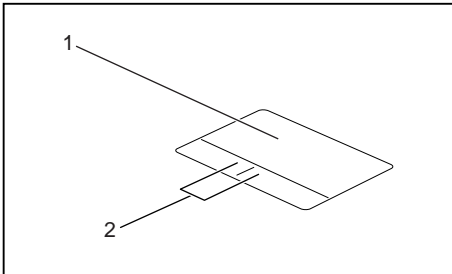

1 = Touchpad

2 = Touchpad buttons

You can move the cursor using the touchpad.

The touchpad buttons allow you to select and execute commands. They correspond to the buttons on a conventional mouse.



You can also deactivate the touchpad using a keyboard shortcut, so that you cannot move the cursor unintentionally (see chapter ["Key combinations", Page 42](#)).

Moving the pointer

- Move your finger on the touchpad.
- ↳ The pointer will move.

Selecting an item

- Move the pointer to the item you wish to select.
- Tap the touchpad once or press the left button once.
- ↳ The item is selected.

Executing commands

- Move the pointer to the field you wish to select.
- Tap the touchpad twice or press the left button twice.
- ↳ The command is executed.

Dragging items

- ▶ Select the desired item.
- ▶ Press and hold the left button and, with your finger on the touchpad, drag the item to the desired position.
- ↳ The item will be moved.

Switching the Touchpad on and off



You can switch the Touchpad on and off using a key combination, see ["Key combinations", Page 42](#).

Keyboard



The keyboard of your notebook is subject to continuous wear through normal use. The key markings are especially prone to wear. The key markings are liable to wear away over the life of the notebook.


The keyboard has been designed to provide all the functions of an enhanced keyboard. Some enhanced keyboard functions are mapped with key combinations.











The following description of keys refers to Windows. Additional functions supported by the keys are described in the relevant manuals supplied with your application programs.

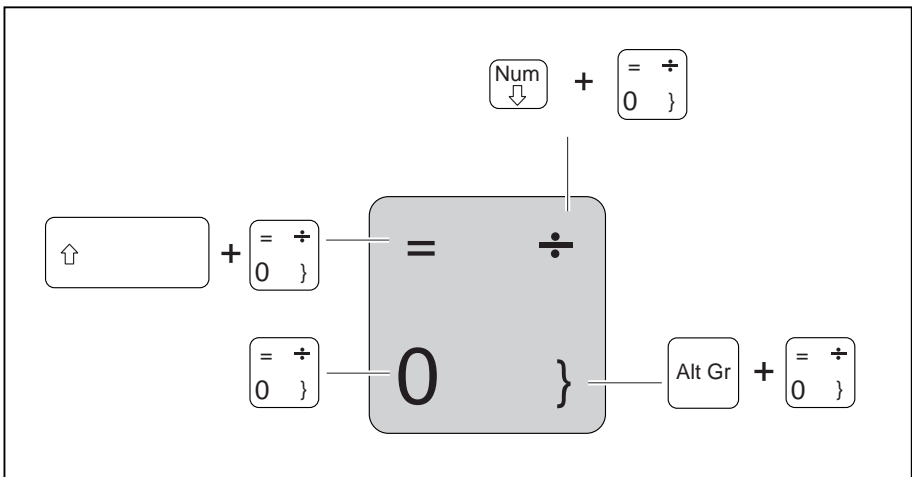The figure below shows how to access the different characters on keys with overlaid functions. The example applies when the Caps Lock key has not been activated.



The illustrations shown below may differ from your actual device.




Key	Description
	Backspace key The Backspace key deletes the character to the left of the cursor.
	Tab key The Tab key moves the cursor to the next tab stop.
	Enter key (return) The Enter key terminates a command line. The command you have entered is executed when you press this key.
	Caps Lock key The Caps Lock key activates uppercase mode. In Caps Lock mode, all of the characters you type appear in upper case. In the case of overlay keys, the character printed on the upper left of the key will appear when that key is pressed. To cancel the Caps Lock function, simply press the Caps Lock key again.
	Shift key The Shift key causes uppercase characters to appear. In the case of overlay keys, the character printed on the upper left of the key appears when that key is pressed.
	Fn key The  key enables the special functions indicated on overlay keys (see " Key combinations ", Page 42).
	Cursor keys The cursor keys move the cursor in the direction of the arrow, i.e. up, down, left, or right.
	Windows key The Windows key switches between the start screen and the last used application.
	Menu key The Menu key opens the menu for the active application.

Virtual numeric keypad

To provide the convenience of a numeric keypad, your keyboard is equipped with a virtual numeric keypad. The special keys of the virtual numeric keypad are recognisable by the numbers and symbols printed in the upper right corner of each key. If you have switched on the virtual numeric keypad, you can output the characters shown on the upper right of the keys.

i

The keyboard layout shown below may differ from your actual device.

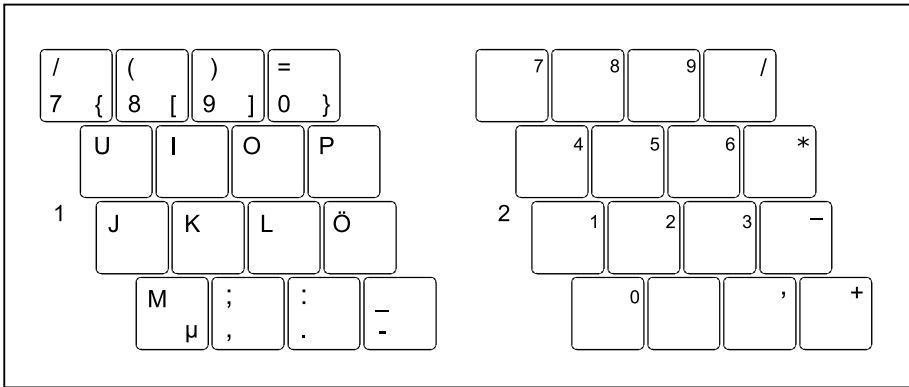

1 = Valid characters when the ☐ Num key is not activated

2 = Valid characters when the ☐ Num key is activated

Further information about the status indicators can be found in chapter ["Status indicators", Page 20](#).

Country and keyboard settings

- Change the country and keyboard settings as described in the documentation for your operating system.

Key combinations



The following description of key combinations applies to Windows operating systems. Some of the following key combinations may not function in other operating systems or with certain device drivers.

















Other key combinations are described in the relevant manuals supplied with your application programs.














Key combinations are entered as follows:

- ▶ Press the first key in the combination and keep it pressed.
- ▶ While holding the first key down, press the other key or keys in the combination.



If the key combination  +  is pressed: The special functions of the Fn keys can be executed by pressing the keys directly without also having to press the Fn key.

Combination	Description
 + 	Switching the microphone on/off This key combination enables and disables the microphone.
 + 	Switching the loudspeakers on and off This key combination switches your notebook's loudspeakers off and on.
 + 	Decrease volume This key combination reduces the volume of the internal loudspeakers.
 + 	Increase volume This key combination increases the volume of the internal loudspeakers.
 + 	Switching the wireless components on / off This key combination switches the wireless components off or on.
 + 	Switching the touchpad and touchpad buttons on/off This key combination switches the touchpad and the touchpad buttons on or off.
 + 	Decrease screen brightness This key combination decreases the brightness of the screen.
 + 	Increase screen brightness This key combination increases the brightness of the screen.

Combination	Description
 + 	Power management functions Use this key combination to activate the power management functions (see chapter "Using the power-management features", Page 49).
 + 	Toggle output screen Use this key combination to select which screen(s) is/are used for display if an external monitor is connected. Screen output is possible: <ul style="list-style-type: none"> • only on the notebook's LCD screen • on the LCD screen of the notebook and the external monitor at the same time • only on the external monitor This setting is useful if you would like a high resolution and a high refresh rate on an external monitor.
 + 	Activate/deactivate keyboard backlight On backlit keyboards, this key combination activates or deactivates the backlight.
 + 	Switch between open applications Use this key combination to switch between several open applications.
 +  + 	Windows security/Task-Manager This key combination opens the Windows security/Task-Manager window.
 + 	Back tab This key combination moves the cursor back to the previous tab stop.



Key combinations using the Windows keys are detailed in the manual for your operating system.

Camera (dependent on configuration)

Depending on the software used, you can use your camera to take pictures, record video clips or take part in web chats.

The camera has its own status indicator. The status indicator lights up when the camera is active.

- The picture quality depends on the lighting conditions and the software being used.
- You can only use the camera with a particular application (e.g. an Internet telephony program or a video conferencing program which supports a camera).
- When using the camera, the notebook support must not shake.
- The camera automatically adjusts itself to the current light level. For this reason the LCD display may flicker while the light level is adjusted.



Further information on use of the camera and additional settings can be found in the Help function of the program which uses the camera.

Rechargeable battery

During mobile use, the notebook runs on its built-in battery. You can increase the life of the battery by caring for the battery properly. The average battery life is around 800 charge/discharge cycles.

You can extend the battery life by taking advantage of the available energy saving functions.

You can replace the rechargeable battery in the notebook without switching the device off first. The notebook has a built-in buffer battery and a status indicator that shows whether the device is ready for battery replacement (see ["Status indicators", Page 20](#)).

Charging, caring for and maintaining the battery

The notebook battery can only be charged when the ambient temperature is between 5°C / 41°F and max. 35°C / 95°F.

You can charge the battery by connecting the notebook to the mains adapter (see ["Mains adapter connecting", Page 17](#)).

Please note that the battery will not be charged if the battery status is between 90% and 100%. If the battery status is less than 90% and the mains adapter is connected, the battery will be charged to 100%.

If the battery status is low, you will hear a warning alarm. If you do not connect the mains adapter within approximately five minutes of the warning alarm described above, your notebook will switch off automatically.

monitoring the battery charging level

Windows also has a "Battery status meter" in the taskbar for monitoring the battery capacity. When you place the mouse pointer on the battery symbol, the system displays the battery status.

Battery storage

Store battery packs in a dry environment at a temperature between 0°C / 32°F and 30°C / 86°F. The lower the temperature at which the batteries are stored, the lower the rate of self-discharge.



If you will be storing batteries for a longer period (more than two months), the battery charge level should be approx. 30 %. To prevent exhaustive discharge which would permanently damage the battery, check the level of charge of the battery at regular intervals.

To be able to make use of the optimal charging capacity of the batteries, the battery should be completely discharged and then fully recharged.



If you do not intend to use a battery for long periods of time, remove it from the notebook. Never store a battery in the device.

Removing and installing the battery



Only use batteries approved by Fujitsu for your notebook.

Never use force when fitting or removing a battery.

Make sure that no foreign bodies get into the battery connections.

Never store a battery for long periods in the discharged state. This can make it impossible to recharge.

Removing the battery



Please observe the safety notes in chapter ["Important notes", Page 12](#).


Remove the power plug from the mains outlet!

- ▶ If the notebook is connected to a USB Type-C™ Port Replicator, release the USB cable (USB Type-C™) to disconnect the connection.



You can replace the rechargeable battery in the device without switching the device off first. The device has an integrated buffer battery for this purpose. If the battery is unlocked while the device is in operating mode, Sleep Mode will automatically be activated. Before removing the battery, check the battery replacement status indicator (see ["Status indicators", Page 20](#)).

- ▶ Close the LCD screen.
- ▶ Remove all the cables from the device.
- ▶ Turn the device over and place it on a stable, flat and clean surface. If necessary, lay an anti-slip cloth on this surface to prevent the device from being scratched.

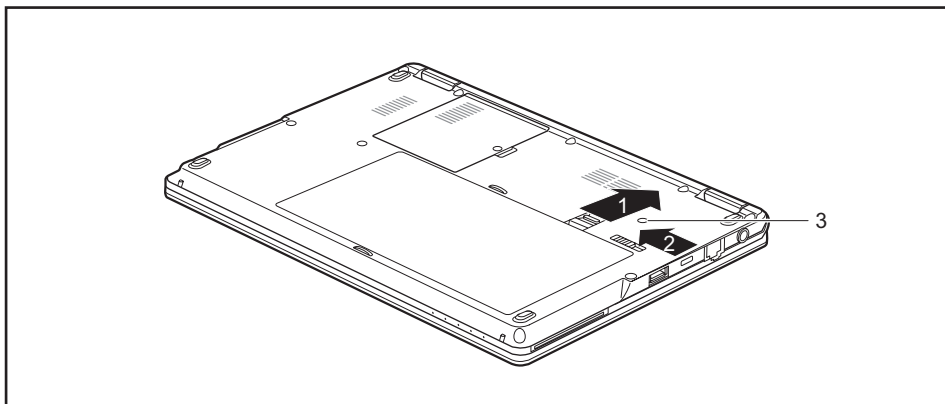

- ▶ Slide the battery release in the direction of the arrow (1) and hold it in place.


- ▶ Slide the battery release in direction of the arrow (2).
- ↳ As soon as the battery is unlocked, the battery replacement status indicator (3) lights up indicating whether the device is ready for the battery replacement (see ["Status indicators", Page 20](#)).

i

The status indicator only lights up if the device is switched on during the battery replacement.


i

If the device is not ready for the battery replacement and the battery is replaced nonetheless, the device will switch itself off. Any data not saved may be lost.

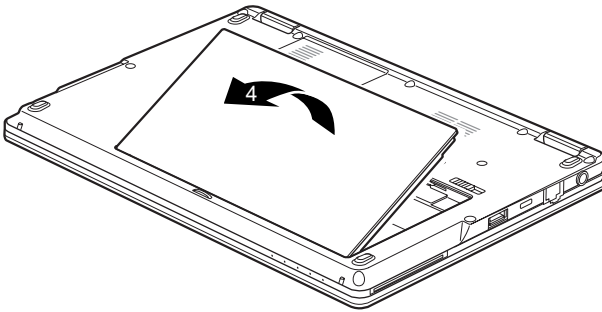

- ▶ Lift the battery out of the battery compartment (4).

Inserting battery

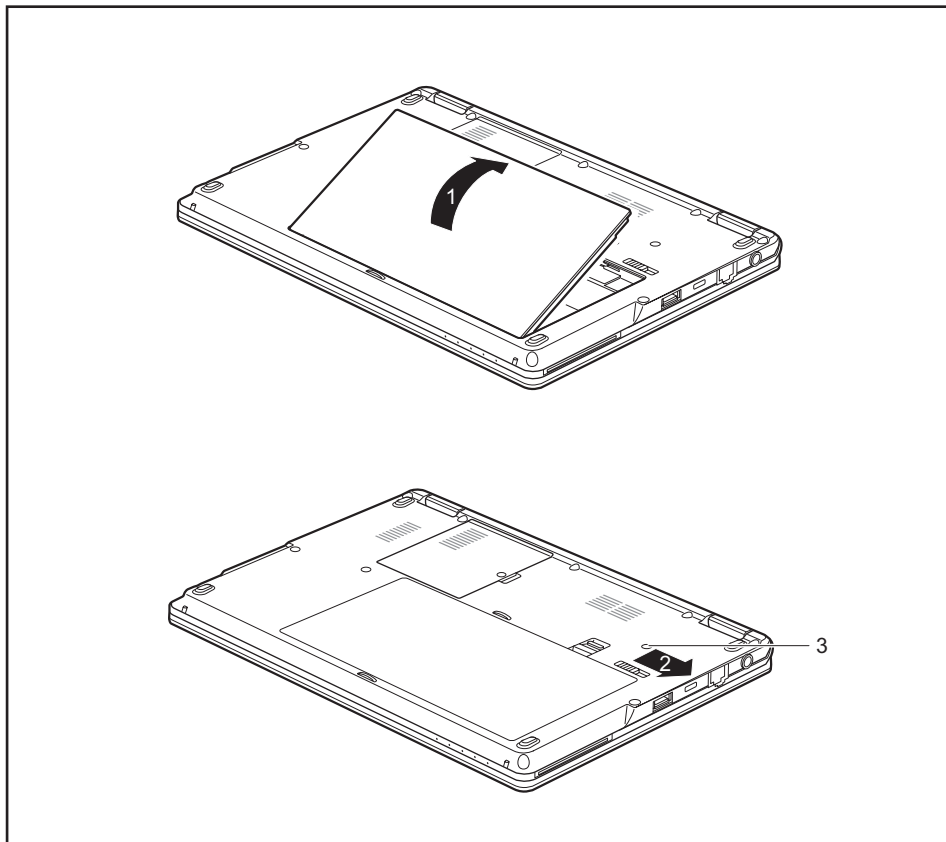

- ▶ Insert the battery in the battery compartment (1).
- ▶ Slide the battery release in the direction of the arrow (2).
- ↳ The battery is secured. The battery replacement status indicator (3) goes out.
- ▶ Turn the notebook the right way up again and place it on a flat surface.
- ▶ Reconnect the cables that were previously disconnected.

Using the power-management features

The notebook uses less power when the available power-management features are used. You will then be able to work longer when using the battery before having to recharge it.



Power efficiency is increased and environmental pollution reduced. By choosing the best power options, you can make significant savings and at the same time help protect the environment.

When you close the LCD screen, depending on the setting in Windows, the notebook automatically enters a power saving mode.

The recommended settings for the Windows energy saving functions are predefined as "Fujitsu Computer EcoSettings" in the Power Options of the Control Panel and can be displayed there.

- ▶ Select the power management functions in your Control Panel.



If you need further information about an option, you can get help with most settings by pressing **[F1]** to open the Microsoft Help.

When the notebook is in power-saving mode, the following must be remembered:



During power saving mode, open files are held in the main memory or in a swap file on the hard disk.

Never turn off your notebook while it is in a power saving mode. If the built-in battery is nearly empty, close the open files and do not go into power saving mode.

If you do not intend to use your notebook for a long period of time:

- ▶ Exit power saving mode if necessary via the mouse or keyboard or by switching on the notebook.
- ▶ Close all opened programs and completely shut down the notebook.

Memory cards

Your notebook is equipped with an integrated memory card reader.




Observe the manufacturer's instructions when handling the memory cards.

Supported formats

Your notebook supports the following formats:

- Secure Digital (SD™ card)
- SDHC
- SDXC

Inserting the memory card

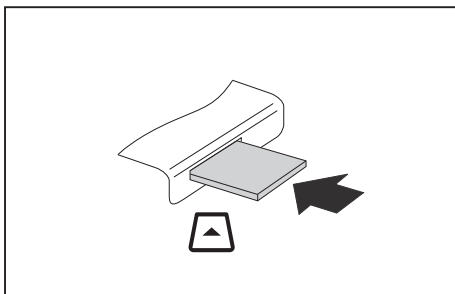


- ▶ Carefully push the memory card into the slot until you feel it click into place. The label should be facing upward. Do not apply excessive force, as otherwise the delicate contact surfaces could be damaged.
- ↳ Depending on the particular type used, the memory card may protrude slightly from the slot.

Removing the memory card



In order to protect your data, always follow the correct procedure for removing the card (see the documentation for your operating system).

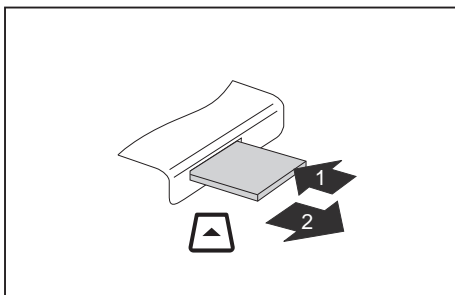

- ▶ Press on the memory card (1).
- ↳ The memory card is released and can now be removed.
- ▶ Pull the memory card out of the slot (2).

Loudspeakers and microphones

You will find information about the exact position of speakers and microphones in chapter ["Ports and controls", Page 9](#).

Please refer to chapter ["Key combinations", Page 42](#) for information on setting the volume and also enabling/disabling the loudspeakers using key combinations.



If you attach an external microphone, the built-in microphone is disabled.

When you connect headphones or external speakers, the built-in speakers are disabled.

Information on connecting headphones and a microphone can be found in ["Connecting external devices", Page 82](#).


SIM card

A SIM card (Subscriber Identity Module) is a chip card which is inserted in a mobile phone or notebook and, together with an integrated UMTS/LTE module, enables access to a mobile network.



When handling SIM cards, follow the instructions supplied by the provider.


Inserting the SIM card

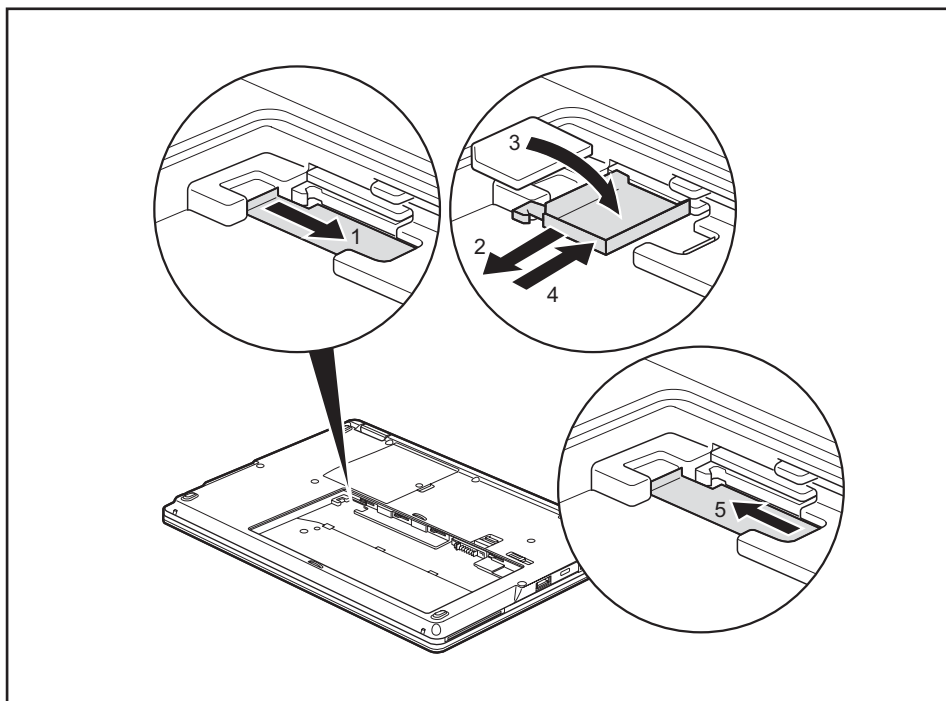

- ▶ Remove the battery, see ["Removing the battery", Page 46.](#)
- ▶ Slide the latch in the direction of the arrow (1) as far as it will go.
- ▶ Pull the SIM card holder out of the slot (2).
- ▶ Insert the SIM card (3) into the SIM card holder as shown in the diagram on the SIM card holder.
- ▶ Slide the latch in the direction of the arrow (4) as far as it will go, to lock the SIM card carrier.
- ▶ Install the battery again, see ["Inserting battery", Page 48.](#)

Removing the SIM card

- Remove the battery, see ["Removing the battery", Page 46.](#)

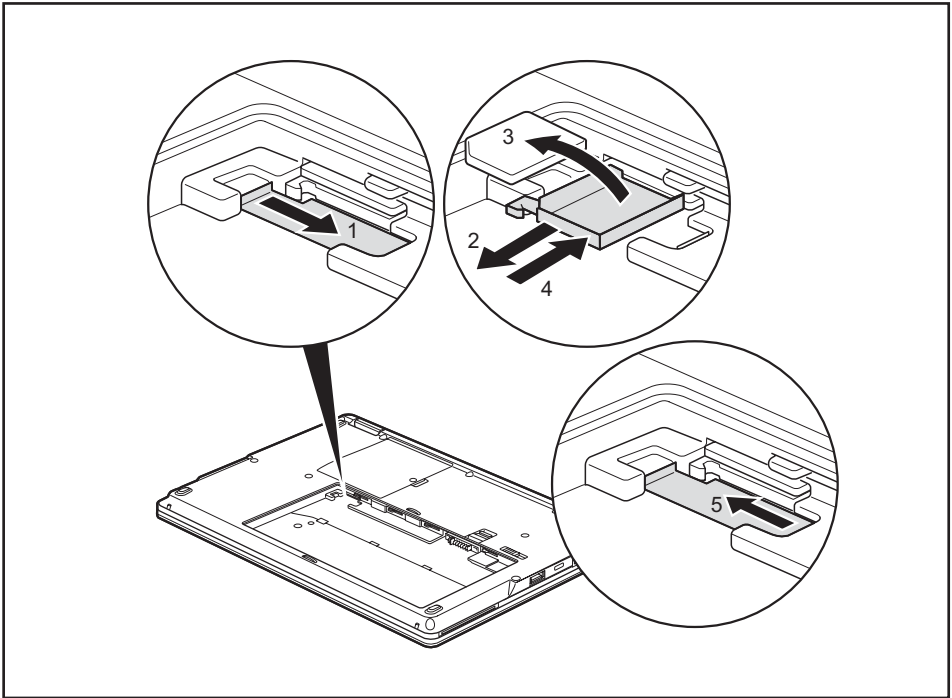

- Slide the latch in the direction of the arrow (1) as far as it will go.
- Pull the SIM card holder out of the slot (2).
- Remove the SIM card from the SIM card holder (3).
- Push the SIM card holder back into the slot (4).
- Slide the latch in the direction of the arrow (5) as far as it will go, to lock the SIM card carrier.
- Install the battery again, see ["Inserting battery", Page 48.](#)

Wireless LAN / Bluetooth / LTE radio components (configuration dependent)



The installation of radio components not approved by Fujitsu will invalidate the certifications issued for this device.



Depending on the device configuration you ordered, your device will be equipped with Wireless LAN, Bluetooth or LTE.

Switching the wireless components on and off

- ▶ To switch the radio components on or off, press the key combination **Fn** + **F5**.
- ↳ The wireless component indicator will illuminate when one or more wireless components are switched on.



If you switch off the radio components, the Bluetooth and LTE modules and the wireless LAN transmission unit (antenna) are also switched off.

Pay attention to the additional safety notes for devices with radio components provided in the "Safety/Regulations" manual.

Details on using a Wireless LAN can be found in the online help system included in the Wireless LAN software.

For further information about LTE, please contact your service provider.

Setting up WLAN access

- Requirement: A WLAN must be available and you must have the corresponding access information.



Information on configuring the WLAN access can be found in the documentation for your operating system.

Access via LTE (configuration dependent)

If you ordered an integrated LTE module with your system, you can enjoy optimum reception and maximum energy efficiency without awkward cables or antennas. An installed LTE module is ready for immediate use.

If you did not order an LTE module, you can purchase the accessories for LTE reception from your retailer or your Fujitsu Technology Solutions dealer.


For information about connecting with the LTE network, please see the documentation for the hardware that you will be using.

You can connect your device to the internet via LTE. To do this, use one of the following connection types:

- Integrated LTE module (the type depends on your model variant)
- a USB dongle (a USB stick with your mobile phone provider's SIM card)
- a mobile end-device (e.g. mobile phone with Bluetooth or cable connection)

Ethernet and LAN

The internal network module of your notebook supports Ethernet LAN. You can use it to establish a connection to a local network (LAN = Local Area Network).

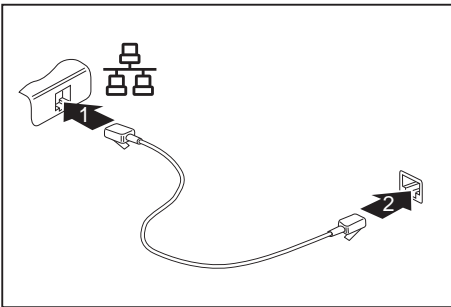

- Connect the network cable to the LAN port of the notebook (1).
- Connect the network cable to your network connection (2).



Your network administrator can help you to configure and use the LAN connections.

The network cable is not included in the delivery scope. This type of cable can be obtained from a specialist dealer.


Your USB Type-C™ Port Replicator (optional)

Your Port Replicator is a device that helps you to quickly connect your notebook to your peripheral devices, such as a monitor, printer, etc.

The features offered by the Port Replicator include standard ports for monitor, audio and other USB devices, such as mouse and keyboard.

You need only connect the notebook to the Port Replicator in order to work with your peripheral devices.

Ports on the Port Replicator

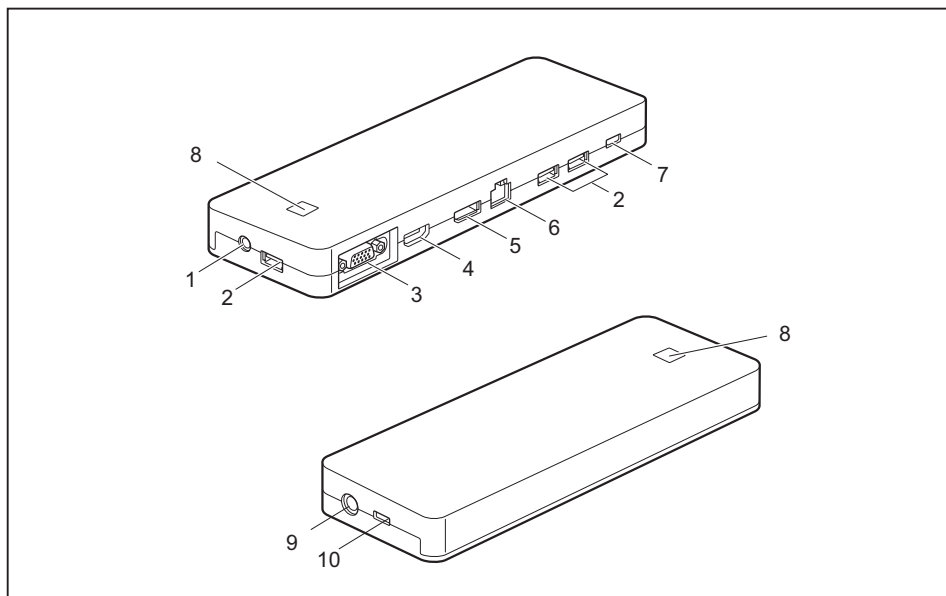

1 = Combined headphones/microphone port

2 = USB port 3.0

3 = VGA monitor port

4 = HDMI

5 = DisplayPort

6 = LAN port

7 = USB 3.0 port for data connection
(USB Type-C™)

8 = ON/OFF switch with power-on indicator

9 = DC input connector (DC IN)

10 = USB 3.0 port for data connection
and power supply for the notebook
(USB Type-C™)


Setting up the port replicator



Select a suitable location for the Port Replicator before setting it up.
Follow the instructions below when doing so:

- Never place the port replicator on a soft surface (e.g. carpeting, upholstered furniture, bed). This can block the air vents of the notebook and cause overheating and damage.
- Place the port replicator on a stable, flat and non-slip surface. Please note that the port replicator's rubber feet may mark certain types of surface.
- Never place the port replicator and the mains adapter on a heat-sensitive surface.
- Do not expose the port replicator to extreme environmental conditions.
Protect the port replicator from dust, humidity and heat.

Connecting the mains adapter to the Port Replicator

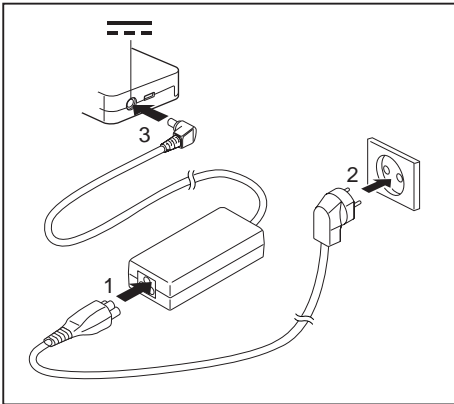


- Connect the power cable to the mains adapter (1).
- Plug the power cable into the mains socket (2).
- Connect the mains adapter cable to the DC jack (DC IN) of the Port Replicator (3).



When the notebook is connected to a Port Replicator, the operating system creates a hardware profile for the "Docked" mode. In this profile, for example, the setting is saved as to which monitor was last used for output. This profile will be loaded, as soon as the notebook is connected to a Port Replicator of the same type.


Connect the notebook to the port replicator

- ▶ Disconnect the mains adapter cable from the DC socket (DC IN) of the notebook.

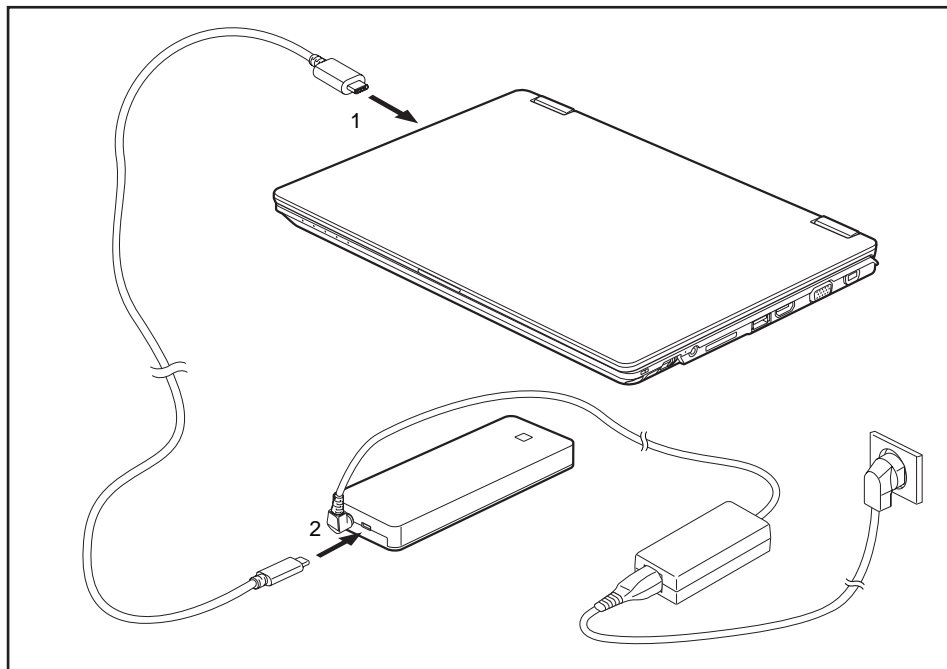

- ▶ Connect one end of the USB cable (USB Type-C™) to the USB 3.0 port with charging function (USB Type-C™) on the notebook (1).
- ▶ Connect the other end of the USB cable (USB Type-C™) to the USB 3.0 port for data connection and power supply (USB Type-C™) on the Port Replicator (2).

Switching on the notebook via the port replicator

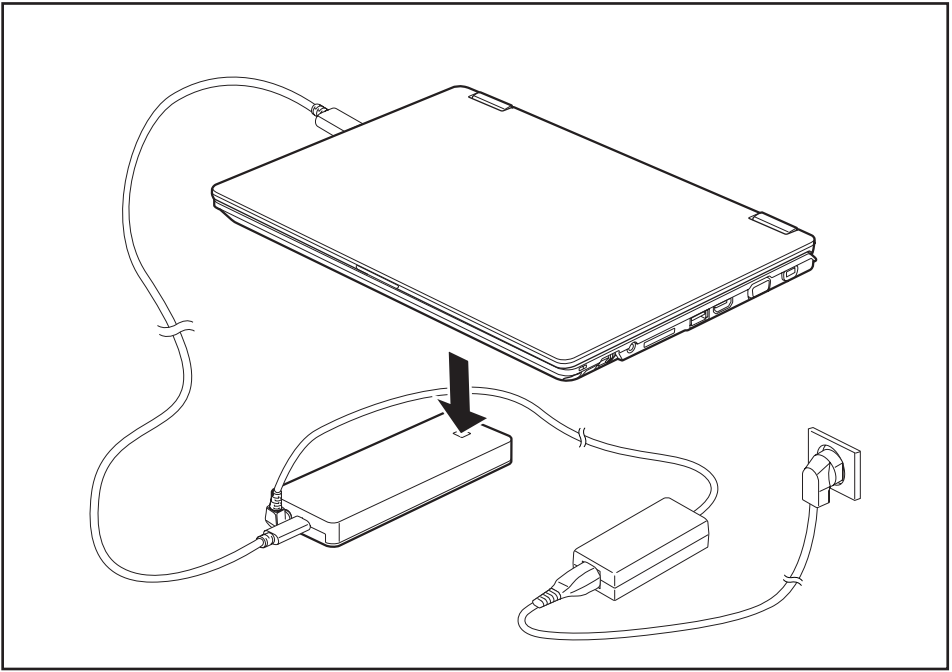

- Press the ON/OFF button on the port replicator to switch the notebook on.



You can configure the function of the ON/OFF switch under Windows (see ["Programming the ON/OFF button", Page 24](#)). The settings apply both to the ON/OFF switch of the notebook and to the ON/OFF switch of the Port Replicator.

Switching off the notebook via the Port Replicator

- Close all applications and shut down your operating system (please refer to the manual for the operating system).



If the notebook cannot be shut down properly, press the ON/OFF switch on the notebook for about four seconds. The notebook will switch itself off. Any data not saved may be lost.

Disconnecting the notebook from the Port Replicator

- Disconnect the supplied USB cable (USB Type-C™) from the USB 3.0 port (USB Type-C™) on the notebook.

Security functions

Your notebook has several security features that you can use to secure your system from unauthorised access.

This chapter explains how to use each function, and what the benefits are.



Please remember that in some cases, for example, forgetting your password, you may be locked out and unable to access your data. Therefore, please note the following information:

- Make regular backups to external data carriers such as external hard drives, CDs, DVDs or Blu-ray Discs.
- Some security functions need you to choose passwords. Make a note of the passwords and keep them in a safe place.

If you forget your passwords you will need to contact the our Service Desk. Deletion or resetting of passwords is not covered by your warranty and a charge will be made for assistance.

Brief overview of security functions




Detailed information about the security equipment of your device can be found in the "Professional Notebook" manual, on the "Drivers & Utilities" CD/DVD or on the Internet at ["http://www.fujitsu.com/fts/support/index.html"](http://www.fujitsu.com/fts/support/index.html).

Security functions	Type of protection	Preparation
Security Lock	Mechanical	Fit and lock the Kensington Lock Cable (accessory).
Fingerprint sensor (configuration dependent)	Biometric	Install the supplied fingerprint software.
Palm scanner (configuration dependent)	Biometric	Installing the supplied software
BIOS password protection	Password protection for <i>BIOS Setup</i> , operating system and hard disk with supervisor and user password. The passwords consist of a maximum of eight alphanumeric characters.	Specify at least one supervisor password in the <i>BIOS Setup</i> and activate the password protection for the operating system and hard disk as desired.
Boot from removable media	Prevents unauthorised booting of an operating system from external media (e.g. USB stick, USB CD-ROM drive etc.).	In the BIOS Setup, go to the <i>Security</i> menu and edit the option <i>Boot from Removable Media</i> .
Owner Information	Overlay service desk or owner information during the boot process.	In the BIOS Setup, go to the <i>Security</i> menu and edit the option <i>Owner Information</i> .
System Lock (configuration dependent)	The BIOS and the system can only be started with SmartCard and PIN.	Initialise the SmartCard in the BIOS.
SmartCard reader (configuration dependent)	PIN and SmartCard protection for operating system	To use the SmartCard reader functions, install the supplied (or other suitable) software.
Trusted Platform Module	Identification and authentication of the notebook	Define a supervisor password in the <i>BIOS Setup</i> and enable the TPM (<i>Security Chip</i>).

Setting up the fingerprint sensor (configuration dependent)

The fingerprint sensor can record an image of a fingerprint. With additional fingerprint software, this image can be processed and used instead of a password.

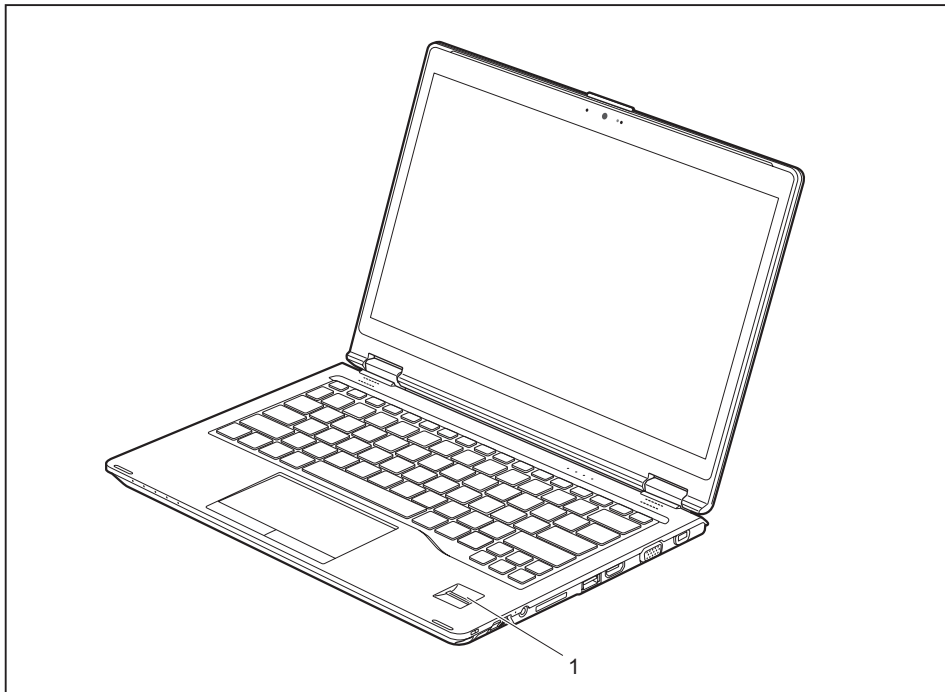

- You must install the fingerprint software in order to be able to use the fingerprint sensor (1).




The current *Workplace Protect* software for palm and fingerprint sensors can be found on the Internet at

["http://www.fujitsu.com/fts/solutions/business-technology/security/secure/index.html"](http://www.fujitsu.com/fts/solutions/business-technology/security/secure/index.html).

Configuring the palm sensor (configuration dependent)

The palm vein sensor can record the image of the pattern of the veins of the hand. This image is evaluated by additional software and can be used instead of a password.

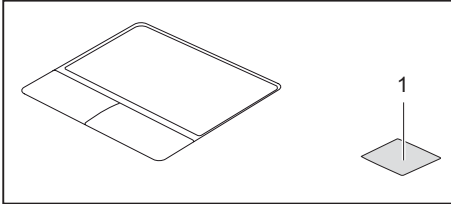

- To be able to use the palm vein sensor (1), you must install the software.



The current *Workplace Protect* software for palm and fingerprint sensors can be found on the Internet at


["http://www.fujitsu.com/fts/solutions/business-technology/security/secure/index.html"](http://www.fujitsu.com/fts/solutions/business-technology/security/secure/index.html).

Using the Security Lock

Your device comes with a Security Lock device for the Kensington Lock Cable. You can use the Kensington Lock Cable, a sturdy steel cable, to help protect your notebook from theft. The Kensington Lock Cable is available as an accessory.



Fujitsu recommends the use of a combination lock.

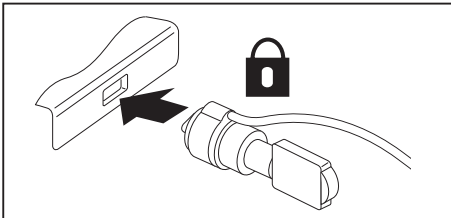

- Fit the Kensington Lock Cable on the device on your notebook.

Configuring password protection in BIOS Setup Utility



Before using the various options for password protection in the *BIOS Setup utility* to increase data security, please observe the following:

Make a note of the passwords and keep them in a safe place. If you forget your supervisor password you will not be able to access your notebook. Deletion of the password is not covered by your warranty and a charge will be made for assistance.



Your password can be up to 32 characters long and can contain letters, numbers and special characters. A distinction is made between upper and lower case.

When using special characters, you must remember that these are dependent on the country variants of the keyboard used.

Protecting BIOS Setup Utility (supervisor and user password)



If you have opened these operating instructions on the screen, we recommend that you print them out. You cannot call the instructions onto the screen while you are setting up the password.

The supervisor password and the user password both prevent unauthorised use of the *BIOS Setup Utility*. With the aid of the supervisor password you can access all of the functions of the *BIOS Setup Utility*, while the user password will only give you access to some of the functions. You can only set up a user password if a supervisor password has already been assigned.



Please refer to section ["Settings in BIOS Setup Utility", Page 98](#) for a description of how to call up and operate the *BIOS-Setup-Utility*.

Assigning the supervisor and user passwords

- ▶ Start the *BIOS Setup Utility* and go to the *Security* menu.
- ▶ Select the *Set Supervisor Password* field and press the Enter key.
 - ↳ With *Enter new Password*: you are asked to enter a password.
- ▶ Enter the password and press the Enter key.
 - ↳ *Confirm new Password* requires you to confirm the password.
- ▶ Enter the password again and press the Enter key.
 - ↳ *Changes have been saved* is a confirmation that the new password has been saved.
- ▶ To set the user password, select *Set User Password* and proceed exactly as when configuring the supervisor password.
 - ↳ If you do not want to change any other settings, you can exit *BIOS Setup Utility*.
- ▶ In the *Exit* menu, select the option *Save Changes & Exit*.
- ▶ Select *Yes* and press the Enter key.
 - ↳ The notebook is then rebooted and the new password comes into effect. It will now be necessary to first enter your supervisor or user password in order to open the *BIOS Setup Utility*. Please note that the user password only provides access to a few of the BIOS settings.

Changing the supervisor or user password

You can only change the supervisor password when you have logged into the *BIOS Setup Utility* with the supervisor password.

- ▶ Call the *BIOS Setup Utility* and go to the *Security* menu.
- ▶ When changing the password, proceed exactly as for password assignment.

Removing passwords

To remove a password (without setting a new password) perform the following steps:

- ▶ Start the *BIOS Setup Utility* and go to the *Security* menu.
- ▶ Highlight the *Set Supervisor Password* or *Set User Password* field and press the Enter key.
- ↳ You will be requested to enter the current password by the *Enter Current Password* prompt.
You will be requested to enter a new password by the *Enter New Password* prompt.
- ▶ Press the Enter key twice.
- ▶ In the *Exit* menu, select the option *Save Changes & Exit*.
- ▶ Select *Yes* and press the Enter key.
- ↳ The notebook will now reboot with the password removed.
Removing the supervisor password simultaneously deactivates the user password.

Password protection for booting of the operating system



With the supervisor password you have set in the *BIOS Setup Utility* (see section ["Assigning the supervisor and user passwords", Page 64](#)), you can also prevent starting of the operating system.

Activating system protection

- ▶ Start the *BIOS Setup Utility* and go to the *Security* menu.
- ▶ Select the *Password on Boot* option and press the Enter key.
- ▶ Select the desired option (*Disabled*, *First Boot* or *Every Boot*) and press the Enter key.
- ▶ Select the *Save Changes & Exit* option under *Exit*.
- ↳ The notebook reboots. You will be prompted to enter your password (the supervisor password).

Deactivating system protection

- ▶ Start the *BIOS Setup Utility* and go to the *Security* menu.
- ▶ Select the *Password on Boot* option and press the Enter key.
- ▶ Select the *Disabled* option and press the Enter key.
- ↳ If you do not want to change any other settings, you can exit *BIOS Setup Utility*.
- ▶ Select the *Save Changes & Exit* option under *Exit*.
- ↳ The notebook will reboot. The system is no longer password-protected.

Password protection for the hard disk

If a supervisor password has been assigned, a password for the hard disk can also be set in the *Hard Disk Security* menu.

The hard disk is protected by this password. Data on this hard disk can only be read into another system if the correct password has been entered.

SmartCard reader (configuration dependent)

SmartCards are not supplied as standard equipment. You can use all SmartCards that comply with the ISO standard 7816-1, -2 or -3. These SmartCards are available from various manufacturers.

With the appropriate software you can use your SmartCard as an alternative to password protection, but also as a digital signature, for encrypting your e-mails or for home banking.

We recommend that you always use two SmartCards. Always keep one of the SmartCards in a safe place if you are carrying the other SmartCard with you.

In order to be able to take advantage of all the security features of your notebook, you will need a CardOS SmartCard from Fujitsu.



The SmartCard can only be used with a PIN, offering maximum protection even if you lose the SmartCard. In order to maximise your security, the CardOS SmartCard is disabled if three incorrect attempts are made to enter the PIN.


When you use the CardOS SmartCard for the first time, you will either need to enter the preset PIN "12345678" or the PIN given to you by your systems administrator.

Inserting the SmartCard



Do not use force when inserting and removing the SmartCard.

Make sure that foreign objects do not fall into the SmartCard reader.

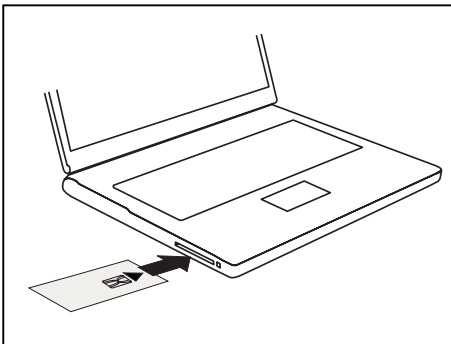

- Slide the SmartCard into the SmartCard reader with the chip facing upwards and to the front.

SmartCard SystemLock (dependent on configuration)

With *SystemLock* enabled, the device can only be started using an initialised SmartCard (SICRYPT, CardOS or Fujitsu) and a personal identification number (PIN). The SmartCard and PIN are checked during system booting in the BIOS, i.e. before the operating system is started.

SmartCard SystemLock		
SmartCard SystemLock	Not Installed	Item Specific Help
Install Single PC:	[Enter]	Installs the security for this PC, and creates a new SystemLock Admin SmartCard dedicated to this PC. SmartCard data will be overwritten. A correct SmartCard is required for a permanent installation
Install Group PC:	[Enter]	



All new SmartCards have a preset PIN (Personal Identification Number) and PUK (Personal Unblocking Key).
On SICRYPT and CardOS SmartCards, the value *12345678* is preset for the PIN and the PUK.

On Fujitsu cards, the value *0000* is preset for the PIN and the value *administrator* is preset for the PUK. For security reasons, we recommend that you change both PIN and PUK without fail.

Additional software (e.g. Smarty) is required so that the system can also check that the correct SmartCard is inserted while the system is running.



For information on how to uninstall *SystemLock*, please refer to "Uninstall SystemLock". A system which was protected using *SystemLock* can no longer be released.
Always create a backup copy of the SmartCard which was used.

Access rights of SmartCards

A new SmartCard initially only has a preset PIN and PUK. Access rights and the customised PIN and PUK are not assigned until the SmartCard is initialised. The SmartCard type depends on the access rights assigned to the card, as described below:

- User SmartCard: starting the system, changing the PIN
- SuperUser SmartCard: starting the system, changes in *BIOS Setup*, changing the PIN
- Service SmartCard: changes in *BIOS-Setup*, operating system boot-up not possible
- Admin SmartCard: starting the system, changes in *BIOS Setup*, changing the PIN, uninstalling *SystemLock*, initialising SmartCards, blocking SmartCards

The following table shows an overview of the rights granted with each type of SmartCard when a PIN or PUK is entered:

	User SmartCard		SuperUser SmartCard		Service SmartCard		Admin SmartCard	
	PIN	PUK	PIN	PUK	PIN	PUK	PIN	PUK
Start-up system	x		x				x	
Run BIOS Setup			x		x		x	
Change own PIN	x		x		x		x	x
Unblocking own blocked SmartCard		x*		x*		x*		x
Unblocking all blocked SmartCards								x
Generating user cards								x
Uninstall SystemLock								x

* *BIOS Setup* setting (*Unblock own SmartCard*)

Usually there is always one Admin SmartCard and at least one User or SuperUser SmartCard that will allow a system to be operated.


SmartCard user groups

User groups can be set up using *SystemLock*. This enables several systems to be started with one SmartCard. A user group consists of at least two systems. Each user that is allowed to start the systems is provided with one SmartCard. The user can start any of the systems using this SmartCard.

Basic information on setting up user groups

When installing *SystemLock*, the first PC in the user group is set up as a "Single PC". The Admin SmartCard generated during this process is used to set up the user group. *SystemLock* sets up each additional device as a "Group PC" during installation. The existing Admin SmartCard is inserted, information is read in and the device is added to the user group. The Admin SmartCard determines which user group the device belongs to.

If you use FTS-CardOS SmartCards, *SystemLock* can be administered via the Windows program "SystemLock Admin". "SystemLock Admin" allows you to conveniently manage *SystemLock* at the operating system level, create SystemLock Organisation Units and Groups, generate SmartCards for these Organisation Units or Groups, assign access authorisations for user cards at various levels and restore access authorisations using remote access. You can also change the SmartCard's PIN or PUK for yourself and other users and reactivate blocked cards. For a detailed description, see the "SystemLock Admin" Help manual.

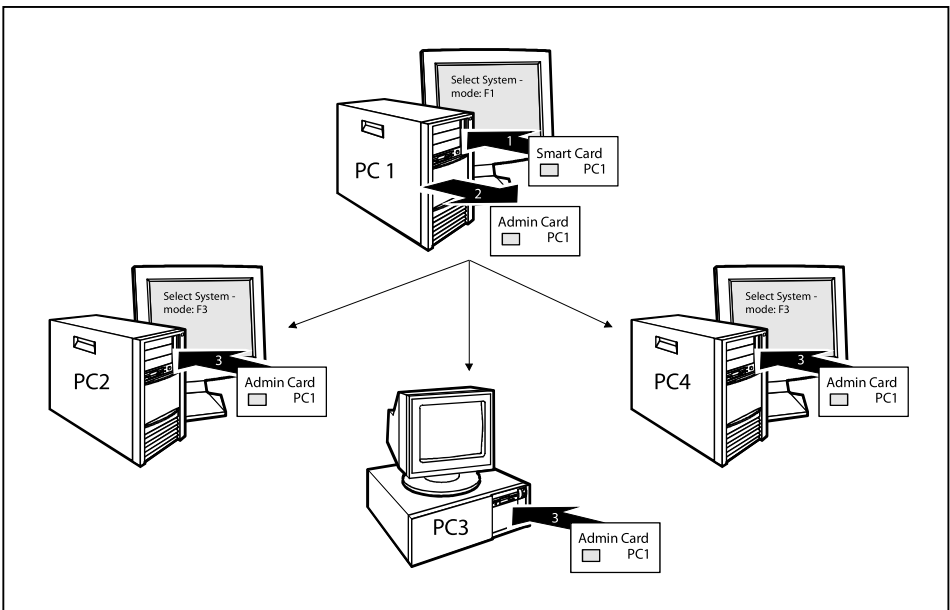

User SmartCards or SuperUser SmartCards must still be generated using *SystemLock* so that users can access the systems within the user group. Using a User SmartCard or SuperUser SmartCard a user can log on to each system within the user group.

Installing SystemLock

During initial installation, the first SmartCard becomes the Admin SmartCard. Together with the PUK, it has all access rights, and should therefore be kept in a safe place. It can only be used by the authorised user (administrator), e.g. to initialise user cards.

You need an Admin SmartCard if you want to set up a user group. You use the Admin SmartCard to add further systems to the user group.

Setting up the first system in a user group or a stand-alone system for use with SystemLock

- ▶ Start the device and call up BIOS Setup.
- ▶ From the *Security* menu, choose the option *SmartCard SystemLock*.
- ↳ The following SmartCard SystemLock menu will be displayed:

Security		
SmartCard SystemLock		Item Specific Help
SmartCard SystemLock	Not Installed	Installs the security from a SystemLock Admin SmartCard into this PC without modifying any data on the SmartCard.
Install Single PC	[Enter]	
Install Group PC	[Enter]	
<div>Enter PIN: []</div>		rect SmartCard is red for a permanent installation.

- ▶ Insert a new SmartCard in the reader and press Enter.



New SmartCards have a preset PUK (see above).
if you want to re-initialise a previously initialised SmartCard, you will need to know the PUK which was assigned to it.

- ▶ Enter the PUK.
- ↳ When the following appears:
 - *ACCESS DENIED* = You have entered an invalid PUK. After six failed attempts, the SmartCard will be blocked and can no longer be used.
- ▶ Enter a new PIN at the following prompt:
- ↳ *Enter new PIN:*
Confirm new PIN:



A number with 4 to 8 digits is acceptable for the new PUK. For security reasons, we recommend that you change the PUK for every SmartCard, and use an 8-digit number each time.

- ▶ Re-enter the new PIN to confirm.
 - ↳ When the following appears:
 - *PIN/PUK do not match* = You have confirmed the PIN incorrectly. You will be requested to re-enter the new PIN and reconfirm.
- Please wait a few seconds after confirming the new PIN: *SystemLock* is being installed.
- The following message will be displayed if installation is successful:


Setup Notice
Changes have been saved
[Continue]

- ▶ Now press the Enter key. The *SystemLock* administration menu will be displayed:

Security			
SmartCard SystemLock			Item Specific Help
SmartCard SystemLock	Installed		Allows to deactivate The smartcard security.
Uninstall:	[Enter]		
BIOS Recovery:	[Allowed]		
SmartCard and Pin	[Always required]		ATTENTION: Always check the BIOS password settings after uninstalling SystemLock.
SmartCard Initialization			
Admin SmartCard	[Enter]		
SuperUser SmartCard:	[Enter]		
User SmartCard:	[Enter]		
Service SmartCard:	[Enter]		NOTICE: Reinstalling a SinglePC implies re-initializing all of your smartcards
SmartCard Configuration			
Change PIN:	[Enter]		
Change PUK:	[Enter]		
Unblock SmartCard:	[Enter]		

- ▶ For security reasons, the preset PUK should always be changed before removing the new SmartCard. To do this, under *SmartCard Configuration*, select the option *Change PUK*, press the Enter key and input the new PUK.
- ▶ First enter the preset PUK.
 - ↳ *Enter the PUK:*
New SmartCards have a preset PUK (see above).

You will need to know the PUK assigned to the SmartCard if you want to re-initialise a previously initialised SmartCard.
- ▶ Enter the PUK.
 - ↳ When the following appears:
 - *ACCESS DENIED* = You have entered an invalid PUK. After six failed attempts, the SmartCard will be blocked and can no longer be used.
- ▶ Enter the new PUK as follows.
 - ↳ *Enter new PUK:*
Confirm new PUK:



A number with 4 to 8 digits is acceptable for the new PUK. For security reasons, we recommend that you change the PUK for every SmartCard, and use an 8-digit number each time.

- ▶ Re-enter the new PUK to confirm.
 - ↳ When the following appears:
 - *PIN/PUK do not match* = You have confirmed the PUK incorrectly. You will then be requested to re-enter and reconfirm the new PUK.
- Instructions on how to initialise additional SmartCards can be found in Section ["Carrying out administrator functions", Page 76](#).

- If you do not want to initialise any further SmartCards, press **[Esc]** and remove the Admin SmartCard. NEVER write the PIN or PUK on the SmartCard under any circumstances!



Keep the SmartCard and PIN/PUK in a safe place and protect them from unauthorised access.

Adding a system to a user group

- ▶ Start the device.
- ▶ Call up *BIOS Setup* and select the *SmartCard SystemLock* page from the *Security* menu.
- ↳ The following SmartCard SystemLock menu will be displayed:

Security			
SmartCard SystemLock		Item Specific Help	
SmartCard SystemLock	Not Installed	Installs the security from a SystemLock Admin SmartCard into this PC without modifying any data on the SmartCard.	
Install Single PC	[Enter]		
Install Group PC	[Enter]		
<div>Enter PIN: []</div>		rect SmartCard is red for a permanent installation.	

- ▶ Insert the Admin SmartCard for the user group.
 - ↳ Enter PIN:
 - ▶ Enter the PIN.
 - ↳ When the following appears:
 - *ACCESS DENIED* = You have confirmed the PIN incorrectly. You are then requested to enter and confirm the new PIN again. After three failed attempts, the SmartCard will be blocked and can then only be activated again by entering the PUK.
- Enter the PUK:

- ▶ Enter the PUK.
 - ↳ When the following appears:
 - *ACCESS DENIED* = You have entered an invalid PUK. After six failed attempts, the SmartCard will be blocked and can no longer be used.
- Please wait a few seconds after entering the PIN and PUK: *SystemLock* is being installed.
- The following message will be displayed if installation is successful:

Setup Notice
Changes have been saved
[Continue]

Now press the Enter key. The SystemLock administration menu will be displayed:

Security		
SmartCard SystemLock		Item Specific Help
SmartCard SystemLock	Installed	Allows to deactivate The smartcard security.
Uninstall:	[Enter]	
BIOS Recovery:	[Allowed]	
SmartCard and Pin	[Always required]	
SmartCard Initialization		ATTENTION: Always check the BIOS password settings after uninstalling SystemLock.
Admin SmartCard	[Enter]	
SuperUser SmartCard:	[Enter]	
User SmartCard:	[Enter]	
Service SmartCard:	[Enter]	NOTICE: Reinstalling a SinglePC implies re-initializing all of your smartcards
SmartCard Configuration		
Change PIN:	[Enter]	
Change PUK:	[Enter]	
Unblock SmartCard:	[Enter]	

Generate a user card for the device as described in Section ["Carrying out administrator functions", Page 76](#).

- ▶ If you do not want to initialise any further SmartCards, press Esc and remove the Admin SmartCard.

Carrying out administrator functions

If you have an internal SmartCard reader, you can switch on the device by inserting the SmartCard.
If you use the ON/OFF switch to switch the device on, the following message appears:

SystemLock

Insert a SmartCard.

► Insert the Admin SmartCard. The following message will be displayed:

↳ *Enter your PIN:*

You can now select:

F2=Setup, F3=Change PIN, F4=Administration

► Press the **F4** function key. The following message will be displayed:

↳ *Enter the PUK:*

► If you have entered the PUK correctly, you receive the following message:

↳ *PUK OK.*

Initialize another SmartCard or press ESC to abort?

F5=User, F6=SuperUser, F7=Admin, F8=Service, F9=Unblock SmartCard, F10=Uninstall

F5: Normal User SmartCard ("System" access rights):

Only allows system start-up, does not allow changes in BIOS Setup.

F6: Extended User SmartCard ("System and Setup" access rights):

Allows system start-up and changes in BIOS Setup.

F7: Admin SmartCard ("Admin" access rights):

Allows generation of further Admin SmartCards.

F8: Service SmartCard ("Service" access rights):

Only allows changes in BIOS Setup.

F9: Re-activate a blocked User SmartCard.

Enables a new user PIN entry.

F10: Uninstalls SystemLock.

Additional SmartCards should be produced either as Normal User SmartCards ("System") or as Extended User SmartCards ("System and Setup"). These then have restricted access to the device.

► Press the desired function key. The following message will be displayed:

↳ *Remove the SmartCard.*

► Remove the Admin SmartCard.

↳ *Insert a SmartCard.*



Keep the Admin SmartCard in a safe place and protect it from unauthorised access.

► Insert the next SmartCard. It will be initialised as required.

↳ The following message will be displayed:

Remove the SmartCard.



Always change the PIN and PUK for all further SmartCards. The PUK is used to re-activate a blocked SmartCard.

► Remove the User SmartCard and label it, e.g. with the name of the user. But NEVER write the PIN on the SmartCard under any circumstances!

Remote Access Enabling – F4

Requirement:

The device is centrally administered as part of an Organisation Unit and is registered in a SystemLock Admin database. The SmartCard used for the group installation must have been initialised beforehand using the *SystemLock Admin.EXE* Windows program (see ["SmartCard user groups", Page 69](#)).

In order to enable "remote" access to a device for a user, or to grant one-time "remote" access to a device for a guest or service technician, proceed as follows:

- ▶ Start the device.
- ↳ The prompt to *Insert a SmartCard* will appear.
- ▶ Press the F4 key.

SmartCard SystemLock	
Org Unit:	Company Department 1
PC Group:	Group 1
I-CODE 1:	0123456789ABCDEF
I-CODE 2:	0123456789ABCDEF

The following dialogue box will appear:

- ↳ The user must then contact the administrator or the administration hotline and inform them of the data and codes displayed .

The administrator then specifies the type of the once-only access rights:

User access	The user can boot the system once.
Service access	The user has one-time access to the BIOS for service purposes, without access to the SystemLock functions.
Admin access	The user has access to the BIOS and the SystemLock functions, e.g. for activating the device when the associated SmartCard has been lost.

An activation code will be generated that depends on the access rights granted; this will be given to the user by the Hotline.

The user must now press the Enter key on the PC to be activated, enter the first half (Code 1) of the activation code and confirm the entry by pressing Enter. The dialogue box for entering the second half (Code 2) of the activation code will appear. If an incorrect entry is made, there is no limit to the number of times the process can be repeated.

When all 32 characters of the activation code have been correctly entered, the device will boot with the rights assigned by the administrator, in the same way as if a corresponding SmartCard were inserted.



The activation code can only be used once to start the device; it immediately becomes invalid when the device boots. If you wish to switch off the device and start it again without your SmartCard, the procedure described above must be repeated each time.

Switch on the device using SystemLock

If you have an internal SmartCard reader, you can switch on the device by inserting the SmartCard. If you use the ON/OFF switch to switch the device on, the following message appears:

Insert a SmartCard.

- ▶ Insert your SmartCard.

↳ *Enter PIN:*

- ▶ Enter your PIN.

↳ When the following appears:

ACCESS DENIED = You have entered an incorrect PIN. After three failed attempts, the SmartCard will be blocked and can only be enabled again by entering the PUK.

↳ Depending on the rights assigned to your SmartCard, you can select the following functions when this message is displayed on the screen:

F2=Setup, F3=Change PIN

If your SmartCard has the appropriate rights, you can:

F2: start BIOS Setup.

F3: change PIN.

If you do not select a function, the system will boot up.

Start BIOS Setup F2

A SmartCard with the appropriate rights must be inserted (SuperUser, Service or Admin).

Changing PIN

It is possible to change the PIN for any initialised SmartCard.

- ▶ Press the function key F3.
- ▶ Enter the old PIN.
- ▶ Enter the new PIN.

i

A number with 4 to 8-digits is acceptable for the new PIN. For security reasons, we recommend that you change the PIN for every SmartCard, and use an 8-digit number each time.

- ▶ Confirm the new PIN.

Uninstall SystemLock

- ▶ Start the device.
- ▶ Follow the instructions given in section ["Carrying out administrator functions", Page 76](#). Select "Uninstall" to uninstall *SystemLock*. You can now use the device again without the need for a SmartCard.

Error messages

In this chapter you will find the error messages which are generated by the mainboard and the SmartCard reader.

Error	Cause
<i>Boot access denied</i>	The SmartCard has no access rights to the system.
<i>Check your SmartCard</i>	The SmartCard is either inserted incorrectly or it is not a suitable SystemLock SmartCard.
<i>SmartCard reader FAILURE</i>	An error has occurred on the serial port to the SmartCard reader. If this error occurs frequently, the connection between the SmartCard reader and the mainboard must be checked, or the SmartCard reader must be replaced. While the error is present, access to the system is blocked.
<i>Non-authorized SmartCard</i>	The SmartCard cannot be used on this device. The SmartCard has been configured for a different device.
<i>SystemLock installation FAILED:</i>	An error occurred while installing <i>SystemLock</i> . Do not switch off the device, insert the "BIOS Flash diskette" instead. Perform a BIOS update and try the installation process again.
<i>The SmartCard is blocked. Enter the PUK:</i>	You have exceeded the maximum allowed number of incorrect PIN entries. The SmartCard is blocked. Enter the administrator PUK to re-activate the SmartCard. You must then enter a new User PIN to restart the system.

Trusted Platform Module - TPM

To use the TPM, you **must** activate the TPM in the *BIOS Setup* before the software is installed. The condition for this is that you have assigned at least the supervisor password (see ["Security functions", Page 60](#)).

Enabling TPM

- Requirement: You have set a supervisor password, see ["Security functions", Page 60](#).
- ▶ Call up the BIOS Setup and select the *Security* menu.
- ▶ Mark the *TPM Security Chip Setting* field and press the Enter key.
- ▶ Select *Enabled* to activate the TPM.
- ↳ Once you have activated the TPM the *Clear Security Chip* option appears.
Select *Clear Security Chip* to delete the holder in the TPM. By clicking on *Enabled*, all secret keys (e.g. SRK - Storage Root Keys, AIK - Attestation Identity Keys etc.) generated by applications are deleted.
Please note that you will then no longer be able to access the data you have encrypted with the keys based on that holder.
- ▶ From the *Exit* menu, choose the option *Exit Saving Changes*.
- ▶ Press the enter key and select *Yes*.
- ↳ The notebook will restart, and TPM will be enabled after the reboot.


Disabling TPM

- Requirement: You have set a supervisor password, see ["Security functions", Page 60](#).
- ▶ Call up the BIOS Setup and select the *Security* menu.
- ▶ Mark the *TPM Security Chip Setting* field and press the Enter key.
- ▶ Select *Disabled* to deactivate the TPM.
- ▶ In the *Exit* menu, choose the option *Exit Saving Changes*.
- ▶ Press the enter key and select *Yes*.
- ↳ Your notebook will now restart and TPM will be disabled.

Enable password entry using the on-screen keyboard (on-screen keyboard for BitLocker password)

If TPM is activated, in the BIOS Setup you can enable an on-screen keyboard for the internal touch screen.

- ▶ Call BIOS Setup and select the *Advanced* menu.
- ▶ Mark *Boot Configurations* and press the enter key.
- ▶ From the *UEFI Boot On-Screen Keyboard* selection, choose the option *Enable* or *Disable*.
- ▶ In the *Exit* menu, choose the option *Exit Saving Changes*.
- ▶ Press the Enter key and select *Yes*.
- ↳ The notebook restarts and the password dialogue is displayed.
- Tap on the password field to enable the on-screen keyboard.

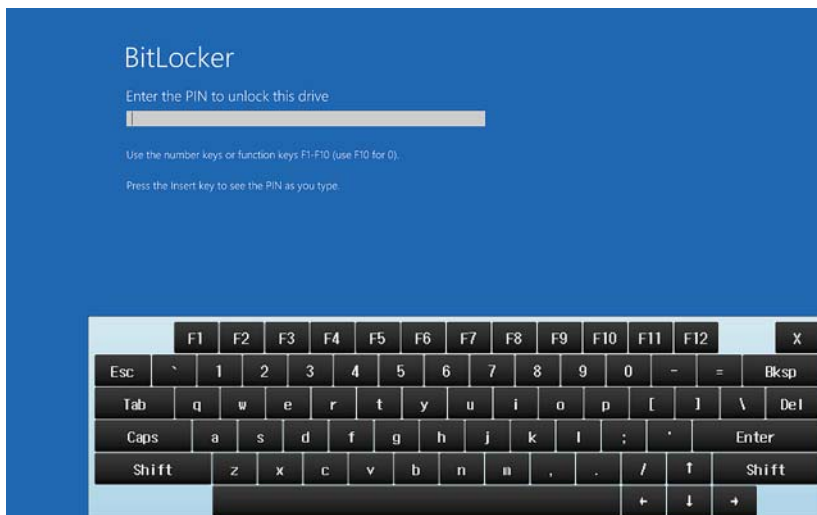

Connecting external devices



Always refer to the safety information provided in "[Important notes](#)", [Page 12](#) before connecting or disconnecting any devices to or from your notebook.

Always read the documentation supplied with the device you wish to connect.

Never connect or disconnect cables during a thunderstorm.

Never pull at a cable when disconnecting it. Always grasp the plug.




With some devices such as USB devices, it is not necessary to switch off the notebook and the device before connecting/disconnecting. For more information about whether or not devices need to be switched off, please refer to the documentation supplied with the external device.

Some of the external devices require special drivers (see the operating system and external device documentation).

HDMI port


The HDMI port on your notebook or on the optional Port Replicator can be used to connect an external amplifier, LCD TV or a plasma TV with an HDMI connection.

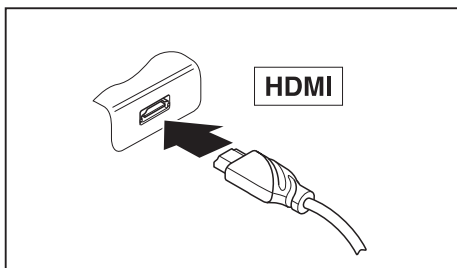


- ▶ Connect the data cable to the external device.
- ▶ Connect the data cable to the HDMI port on the notebook or on the optional Port Replicator.

Connecting an external monitor

An analogue monitor is connected to the analogue VGA monitor port, a digital monitor to the DisplayPort on the optional Port Replicator. Screen output is limited to a maximum of two screens at any one time (see ["Key combinations", Page 42](#), section "Toggle screen output").

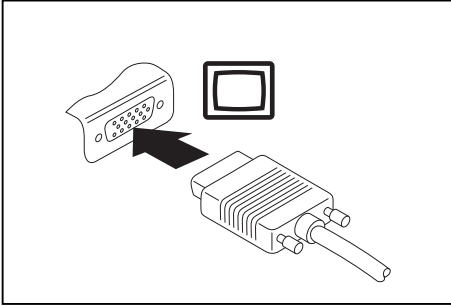

Analogue VGA monitor port (on notebook or on optional port replicator)

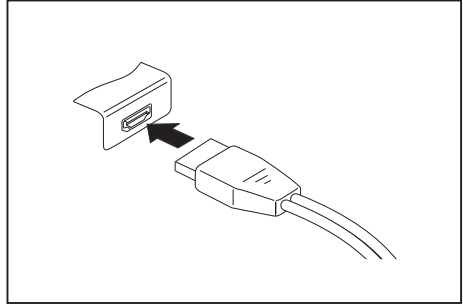

Digital DisplayPort (on optional Port Replicator)

- ▶ Switch off the notebook and the external monitor.
- ▶ Plug the data cable of the external monitor into the monitor port.
- ▶ First switch on the external monitor and then the notebook.



You can also switch between the external monitor and the LCD monitor of the notebook, see chapter ["Key combinations", Page 42](#).

You can display the same picture on the external monitor and the notebook LCD monitor simultaneously.

Connecting USB devices

On the USB ports, you can connect external devices that also have a USB port (e.g. a DVD drive, a printer, a scanner or a modem).



USB devices are hot-pluggable. This means you can connect and disconnect devices while your operating system is running.


USB 1.x has a maximum data transfer rate of 12 Mbit/s.

USB 2.0 has a data transfer rate of up to 480 Mbit/s.

USB 3.0 has a data transfer rate of up to 5 Gbit/s.

USB 3.1 has a data transfer rate of up to 10 Gbit/s.

Additional information can be found in the documentation for the USB devices.

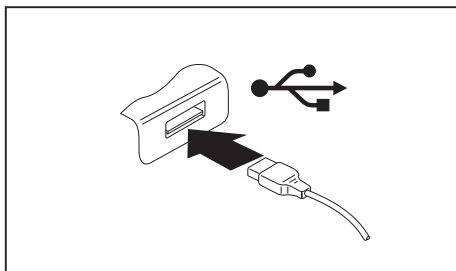

- ▶ Connect the data cable to the external device.
- ▶ Connect the data cable to a USB port of the notebook.



Device drivers

USB devices will be automatically recognised and installed by your operating system.

USB connection with charging function (USB Type-C™)


At this USB port, you can charge a connected USB device or operate devices without an additional power supply (e.g. a monitor or printer).

This is also possible with connected notebook computers by going to the *BIOS Setup Utility* under the menu *Advanced > Miscellaneous Configurations* and activating the function *USB Type-C Power Delivery on System-Off*. Instructions for how to call up and operate the *BIOS Setup Utility* can be found in section ["Settings in BIOS Setup Utility", Page 98](#).



USB devices are hot-pluggable. This means you can connect and disconnect the cables of USB devices while the system is running.

Additional information can be found in the documentation for the USB devices.

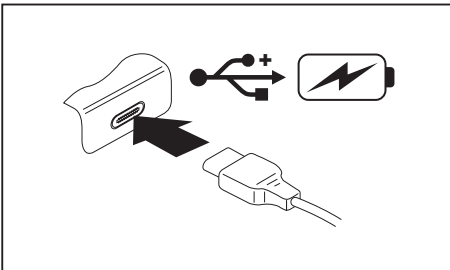

- ▶ Connect the data cable to the external device.
- ▶ Connect the data cable to a USB port (USB Type-C™) of the notebook.

USB port with charging function (Anytime USB charge)

You can use this USB port to charge or supply power to a connected USB device (e.g. to charge a PDA or a mobile phone or to connect a USB lamp).

This is also possible with the notebook switched off, if the *Anytime USB Charge* function is activated in the *Advanced/Miscellaneous Configurations* menu in the *BIOS Setup Utility*. If the setting *AC* is selected, the device will only be charged when the mains adapter is connected.

Please refer to section ["Settings in BIOS Setup Utility", Page 98](#) for a description of how to call up and operate the *BIOS-Setup-Utility*.




It is recommended that the notebook be operated with the power supply connected whenever the USB port with charging function is in use, as this function will drain the battery more quickly if an external USB device is being charged.

The power supply unit must already be connected when the notebook is switched off, as otherwise the USB charging function will be disabled and the connected USB devices will not be charged.



Some USB devices (e.g. mobile telephones) require a driver in order to utilise the USB charging function. In this case the USB charging function will not work when the notebook is switched off, as no drivers are active when the notebook is switched off.

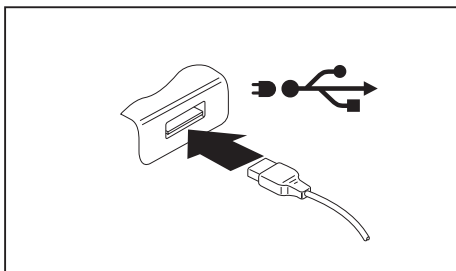

- ▶ Connect the data cable to the external device.
- ▶ Connect the data cable to a USB port (Anytime USB charge) of the notebook.

How to remove USB devices correctly




Always correctly remove the device according to the rules described below, to ensure that none of your data is lost.

- ▶ Left click on the icon to safely remove hardware, located in the taskbar.
- ▶ Select the device which you want to shut down and remove.
- ▶ Press the Enter key.
- ↳ Wait for the dialogue box which tells you that it is now safe to remove the device.

Headphones/microphone/Line-In/Line-Out/headset-combi port

Using the headphones/microphone/Line-In/Line-Out/headset-combi port, you can connect a headset, headphones, a microphone or external loudspeakers to your notebook.

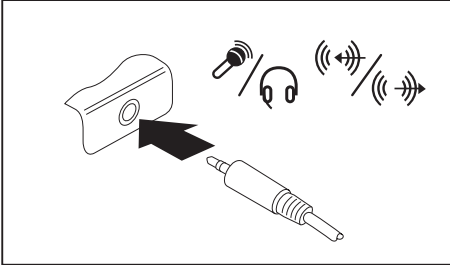

- ▶ Connect the audio cable to the external device.
- ▶ Connect the audio cable to the headphone port of the notebook.
- ↳ The internal loudspeakers are disabled.

i

If you purchase a cable from a retailer, please note the following information:

The headphones/microphone/Line-In/Line-Out/headset-combi port on your notebook is a "3.5 mm jack".

If you want to connect headphones or a speaker you will need a "3.5 mm jack plug".

Removing and installing components during servicing



Only qualified technicians should repair your notebook. Unauthorised opening or incorrect repair may greatly endanger the user (electric shock, fire risk) and will invalidate your warranty.

After consulting the Hotline/Service Desk, you may remove and install the components described in this chapter yourself.



If you remove and install components without consulting the Hotline/Service Desk, then the warranty of your notebook will be voided.

Notes on installing and removing boards and components

- Switch the notebook off and pull the power plug out of the mains socket.
- Always remove the battery.
- Take care when you use the locking mechanisms on the battery and any other component.
- Never use sharp objects such as screwdrivers, scissors or knives as leverage to remove covers.



Boards with electrostatic sensitive devices (ESD) are marked with the label shown.

When handling boards fitted with ESDs, you must always observe the following points:

- You must always discharge static build up (e.g. by touching a grounded object) before working.
- The equipment and tools you use must be free of static charges.
- Remove the power plug from the mains supply before inserting or removing boards containing ESDs.
- Always hold boards with ESDs by their edges.
- Never touch pins or conductors on boards fitted with ESDs.

Preparing to remove components

If you are going to remove or change system components, prepare for the removal as follows:



Please observe the safety information in chapter ["Important notes", Page 12](#).

Remove the power plug from the mains outlet !

- ▶ Switch the device off.




The device must not be in energy-saving mode !

- ▶ Close the LCD screen.
- ▶ Remove all the cables from the device.
- ▶ Turn the device over and place it on a stable, flat and clean surface. If necessary, lay an anti-slip cloth on this surface to prevent the device from being scratched.
- ▶ Remove the battery (see ["Removing the battery", Page 46](#)).

Removing a cover

- Prepare for removal, see ["Preparing to remove components", Page 89.](#)

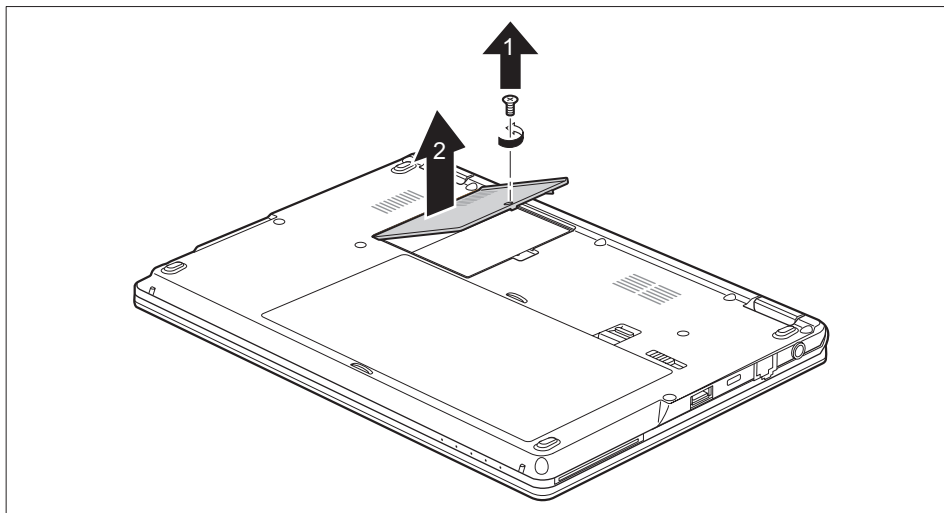

- Remove the screw (1).



Keep the screw in a safe place.

- Lift the cover off the notebook (2).

Installing and removing memory expansion

If you are asked by the Hotline/Service Desk to remove and install the memory expansion yourself, proceed as follows:



Please observe the safety information in chapter ["Important notes", Page 12](#).

When installing/removing memory modules, the battery must be removed from the notebook and the notebook must not be connected to the power supply, see ["Preparing to remove components", Page 89](#).

Only use memory expansion modules that have been approved for your notebook (see ["Technical data", Page 110](#)).

Never use force when installing or removing a memory extension.

Make sure that foreign objects do not fall into the memory extension compartment.

You must open the service compartment to remove or install a memory module. On some devices, opening the compartment may expose other components. These components should be removed and replaced only by authorised specialists. Therefore, be sure to observe the following:




Individual components can become very hot during operation. Therefore, we recommend that you wait one hour after switching off the notebook before removing or installing memory modules. Otherwise, there is a risk of suffering burns!


As some components are exposed that are sensitive to static electricity, please take note of chapter ["Notes on installing and removing boards and components", Page 88](#).

Removing memory modules

- Remove the cover ["Removing a cover", Page 90](#)

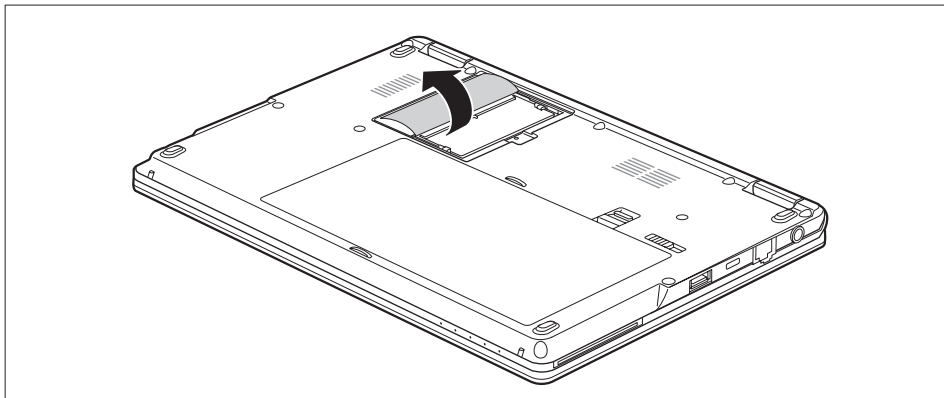


- Fold the protective film in the direction of the arrow.

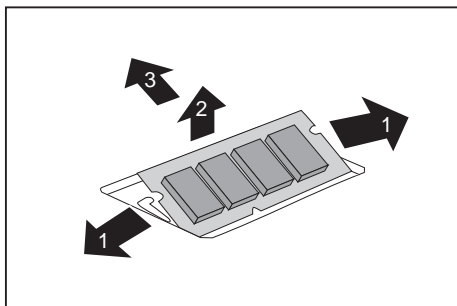


- Carefully push the two mounting clips outwards (1).
- ↳ The memory module snaps upwards (2).
- Pull the memory module out of its slot in the direction of the arrow (3).

Installing a memory module

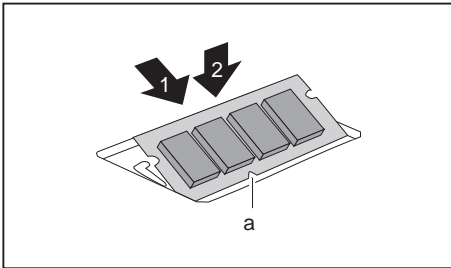


- ▶ Insert the memory module with the contacts and the recess (a) facing the slot (1).
- ▶ Carefully push the memory module downwards until you feel it click into place (2).

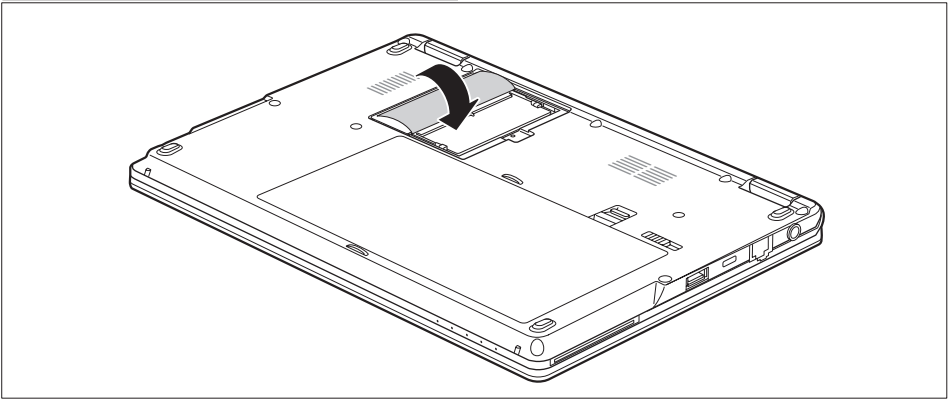


- ▶ Fold the protective film in the direction of the arrow.
- ▶ Re-fasten the cover, see ["Attaching the cover", Page 97](#)

Installing and removing an M.2 module

Removing an M.2 module

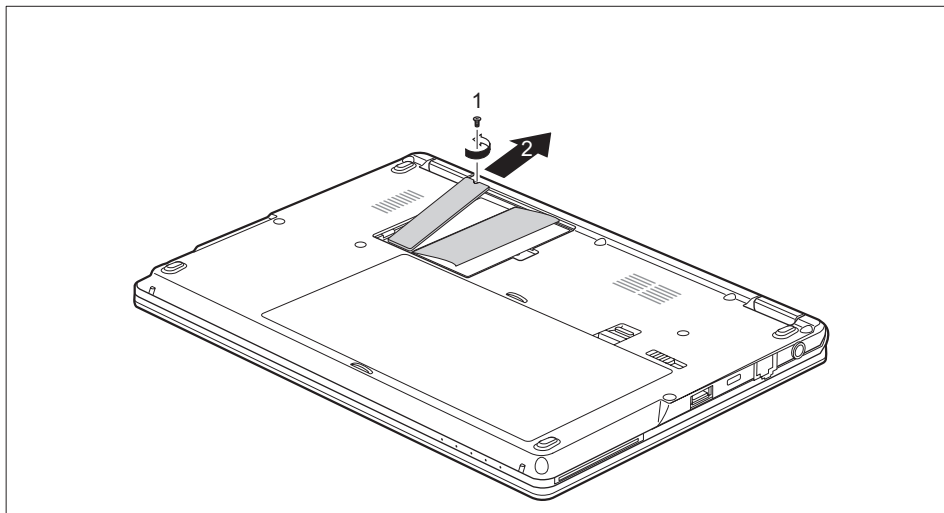


- ▶ Undo the screw (1).
- ▶ Carefully raise the M.2 module upwards at the free side.
- ▶ Pull the M.2 module in the direction of the arrow (2) and out of the slot on the mainboard and remove it from the casing.

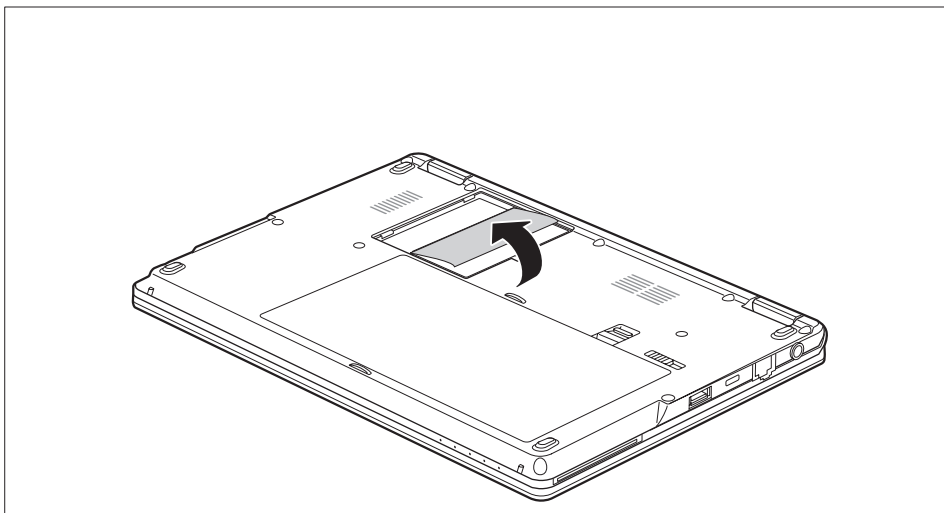


- ▶ Fold the protective film in the direction of the arrow.
- ▶ Re-fasten the cover, see ["Attaching the cover", Page 97](#)

Installing an M.2 module

- ▶ Remove the cover, see ["Removing a cover", Page 90](#)

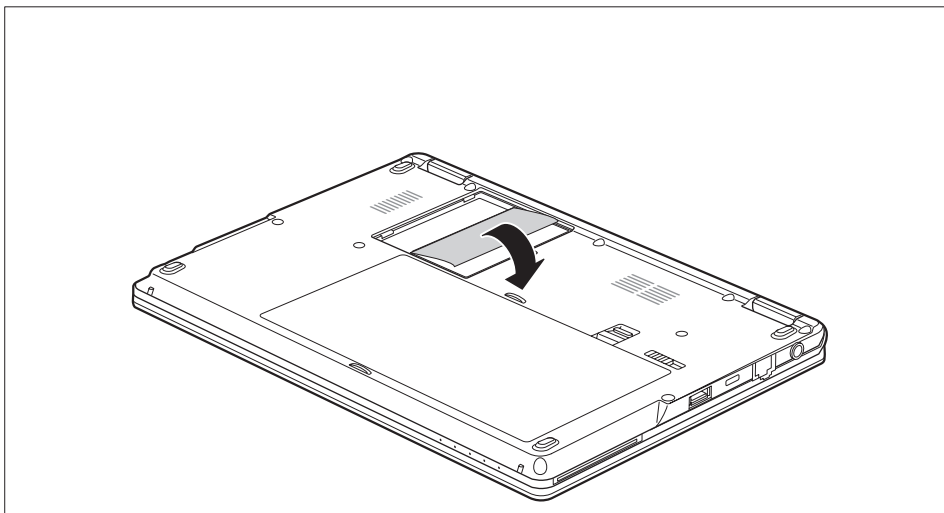


- ▶ Fold the protective film in the direction of the arrow.

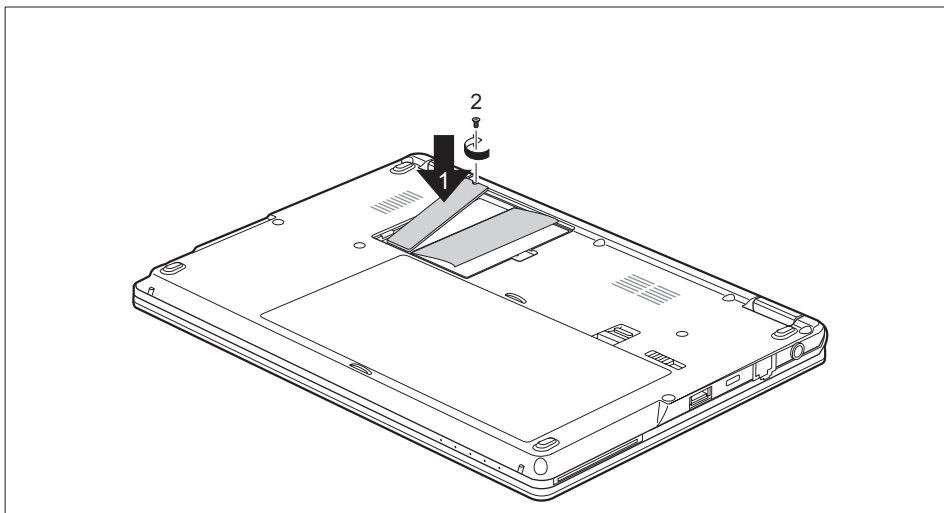

- ▶ Insert the M.2 module at a slight angle in the direction of the arrow (1) into the slot on the mainboard.
- ▶ Fasten the M.2 module in place in the slot with the screw (2).

Attaching the cover

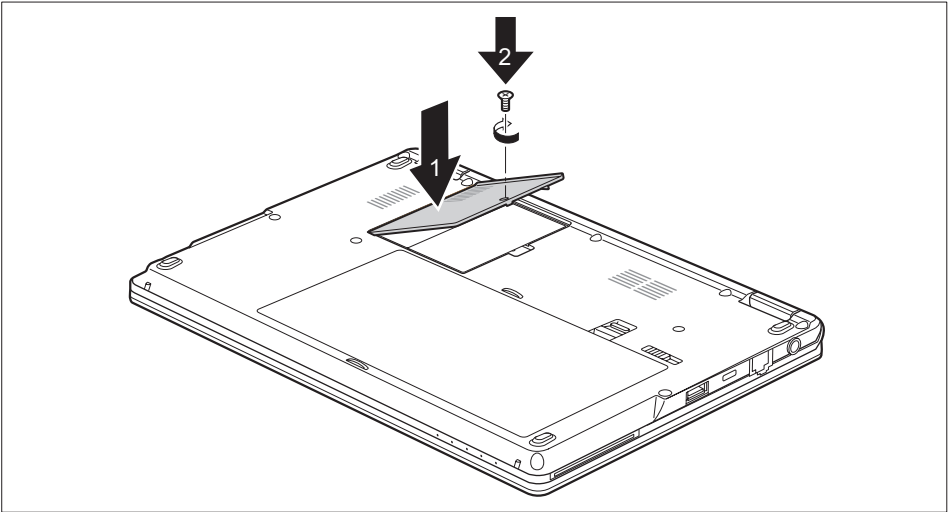

- ▶ Place the cover in the correct mounting position (1).
- ▶ Tighten the screw (2).
- ▶ Complete the installation, see ["Finishing component removal", Page 97](#).

Finishing component removal

After you have removed or changed the system components as you required, please prepare your device for operation again as follows:

- ▶ Install the battery again (see ["Inserting battery", Page 48](#)).
- ▶ Turn the notebook the right way up again and place it on a flat surface.
- ▶ Reconnect the cables that you disconnected before.

Settings in BIOS Setup Utility

The *BIOS Setup Utility* allows you to set the system functions and the hardware configuration for the notebook.

When it is delivered, the notebook is set to factory default settings. You can change these settings in *BIOS Setup Utility*. Any changes you make take effect as soon as you save and exit the *BIOS Setup Utility*.

The *BIOS Setup Utility* program contains the following menus:

<i>About</i>	Displays information relating to the BIOS, processor and notebook
<i>System</i>	Advanced system settings
<i>Advanced</i>	Configuration of various hardware components, such as mouse, keyboard, processor
<i>Security</i>	Password settings and security functions
<i>Boot</i>	Configuration of the start-up sequence
<i>Exit</i>	Exits the <i>BIOS Setup Utility</i>

Starting the BIOS Setup Utility

- ▶ Reboot the device (switch off/on or reboot the operating system).
- ↳ Depending on the *Fast Boot* setting in the *BIOS Setup utility*, the following information may appear on the screen during start:
 - <F2> BIOS Setup <F12> Boot Menu
- ▶ Press the function key **F2**.
- ▶ If a password has been assigned, enter the password and press the Enter key.



If you have forgotten the password, contact your system administrator or contact our customer service centre.

The *BIOS Setup Utility* starts.

Operating BIOS Setup Utility



Press the **F1** key to display help on the operation of the *BIOS Setup Utility*. The description of the individual settings is shown in the right-hand window of the *BIOS Setup Utility*.

With the **F9** key you can load the default settings of the *BIOS Setup Utility*.

- ▶ Use the cursor keys **←** or **→** to select the menu you wish to access to make changes.
↳ The menu is displayed on the screen.
- ▶ Select the option you want to change with the cursor keys **↑** or **↓**.
- ▶ Press the **Enter** key.
- ▶ Press the **ESC** key to exit the selected menu.
- ▶ For future reference, make a note of the changes you have made (for example, in this manual).

Exiting BIOS Setup Utility

You need to select the desired option in the *Exit* menu and activate it by pressing the Enter key:

Exit Saving Changes - save changes and exit BIOS Setup Utility

- ▶ To save the current menu settings and exit the *BIOS Setup Utility*, select *Exit Saving Changes* and *Yes*.
- ↳ The notebook is rebooted and the new settings come into effect.

Exit Discarding Changes – Discard changes and exit BIOS Setup Utility

- ▶ To discard the changes, select *Exit Discarding Changes* and *Yes*.
- ↳ The settings in place when *BIOS Setup Utility* was called remain effective. *BIOS Setup Utility* is terminated and the notebook is rebooted.

Load Setup Defaults – Copy Standard Entries

- ▶ To copy the standard entries for all menus of the *BIOS Setup Utility*, choose *Load Setup Defaults* and *Yes*.

Discard Changes – Discard changes without exiting the BIOS Setup Utility

- ▶ To discard the changes you have made, select *Discard Changes* and *Yes*.
- ↳ The settings in place when *BIOS Setup Utility* was called remain effective.
You can now make additional settings in the *BIOS Setup Utility*.
- ▶ If you want to exit *BIOS Setup Utility* with these settings, select *Exit Saving Changes* and *Yes*.

Save Changes - save changes without exiting the BIOS Setup Utility

- ▶ To save the changes, select *Save Changes* and *Yes*.
- ↳ The changes are saved. You can now make additional settings in the BIOS Setup Utility.
- ▶ If you want to exit BIOS Setup Utility with these settings, choose *Exit Saving Changes* and *Yes*.

Save Changes and Power Off

- ▶ To save the changes and switch off your device, select *Save Changes and Power Off* and *Yes*.
- ↳ The changes are saved. Your device is shut down.

Troubleshooting and tips



Follow the safety notes in the "Safety/Regulations" manual when connecting or disconnecting cables.

If a fault occurs, try to correct it as described. If you fail to correct the problem, proceed as follows:

- ▶ Make a note of the steps and the circumstances that led to the fault. Also make a note of any error messages displayed.
- ▶ Switch the notebook off.
- ▶ Please contact the Hotline/Service Desk.



The telephone numbers can be found at: ["http://support.ts.fujitsu.com/contact/servicedesk"](http://support.ts.fujitsu.com/contact/servicedesk). Have the following information ready when you call:

- The model name and serial number of the notebook. The serial number is located on a sticker on the underside of the notebook.
- Notes of any messages that appear on the screen and information on acoustic signals.
- Any changes you have made to the hardware or software since receiving the notebook.
- Any changes you have made to the *BIOS Setup* settings since receiving the notebook.
- Your system configuration and all peripheral devices connected to your system.
- Your sales contract.



Our notebooks have been designed primarily with mobile applications in mind. This means that considerable effort has been made to optimise components and equipment in terms of weight, space and energy requirements. Depending on the particular configuration you have purchased, it is possible that functionality may be slightly reduced compared to a desktop PC if you are running processor-intensive gaming software, e.g. games with intensive 3D graphics. Updating your hardware with drivers which have not been approved by Fujitsu Technology Solutions may result in performance losses, data losses or malfunction of the equipment. A list of approved drivers and current BIOS versions can be downloaded from: ["http://support.ts.fujitsu.com/Download/Index.asp"](http://support.ts.fujitsu.com/Download/Index.asp)

Help if problems occur

Should you encounter a problem with your computer that you cannot resolve yourself:

- ▶ Note the ID number of your device. The ID number is found on the type rating plate on the back or underside of the casing.
- ▶ Contact the Service Desk responsible for your country for clarification of the problem: ["http://support.ts.fujitsu.com/contact/servicedesk"](http://support.ts.fujitsu.com/contact/servicedesk). When you do this, please have ready the ID number and serial number of your system.

The notebook's date or time is incorrect

Cause	Troubleshooting
Time and date are incorrect.	▶ With the <i>BIOS-Setup-Utility</i> , you can set the date and time in the <i>main</i> menu.
If the time and date are still set incorrectly after switching on the notebook.	▶ Please contact your sales outlet or our Hotline/Service Desk.

Battery indicator does not illuminate

Cause	Fault elimination
The battery is not installed correctly.	<ul style="list-style-type: none"> ▶ Switch the notebook off. ▶ Check whether the battery is installed correctly in its compartment. ▶ Switch the notebook on.
The battery is not being charged.	<ul style="list-style-type: none"> ▶ Connect the Tablet PC to a mains outlet using the mains adapter. <p>Note: The battery will only be charged again when the battery capacity is less than 90 %.</p>

When certain characters are entered on the keyboard, only numerals are written

Cause	Troubleshooting
The virtual numeric keypad of your device is activated, see "Virtual numeric keypad", Page 41	▶ Press the <code>[Num]</code> key.

The notebook's LCD screen remains blank

Cause	Troubleshooting
Monitor is switched off.	▶ Press a key or touch the touchpad.
External monitor or television set connected.	▶ Press the key combination to switch the screen output, see "Key combinations", Page 42 .

The LCD screen is difficult to read

Cause	Troubleshooting
Reflected glare	<ul style="list-style-type: none"> ▶ Turn the notebook or alter the tilt of the LCD screen. ▶ Increase the brightness of the screen.

The external monitor remains blank

Cause	Troubleshooting
Monitor is switched off.	▶ Switch the external monitor on.
Power saving has been activated (monitor is blank).	▶ Press any key to continue.
Brightness is set to dark.	▶ Adjust the brightness of the monitor.
Screen output is set to the notebook's LCD screen	▶ Press the key combination to switch the screen output, see "Key combinations", Page 42 .
The external monitor's power cable or data cable is not connected properly.	<ul style="list-style-type: none"> ▶ Switch off the external monitor and the notebook. ▶ Check whether the power cable is plugged properly into the external monitor and into the power socket. ▶ Check whether the data cable is properly connected to the notebook and the external monitor (if it is plugged in with a connector). ▶ Switch on the external monitor and the notebook.

The external monitor is blank or the image is unstable

Cause	Troubleshooting
The wrong external monitor has been selected or the wrong screen resolution has been set for the application program.	<ul style="list-style-type: none"> ▶ Terminate the application program in Windows by pressing [Alt] + [F4]. If the fault persists after closing the program, use the key combination for switching the screen output (see "Key combinations", Page 42) to switch over to the notebook's LCD screen. Change the following setting: ▶ Set the screen resolution: Set the screen resolution as described in the documentation for your operating system. ▶ Select monitor: Select monitor 1 or 2 as described in the documentation for your operating system.

The cursor does not correctly follow the pen movements

Cause	Fault elimination
Pen incorrectly calibrated	<ul style="list-style-type: none"> ▶ Calibrate the pen as shown under <i>Hardware and Sound / Tablet PC Settings</i> in the Control Panel, see "Setting the pen", Page 35 and "Calibrating the pen", Page 35.

Pen input not working

Cause	Troubleshooting
Incorrect driver installed.	<ul style="list-style-type: none"> ▶ If your device is one which can only be operated using the pen, install the driver for the standard model. <p>or</p> <ul style="list-style-type: none"> ▶ If your device is one which can be operated using the pen and by finger, install the driver for the "Dual Digitizer" model.
The pen is in power-saving mode.	<ul style="list-style-type: none"> ▶ Press the pen button gently to wake the pen from sleep mode.
The pen battery is completely discharged.	<ul style="list-style-type: none"> ▶ Insert the pen fully into its slot on the notebook to charge the pen battery.

The notebook cannot be started

Cause	Troubleshooting
The battery is not installed correctly.	<ul style="list-style-type: none"> ▶ Check whether the battery is installed correctly in its compartment. ▶ Switch the notebook on.
The battery is dead.	<ul style="list-style-type: none"> ▶ Charge the battery. <p>or</p> <ul style="list-style-type: none"> ▶ Insert a charged battery. <p>or</p> <ul style="list-style-type: none"> ▶ Connect the mains adapter to the notebook.
The power adapter is not connected correctly.	<ul style="list-style-type: none"> ▶ Check whether the mains adapter is connected correctly to the notebook. ▶ Switch the notebook on.

The notebook stops working

Cause	Troubleshooting
Notebook is in energy saving mode.	▶ Leave energy saving mode.
An application programme has caused the malfunction.	▶ Close the application program or restart the notebook (by restarting the operating system or switching the device off and back on again).
The battery is dead.	▶ Charge the battery. or ▶ Insert a charged battery. or ▶ Connect the mains adapter to the notebook.

The printer does not print

Cause	Troubleshooting
The printer is not switched on.	▶ Make sure that the printer is switched on and ready for operation (refer to the documentation supplied with the printer).
The printer is not connected correctly.	▶ Check that the data cable connecting the notebook to the printer is properly connected.
The printer driver is faulty or not correctly installed, or it is the wrong printer driver.	▶ Check that the data cable connecting the notebook to the printer is properly connected. ▶ Check whether the correct printer driver is loaded (refer to the printer documentation).

The wireless connection to a network does not work

Cause	Troubleshooting
The wireless component is disabled.	▶ Switch the wireless component on (see "Switching the wireless components on and off", Page 54).
The wireless component is enabled. Despite this, the wireless connection to a network does not work.	▶ Check whether the wireless connection is switched on via the software. ▶ Further information on using the wireless component can be found in the help files.

The battery discharges too quickly

Cause	Troubleshooting
The battery is either too hot or too cold. In this case the battery indicator flashes.	<ul style="list-style-type: none"> ► Bring the notebook up/down to a normal temperature again. ► If the operating time of the battery life is extremely short, the battery is probably too old. Replace battery if necessary.
You may have an application running that consumes a great deal of power due to frequent accessing of the hard disk or optical drive.	<ul style="list-style-type: none"> ► Use the mains adapter as frequently as possible.
The maximum brightness may have been set for the screen.	<ul style="list-style-type: none"> ► Set the screen slightly darker with the key combination for <i>Decreasing the screen brightness</i> in order to reduce the amount of power being drawn.

SmartCard reader is not recognised.

Cause	Troubleshooting
Chip card inserted incorrectly.	<ul style="list-style-type: none"> ► Make sure you have inserted your SmartCard into the SmartCard reader with the chip facing upwards/downwards (device-dependent). ► Check whether the SmartCard you are using is supported. Your SmartCard must comply with the ISO standard 7816-1, -2, -3 and -4.

SmartCard PIN forgotten

Cause	Troubleshooting
PIN forgotten	<ul style="list-style-type: none"> ► If you are working in a network, contact your system administrator, who can unlock your notebook with a Supervisor PIN.

SmartCard lost

Cause	Troubleshooting
SmartCard lost	<ul style="list-style-type: none"> ► If you are working in a network, contact your system administrator, who can boot up your notebook with a Supervisor SmartCard.

User and/or supervisor SmartCard lost

Cause	Troubleshooting
User and/or supervisor SmartCard lost	<ul style="list-style-type: none"> ▶ If you have lost your User SmartCard, you can continue working with the Supervisor SmartCard and initialise a new User SmartCard or deactivate the SystemLock function. ▶ If you have lost the Supervisor SmartCard, you can continue working, but you no longer have all your rights and can no longer initialise a Supervisor SmartCard. ▶ If you have lost both SmartCards, you can no longer boot your system. Please contact our Service Desk. You must provide proof of ownership for the device. Then the Service Desk will refer you to our service partner, who will unlock your device (for a charge).

Acoustic warnings

Cause	Troubleshooting
<p>A beep sounds every few seconds.</p> <p>The battery is almost flat.</p>	<ul style="list-style-type: none"> ▶ Charge the battery.

Error messages on the screen

This section describes the error messages generated by the BIOS Setup. Error messages displayed by the operating system or programmes are described in the relevant documentation.



If the error message appears repeatedly, despite troubleshooting measures, please contact the place of purchase or our customer service centre.

Error message/cause	Resolution
CMOS battery bad If the error message occurs repeatedly, the buffer battery in the notebook is flat.	<ul style="list-style-type: none"> ► Contact your sales outlet or our customer service centre.
System CMOS checksum bad - default configuration used The system configuration information is incorrect.	<ul style="list-style-type: none"> ► Switch the notebook off. ► Switch the notebook on. ► Press the function key [F2] to access the <i>BIOS Setup</i>. ► In the <i>BIOS Setup</i>, select the <i>Exit</i> menu. ► Select the entry <i>Load Setup Defaults</i>. ► Select <i>OK</i> and press the Enter key.
Extended memory failed at offset: xxxx Failing Bits: zzzz zzzz When testing the extended memory an error has resulted at the address xxxx.	<ul style="list-style-type: none"> ► Check whether the additional memory module has been inserted correctly.
Failure Fixed Disk n The settings of the hard disk drive are incorrect.	<ul style="list-style-type: none"> ► Start the <i>BIOS Setup</i> (<i>Primary Master</i> submenu) and select the correct settings.
Keyboard controller error	<ul style="list-style-type: none"> ► Switch the notebook off using with the ON/OFF button. ► Wait 3 - 5 seconds and switch on the notebook again.
Keyboard error	If you are using an external keyboard: <ul style="list-style-type: none"> ► Check the connection and reboot the notebook.
nn Stuck key	<ul style="list-style-type: none"> ► Make sure that no key is pressed.
Operating system not found	<ul style="list-style-type: none"> ► Check in the <i>BIOS Setup</i> whether your hard disk has been set correctly. ► Make sure that the operating system is installed on the corresponding drive.
Press <F1> to resume, <F2> to SETUP This error message appears if an error occurs during the self-test before starting the operating system.	<ul style="list-style-type: none"> ► Press the [F1] function key to start the operating system. ► Press the function key [F2] to access the <i>BIOS Setup</i>.

Error message/cause	Resolution
<i>Previous boot incomplete - Default configuration used</i> Due to an error during the previous system boot, default values were used for certain settings. Check the settings in the BIOS Setup.	► Press the F1 function key when prompted to do so.
<i>Real time clock error</i>	► Contact your sales outlet or our customer service centre.
<i>nnmK Shadow RAM failed at offset: xxxx Failing Bits: zzzz</i>	► Contact your sales outlet or our customer service centre.
<i>System battery is dead - Replace and run SETUP</i>	► Contact your sales outlet or our customer service centre.
<i>System cache error - Cache disabled</i>	► Contact your sales outlet or our customer service centre.
<i>System timer error</i>	► Contact your sales outlet or our customer service centre.

Restoring the contents of the hard disk under Windows

Restoring the system under Windows 10

If necessary, you can reset your system to the original state of the hard disk.

- Beginning at the right edge of the Windows Start screen or the desktop, use a finger to sweep over the screen to open the *Action Centre*.
- Select *All settings*.
- Select *Update & security*.
- Select *Recovery*.
- Select according to your requirements from the options given.

Technical data

Notebook

General	
Processor	7. Generation Intel® Core™ with vPro™ technology (vPro configuration dependent)
Main memory (SO DIMM)	Maximum 16 GByte DDR4 1 slot for 4, 8 or 16 Gbyte module
Electrical data	
Safety regulations complied with	CE
Protection class	II
Maximum power consumption (with the notebook switched on and the battery charging):	65 W (without Port Replicator) / 90 W (with USB Type-C Port Replicator)
LCD screen	
Size	31.75 cm / 12.5" TFT FHD or HD (configuration dependent)
Resolution	HD: 1366 x 768 pixels FHD: 1920 x 1080 pixels 16M colours
Pixel class	II
Brightness control	11 levels
Technology	Wide-View High-Bright display with LED background lighting
Digitizer and glass panel	<ul style="list-style-type: none">• Dual Digitizer / touch and pen support• Toughened glass
Camera	HD (720p) with status indicator
Graphics card	
Chip	Intel® HD Graphics 620
Maximum resolution on external display:	HDMI: 4096 x 2160 pixels
Dimensions	
Width x depth x height	from 299 x 209 x 18.8 mm / 11.77 inch x 8.23 inch x 0.74 inch
Weight depending on configuration	from 1.29 kg / 2.84 lbs
Input devices	
Keyboard	85 keys with backlit keyboard (configuration dependent)
Touchpad	2 keys
Pen	2 pen buttons
Slots	
Memory card slot	1 x SD Card

SmartCard slot	1 x
SIM card slot	1 x
Ports	
HDMI port	1 x
VGA port	1 x
LAN port	Socket, RJ45
USB (Universal Serial Bus)	3 x USB (1 x USB 3.0, 1 x USB Type-C (for USB Type-C Port Replicator), 1 x USB 3.0 with charging function (Anytime USB charge))
Security Lock	1 x
Ambient conditions	
Environment class DIN IEC 721	7K1
Mechanism class DIN IEC 721	7M2
Operating temperature	5 °C 35 °C / 41°F 95°F
Transport temperature (2K2)	–15 °C 60 °C / 5°F 140°F

USB Type-C™ Port Replicator (optional)

Electrical data	
Safety regulations complied with	CE
Protection class	II
Ports	
Monitor port (analogue)	15-pin
HDMI port	1 x
DisplayPort	1 x
Maximum resolution of an external monitor	VGA: 1920 x 1200 pixels DisplayPort: 2560 x 1600 pixels HDMI: 4096 x 2160 pixels
LAN port	RJ45
USB (Universal Serial Bus)	3 x USB 3.0, 2 x USB Type-C
Microphone port / Line In / headphones port / Line Out	3.5 mm stereo mini jack
Ambient conditions	
Environment class DIN IEC 721	7K1
Mechanism class DIN IEC 721	7M2
Operating temperature	5°C to 35°C / 41°F 95°F
Transport temperature	–15°C 60°C / 5°F 140°F

Screen resolutions for integrated screen and external screens

Notebook only

Max. number of screens	Number of external screens	Integrated monitor HD 1366 x 768 FHD 1920 x 1080	Notebook connection		Ports on the Port Replicator		
			HDMI	VGA	HDMI	Display Port	VGA
2	1	on	3840 x 2160 @ 30 Hz	-	-	-	-
		on	-	1920 x 1200 @ 60 Hz	-	-	-
3	2	on	3840 x 2160 @ 30 Hz	1920 x 1200 @ 60 Hz	-	-	-

Notebook with Port Replicator

Max. number of screens	Number of external screens	Integrated monitor HD 1366 x 768 FHD 1920 x 1080	Notebook connection		Ports on the Port Replicator		
			HDMI	VGA	HDMI	Display Port	VGA
2	1	on	-	-	4096 x 2160 @ 24 Hz 3840 x 2160 @ 30 Hz	-	-
		on	-	-	-	4096 x 2160 @ 24 Hz 3840 x 2160 @ 30 Hz	-
		on	-	-	-	-	1920 x 1200 @ 60 Hz

Max. number of screens	Number of external screens	Integrated monitor HD 1366 x 768 FHD 1920 x 1080	Notebook connection		Ports on the Port Replicator		
			HDMI	VGA	HDMI	Display Port	VGA
3	2	on	3840 x 2160 @ 30 Hz	-	4096 x 2160 @ 24 Hz 3840 x 2160 @ 30 Hz	-	-
		on	3840 x 2160 @ 30 Hz	-	-	4096 x 2160 @ 24 Hz	-
		on	3840 x 2160 @ 30 Hz	-	-	-	1920 x 1200 @ 60 Hz
		on	-	-	4096 x 2160 @ 24 Hz 3840 x 2160 @ 30 Hz	4096 x 2160 @ 24 Hz 3840 x 2160 @ 30 Hz	-
		on	-	-	4096 x 2160 @ 24 Hz 3840 x 2160 @ 30 Hz	-	1920 x 1200 @ 60 Hz
		on	-	-	-	4096 x 2160 @ 24 Hz 3840 x 2160 @ 30 Hz	1920 x 1200 @ 60 Hz
3	3	off	-	-	4096 x 2160 @ 24 Hz 3840 x 2160 @ 30 Hz	4096 x 2160 @ 24 Hz 3840 x 2160 @ 30 Hz	1920 x 1200 @ 60 Hz

Rechargeable battery



You will find information on the batteries used in your device on the Internet at ["http://www.fujitsu.com/fts/support/"](http://www.fujitsu.com/fts/support/).

Rated voltage	10.8 V
Rated capacity	45 Wh
Nominal power	4170 mAh



The operating time depends on the device configuration, the active applications and the energy-saving settings.

Mains adapter for use with the notebook and port replicator



Connect only the 90 W mains adapter to the USB Type-C™ Port Replicator.



The following technical data applies to the mains adapter supplied with the notebook and USB Type-C™ Port Replicator, which you can order separately.

Primary	
Rated voltage	100 V to 240 V (automatic)
Rated frequency	50 Hz to 60 Hz (automatic)
Max. rated current	0.7 A to 1.2 A
Secondary	
Nominal power	65 W / 90 W
Rated voltage	19 V
Max. rated current	3.42 A / 4.74 A



An additional mains adapter or power cable can be ordered at any time.

Manufacturer's notes

Disposal and recycling

You can find information on this subject on your notebook or on our website (["http://www.fujitsu.com/fts/about/fts/environment-care/"](http://www.fujitsu.com/fts/about/fts/environment-care/)).

Declarations of Conformity

The "Declarations of Conformity" for the device can be found on the Internet at: ["http://globasp.ts.fujitsu.com/sites/certificates/default.aspx"](http://globasp.ts.fujitsu.com/sites/certificates/default.aspx).

Fujitsu Technology Solutions hereby declares that your device is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.

Electrical safety including ergonomic requirements (GS, depending on the device)

Please refer to the associated data sheet to establish whether the model variant of your device has GS certification. You can find further information on the Internet at ["http://www.fujitsu.com/fts/products/computing/pc/tablets/datasheets"](http://www.fujitsu.com/fts/products/computing/pc/tablets/datasheets).



Intended viewing distance

300 mm as a hand-held product.

A monitor and a keyboard should be connected externally for use in an office.

CE marking

The shipped version of this device complies with the requirements of EC directives 2004/108/EC "Electromagnetic compatibility", 2006/95/EC "Low voltage directive", 2011/65/EU "RoHS directive" and 2009/125/EC "ecodesign directive" (from 20/04/2016: 2014/30/EC "Electromagnetic Compatibility" and 2014/35/EC "Low Voltage Directive").

CE marking for devices with radio component

This equipment complies with the requirements of Directive 1999/5/EC of the European Parliament and Commission from 9 March, 1999 governing Radio and Telecommunications Equipment and mutual recognition of conformity.

CE nnnn (!) ; nnnn: For digits and exclamation mark (!), see label on the product.

The product complies with the legal limits for SAR in the EU.

You can find more information and declarations of conformity on the Internet at:
["http://globalsp.ts.fujitsu.com/sites/certificates"](http://globalsp.ts.fujitsu.com/sites/certificates).

This equipment can be used in the following countries:

Belgium	Bulgaria	Denmark	Germany
Estonia	Finland	France	Greece
UK	Ireland	Iceland	Italy
Latvia	Liechtenstein	Lithuania	Luxembourg
Malta	Netherlands	Norway	Austria
Poland	Portugal	Rumania	Sweden
Switzerland	Slovakia	Slovenia	Spain
Czech Republic	Hungary	Cyprus	Croatia
Turkey			

Limitation in France: The use of WLAN in the 5 GHz band is not permitted outdoors.

Contact the corresponding government office in the respective country for current information on possible operating restrictions. If your country is not included in the list, then please contact the corresponding supervisory authority as to whether the use of this product is permitted in your country.

The CE conformity declaration covers accessories (e.g. mains adapters, batteries, cable adapters) and software (e.g. module drivers, module firmware and operating system). The software used and affecting compliance is purchased by the module vendors and is under their sole control.

Radio frequencies used

	RF module	Frequency band	Max. transmission power
1	BT	2400-2480 MHz	100 mW
2	WLAN	2410-2480 MHz	100 mW
3	WLAN	5150-5350 MHz class 2	200 mW
4	WLAN	5470-5725 MHz class 1	1 W
5	GSM	850 MHz, 900 MHz	2 W
6	LTE	2100 MHz, 2600 MHz	500 mW
7	LTE	850 MHz, 900 MHz	2 W

Other certification markings

Any other certification markings are listed in the "Manual Appendix - Additional Certifications" supplement.

If such markings are available, you can find the supplement on the Internet at ["http://support.ts.fujitsu.com/Manuals/"](http://support.ts.fujitsu.com/Manuals/) with the Operating Manual for your device.

Index

A

Acoustic error messages 107
Activate/deactivate keyboard backlight 43
Administrator functions 76
Alt + Tab 43
Anti-theft protection 63
Audio ports 87

B

Back tab 43
Backspace 40
Battery
 battery life 45
 caring for and maintaining 45
 charge level 45, 49
 charging 45
 self-discharge 45
 storage 45
Battery indicator 21
Battery status indicator
 see Battery indicator 21
Battery status meter 45
Battery symbol
 see Battery indicator 21
Battery:
 discharges too quickly 106
BIOS Setup Utility
 calling 98
 exiting 100
 operating 99
 protecting with password 64
 settings 98
Bluetooth
 Switching the module off 54
 Switching the module on 54
Bluetooth, safety notes 12
Board 88
Buttons 39

C

Camera 44
Caps Lock 40
 indicator 22
CE marking 116
Certification markings 117
Charging capacity, battery 45
Cleaning 15
Components
 installing / removing 88
Configuration, BIOS Setup Utility 98

Connecting audio devices 87
Connecting headphones 87
Ctrl+Alt+Del 43
Cursor control 40
Cursor keys 40

D

Date is incorrect 102
Declaration of conformity 115
Device
 setting up 17
Display orientation
 selecting 26
Drive
 indicator 21

E

Electromagnetic compatibility 116
Energy
 energy saving 13
Energy saving 13
Energy saving functions 43
Energy saving mode
 leaving 105
Enter 40
Enter key 40
Error message:
 on the screen 108
Error messages
 Mainboard 80
Error messages on the screen 108
Errors
 Acoustic warnings 107
ESD 88
Ethernet LAN 55

F

F Lock
 Indicator 21
F10, function key 72
F2, function key 79
F3, function key 79
F5, function key 72, 75
F6, function key 72, 75
F7, function key 72
F8, function key 72, 75
F9, function key 72, 75
Fault
 correction 101

- Fingerprint sensor 62
 - configure 62
 - First-time setup 16
 - Fn key 40
 - Fn+F1 42
 - Fn+F10 43
 - Fn+F2 42
 - Fn+F3 42
 - Fn+F4 42
 - Fn+F5 42
 - Fn+F6 42
 - Fn+F7 42
 - Fn+F8 42
 - Fn+F9 43
 - Fn+space key 43
- G**
- Getting started 16
- H**
- Hardware configuration 98
 - HDMI port 82
- I**
- Important notes 12
 - Incorrect date/time 102
 - Indicator
 - Caps Lock 22
 - drive 21
 - F Lock 21
 - Num Lock 21
 - Scroll Lock 22
 - Installing SystemLock 70
- K**
- Key combinations 42
 - Keyboard 39
 - cleaning 15
- L**
- Landscape orientation
 - screen 26
 - LCD screen
 - cleaning 15
 - decrease brightness 42
 - difficult to read 102
 - notes 30
 - reflected glare 102
 - remains blank 102
 - LCD screen is too dark 102
 - Life, battery 45
 - Line feed 40
 - Loudspeakers 51
 - switch off 42
 - switch on 42
 - Low voltage directive 116
- M**
- Main memory
 - see Adding memory 91
 - Mains adapter
 - connecting 17
 - setting up 17
 - Mechanical backup 63
 - Memory card
 - handling 50
 - inserting 50
 - removing 50
 - Memory expansion
 - installing 93
 - removing 92
 - Memory module
 - important notes 91
 - installing 93
 - removing 92
 - Microphone 51
 - switch off 42
 - switch on 42
 - Mobile operation 14
 - Monitor
 - connecting 83
 - drifting display 103
 - remains blank 103
 - Monitor port
 - see VGA connection socket 83
- N**
- Notebook
 - before you travel 14
 - cannot be started 104
 - cleaning 15
 - stops working 105
 - switching off 28
 - transporting 14
 - using 20
 - Notebook, operation 20
 - Notebook: switching on 24

Notes 12

- boards 88
- CE marking 116
- cleaning 15
- disposal / recycling 115
- energy saving 13
- LCD screen 30
- Safety 12
- transport 14

Num Lock

- indicator 21, 41

Numeric keypad 39

- see Virtual numeric keypad 41

O

Operating system

- activating system protection 65
- cancel system protection 65
- protecting with password 65

P

Packaging 16

Palm vein sensor 63

- Configuring 63

Password

- changing 65
- entering 64
- removing 65

Password protection 64

Pen 33

Port Replicator

- Ports 56

Portrait orientation

- screen 26

Ports

- Port Replicator 56

Power

- power consumption 49
- power-management features 49

Power-on indicator 21, 24

Preparing for operation 17

Printer does not print 105

R

Radio component:

- safety notes 12

Rechargeable battery 45

- see Battery 45

Removing memory

- see Adding memory 91

Return 40

S

Safety notes 12

Screen

- no screen display 103

Screen brightness

- decrease 42
- increase 42

Scroll Lock

- indicator 22

Security functions 60

- SystemLock 66

Security functions,

- SmartCard 66

Security Lock 63

Selecting a location 17

Self-discharge, battery 45

Servicing 88

Setup

- see BIOS Setup Utility 98

Shift 40

Shift + Tab 43

Shift key 40

Slot

- Memory cards 50

SmartCard 67

- access rights 68

- PIN 68

- PUK 68

- user groups 69

Standby indicator 21

Status indicators 20

Supervisor password

- changing 65
- entering 64
- removing 65

Switching on for the first time 18

Switching on the system 67

System configuration 98

System expansion 91

- see Adding memory 91

System settings, BIOS Setup Utility 98

SystemLock

- switching on 79

SystemLock 2

- installing 74

T

Tab key 40

The wireless connection to a network

- does not work 105

Time not correct 102

Tips 101

Toggle output screen 43

- Touchpad 37, 42
 - buttons 37
 - cleaning 15
 - dragging items 38
 - executing commands 37
 - moving the pointer 37
 - selecting an item 37
 - switch off 42
- Touchpad buttons 42
- TPM 80
- Transport
 - Transport damage 16
- Transportation 14
- Travel, notebook 14
- Troubleshooting 101
- Trusted Platform Module 80

U

- Uninstalling
 - SystemLock 79
- USB charging function 86
- USB connection with charging function (USB Type-C™) 85
- USB ports 84
- User groups
 - installing 70

- User password
 - changing 65
 - entering 64
 - removing 65
- Using the Kensington Lock Cable 63

V

- VGA connection socket 83
- Virtual numeric keypad 41
- Volume
 - decrease 42
 - increase 42
- Volume control 51

W

- Windows key 40
- Wireless components
 - switch off 42
 - switch on 42
- Wireless LAN
 - Switching the module off 54
 - Switching the module on 54
- Wireless LAN:
 - safety notes 12