

GV-APOE0810 10-Port 10/100/1000M Unmanaged PoE

Switch with 8-Port PoE



1. Packing List

- 1. GV-APOE0810
- 2. AC Power Cord
- 3. Rubber Feet x 4


- 4. Rack Mount Kit
- 5. Screws x 8

Note: If any of these items is found missing or damaged, please contact your local supplier for replacement.



2. Front Panel

The front panel consists of 10 10/100/1000 Mbps ports, 8 PoE and 2 uplink, LED indicators and the DIP switch.

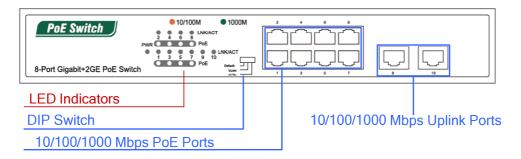

2.1 LED Indicator

LED	Color/Status	Description
PWR	Off	No power supply
	Orange	System powered on
LINK/ACT	Off	No devices connected to the corresponding port
	Orange	Network through the corresponding port has been successfully established at 10/100 Mbps.
	Green	Network through the corresponding port has been successfully established at 1000 Mbps.
	Blinking Orange / Green	Data currently being sent through the corresponding port at 10/100 (orange) or 1000 (green) Mbps
PoE	Off	No PoE powered devices (PD) connected
	Orange	At least one device successfully powered through PoE
	Blinking Orange	Abnormal power supply



2.2 DIP Switch

The DIP switch can switch the system among the following three modes.

[Default Mode] There is communication between all 10 ports, and power is supplied through the 8 PoE ports over cables of up to 100 m (328 ft) with a network bandwidth of 1000 Mbps per port.

[VLAN Mode] The 8 PoE ports function independently, cannot communicate with one another, and can only communicate with the 2 uplink ports.

[CCTV Mode] Allow power supply over cables of up to 250 m in length, but at the expense of reducing the network bandwidth of the 8 PoE ports to 10 Mbps per port.

Note: After changing the mode, it is required to restart the system for the change to take effect.

3. Rear Panel

The AC power socket for powering the system is located at the rear panel and accepts power input from 100 to 240 V at 50/60 Hz.






4. Installation

Prior to installing the PoE switch, please note the following:

- Only clean the switch when it is unplugged and with a dry cloth without involving any liquids.
- Do not place the switch near water or any damp area and prevent moisture from entering the switch chassis.
- Do not place the switch on an unstable surface where it may be severely damaged due to a fall.
- Ensure there is proper ventilation at the installation site and keep the ventilation of the switch free of obstruction.
- Make sure the operating voltage is consistent with as labeled on the switch.
- Do not open the chassis during operation or when there are electrical hazards in avoiding electric shocks.

4.1 Leveled Installation

Attach the four supplied rubber feet at the bottom of the switch and place it on a leveled surface.

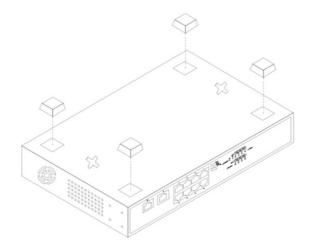

Note: Make sure to leave at least 10 cm of space around the switch for adequate ventilation.




4.2 Wall Mount Installation

For wall mount, make sure to prepare 2 screws of 4 mm in length and $5.5 \sim 7$ mm in diameter and prepare 2 screw anchors of matching size.


1. Drill two evenly-leveled holes on the desired wall that are 150 mm apart.



- 2. Hammer the two self-prepared screw anchors into the holes on the wall.
- 3. Insert the two-self prepared screws into the screw anchors and tighten to the point where there are about 1.5 mm left hanging out.

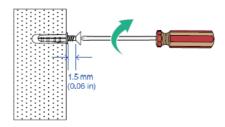

4. Hang the switch onto the screws with all of its ports pointing downward.

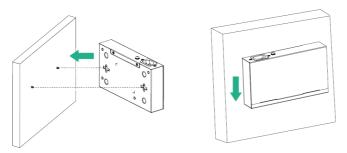

Note: Make sure to leave at least 10 cm of space around the switch for adequate ventilation.

4.3 Powering On the Switch

To power on the switch, connect it to a power source using the supplied AC power cord (preferably one that is grounded). The switch will respond as following upon turning on:

- The LED indicators will flash momentarily, signaling system initiation.
- The PWR LED will be lit.



5. Connecting to GV-IP Camera

The switch can be connected to up to 8 GV-IP Camera and 1 GV-VMS / NVR / DVR System. You can also extend the connection by connecting to another switch.



6. Specifications

For details, please see **Datasheet**.