

# EPA6220 / EPA6236

AHD 1080p IR / IP66 Outdoor Speed Dome

True Day/Night and WDR (20x / 36x Optical Zoom)

---

**eZ.HD**

*User's Manual*



**EverFocus**

Copyright © EverFocus Electronics Corp.

Release Date: February, 2019



Copyright © 1995 - 2019 EverFocus Electronics Corp.

#### **Disclaimer**

All the images including product pictures or screen shots in this document are for example only. The images may vary depending on the product and software version. Information contained in this document is subject to change without notice.

#### **Copyright**

All rights reserved. No part of the contents of this manual may be reproduced or transmitted in any form or by any means without written permission of the EverFocus Electronics Corporation.

EverFocus  
2F., No.12, Ln. 270, Sec. 3, Beishen Rd.,  
Shenkeng Dist., New Taipei City 222, Taiwan  
TEL: +886 2 2662 2338  
FAX: +886 2 2662 3632  
[www.everfocus.com.tw](http://www.everfocus.com.tw)

February, 2019

## About this document

All the safety and operating instructions should be read and followed before the unit is operated. This manual should be retained for future reference. The information in this manual was current when published. The manufacturer reserves the right to revise and improve its products. All specifications are therefore subject to change without notice.

## Regulatory Notices

### **FCC Notice "Declaration of Conformity Information"**

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Warning: Changes or modifications made to this equipment, not expressly approved by EverFocus or parties authorized by EverFocus could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

EPTZ cameras comply with CE and FCC.

## Precautions

### 1. Do not install the camera near electric or magnetic fields.

Install the camera away from TV/radio transmitters, magnets, electric motors, transformers and audio speakers since the electromagnetic fields generated from these devices may distort the video image or otherwise interfere with camera operation.

### 2. Never disassemble the camera beyond the recommendations in this manual nor introduce materials other than those recommended herein.

Improper disassembly or introduction of corrosive materials may result in equipment failure or other damage.

### 3. Try to avoid facing the camera toward the sun.

In some circumstances, direct sunlight may cause permanent damage to the sensor and/or internal circuits, as well as creating unbalanced illumination beyond the capability of the camera to compensate.

### 4. Keep the power cord away from water and other liquids and never touch the power cord with wet hands.

Touching a wet power cord with your hands or touching the power cord with wet hands may result in electric shock.

### 5. Never install the camera in areas exposed to oil, gas or solvents.

Oil, gas or solvents may result in equipment failure, electric shock or, in extreme cases, fire.

### 6. Cleaning

For cameras with interchangeable lenses, do not touch the surface of the sensor directly with the hands. Use lens tissue or a cotton tipped applicator and ethanol to clean the sensor and the camera lens. Use a damp soft cloth to remove any dirt from the camera body. Please do not use complex solvents, corrosive or abrasive agents for cleaning of any part of the camera.

### 7. Do not operate the camera beyond the specified temperature, humidity or power source ratings.

Use the outdoor camera at temperatures within  $-40^{\circ}\text{C} \sim +60^{\circ}\text{C} \leq 95\%$  /  $-40^{\circ}\text{F} \sim +140^{\circ}\text{F} \leq 95\%$ ; this device is not rated as submersible. The input power source is 12VDC or 24VAC~. Be sure to connect the proper + / - polarity and voltage, as incorrect polarity or too high a voltage will likely cause the camera to fail, and such damage is not covered by the warranty. The use of properly fused or Class 2 power limited type supplies is highly recommended.

### 8. Mounting

Use care in selecting a solid mounting surface which will support the weight of the camera plus any wind, snow, ice or other loading, and securely attach the camera to the mounting surface using screws and anchors which will properly support the camera. If necessary (e.g. when mounting to drop ceilings) use a safety wire to provide additional support for the camera.

# CONTENTS

---

<b>1. Introduction</b> .....	<b>1</b>
1.1 Features.....	1
1.2 Dimensions.....	1
1.3 Packing List.....	2
1.4 Optional Accessories.....	2
<b>2. Installation</b> .....	<b>3</b>
2.1 Wall Mounting.....	3
2.2 Corner Mounting.....	4
2.3 Pole Mounting.....	5
2.4 Ceiling Mounting.....	6
2.5 Cable Connection.....	7
2.5.1 Coaxial and RS-485 Cables.....	7
2.5.2 Power Cable.....	7
<b>3. OSD Menu Tree</b> .....	<b>8</b>
<b>4. OSD Menu</b> .....	<b>10</b>
4.1 System.....	10
4.2 Dome.....	11
4.2.1 COMM.....	11
4.2.2 IR DISPLAY.....	11
4.2.3 GUARD TOUR.....	12
4.2.4 A-B SCAN.....	13
4.2.5 PAN SCAN.....	13
4.2.6 PATTERN.....	14
4.2.7 PARK ACTION.....	14
4.2.8 PRIVACY ZONE.....	15
4.2.9 ADVANCED.....	15
4.3 Camera.....	16
4.4 Display.....	16
4.5 Language.....	17
4.6 Timing Task.....	17
4.6.1 TIME SETTING.....	17
4.6.2 TIME TASK.....	17
4.7 Alarm.....	18
4.8 Reset.....	18
<b>5. Specifications</b> .....	<b>19</b>
<b>Appendix</b> .....	<b>21</b>
A.Shortcut Commands.....	21
B.Troubleshooting.....	22

## 1. Introduction


The EPA6220 / EPA6236 1080p speed dome cameras come with 20x / 36x optical zoom lens respectively. Equipped with a weather-resistant (IP66) housing, the models meet a wide variety of needs for outdoor surveillance. The speed dome cameras support AHD, TVI, CVI and CVBS video formats, which are switchable via shortcut commands (please refer to *Appendix A Shortcut Commands*).

EPA6220 / EPA6236 provides variable pan / tilt speeds for fast and accurate monitoring. A maximum of 220 preset points can be configured for precise location of target areas. Features like A-B scan, 4 patterns, 8 tours are all provided. The speed dome cameras also feature IR-Cut Filter, which can be removed or attached manually or automatically switched based on the detected light levels. A built-in fan and heater are also equipped in the speed dome camera.

### 1.1 Features

- AHD 1080p Sony CMOS sensor
- 20x optical zoom lens (for EPA6220) / 36x optical zoom lens (for EPA6236)
- Supports UTC & RS-485 communication
- True Day and Night (IR-cut filter removable)
- Supports D-WDR
- Supports 220 preset positions
- Supports 8 tours (16 positions each tour)
- IP66-rated with metal housing
- Supports OSD menu

### 1.2 Dimensions

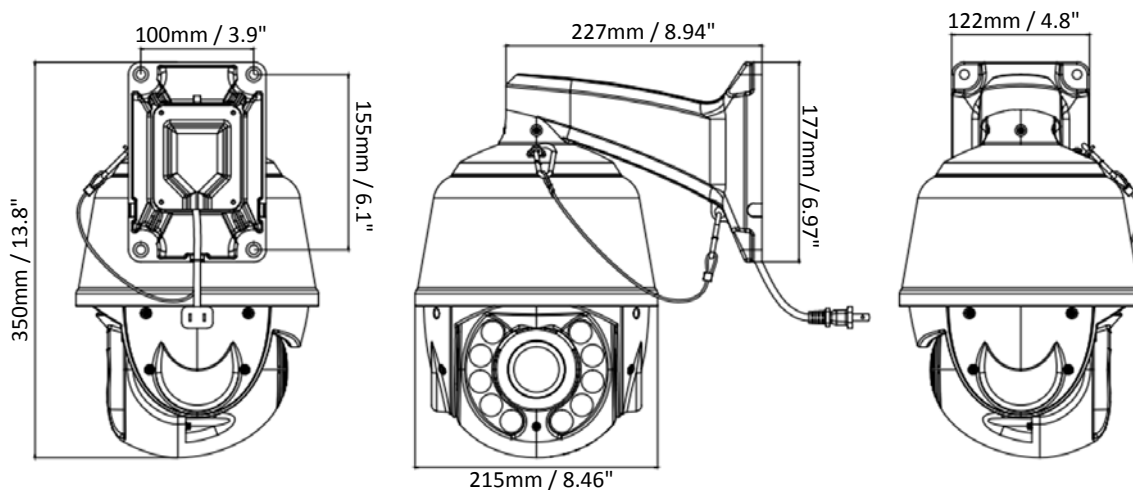

### 1.3 Packing List

1. Speed Dome Camera x 1
2. Wall Mount Bracket x 1
3. Power Supply (12VDC, 4A) x 1
4. Screw Kit x 1
5. Quick Installation Guide x 1

**Note:**

1. Equipment configurations and supplied accessories vary by country. Please consult your local EverFocus office or agents for more information. Please also keep the shipping carton for possible future use.
2. Contact the shipper if any items appear to have been damaged in the shipping process.

### 1.4 Optional Accessories

- Pole Mount Bracket



- Corner Mount Bracket



- Pendant Mount Bracket



- EKB700 Keyboard (RS-485)




## 2. Installation


### 2.1 Wall Mounting

You can use the supplied **Wall Mount Bracket** to install the speed dome camera to the concrete wall. Note that the wall should be withstood at least 4 times the weight of the speed dome camera.


#### Wall Mount Bracket

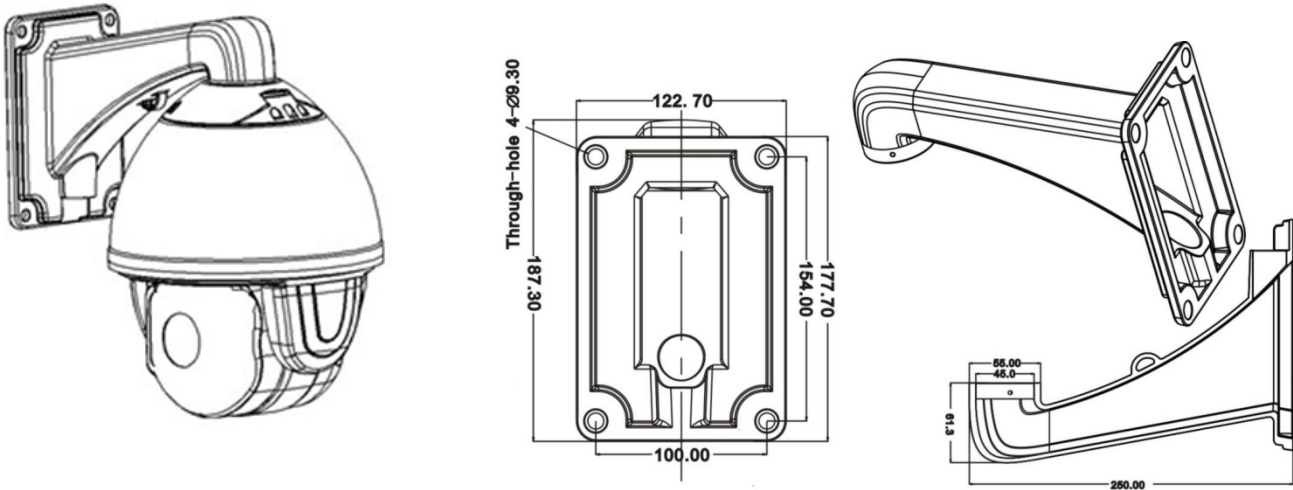

1. Mark the 4 screw holes on the wall based on the **Wall Mount Bracket** and then drill 4 screw-depth holes on the wall.

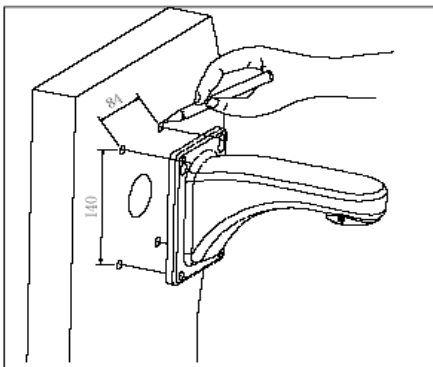

2. Run the cables through the **Wall Mount Bracket** and then screw the **Wall Mount Bracket** to the wall with M8 screws.

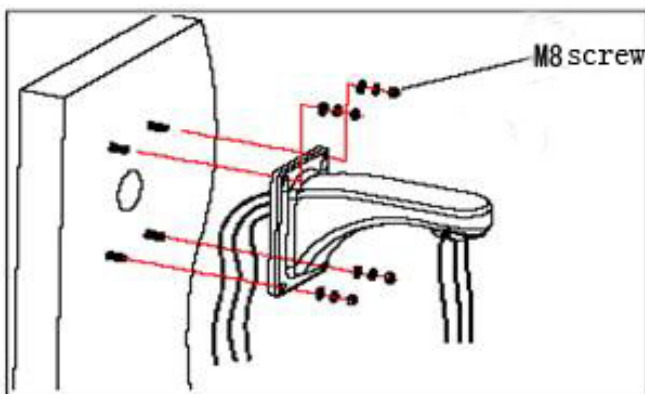


3. Screw the speed dome camera to the **Wall Mount Bracket**.




## 2.2 Corner Mounting

You can purchase the **Corner Mount Bracket** (please refer to *1.4 Optional Accessories*) to install the speed dome camera to the concrete corner wall with 90° angle. Note that the wall should be withstood at least 4 times the weight of the speed dome camera.


**Corner Mount Bracket**

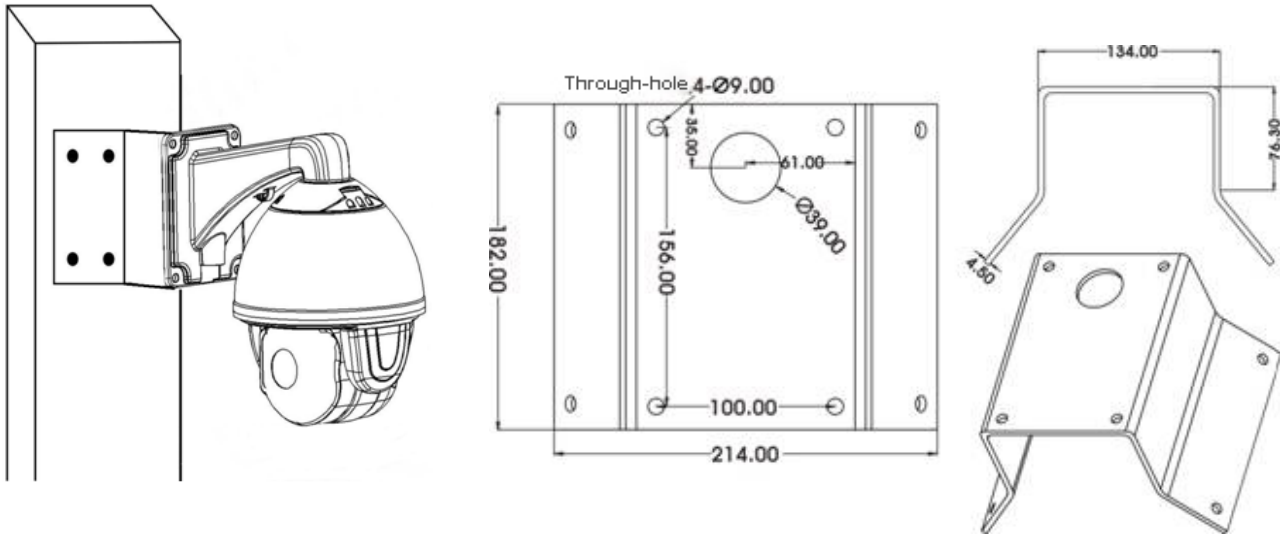

1. Mark the screw holes on the wall based on the **Corner Mount Bracket**, drill the screw-depth holes and then screw the **Corner Mount Bracket** to the wall with M8 screws and screw nuts.

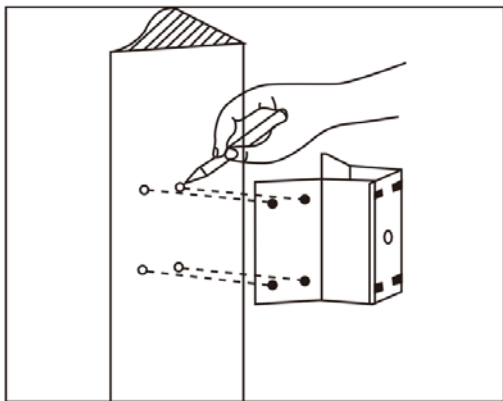


2. Run the cables through the **Wall Mount Bracket** and **Corner Mount Bracket**, and then screw the **Wall Mount Bracket** to the **Corner Mount Bracket**.

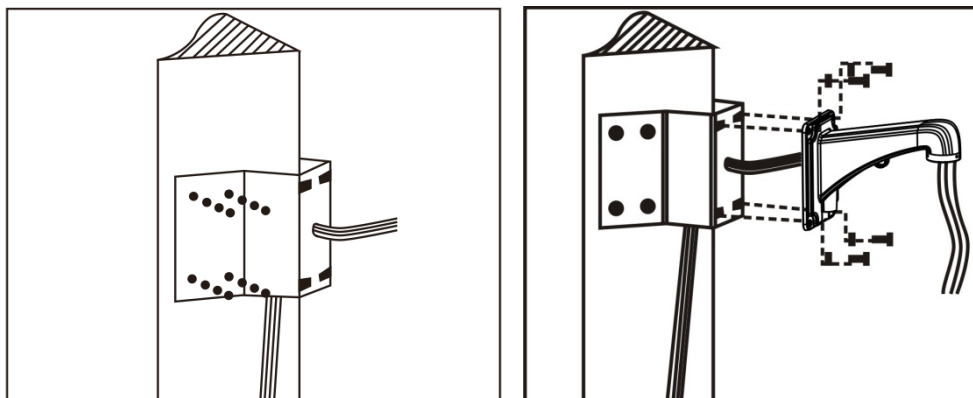


3. Screw the speed dome camera to the **Wall Mount Bracket**.

## 2.3 Pole Mounting


You can purchase the **Pole Mount Bracket** (please refer to *1.4 Optional Accessories*) to install the speed dome camera to a pole structure with diameter between 130-152mm (max. 6 inches). Note that the pole structure should be withstood at least 4 times the weight of the speed dome camera.

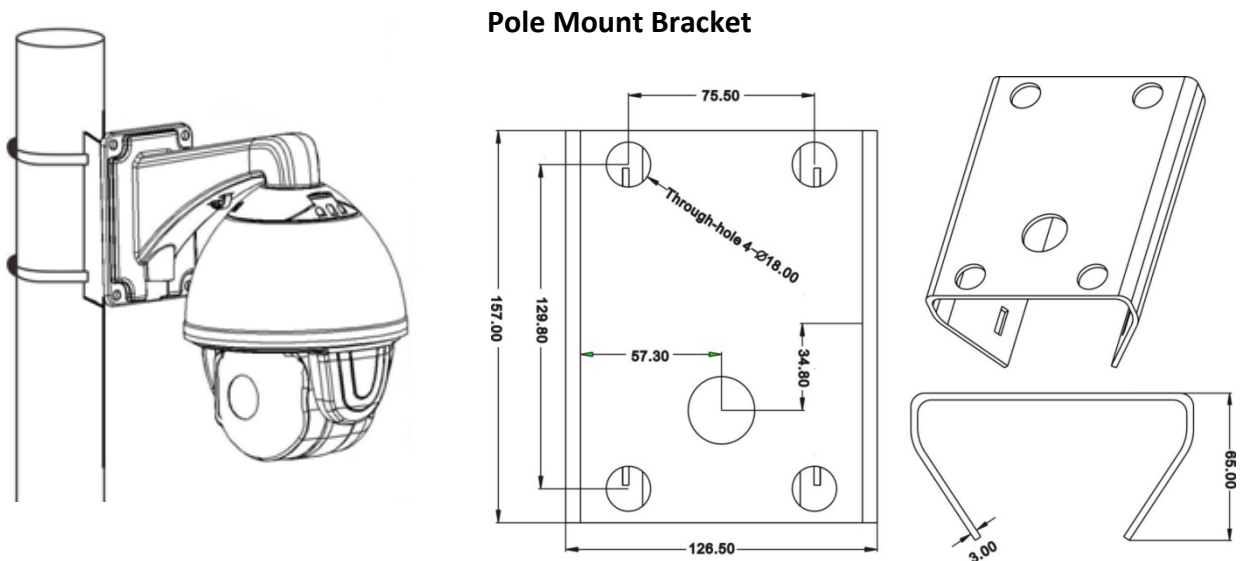

1. Fix the **Pole Mount Bracket** to the pole structure using the Stainless Hose Clamps ( $\phi$ 130-152mm).

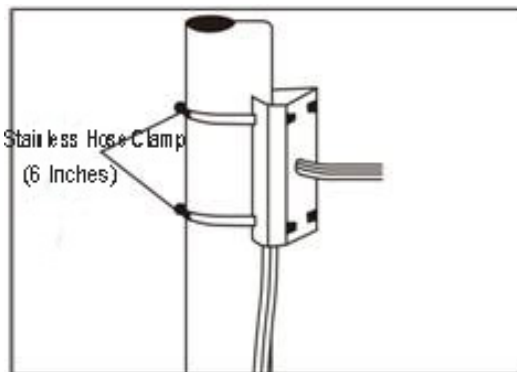


2. Run the cables through the **Wall Mount Bracket** and **Pole Mount Bracket**, and then screw the **Wall Mount Bracket** to the **Pole Mount Bracket**.

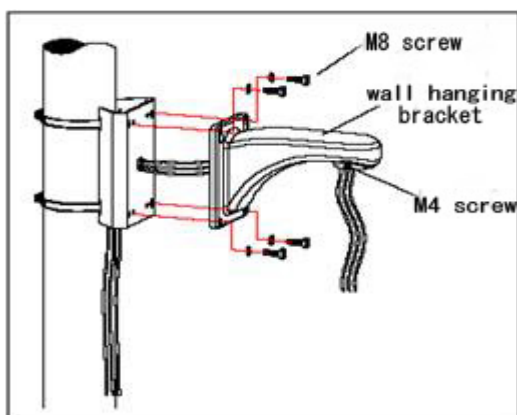



3. Screw the speed dome camera to the **Wall Mount Bracket**.

## 2.4 Ceiling Mounting


You can purchase the **Ceiling Mount Bracket** (please refer to *1.4 Optional Accessories*) to install the speed dome camera to the ceiling. Note that the ceiling should be withstood at least 4 times the weight of the speed dome camera.

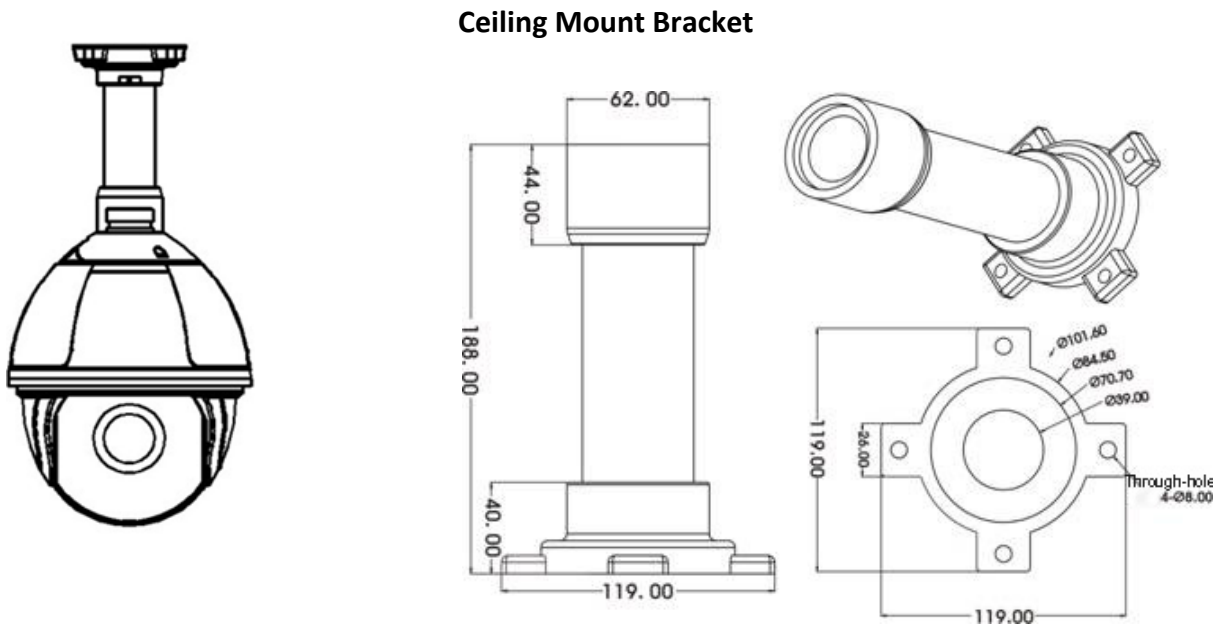

1. Unscrew the M4 screws to remove the **Bracket Base** from the **Ceiling Mount Bracket**. Mark the screw holes on the ceiling based on the **Bracket Base**, drill the screw-depth holes and then screw the **Bracket Base** to the ceiling with M6 screws. You can optionally apply the silica gel to the faying surface between the Bracket Base and ceiling for water proofing.

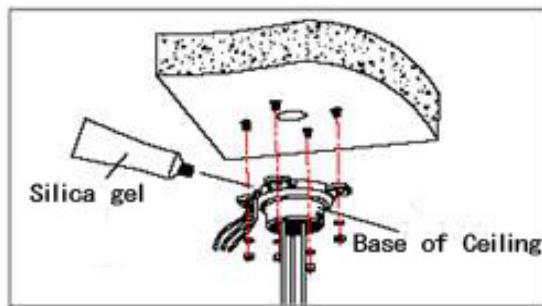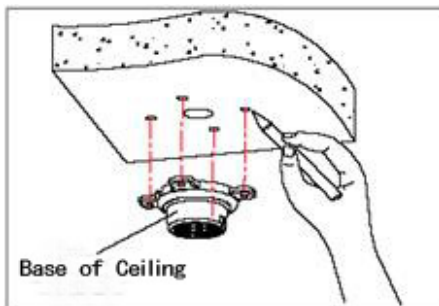


2. Run the cables through the **Ceiling Mount Bracket**, and then screw the **Ceiling Mount Bracket** to the **Bracket Base**. You can optionally apply the silica gel to the joint sleeve for water proofing.

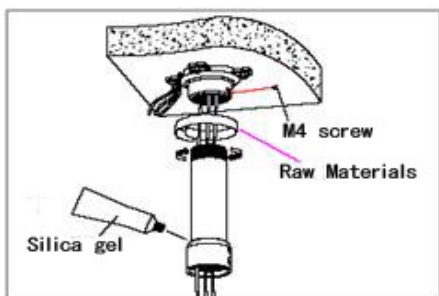

3. Screw the speed dome camera to the **Ceiling Mount Bracket**.

## 2.5 Cable Connection

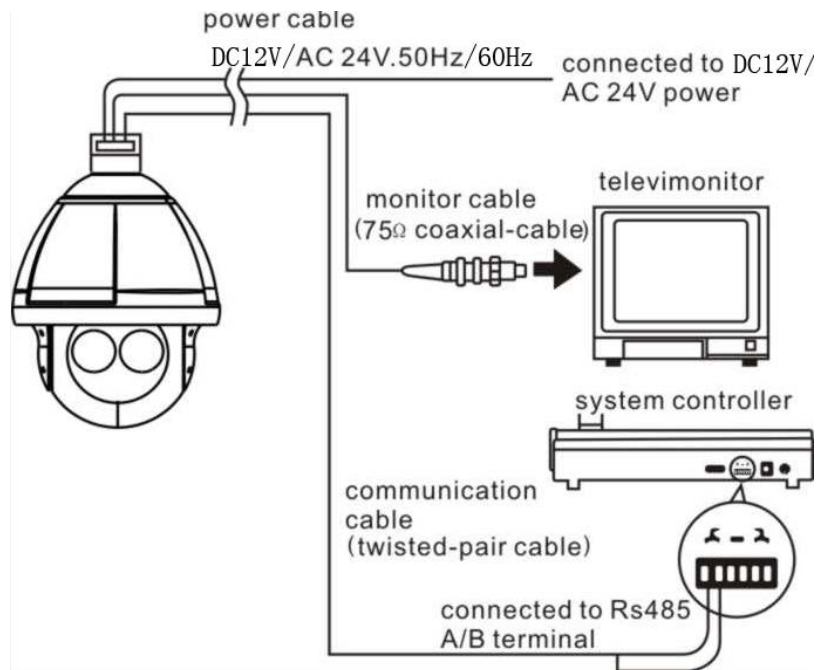

### 2.5.1 Coaxial and RS-485 Cables

The speed dome cameras support UTC function and RS-485 communication. You can control the speed dome cameras either through UTC (over coaxial cable) or RS-485 (RS-485 wires).

### 2.5.2 Power Cable

The speed dome cameras support dual power, 12VDC/4A and 24VAC~/3A.

In general, the power cable has resistance, there are internal losses when transmitting the voltage, the longer of the cable used, the smaller the wire diameter, the worse loss will suffer. In order to avoid losses of cable causing low voltage and keep the dome work properly, when processing wiring please refer to the requirement below:

Cable Diameter	0.5mm <sup>2</sup> (20#)	1.0mm <sup>2</sup> (18#)	1.5mm <sup>2</sup> (16#)	2.5mm <sup>2</sup> (14#)
Dome Distance	11m(37ft)	18m(60ft)	29m(95ft)	46m(152ft)

For example, if a dome is 35 meters away from the power supply , power cable used must be more than 2.5mm<sup>2</sup>, otherwise, the dome may suffer insufficient power supply and could not work properly.

Remark: The dome with 12VDC should be less than 3 meters away from power supply.

### 3. OSD Menu Tree

No.	Main Menu	1 <sup>st</sup> Layer	2 <sup>nd</sup> Layer	3 <sup>rd</sup> Layer
1	System	MFG		
		Protocol		
		Dome ID		
		Comm		
		Temperature		
		Version		
		Exit		
2	Dome	Comm	Device ID	
			Check ID	
			Target ID	1-250
			Soft Protocol	Auto
			Baud Rate	1200, 2400, 4800, 9600
			Comm Reset	
			Save	
			Exit	
		IR Display	Working Mode	Auto, Off, On
			Testing Time	2-15 sec.
			Output Power	40%, 60%, 80%, 100%
			Illumination On	1-15
			Ambient Light	0-50
			IR Switch Zoom	1-10
			Exit	
		Guard Tours	Guard Tour	1-8
			Setting	ID (1-16), Point, Time, Speed
			Init	
			Running	
			Delete	
		A-B Scan	Preset A	0-64
			Preset B	0-64
			Scan Speed	1-64
			Dwell Time	2-60 sec.
			Running	
			Delete	
			Exit	
		PAN Scan	PAN Scan Speed	1-64
			Init	
			Running	
			Exit	
		Pattern	Pattern No	1-4
			Setting	
			Running	
			Delete	
			Exit	
		Park Action	Park Mode	Off, AB Scan, 360, Home, Tour1, Pattern1
			Park Time	1-60 min.
			Setting	
			Call	

			Delete	
			Exit	
		Privacy Zone	N/A	
		Advanced	PWR On Act	Action (memory), Off, AB Scan, 360, Home, Tour1, Pattern1
			Ratio Speed	On, Off
			Auto Flip	On, Off
			Others	N/A
	Exit			
3	Camera	Cam	Auto, CNB, LG, Samsung, Hitachi, Yoko, XF, WX, Sony	
		Zoom Speed	Quick, Slow	
		Digital Zoom	On, Off	
		Focus	Auto, Manual	
		Iris	Auto, Manual	
		BLC	On, Off	
		Freeze	On, Off	
			Exit	
4	Display	P and T	On, Off	
		Zoom	On, Off	
		Action	On, Off	
		Dome ID	On, Off	
		Comm	On, Off	
		Time	On, Off	
			Exit	
5	Language	Language	English, Spanish, French, Portuguese, Polish, German, Italian	
			Exit	
6	Timing Task	Time Setting	Time-Year	
			Time-Month	
			Time-Date	
			Time-Hour	
			Time-Min	
			Time-Sec	
			Save	
			Exit	
		Timing Task	Off, AB Scan, 360, Tour1, Tour2, Tour3, Tour4, Pattern1, Pattern2,	
	Exit			
7	Alarm	Alarm	On, Off	
		Patrol Time	2-60 sec.	
		Alarm Linkage	On, Off	
		Alarm 1	1-64	
		Alarm 2	1-64	
		Alarm 3	1-64	
		Alarm 4	1-64	
		Release Time	Off, 2-60 sec.	
			Exit	
8	Reset	Dome Restart		
		Sys Data		
		Cam Data		
		Preset		
			Exit	
9	Exit			

## 4. OSD Menu

MAIN MENU
< SYSTEM >
< DOME >
< CAMERA >
< DISPLAY >
< LANGUAGE >
< TIMING TASK >
< ALARM >
< RESET >
EXIT

### 4.1 System

MAIN MENU	SYSTEM
< SYSTEM >	MFG
< DOME >	PROTOCOL                      AUTO
< CAMERA >	DOME ID                        001
< DISPLAY >	COMM                            9600-N-8-1
< LANGUAGE >	TEMPERATURE                    33
< TIMING TASK >	VERSION                        A123456
< ALARM >	EXIT
< RESET >	
EXIT	

**MFG:** Max 15 characters displayed on the screen.

**PROTOCOL:** Displays the protocol of the dome. To configure the value, go to DOME > COMM.

**DOME ID:** Displays the dome address. To configure the value, go to DOME > COMM.

**COMM:** Displays the baud rate, check bit, data bit, start bit. To configure the value, go to DOME > COMM.

**TEMPERATURE:** Displays the temperature of the dome.

**VERSION:** Displays the version of the dome.

**EXIT:** Exit the current menu.

## 4.2 Dome

### 4.2.1 COMM

MAIN MENU	DOME	COMM
< SYSTEM > < DOME > → < CAMERA > < DISPLAY > < LANGUAGE > < TIMING TASK > < ALARM > < RESET > EXIT	< COMM > → < IR DISPLAY > < GUARD TOURS > < A-B SCAN > < PAN SCAN > < PATTERN > < PARK ACTION > < PRIVACY ZONE > < ADVANCED >	DEVICE ID                   160303 CHECK ID                   160298  TARGET ID                    003 SOFT PROTOCOL                AUTO BAUD RATE                    9600 COMM RESET SAVE EXIT

**DEVICE ID:** The device ID is auto generated by the system.

**CHECK ID:** To change the TARGET ID, please input the CHECK ID exactly same as the DEVICE ID displays on the screen.

**TARGET ID:** Target ID is available from 001 to 250, which can be used to distinguish several domes with the same ID.

**SOFT PROTOCOL:** Select a protocol for the dome.

**BAUD RATE:** Select a baud rate for the dome. Options include 1200BPS, 2400BPS, 4800BPS and 9600BPS.

**COMM RESET:** Enter to restore the COMM settings to factory default and then automatically restart the dome.

**SAVE:** Enter to save all the configurations. The dome will reboot.

**EXIT:** Exit the current menu.

### 4.2.2 IR DISPLAY

MAIN MENU	DOME	IR DISPLAY
< SYSTEM > < DOME > → < CAMERA > < DISPLAY > < LANGUAGE > < TIMING TASK > < ALARM > < RESET > EXIT	< COMM > < IR DISPLAY > → < GUARD TOURS > < A-B SCAN > < PAN SCAN > < PATTERN > < PARK ACTION > < PRIVACY ZONE > < ADVANCED >	WORKING MODE                AUTO TESTING TIME                08S OUTPUT POWER               100 ILLUMINATION ON             03 AMBIENT LIGHT               17 IR SWITCH ZOOM              07 EXIT

**WORKING MODE:** Select an IR working mode for Day/Night switch. Options include Auto, Off (black & white) and On (color). If Auto is selected, the dome will automatically switch from day to night mode when the illumination level is low; or automatically switch from night to day mode when the illumination level is high.



**TESTING TIME:** If Auto is selected from the IR working mode, you can set up a switch time (switch from day to night or night to day) to activate the switch action.

**OUTPUT POWER:** Select an output power. Options include 40%, 60%, 80% and 100%.


**ILLUMINATION ON:** Illumination on is 1 to 15 grade selectable and default is 3. If Auto IR working mode is selected, when the Illumination On level is lower than the ambient light, the picture will change to color, the IR illumination will turn off automatically. When the Illumination On level is higher than the ambient light, the picture will change to black and white, the IR illumination will turn on automatically.

**AMBIENT LIGHT:** Ambient light is a system data. User cannot change it manually. The Ambient Light changes according to the environment all the time. The data will refresh every time when user enter the OSD.

**IR SWITCH ZOOM:** When zoom value reaches the demanded setting, the IR LEDs with auto switch from near illumination to far illumination.


**EXIT:** Exit the current menu.

### 4.2.3 GUARD TOUR

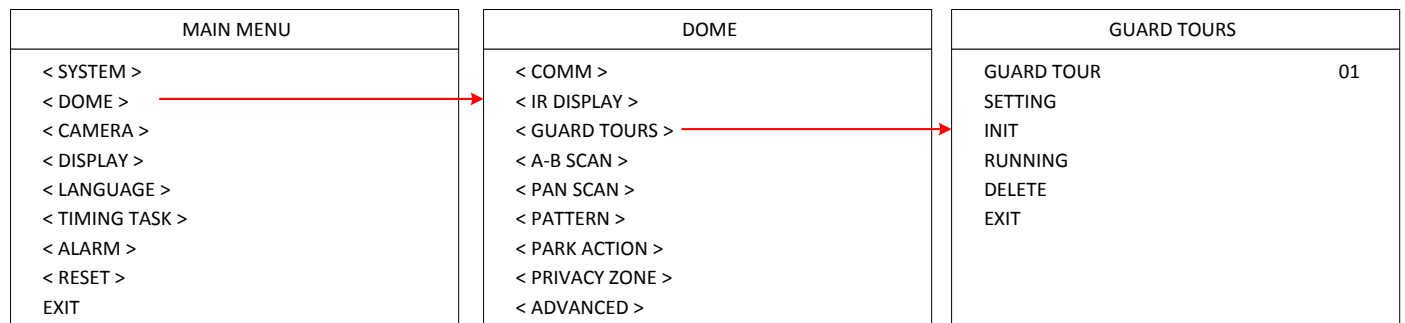

**GUARD TOUR:** Select a number to start setting the Tour function. Up to 8 tours can be set up.

**SETTING:** You can set-up up to 16 presets to each guard tour. Preset point is from 0-64 (0 is invalid). Dwell time is from 1 to 60s. Speed value is from 1 to 64.

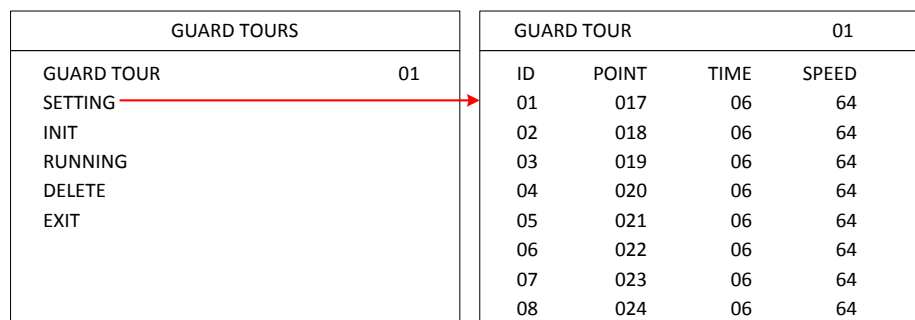

**INIT:** Enter to initialize the preset point, dwell time and speed to default value.

**RUNNING:** Enter to activate this tour function.

**DELETE:** Enter to delete the setting of this tour. The preset points will display as 0.

**EXIT:** Exit the current menu.

#### 4.2.4 A-B SCAN

MAIN MENU	DOME	A-B SCAN
< SYSTEM > < DOME > → < CAMERA > < DISPLAY > < LANGUAGE > < TIMING TASK > < ALARM > < RESET > EXIT	< COMM > < IR DISPLAY > < GUARD TOURS > < A-B SCAN > → < PAN SCAN > < PATTERN > < PARK ACTION > < PRIVACY ZONE > < ADVANCED >	PRESET A PRESET B SCAN SPEED 03 DWELL TIME 06s RUNNING DELETE EXIT

**PRESET A:** Set up A point from preset 0 to 64. To save the position, activate preset 1.

**PRESET B:** Set up B point from preset 0 to 64. To save the position, activate preset 1.

**SCAN SPEED:** A-B scan speed can be set up from 1 to 64.

**DWELL TIME:** Dwell time can be set up from 2s to 60s.

**RUNNING:** Enter to activate the A-B scan function.

**DELETE:** Enter to delete the setting of A-B scan. The preset points will display as 0.

**EXIT:** Exit the current menu.

#### 4.2.5 PAN SCAN

MAIN MENU	DOME	PAN SCAN
< SYSTEM > < DOME > → < CAMERA > < DISPLAY > < LANGUAGE > < TIMING TASK > < ALARM > < RESET > EXIT	< COMM > < IR DISPLAY > < GUARD TOURS > < A-B SCAN > < PAN SCAN > → < PATTERN > < PARK ACTION > < PRIVACY ZONE > < ADVANCED >	PAN SCAN SPEED 03 INIT RUNNING EXIT


**PAN SCAN SPEED:** Set up the PAN scan speed from 1 to 64. PAN Scan supports 360°clockwise continuous scan.

**INIT:** Enter to initialize the PAN Scan speed to default value.

**RUNNING:** Enter to activate the PAN scan function.

**EXIT:** Exit the current menu.

#### 4.2.6 PATTERN

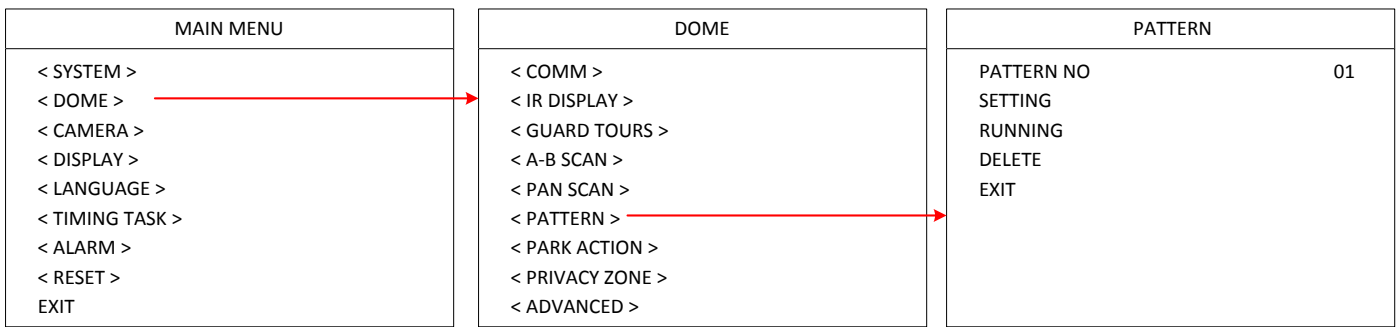

**PATTERN NO:** Select a number to start setting the Pattern function. Up to 4 patterns can be set up.


**SETTING:** Enter to set up the pattern function.

**RUNNING:** Enter to activate the pattern function.

**DELETE:** Enter to delete the setting of this pattern.

**EXIT:** Exit the current menu.

#### 4.2.7 PARK ACTION

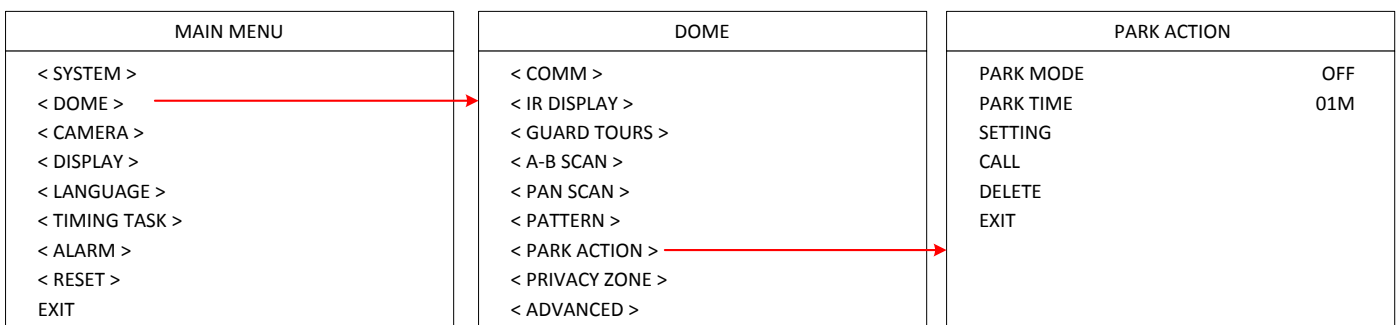

**PARK MODE:** Select a park mode. Options include Off, A-B Scan, 360, Home, Tour1 and Pattern1.

**PARK TIME:** Select a park time from 1~60 mins.

**SETTING:** Move to the desired position and save the settings.

**CALL:** Enter to activate the park function.

**DELETE:** Delete the settings.

**EXIT:** Exit the current menu.

## 4.2.8 PRIVACY ZONE

This speed dome camera does not support the Privacy Zone function.

MAIN MENU	DOME	PRIVACY ZONE
< SYSTEM > < DOME > → < CAMERA > < DISPLAY > < LANGUAGE > < TIMING TASK > < ALARM > < RESET > EXIT	< COMM > < IR DISPLAY > < GUARD TOURS > < A-B SCAN > < PAN SCAN > < PATTERN > < PARK ACTION > < PRIVACY ZONE > → < ADVANCED >	MASK NO. 01 MASK OFF SETTING EXIT

## 4.2.9 ADVANCED

MAIN MENU	DOME	ADVANCED
< SYSTEM > < DOME > → < CAMERA > < DISPLAY > < LANGUAGE > < TIMING TASK > < ALARM > < RESET > EXIT	< COMM > < IR DISPLAY > < GUARD TOURS > < A-B SCAN > < PAN SCAN > < PATTERN > < PARK ACTION > < PRIVACY ZONE > < ADVANCED > →	PWR ON ACT ACTION RATIO SPEED ON AUTO FLIP ON OTHERS EXIT

**PWR ON ACTION:** Power on action can be set as Action (memory), Off, A-B Scan, 360, Home, Tour1 and Pattern1. When power-on the dome, the dome will activate the selected action.

**RATIO SPEED:** Ratio speed can be set up as ON or OFF. Intelligent pan and tilt speed is variable based on the zoom factor. When zooming in, the speed will become slower and when zooming out, the speed will become faster.

**AUTO FLIP:** Auto flip can be set up as ON or OFF status.

**OTHERS:** This speed dome camera does not support this function.

**EXIT:** Exit the current menu.

## 4.3 Camera

MAIN MENU	CAMERA
< SYSTEM >	CAM AUTO
< DOME >	ZOOM SPEED QUICK
< CAMERA >	DIGITAL ZOOM OFF
< DISPLAY >	FOCUS AUTO
< LANGUAGE >	IRIS AUTO
< TIMING TASK >	BLC OFF
< ALARM >	FREEZE OFF
< RESET >	EXIT
EXIT	

**CAM:** Optionally select a brand of the speed dome camera to be displayed.

**ZOOM SPEED:** Select a zoom speed for the speed dome camera.

**DIGITAL ZOOM:** Turn on or turn off the Digital Zoom function for the speed dome camera.

**FOCUS:** Select Auto or Manual for the focus mode.

**IRIS:** Select Auto or Manual for the IRIS. Auto IRIS is recommended.

**BLC:** Turn on or turn off the BLC function.

**FREEZE:** Turn on or turn off the Video Freeze function.

**EXIT:** Exit the current menu.

## 4.4 Display

MAIN MENU	DISPLAY
< SYSTEM >	P AND T OFF
< DOME >	ZOOM OFF
< CAMERA >	ACTION ON
< DISPLAY >	DOME ID ON
< LANGUAGE >	COMM ON
< TIMING TASK >	TIME OFF
< ALARM >	EXIT
< RESET >	
EXIT	

**P AND T:** Turn on or off to display the pan and tilt degree on the screen.

**ZOOM:** Turn on or off to display the zoom information.

**ACTION:** Turn on or off to display the current action, such as A-B Scan, Call Preset, Save preset, Call Park Action, Pan Scan and etc.

**DOME ID:** Turn on or off to display the dome ID on the top-left corner of the screen.


**COMM:** Turn on or off to display the communication speed on the top-left corner of the screen.

**TIME:** Turn on or off to display the system time on the screen.

**EXIT:** Exit the current menu.

## 4.5 Language


You can select a language for the dome.

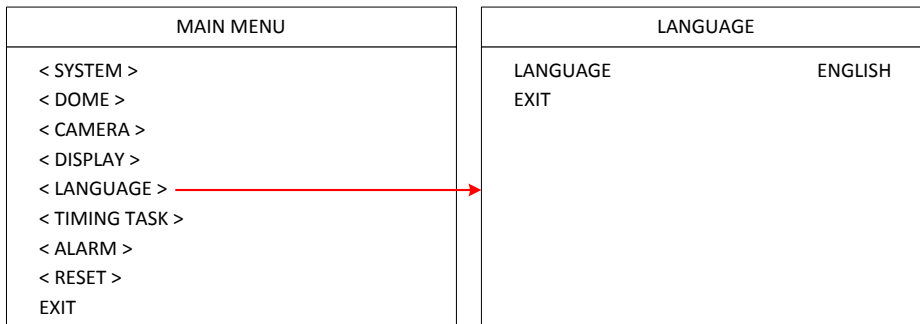

## 4.6 Timing Task


### 4.6.1 TIME SETTING

You can set up the system date and time in this menu.

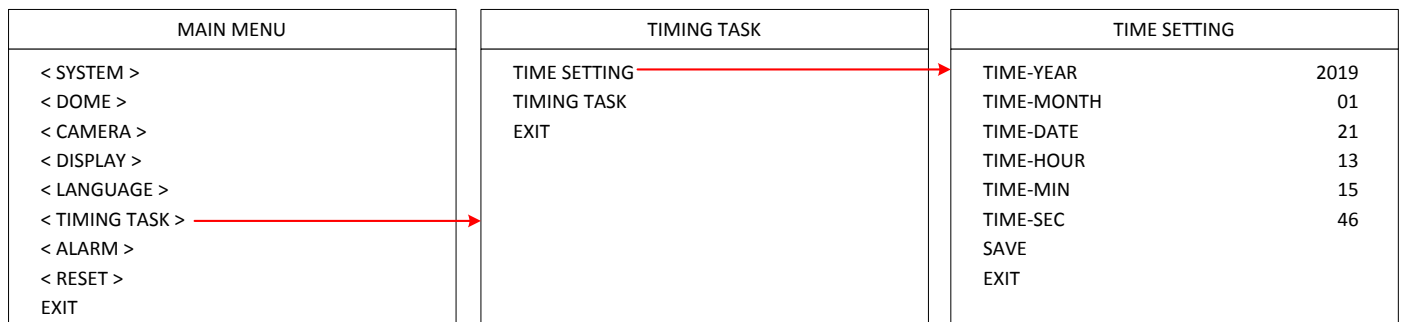


### 4.6.2 TIME TASK

You can set up time task in this menu. Up to 6 time schedules can be set up for functions including A-B Scan, 360 Pan, Tour1, Tour2, Tour3, Tour4, Pattern1, Pattern2, Pattern3 and Pattern4.

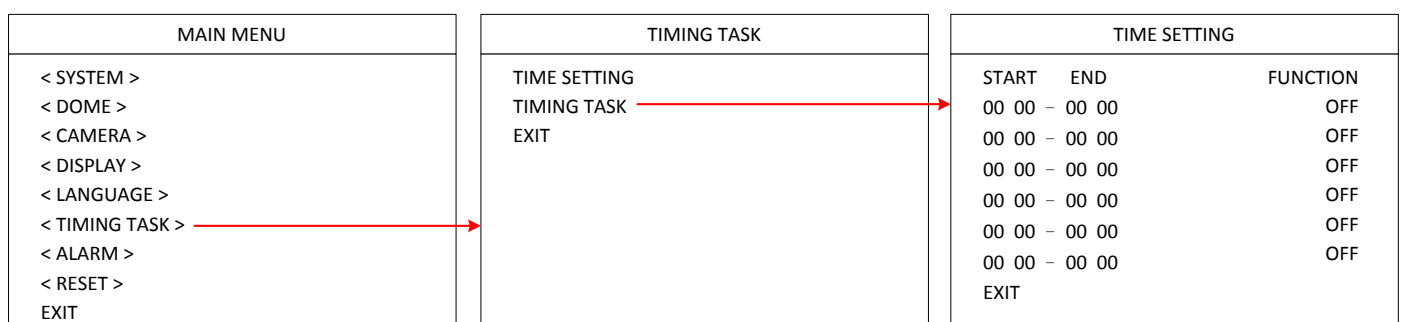

## 4.7 Alarm

MAIN MENU	ALARM
< SYSTEM >	ALARM OFF
< DOME >	PATROL TIME 06S
< CAMERA >	ALARM LINKAGE OFF
< DISPLAY >	ALARM 1 01
< LANGUAGE >	ALARM 2 02
< TIMING TASK >	ALARM 3 03
< ALARM > 	ALARM 4 04
< RESET >	RELEASE TIME OFF
EXIT	EXIT

**ALARM:** Turn on or off the Alarm function.

**PATROL TIME:** Patrol time can be set up from 2~60s.

**ALARM LINKAGE:** Turn on or off the Alarm Linkage function. If On is selected, you can further set up an alarm linkage preset point in the below field.

**ALARM 1:** To run alarm 1, presets 1-64 are available.

**ALARM 2:** To run alarm 2, presets 1-64 are available.


**ALARM 3:** To run alarm 3, presets 1-64 are available.

**ALARM 4:** To run alarm 4, presets 1-64 are available.

**RELEASE TIME:** You can set up the alarming release time from 2-60s; or select Off to turn off the release time.

**EXIT:** Exit the current menu.

## 4.8 Reset

MAIN MENU	RESET
< SYSTEM >	DOMESTART
< DOME >	SYS DATA
< CAMERA >	CAM DATA
< DISPLAY >	PRESET
< LANGUAGE >	EXIT
< TIMING TASK >	
< ALARM >	
< RESET > 	
EXIT	

**DOMESTART:** Enter to restart the speed dome camera.

**SYS DATA:** Enter to restore the system data to factory default.

**CAM DATA:** Enter to restore the dome data to factory default.

**PRESET:** Enter to delete the setup preset points.

**EXIT:** Exit the current menu.

## 5. Specifications

Product Model	EPA6220	EPA6236
Pickup Device	Sony CMOS sensor	
Output Pixels (H x V)	1920 x 1080 (30 / 25 FPS)	
Lens	20x optical zoom, 4.7~94mm	36x optical zoom, 4.6~165mm
Video Format	AHD / TVI / CVI / CVBS switchable	
System Format	NTSC / PAL switchable	
Min. Illumination	Color: 0.01Lux ; B/W: 0.001Lux	
S/N Ratio	≥50dB	
Zoom Ratio	Max. 20x (optical)	Max. 36x (optical)
True Day / Night	Supported	
BLC	On / Off	
WDR	D-WDR (auto)	
AGC	Auto	
WB	Auto	
Motion Detection	Not supported	
Defog	Not supported	
Privacy Mask	Not supported	
Alarm	Not supported	
Focus Control	Auto / Manual	
OSD Menu	Supported	
Video Output	1Vp-p, 75Ω	
IR LED	8 units	
IR Range	150m / 492ft.	
Auto Flip	Horizontal 180°, Vertical 93°	
Preset Points	220 preset points (dwell time 01-60s)	
A-B Scan	User programmable (scan speed 1-64)	
Tour	8 tours (max.16 preset points each tour)	
PWR on Action	Action (Memory), Off, AB Scan, 360, Home, Tour1, Pattern1	
Park Mode	Off, AB Scan, 360, Home, Tour1, Pattern1 (park time 1-60m)	
Pattern Scan	4 patterns (max.15 minutes, max.512 commands)	
Time Scheduling	6 tasks (AB Scan, 360 Pan, Tour 1-4, Pattern 1-4)	
Rotation Range	Pan: 0°~360°, Tilt: 0°~93°	
Rotation Speed	Pan: 0~480°/s, Tilt:0~240°/s	
Communication	RS-485, Coaxial	
Communication Speed	1200 / 2400 / 4800 / 9600bps	
Built-in Protocols	Pelco-P / Pelco-D (auto)	
Address Editable	Supported (OSD switch)	



<b>ID Address</b>	0 ~ 255
<b>Power Source</b>	12VDC, 4A / 24VAC~, 3A
<b>Power Consumption</b>	≤ 25W
<b>Weather Resistance</b>	IP66
<b>Operating Temperature</b>	-40°C ~ 60°C ≤ 95% / -40°F ~ 140°F ≤ 95%
<b>Package Size (W x D x H)</b>	310 x 310 x 440mm / 12.2" x 12.2" x 17.32"
<b>Weight</b>	12VDC: 6.1kg / 13.45lb 24VAC~: 7.15kg / 15.76lb
<b>Certificates</b>	CE, FCC

## Appendix

### A. Shortcut Commands

The speed dome camera supports AHD, TVI, CVI and CVBS video formats, which are switchable via shortcut commands. The shortcut commands are only compliant with Pelco-D and its extended protocol. Users can use the shortcut command to enable the functions described as below:

Preset No.	Function	Preset No.	Function
<b>81 (41)</b>	Auto day/night	<b>97</b>	Call tour 2
<b>82 (42)</b>	Switch to night	<b>98 (38)</b>	Call tour 1
<b>83</b>	Switch to day	<b>99 (39)</b>	Pan scan
<b>84</b>	Force on far light	<b>Twice 137</b>	Switch to AHD
<b>85</b>	Force on near light	<b>Twice 138</b>	Switch to TVI
<b>92</b>	A-B Scan	<b>Twice 139</b>	Switch to CVI
<b>94</b>	OSD off	<b>Twice 140</b>	Switch to CVBS
<b>95</b>	OSD on	<b>Twice 115</b>	Switch to NTSC
<b>96</b>	Call tour 3	<b>Twice 116</b>	Switch to PAL

**Note:** If there is no video or the video is displaying black and white, please check whether the video signal output (NTSC / PAL) is compliant with the system format of your region.

## B. Troubleshooting

Issue	Possible Reason	Solution
After power is applied, there is no motion (self-test) and no video image	Cable harness is improperly connected	Verify that the orientation of the connector input
	Input power voltage is too low	Verify the voltage of the input power
	Power supply is not working	Change a new power supply
Self-test is normal, but cannot control dome	Wrong communication settings	Set the correct protocol, baud rate and address of dome
	Improper connection of control cable (polarity)	Verify the polarity of the RS485 connection as per the instruction manual
Noise after self-testing	Mechanical obstruction	Verify and correct it
	Camera module is not installed correctly	Check the module installation
	Low power	Change the correct power supply
Image is not stable	Low power	Check the power supply or make sure the power input
	Video cable is improperly contacted	Verify the contact of the video cable
Image is blurring	Camera is on manual focus	Change to auto focus
	The lens is dusted	Clean the lens
Control to the dome is not smooth	Power is too low	Change the DC 12V Power supply
	Communication distance is too far	Make sure the distance is in the allowed range
	RS485 cable is not properly connected	Make sure the RS485 is properly connected
	Too many domes connected	Make sure the quantity of the connected domes are allowed

## **EverFocus Electronics Corp.**

### **EverFocus Taiwan:**

2F., No.12, Ln. 270, Sec. 3, Beishen Rd., Shenkeng  
Dist., New Taipei City 222, Taiwan  
TEL: +886 2 2662 2338  
FAX: +886 2 2662 3632  
www.everfocus.com.tw  
[marketing@everfocus.com.tw](mailto:marketing@everfocus.com.tw)

### **EverFocus China - Beijing:**

Room 609, Technology Trade Building,  
Shangdi Information Industry Base,  
Haidian District, Beijing 100085, China  
TEL: +86 10 6297 3336~39  
FAX: +86 10 6297 1423  
www.everfocus.com.cn  
[marketing@everfocus.com.cn](mailto:marketing@everfocus.com.cn)

### **EverFocus USA - California:**


1801 Highland Avenue, Unit A, Duarte, CA 91010,  
USA  
TEL: +1 626 844 8888  
FAX: +1 626 844 8838  
www.everfocus.com  
[sales@everfocus.com](mailto:sales@everfocus.com)

### **EverFocus China - Shenzhen:**

4F, No. 2, D4 Building, Wan Yelong  
Industrial Park, Tangtou Road, Shiyan,  
Baoan, Shenzhen, Guangdong 518101, China  
TEL: +86 755 2765 1313  
FAX: +86 755 2765 0337  
www.everfocus.com.cn  
[marketing@everfocus.com.cn](mailto:marketing@everfocus.com.cn)

### **EverFocus Japan:**

3F, Kuramochi, Building II  
2-2-3 Koto-Bashi, Sumida-Ku,  
Tokyo, 130-0022, Japan  
TEL: +81-3-5625-8188  
FAX: +81 3 5625 8189  
www.everfocus.co.jp  
[info@everfocus.co.jp](mailto:info@everfocus.co.jp)

	<p>Your EverFocus product is designed and manufactured with high quality materials and components which can be recycled and reused. This symbol means that electrical and electronic equipment, at their end-of-life, should be disposed of separately from your household waste. Please, dispose of this equipment at your local community waste collection/recycling centre. In the European Union there are separate collection systems for used electrical and electronic product. Please, help us to conserve the environment we live in!</p>	<p>Ihr EverFocus Produkt wurde entwickelt und hergestellt mit qualitativ hochwertigen Materialien und Komponenten, die recycelt und wieder verwendet werden können. Dieses Symbol bedeutet, dass elektrische und elektronische Geräte am Ende ihrer Nutzungsdauer vom Hausmüll getrennt entsorgt werden sollen. Bitte entsorgen Sie dieses Gerät bei Ihrer örtlichen kommunalen Sammelstelle oder im Recycling Centre. Helfen Sie uns bitte, die Umwelt zu erhalten, in der wir leben!</p>
---	--	--

