



RSC-1DT

Rackmount Chassis User's Manual

Table of Contents

Preface i

Safety Instructions ii

About This Manual iv

Chapter 1. Product Features 1

 1.1 Components 1

 1.2 Specifications 2

 1.3 Feature 2

Chapter 2. Hardware Setup 5

 2.1 Top Cover 5

 2.2 Power Supply Unit Module..... 6

 2.3 Fan Module 6

 2.4 Hard Disk Drive 7

 2.5 Riser Card..... 8

 2.6 Slide Rail 9

Chapter 3. Hardware Specifications..... 13

 3.1.1 Placement..... 13

 3.1.2 Connector and Jumper 13

 3.1.3 LED Indicator 14

Chapter 4. Technical Support..... 15

Document Release History

Release Date	Version	Update Content
October, 2018	1	User's Manual release to public.
June, 2019	1.1	QIG update.
August, 2019	1.2	Content update.
August, 2020	1.3	logo update.
February, 2021	1.4	Manual cover update.
July, 2021	1.5	Content update.



Copyright © 2018 AIC®, Inc. All Rights Reserved.

This document contains proprietary information about AIC® products and is not to be disclosed or used except in accordance with applicable agreements.

Preface

Copyright

No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or by any means, electronic, mechanical, photo-static, recording or otherwise, without the prior written consent of the manufacturer.

Trademarks

All products and trade names used in this document are trademarks or registered trademarks of their respective holders.

Changes

The material in this document is for information purposes only and is subject to change without notice.

Warning

1. A shielded-type power cord is required in order to meet FCC emission limits and also to prevent interference to the nearby radio and television reception. It is essential that only the supplied power cord be used.
2. Use only shielded cables to connect I/O devices to this equipment.
3. You are cautioned that changes or modifications not expressly approved by the party responsible for compliance could void your authority to operate the equipment.

Disclaimer

AIC® shall not be liable for technical or editorial errors or omissions contained herein. The information provided is provided "as is" without warranty of any kind. To the extent permitted by law, neither AIC® or its affiliates, subcontractors or suppliers will be liable for incidental, special or consequential damages including downtime cost; lost profits; damages relating to the procurement of substitute products or services; or damages for loss of data, or software restoration. The information in this document is subject to change without notice.

Safety Instructions

Before you commence, please attentively read the following important discretions below. All cautions and warnings on the equipment or in the manuals should be circumspectly noted and reviewed.

Always ground yourself to prevent static electricity.

請全程接地，以防止靜電。

请全程接地，以防止静电。

Всегда заземляйте себя, чтобы избежать статического электричества.

Aard jezelf altijd om statische elektriciteit te voorkomen.

- Firmly ground yourself at all times when installing or assembling the internal components of the server. Most of electronic components in the server are highly sensitive to electrical static discharge.
- Use a solid grounding wrist strap and distintively place all electronic components in static-shielded devices to prevent static. Grounding wrist straps can be purchased in any electronic supply store.
- Confirm that the power source is turned off and then disconnect the power cords from your system before performing any type of installation or manual servicing. A sudden surge of power could serverly damage the sensitive electronic components.
- Do not precipitously open the system's top cover. If you must open the cover for maintenance purposes, only a trained technician should be allowed to proceed this action. Integrated circuits on computer boards are highly sensitive to static electricity. Before operating a board or integrated circuit, touch an unpainted portion of the system unit chassis for a couple of seconds to discharge any static electricity on your body.

Place the server in a stable environment.

請將伺服器放置在穩定的環境中。

请将伺服器放置在稳定的环境中。

Поместите сервер в стабильную среду.

Plaats de server in een stabiele omgeving.

- Place this equipment on a stable surface when installing. A small mild drop or fall could cause fatal injury to both the equipment and the person handling the equipment.
- Please keep this equipment away from humidity to prevent vast rust and disintergration.
- Carefully and accurately mount the equipment into the rack. Uneven mechanical loading may lead to hazadous consequences.
- This equipment is to be installed for operation in an environment with maximum ambient temperature below 35°C.
- Review the environment before performing any installation or servicing. Keep the equipment away from hazardous and uneven grounds.
- This server must be installed only in Restricted Acess Locations.

Handle equipment with care.

請謹慎操作設備。

请谨慎操作设备。

Обращайтесь с оборудованием осторожно.

Behandel de apparatuur voorzichtig.

- Do not cover the openings of the system. The openings on the system are for air convection, which intentionally protect the equipment from overheating.
- Never pour any liquid into ventilation openings of the system. This could cause catastrophic fire or electrical shock.

- Ensure that the voltage of the power source is within the specification on the label when connecting the equipment to the power outlet. The current load and output power of loads must be within the specification.
- This equipment must be firmly connected to reliable grounding before usage. Pay special attention to power supplied other than direct connections, e.g. using of power strips.
- Place the power cord out of the way of foot traffic. Do not place anything over the power cord. The power cord must be rated for the product, voltage and current marked on the product's electrical ratings label. The voltage and current rating of the cord should be greater than the voltage and current rating marked on the product.

Pay attention to hardware maintenance.

注意硬體維護。

注意硬體维护。

Обратите внимание на обслуживание оборудования.

Besteed aandacht aan hardware-onderhoud.

- If the equipment is not used for a long time, disconnect the equipment from mains to avoid being damaged by transient over-voltage.
- Module and drive bays must not be empty. They must have a dummy cover.
- Never open the equipment without professional assistance. For safety reasons, only qualified service personnel should open the equipment.
- If one of the following situations arise, the equipment should be checked and tested by service personnel:
 1. The power cord or plug is damaged.
 2. Liquid has penetrated the equipment.
 3. The equipment has been exposed to moisture.
 4. The equipment does not work well or will not work according to its user manual.
 5. The equipment has been dropped and/or damaged.
 6. The equipment has obvious signs of breakage.
 7. Please disconnect this equipment from the AC outlet before cleaning. Do not use liquid or detergent for cleaning. The use of a moisture sheet or cloth is recommended for cleaning.



CAUTION

The equipment intended for installation should be placed in Restricted Access Location.



CAUTION

There will be a risk of explosion if battery is replaced by an incorrect type. Dispose of used batteries according to the instructions. After performing any installation or servicing, make sure the enclosure is correct in position before turning on the power.



CAUTION

This unit may have more than one power supply. Disconnect all power sources before maintenance to avoid electric shock.



About This Manual

Thank you for selecting and purchasing RSC-1DT.

This user's manual is provided for professional technicians to perform easy hardware setup, basic system configurations, and quick software startup. This document pellucidly presents a brief overview of the product design, device installation, and firmware settings for 1 DT Rackmount Chassis. For the latest version of this user's manual, please refer to the AIC® website: <https://www.aicipc.com/en/productdetail/40919>.

Chapter 1 Product Features

This chapter delivers the overall layout of the product, including the fundamental components of the rackmount chassis, design specifications, and noteworthy features.

Chapter 2 Hardware Setup

This chapter displays an easy installation guide for assembling the chassis. Utmost caution for proceeding to set up the hardware is highly advised.

Chapter 3 Hardware Specifications

This chapter elaborates the overall layout of the hardware design, including multifarious connectors, jumpers, and LED descriptions.

Chapter 4 Technical Support

For more information or suggestion, please contact the nearest AIC® corporation representative in your district or visit the AIC® website: <https://www.aicipc.com/en/index>. It is our greatest honor to provide the best service for our customers.

Chapter 1. Product Features

RSC-1 DT is a flexible rackmount storage chassis with tool-less design. This product supports hot swappable HDDs and easy swap fans. For more information about our product, please visit our website at <https://www.aicipc.com/en/index>.

Before removing the subsystem from the shipping carton, visually inspect the physical condition of the shipping carton. Exterior damage to the shipping carton may indicate that the contents of the carton are damaged. If any damage is found, do not remove the components; contact the dealer where the subsystem was purchased for further instructions. Before continuing, first unpack the subsystem and verify that the number of components in the shipping carton is accurate and in good condition.

1.1 Components

This product contains the components listed below.

Please confirm the number and the condition of the components before installation.

- Enclosure (includes power supply, fan & hard disk drive tray)
- Power cord (vary per region)
- Slide rail x 1 set (optional)

Product specifications and features are subject to change without prior notice.

1.2 Specifications

Dimensions (W x D x H)	mm : 438 x 680 x 43.5	
	inches : 17 x 26.8 x 1.72	
Industry Standard	EIA-RS310D	
Material	SGCC	
Color	Front Panel : Black	
Cooling	Middle : 4 x 40x56mm rotor + 1 x 40x28mm hot swap fans	
Power Supply	Standard	500W single PSU
	Option	450W 1+1 redundant
Expansion Slot	1 full height	
Front Panel	System power on/off, system reset, and system UID 2 x USB 3.0 ports	
LED Indicators	Power, HDD, LAN, UID, and Fault	
System Board	Up to 12"(W) x 13"(D) EATX MB	


Drive Bays	External	3.5" hot swap	4
	Internal	2.5	4
Backplanes	4-port with SFF-8643 connector supports 12G		
Storage Temperature	0°C(32°F) ~ 50°C(122°F)		
Humidity	5%~95% non-condensing		
Gross Weight	(w/ PSU & Rail)	kgs : 20	
		lbs : 44	
Packaging Dimensions	(W x D x H)	mm : 588 x 1050 x 263	
		inches : 23.1 x 41.3 x 10.4	
Cubic Feet	3.93		
Container Load Quantity	20'	165	
	40'	340	
	40' H	410	
Mounting	Standard	28" tool-less slide rail	

1.3 Feature

- Tool-less design supports quick installation and easy maintenance:
 - Tool-less 3.5" drive trays
 - Tool-less slide rail
- Supports 4 x 12G 3.5" hot swap drive bays
- Supports single and redundant power supplies
- Supports 1 full height expansion slot
- Two front access USB 3.0 ports



Front Panel

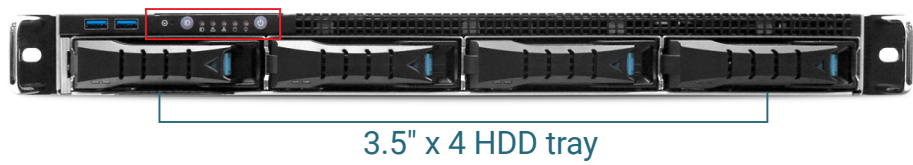


System Switches and LED indicators in front panel

	System Reset Switch
	System ID Switch
	System ID LED
	System Fault LED
	System LAN LED
	System HDD LED
	System Power LED
	System Power Switch

Rear Panel

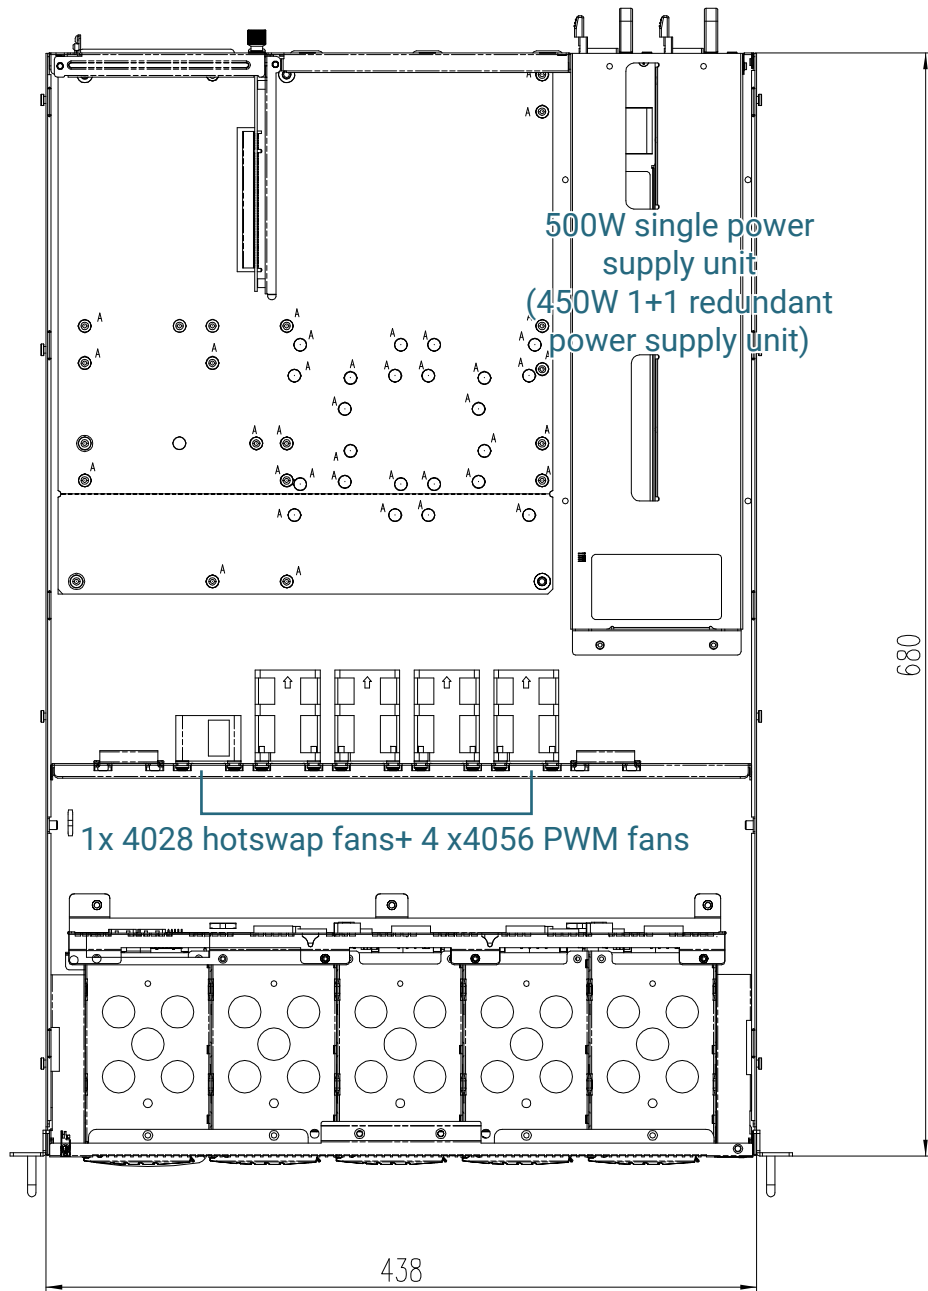


Top View**NOTE**

Motherboard is not included in the product.


Chapter 2. Hardware Setup

2.1 Top Cover

- ① Push the release button on both sides of the top cover and push it toward the rear panel.
- ② Lift the top cover to complete removal.

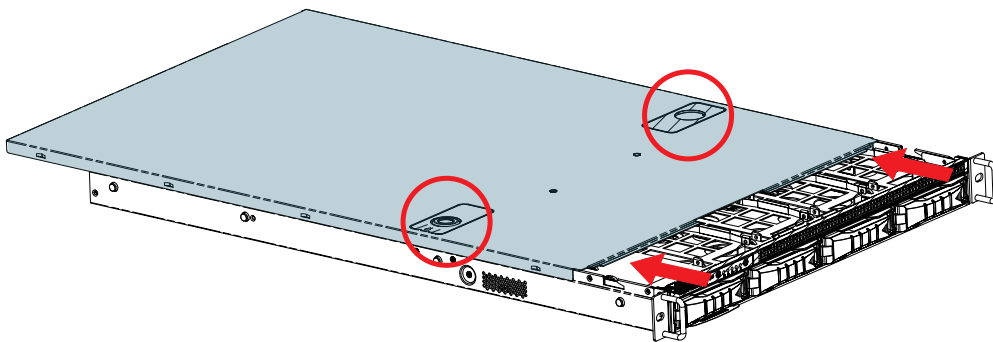


Press and push.

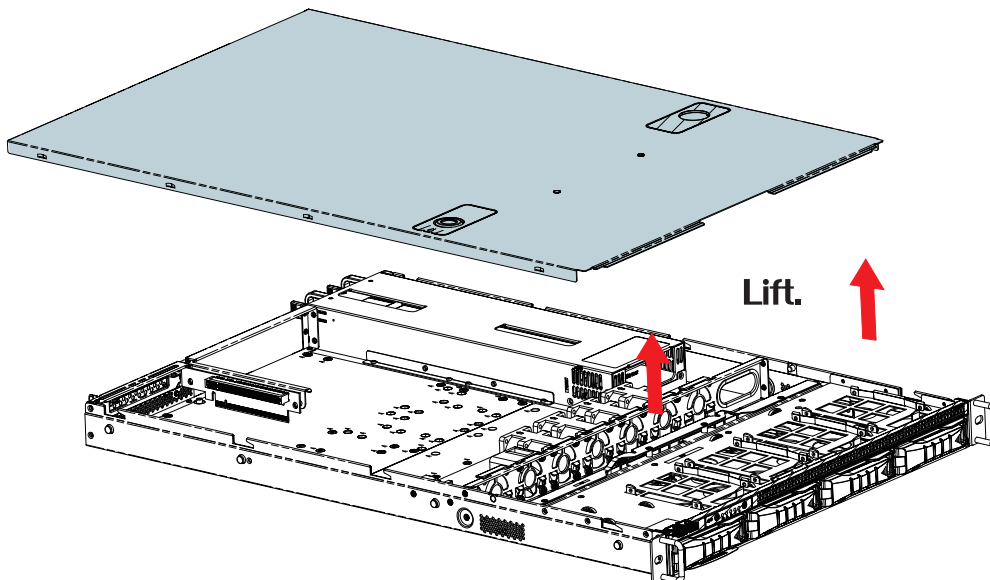



2.2 Power Supply Unit Module

- ① Extract the power supply unit by pushing the ejector while pulling the power supply unit.
- ② Pull the module completely out of the chassis.
- ③ Install the new power supply unit by pushing it into the chassis. Ensure that the module is accurately inserted and locked into the chassis.

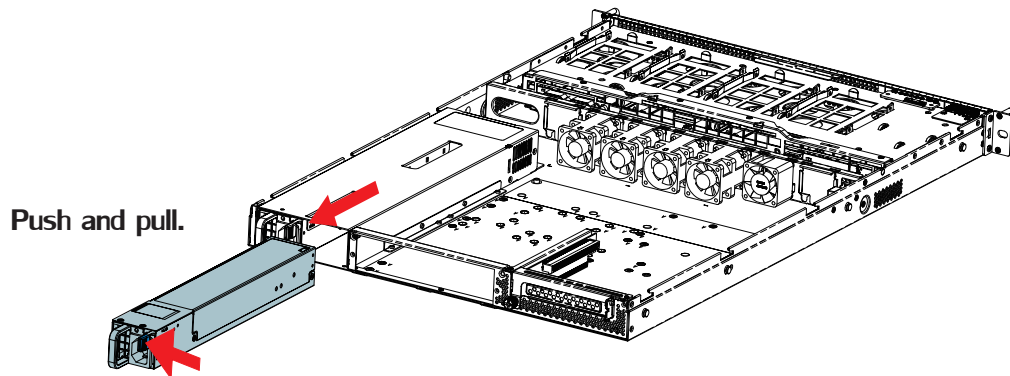

2.3 Fan Module


- ① Unplug the cables and connectors.
- ② Lift the fan module upward. Check to carefully dislodge the rubber connectors from the attached bracket.
- ③ Insert the new fan into the chassis. Verify to align the rubber connectors with the appropriate slot in the bracket.

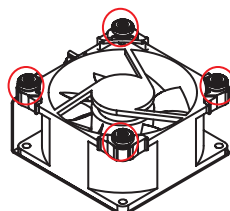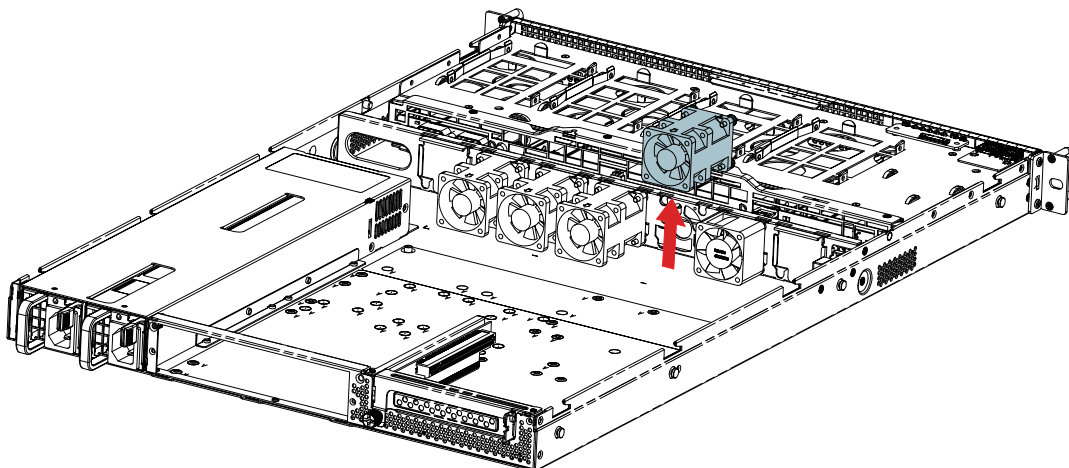


Rubber connectors

2.4 Hard Disk Drive


- ① Press the release button on the tray lever to loosen the lever.
- ② Pull the tray lever outward completely.
- ③ Pull the tray out of the chassis.

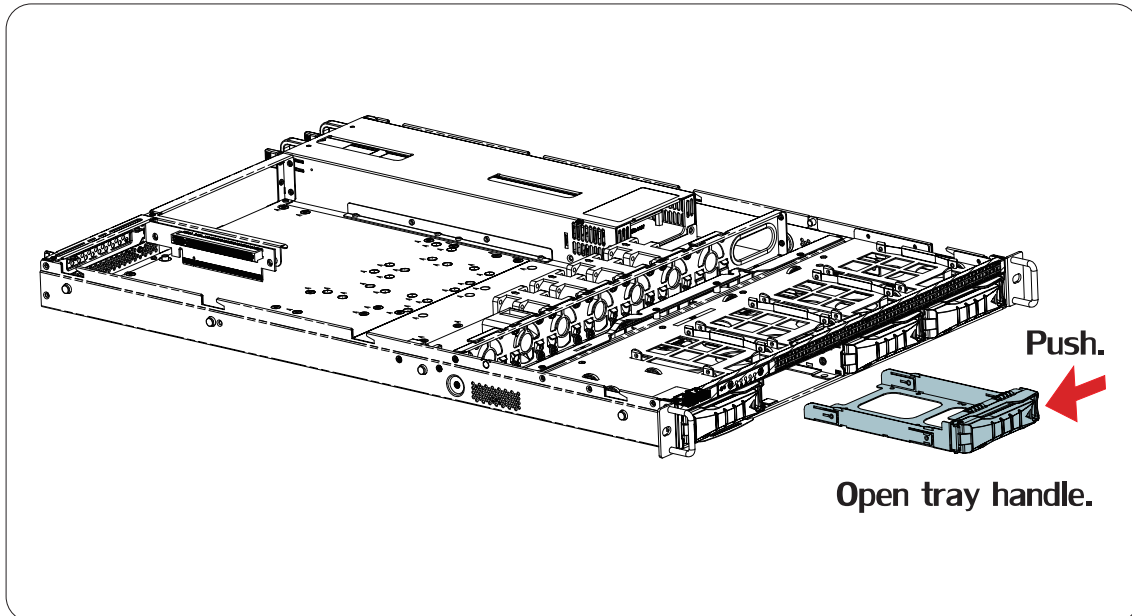

- ④ Match the dimples on the tray to insert the HDD into the tray. Pull upward to remove the HDD from the HDD tray. Make certain that the HDD is not damaged during installation or removal process.

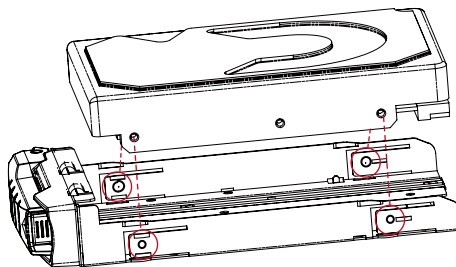


HDD can also be screwed on HDD tray by fastening two screws.

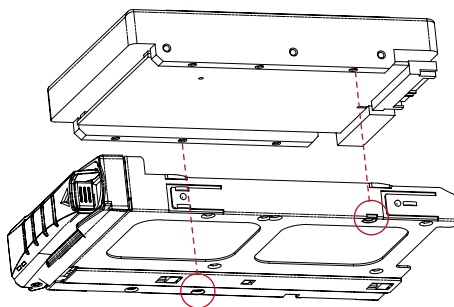

2.5 Riser Card

- ① Loosen the thumb screw on the riser card bracket.
- ② Pull the riser card bracket out of the chassis.
- ③ Insert the PCIe card into the riser card bracket.
- ④ Install the bracket with the PCIe card into the chassis.

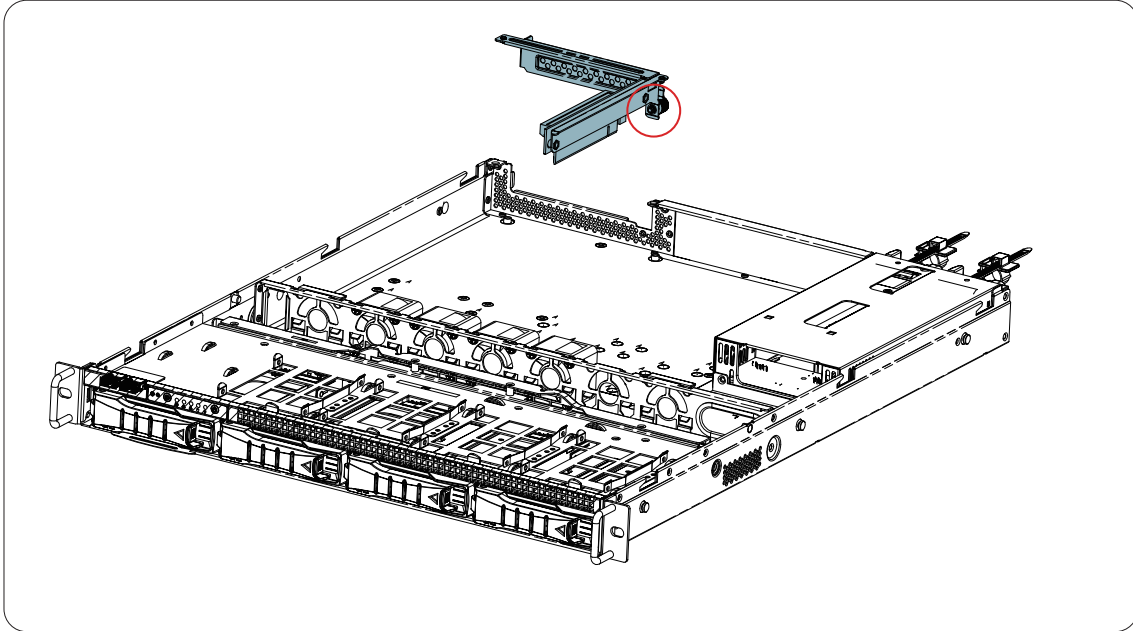


2.6 Slide Rail

NOTE




This sections provides a basic instruction for mounting the slide rail onto the system. Tool-less rails vary per order. The rail in this manual may not exactly match the rail for your system. Please refer to the specifications or quick installation guide that came with your purchased product.

1. Pull on the "Front-Release" to unlock the inner channel from the Slide Assembly.

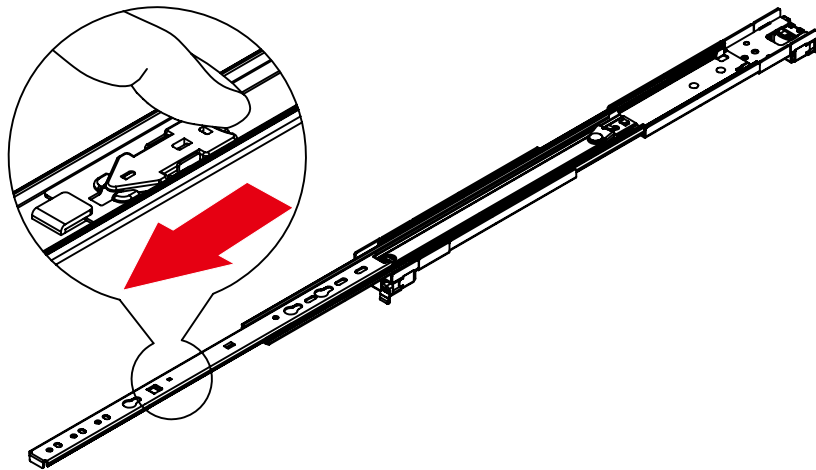


2. Release the Detent-Lock and push Middle Channel inwards to retract Middle Channel.

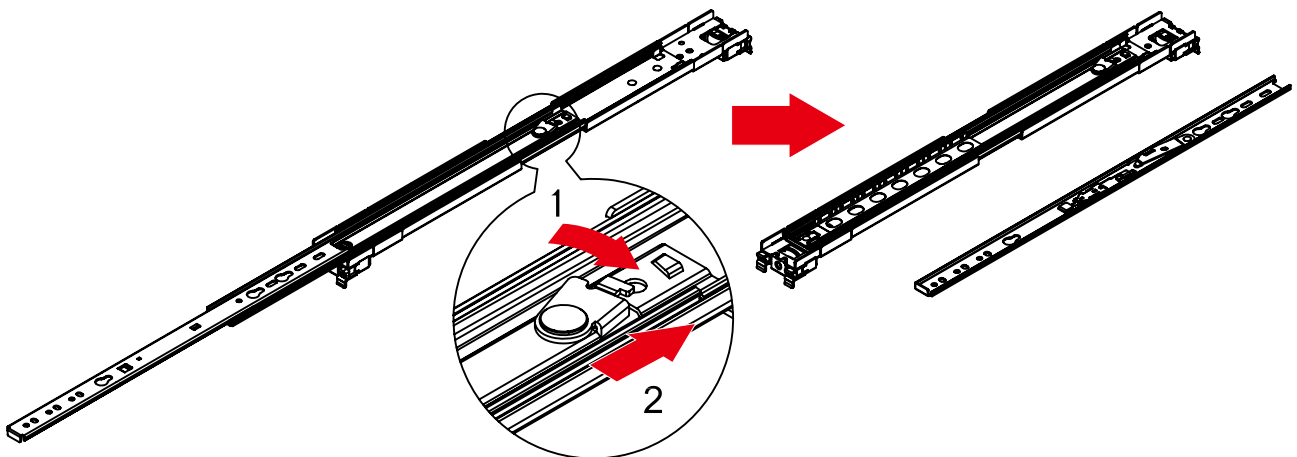


Optional:
Remove Metal Spacer for Aluminium Racks


Metal Spacer

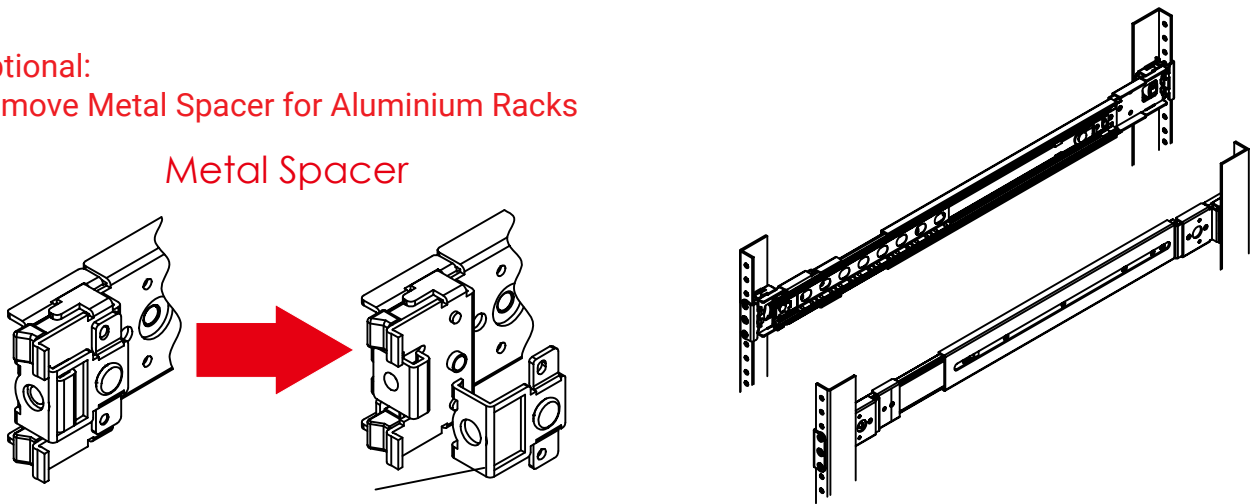


3. Aligning the Front Bracket with the Mounting Hole.

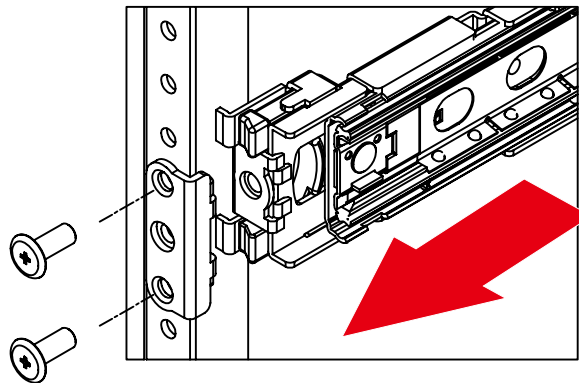


4. Push in to assembly the Front Bracket onto the Rack.

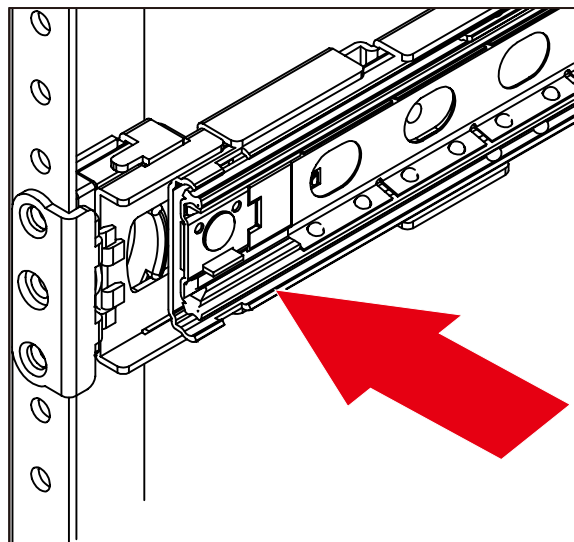


5. Now the bracket is fixed onto the Rack.
(Optional M6x10L screws are to secure the rails with posts if needed.)

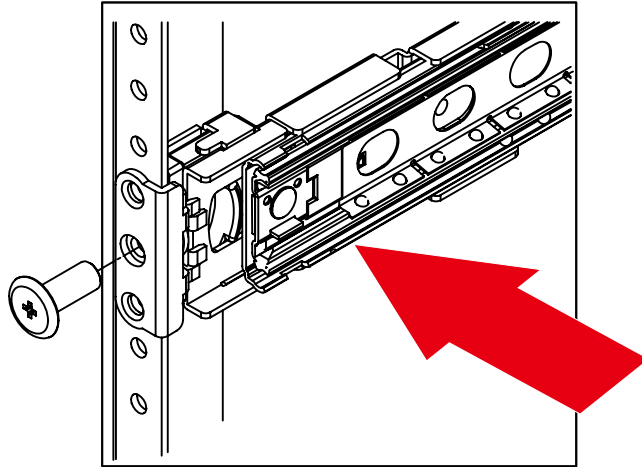


6. Refer to step 3 and 4 to assemble the End Bracket onto the Rack.

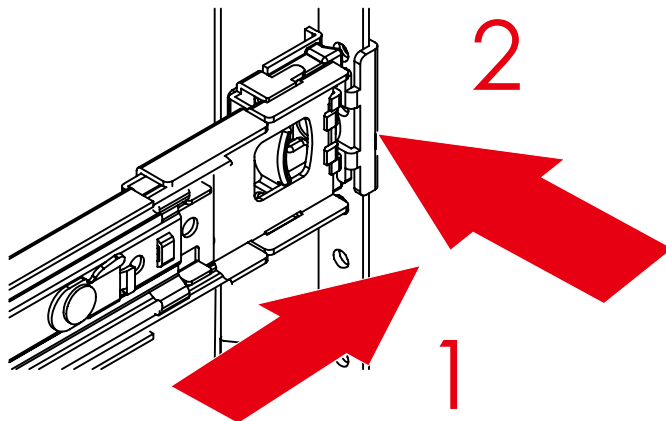

7. Assemble the inner channel onto the chassis using the screws provided.

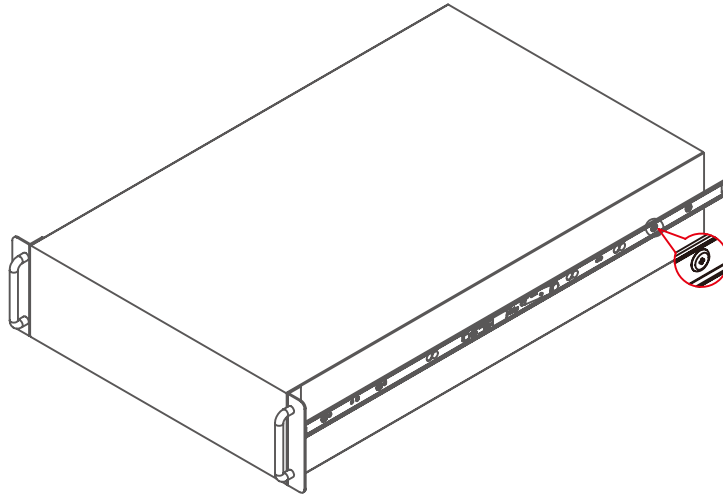


8. Push the chassis with inner channels into Slide to complete Rack Installation.

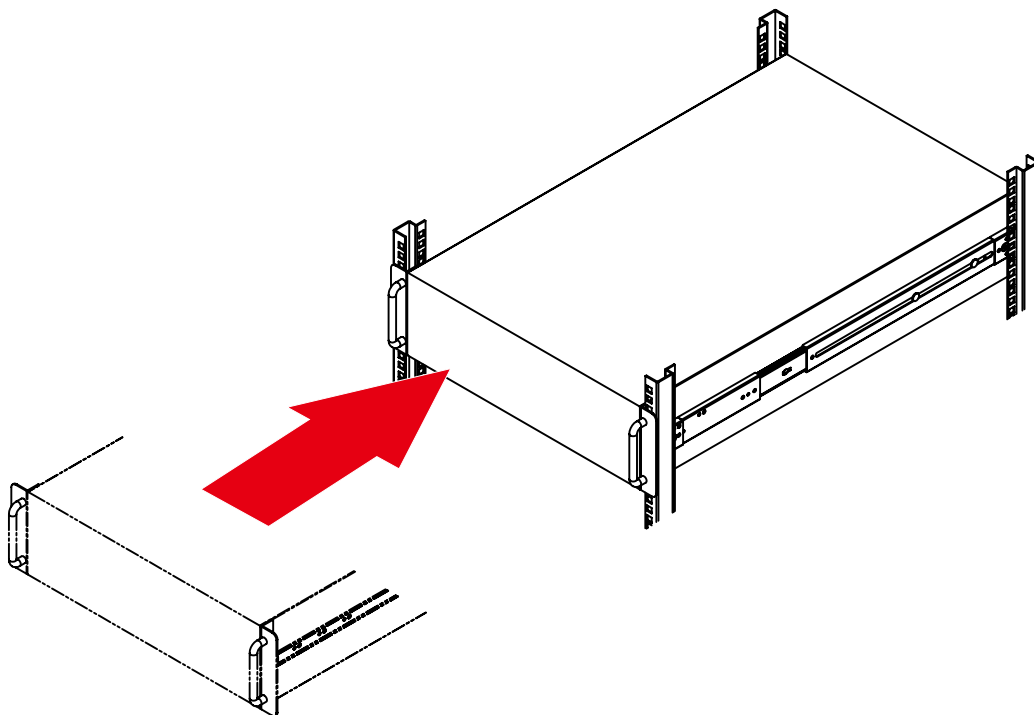


Chapter 3. Hardware Specifications

3.1.1 Placement

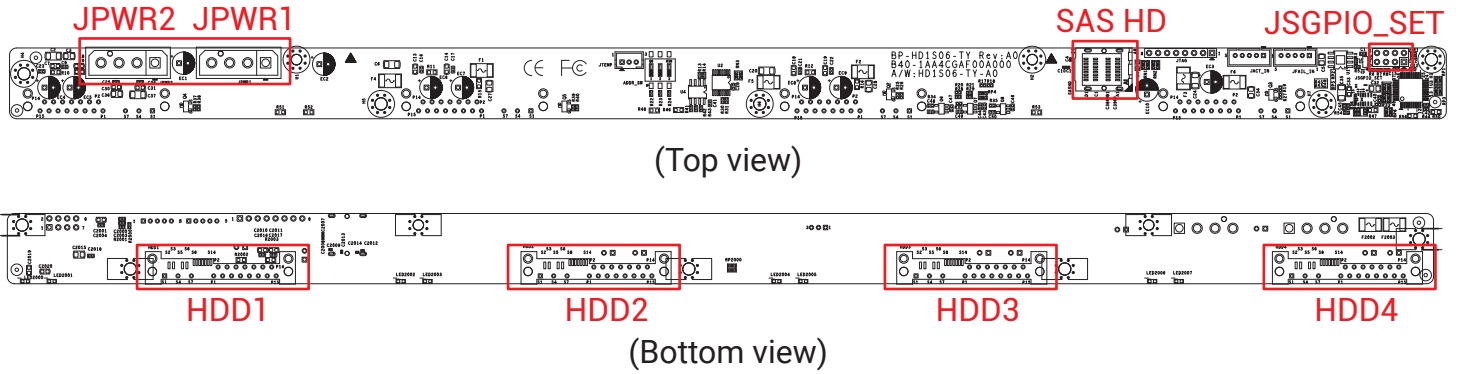


3.1.2 Connector and Jumper

JPWR1&JPWR2: Power connector

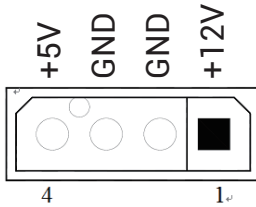

JSGPIO_SET: SGPIO






Function and Setting

Pin	Status	Description
1, 2	Open	Disable External LED input.
	Close	Enable External LED input.
3, 4	Open	ActivityLED from HDD Pin P11.
	Close	ActivityLED from SGPIO.
5, 6	Open	Identify behavior according to Host.
	Close	Blinking the Identify LED behavior.
7, 8	Open	Disable SGPIO.
	Close	Enable SGPIO.

SAS HD: SAS 8643 Connector

3.1.3 LED Indicator



-  HDD Activity LED
-  HDD Fault/Status LED

HDD Activity LEDs	Blue (On)	HDD Present
	Blue (Blinking)	HDD activity detected or located HDD
	Off	HDD no connection or the power is off.
HDD Fault/Status LEDs	Red (On)	HDD has fault or located HDD
	Red (Blinking)	Re-building status
	Off	Normal

Chapter 4. Technical Support



Taiwan, Global Headquarters

Address: No. 152, Section 4,
Linghang N. Rd, Dayuan District,
Taoyuan City 337, Taiwan
Tel: +886-3-433-9188
Fax: +886-3-287-1818
Sales Email: sales@aicipc.com.tw
Support Email: support@aicipc.com

Shanghai, China

Address: Room 1009, No. 777,
Zhaojia Bang Rd, Shanghai 200032,
Shanghai, China
Tel: +86-21-54961421
Fax: +86-21-54961422 #608
Sales Email: csales@aicipc.com.tw
Support Email: support@aicipc.com

Moscow, Russia

Address: No.500, 5th Floor, 5th Entrance,
32A, Khoroshevskoye Shosse, Moscow,
123007
Tel: +7-4997019998
Sales Email: support-ru@aicipc.com.tw
Support Email: support-ru@aicipc.com.tw

North California, United States

Address: 48531 Warm Springs
Boulevard Suite 404 Fremont, CA
94539, United States
Tel: +1-510-573-6730
Fax: +1-510-573-6729
Sales Email: sales@aicipc.com
Support Email: support@aicipc.com

South California, United States

Address: 21808 Garcia Lane
City of Industry, CA 91789,
United States
Toll free: +7-4997019998
Tel: +1-909-895-8989
Fax: +1-909-895-8989#157
Sales Email: sales@aicipc.com
Support Email: support@aicipc.com

New Jersey, United States

Address: 11 Melanie Lane
Unit #20 & 21
East Hanover, NJ 07936, United States
Tel: +1-973-884-8886
Fax: +1-973-884-4794
Sales Email: sales@aicipc.com
Support Email: support@aicipc.com

Houten, The Netherlands

Address: Peppelkade 58, 3992AK, Houten,
The Netherlands
Tel: +31-30-6386789
Fax: +31-30-6360638
Sales Email: sales@aicipc.nl
Support Email: support@aicipc.com